

EZiCaddy

EZi-3 Digital User Manual



YOUR EZICADDY EZI-3 DIGITAL TROLLEY



1. Front Wheel Adjuster Nut
2. Camlock Lever
3. Lower Bungee Strap
4. Bottom Bag Stay
5. Front Wheel Release Lever (on Right-Hand side of trolley)
6. Quick Release Lever for wheel
7. Rear Wheel
8. Motor
9. Battery (normally, one Standard or Lithium battery is supplied with each cart)
10. Unfolding Release Lever and Battery Release Lever (Battery Catch)
11. Lower/Main Spar
12. Upper Bungee Strap
13. Upper Bag Stay
14. Height Adjustment Screw
15. Folding Release Lever
16. Upper Spar
17. Handle, Controls and Display
18. USB Port
19. Charger (Automatically detects Standard or Lithium batteries)

YOUR NEW EZI-3 DIGITAL

Congratulations on your purchase of an **EZi-3 Digital** trolley - a powered trolley from a company founded by two of the most experienced professionals in the business, with over 50 years' experience in electric golf trolleys between us. From the earliest stages of development, the mantra has been 'make it easy' – easy to open, easy to fold, easy to carry, easy to manoeuvre, easy plug'n'play battery, easy to operate, even easy-on-the-eye. Every little detail has been designed and engineered to be 'easy'. We hope you enjoy your new trolley and welcome your feedback and comments.

Your new cart has also been designed for easy, minimum maintenance. Please read these instructions carefully, and your new EZiCaddy trolley should give you many years of faithful service.

FINDING YOUR TROLLEY SERIAL NUMBER

The serial number for your **EZi-3 Digital** trolley can be found on the underside of the main spar. The same number is on the box you received with your trolley. Please keep this box for shipping purposes.

YOUR EZICADDY TROLLEY IS SIMPLE TO MAINTAIN:

- Store in a dry protected place.
- Never jet-wash it or immerse it in water.
- Avoid using detergents, oils or solvents on it.
- Wipe clean whenever it gets wet or wipe with a damp cloth when it gets dirty.
- Occasionally remove the wheels and apply grease to the axle.

FOLDING AND UNFOLDING YOUR TROLLEY

To unfold the upper section of your trolley, depress the release lever 10 and pull the handle away from the main spar. Continue unfolding until the upper spar clicks into place. To unfold the bottom bag-stay section, depress the release lever 5 and pull the wheel away from the main spar. Continue unfolding until the bottom bag-stay clicks into place.


To fold your trolley, make sure you have removed your battery. Then depress lever 15 to release the upper handle section and continue folding until it clicks closed. Then depress lever 5 to release the front wheel and continue folding until it clicks into place.

The folded trolley is designed to be stable standing upright or flat on its back.

Never put your trolley into your car boot with the battery plugged in. It could get switched on.

ADJUSTING THE HANDLE HEIGHT

Your EZiCaddy has 5 height adjustment settings. To adjust the handle height, first fold the trolley. Then unscrew the locking screw 14 by about 8 mm until the handle adjuster plate can be lifted off the teeth below. This then allows you to select one of the 5 available handle heights. Move the plate forward to raise the handle height and backwards to reduce the handle height. Please note that the adjustment plate cannot be moved if the trolley is open. Finally, re-do screw 14 **tightly**.

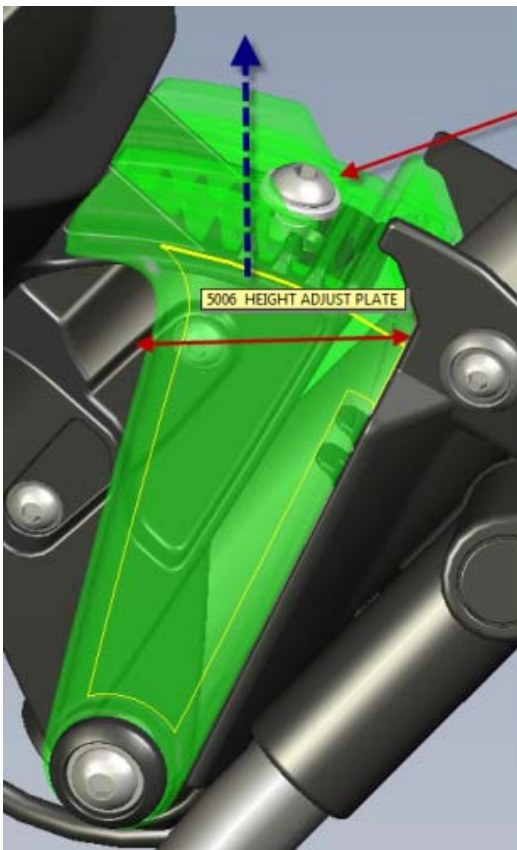

unscrew by
about 8 mm

Lift height
adjust plate
upwards and
off the teeth
below

The plate can
then be
moved
backwards
and forwards

FITTING THE PLUG-N-PLAY BATTERY

To fit the battery, hold it vertically and, from the rear of the trolley, present it base downwards to the main chassis. The notch in the base of the battery will locate in the recess of the chassis. The top of the battery can then be pushed firmly forwards to engage with the battery catch at the top of the battery.

To release the battery, press the battery release lever at the top and pull the battery out of its docking station.

Always remove the battery before folding your trolley.

ADJUSTING THE FRONT WHEEL.

If the steering of your trolley gets knocked out of alignment, it can usually be corrected using the front wheel adjustment nut (1).

Tracking / poor steering can also be affected by the way you load your bag. This is why an anti-twisting “cart bag” often provides a better driving experience.

Lift the cam-lock lever (2) to release it. Rotate the front wheel adjustment nut (1) clockwise to make the trolley go more to the right and anticlockwise to get it to track more to the left. When you are happy that it is tracking correctly, push back the cam-lock lever 2 to fix it back in position. The cam-lock needs to grip very firmly to prevent subsequent movement.

REMOVING THE MAIN WHEELS.

You might occasionally want to take off the main wheels either for cleaning purposes or to squeeze your trolley into a tighter space.

Press button 6 to allow you to release and pull off the wheel. Replace the wheel by sliding the wheel into the clutch, align the wheel so that it starts to engage properly and then push until you hear the engagement click

THE UPPER AND LOWER BAG STAYS

The upper and lower bag stays are designed to accommodate a wide range of golf-bag shapes and sizes. Ideally, you will be using a “Cart-Bag” with symmetrically balanced pockets and an anti-twist base.

To lock the base of your bag in place, stretch the bungee strap 3 over the bottom of the bag. This strap is not adjustable because most bag bases have the same dimensions.

To hold the top of your bag in place, stretch the upper bungee straps 12 and clip in place as shown opposite.



EZICADDY CHARGER



Only use this charger with your EZiCaddy Standard battery or EZiCaddy Lithium battery. It recognises which EZiCaddy battery you are using and adjusts accordingly. Do not use a non-EZiCaddy charger with your EZiCaddy battery or vice versa; a mismatch of battery and charger could cause damage.

Your charger should be placed on a hard surface, in a dry, well-ventilated place. Do not charge in direct sunlight. Unplug it from the mains supply before connecting or disconnecting the battery.

Do not open the charger casing there are no serviceable components inside

Always check that the charger casing and cables are in a good condition.

1. Connect your battery to your charger when you first receive it and, thereafter, as soon as possible after use.
2. Plug in and switch on at the mains supply. The red light will come on.
3. After some minutes or several hours, according to the initial charge on the battery, the red light will go out and the green light will come on. If you are charging a brand new battery (and,

so, relatively well charged battery), the light may go green relatively quickly. Even so, please still leave it on charge.

4. We recommend that you **leave your battery “on charge”** until your next game.
5. Never leave the charger connected to the battery with the mains supply switched off

EZICADDY BATTERY

Your EZiCaddy battery is designed to play 18 holes. Avoid exceeding 18 holes on one charge to maximise battery life. If you regularly want to play more than 18 holes, please buy another battery.



Always remember to charge your battery after use, even if you have only played a few holes, and **THEN LEAVE IT ON CHARGE** until your next game.

Note, the charging light for a brand new battery should turn green much sooner than for one that has done a full round of golf. Even so, please still leave it on charge.



USING YOUR EZICADDY EZI-3 DIGITAL

When you have fitted your battery and secured your bag, you are ready to go.

- Depress and release the control knob on the handle to turn on the power. The **On/Off** Indicator will turn from **Red** (Standby) to **Green** (On)
- Rotate the control knob clockwise to increase the power. Your power readout will increase and your trolley should start moving.
- Rotate the control knob anti-clockwise to reduce the power.
- Depress and release the control knob on the handle to turn off the power. The **On/Off** indicator will turn from **Green** to **Red**.
- If you turn off the power when moving, the trolley will remember your power setting. On turning the trolley back on, it will gradually accelerate back to that setting.

- If you have turned off the power when moving and do not want to start off with the same setting, simply rotate the control knob about half-a-turn anti-clockwise until the Readout reverts to “0”.
- Your trolley will always forget its power setting and revert to zero if you disconnect the battery.

ADF (AUTOMATIC DISTANCE FUNCTION) MODE

Your **Ezi-3 Digital** features a convenient Automatic Distance Function. This is particularly useful when you want to, say, send off your trolley by itself towards the next tee whilst you go on to the green. But please be **very** mindful of people and obstacles that might end up in your path

Hold down the control button for at least 3 seconds and then release it. The Power Readout will show “**A**”. Then rotate the control knob to one of three settings (from 1 through to 3) according to how far you want to travel. The increments of 1 – 3 correspond to distances of 15 yards, 30 yards and 50 yards approximately. When you next press the control knob, the trolley will travel for your desired distance at a power setting of 5 (which can be adjusted instantaneously, should you wish) and then stop.

PLEASE PRACTICE THIS AT HOME FOR YOUR FIRST FEW ATTEMPTS !

When you return to your **EZI-3 DIGITAL** it will still remember the power setting at which you left it and will accelerate to that speed when you next depress the control button.

BATTERY CONDITION INDICATOR

When your battery is fully charged, this should glow **GREEN**.

According to the age of your battery and the severity of the course, as you progress through a round of golf, it may turn to **AMBER** and eventually to **RED**. When it reaches red, you may notice that the battery is struggling and is in need of a charge. **If your battery regularly shows red well before the end of a round, you may need to buy a new battery.**

USB PORT

Your **EZi-3 Digital** features a standard **USB** port which can top up your SmartPhone or Golf GPS device. Please avoid using the USB port if your trolley battery is struggling.

EZiCaddy Ltd
Unit 4L Sparrow Way
Lakesview International Business Park
Canterbury Kent CT3 4JH
United Kingdom

Contact us via:
Freephone 0800 849 1345
International +44 1227 714600
eMail: ezi@ezicaddy.com
www.ezicaddy.com

EZi-3 Digital Manual v 1.10 A5 booklet