



Sonic Studio iRC & iRC(b)



User Manual

www.sonicstudio.com

iRC & iRC(b) User Manual Table of Contents

Chapter 1	About iRC Measure	5
1.1	About This User Manual	6
1.2	iRC vs. iRC(b) - What Is The Difference?	6
Chapter 2	Quick Guide.....	9
2.1	iRC Measure Tutorial	9
Chapter 3	Step-By-Step Guide.....	11
3.1	Software Installation	11
3.1.1	Activation	11
3.2	Equipment setup	11
3.3	Using the iRC Measure application	12
3.3.1	Sound system setup	14
3.3.2	Microphone configuration.....	14
3.3.3	Output & levels	15
3.3.4	Measurements	16
3.3.5	Filter design	18
3.4	Using the Amarra with iRC(b) & Symphony with iRC applications	21
3.4.1	Filter selection	21
Chapter 4	Understanding more.....	23
4.1	Impulse response.....	23
4.2	Magnitude response	23
4.3	Mixed-phase filters	23

4.4	Target curve design guidelines	24
4.5	Loudspeakers in rooms	25
4.5.1	Loudspeaker placement.....	25
4.5.2	Sweet spot and dispersion	25
4.5.3	Reflections – Good and bad	26
4.5.4	Useful tips	26
4.6	Recommended reading	27
Chapter 5	Troubleshooting.....	28
5.1	Troubleshooting the iRC Measure application	28
5.1.1	Sound system setup problems	28
5.1.2	Playback problems	2
5.1.3	Measurement problems	29
5.1.4	Filter design problems.....	30
5.2	Troubleshooting the Sonic Studio iRC Filter Bank window.....	31
5.2.1	Account login or authorization problems	31
5.2.2	Playback problems	31
Chapter 6	Appendix A.....	32
6.1	Operational Information	32
6.1.1	Measurement Sample Rate	32
6.1.2	Saving iRC Measure Projects	32
6.1.3	Saving Filter Files Created in iRC Measure	32
6.1.4	Mic Recommendations	32

About This Manual

This manual, as well as the software described in it, is furnished under license and may only be used or copied in accordance with the terms of such license. The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Sonic Studio, LLC. Sonic Studio, LLC assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of Sonic Studio, LLC.

Notice of Liability

The author and publisher have made every effort to ensure the accuracy of the information herein. However, the information contained in this document is provided without warranty, either express or implied. Neither the authors, Sonic Studio, LLC, nor its dealers or distributors will be held liable for any damages to be caused either directly or indirectly by the instructions contained in this book, or by the software or hardware products described herein.

SONIC STUDIO, LLC MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE. SONIC STUDIO, LLC DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SONIC STUDIO, LLC SOFTWARE

INTERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SONIC STUDIO SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. IN NO EVENT WILL SONIC STUDIO, LLC, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE SONIC STUDIO SOFTWARE EVEN IF SONIC STUDIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Notice of Rights

Copyright © 2014 Sonic Studio, LLC and Dirac Research AB. All rights reserved.

No part of this document may be reproduced, stored in a retrieval system or transmitted in any form or by any means, without the prior written permission of the publisher.

Sonic Studio, Amarra, Amarra Hifi, Amarra Symphony, iRC, iRC(b) iRC Measure and the Sonic Studio and Amarra logos are trademarks of Sonic Studio, LLC. All other company or product names are either trademarks or registered trademarks of their respective owners. All features and specifications described within this manual are subject to change. Sonic Studio and Dirac Research AB makes no warranty of any kind regarding the accuracy, correctness, or sufficiency of the information in this document. However, we will make every reasonable effort to keep the document accurate, correct, and sufficient in response to your feedback.

Chapter 1.....About iRC Measure

The listening room is usually the weakest link of any sound system. Loudspeakers have been designed for a certain placement in a room, but in an imperfect environment performance suffers and it's impossible get the full benefit from your speaker investment. Imaging, clarity, and bass tightness are all affected by the limitations imposed by your listening room, and the result is that your listening experience can be significantly diminished.

Amarra with iRC(b) and Amarra Symphony with iRC combines our industry defining music player with leading-edge room correction technology to optimize the sound of your system to its' best possible performance.

The 'iRC Measure' app with Amarra Symphony and option for Amarra measures the acoustic characteristics of your loudspeakers within the listening environment and then optimizes for timing, phase and frequency anomalies imposed by your room. The result is massively improved imaging and sound staging because now your room will be working with your sound system, not against it.

iRC integrates premium mixed-phase room correction technology from Swedish technology leader, Dirac SE. Dirac room correction technology is used in cinemas, studios, as well as the world's most famous luxury car brands including BMW, Bentley and Rolls Royce to bring sound into harmony with the listening space. Amarra iRC is very different from standard room correction technologies that rely on simple minimum-phase EQ technology. Amarra iRC optimizes not only the frequency response but also the impulse response at the listening position, which is a critical factor for accurate staging, clarity and bass reproduction. You'll be amazed.

iRC will:

- Improve the imaging of your sound system
- Improve the clarity of your music
- Produce a tighter bass
- Reduce listening fatigue
- Improve the timbre
- Remove resonances and room modes
- Reduce early reflections

1.1 About This User Manual

This user manual is divided into multiple sections. It describes the use of Sonic Studio's

- 'iRC Filter Bank' and 'iRC Measure.app' in Amarra Symphony
- 'iRC(b) Filter Bank' and 'iRC(b) Measure.app' options for Amarra

Unless otherwise noted, features and workflow discussed in this manual apply to all of the above.

1.2 iRC vs. iRC(b) - What Is The Difference?

The main difference between iRC and iRC(b) is in the Measure application:

- The 'iRC Measure.app' in Amarra Symphony is full spectrum. It processes frequencies from 15 Hz-20 kHz+



The iRC Measure app's Filter Design Tab. Note the wide frequency correction spectrum

- The 'iRC(b) Measure.app' option for Amarra is designed for lo-mid range and bass management. It is limited to processing frequencies from 15 Hz-500 Hz



The iRC(b) Measure app's Filter Design Tab.

The Quick guide in the next section lists the main steps to get started with iRC Measure. More detailed instructions are provided in the Step-by-step guide starting on page 12, and thereafter divided into four sections about Software Installation, Equipment setup, and Using the, respectively. Additionally, there is a section on Understanding more section beginning on page 24, followed by a Troubleshooting section on page 29.

If you are reading this document as a PDF file on a computer, then you should be able to click on the underlined links in the text to jump to the referenced section. The same applies for the entries in the Table of Contents.



Useful remarks are preceded by this lamp symbol.



Warnings and important remarks are preceded by this caution sign.

Chapter 2..... Quick Guide

The following steps will get you started immediately. In the Step-by-step guide on page 12, the process is described in more detail.

1. Run the Amarra or Amarra Symphony Installer. License iRC or iRC(b) for use. (See page 12) Note that you can run iRC or iRC(b) on two Macs at the same time.
2. Set up your measurement mic. Measure @ 48k sample rate. Use a microphone stand. Holding the mic in your hand is not recommended.
3. Connect the audio output of your computer or your DAC to the input of your sound system (on your amplifier/preamplifier). (page 8)
4. Start the iRC Measure application (page 13) Make sure that Amarra or Amarra Symphony is not running.
5. Follow the on-screen instructions to select your microphone input and microphone calibration file (page 15), audio outputs (page 15), measure (page 17) and optimize (page 19) your sound system.
6. When you have saved your filters from the iRC Measure application, start Amarra or Amarra Symphony application. (page 22)
7. Click on the iRC button on the Amarra or Amarra Symphony interface, and click on an empty filter slot (numbered 1-4) then select your newly created filter. (page 22)
8. Enjoy a more musical and accurate reproduction of your favorite music!

2.1 iRC Measure Tutorial

The iRC Measure tutorial gives you step-by-step instructions on microphone set-up, measuring your room and creating filter files for use in Amarra or Amarra Symphony.



[View the iRC Measure Tutorial](#)

Chapter 3..... Step-By-Step Guide

This guide will go through each step in more detail to achieve the best possible sound.



Need more thorough explanations? Refer to Understanding more, on page 24, where some important concepts are discussed.

If you have any problems with the Amarra iRC or the iRC Measure application, then some possible solutions are addressed in the Troubleshooting section beginning on page 29.

3.1 Software Installation


Run the Amarra or Amarra Symphony installer (.mpkg file) and follow the on-screen instructions. iRC Measure is installed in the Amarra or Amarra Symphony Application Folder.

3.1.1 Activation

After installation is completed, in order for you to run iRC Measure, you will first need to activate the iRC feature in Amarra or Amarra Symphony. When clicking on the iRC button in Amarra for the first time, you will be prompted with an Authentication window to enter your user license information delivered at the time of purchase.

Once iRC has been authorized in Amarra or Amarra Symphony, iRC Measure for your app will also be licensed.

Note that the computer has to be connected to the Internet and any active firewalls have to allow HTTP (normal Internet access).

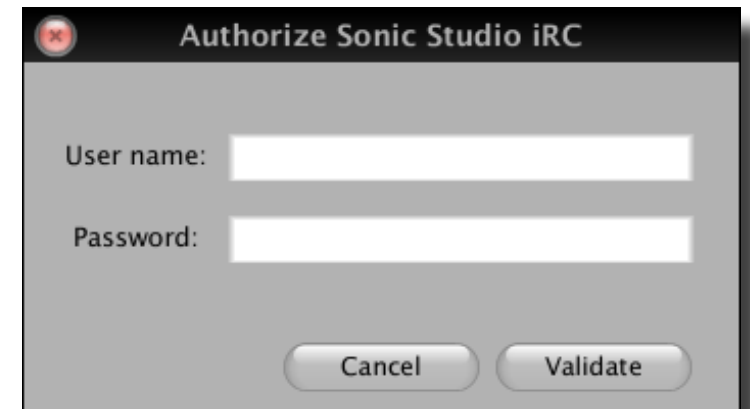

3.2 Equipment setup

1. Connect the output of your DAC or Mac's line output to your amplifier or preamplifier input.

2. Make sure your DAC is powered on.
3. Connect your microphone and verify operation in System Preferences/Sound tab
 - a. If you are using a USB microphone, just connect it to a USB port on the computer. Make sure to use 48 kHz sample rate for measuring.
 - b. Otherwise, connect the microphone to your Mac's sound input or external microphone pre-amp and analog-to-digital converter ("A/D Converter"). Make sure to use 48 kHz sample rate for measuring.

Some microphones require 48V phantom power. Be sure to follow the microphone usage instructions.



Avoid microphone feedback! If your A/D Converter has a direct monitor function, this must be turned off. Some A/D Converters have a physical volume knob for direct monitor, in this case it has to be turned down to zero level.



Some professional A/D Converters have signal modifiers like compression or equalization. Double check that any such signal modifiers are turned off.

4. Before continuing, please close all other audio applications on your computer.
5. Start the iRC Measure application to begin measuring your room.



Make sure the main volume control on your pre-amp or amplifier is turned down prior to playing any test signals from iRC Measure. You can adjust to normal volume after testing output levels in iRC Measure.

3.3 Using the iRC Measure application

Launch iRC Measure by clicking on the Icon for your product inside the Amarra or Amarra Symphony Application folder.



iRC Measure.app

*If you own Amarra Symphony,
Launch iRC Measure*



iRC(b) Measure.app

*If you own Amarra and have purchased the iRC(b) option, launch
iRC(b) Measure*



IMPORTANT NOTE REGARDING MEASUREMENT SAMPLE RATE: If possible, make all measurements at 48 kHz. Amarra's iRC Filter Bank automatically interpolates the filter files for all sample rates, so there is no need to make measurements for each sample rate available on your DAC.

The iRC Measure application measures the acoustical properties of your sound system and designs customized Amarra iRC filters including impulse response correction for your room and loudspeakers.



 
To apply the resulting Amarra iRC filters to music, you will have load your saved filter set into Amarra or Amarra Symphony's iRC window (see page 22).

- Please note that your computer must be connected to the Internet during the measurements or during the filter optimization. If the computer is not connected during the measurements, then certain parts of the optimization will be delayed until a connection is available. To save time, it is recommended having a connection during the whole process. Any active firewalls have to allow HTTP.

The workflow is logically divided into a number of tabs at the left side of the window and these are meant to be worked through sequentially from the top down.


You'll find step-by-step instructions along the right side of the iRC Measure application window. The content changes with the active workflow tab. Simply click the tab to open and click to close.

3.3.1 Sound system setup

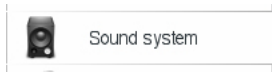

This is the first tab in the iRC Measure application

1. System configuration in the “Choose system configuration” drop-down box (A). Please note that for iRC Measure, the system configuration is preset for stereo and cannot be changed.
2. Select the device that you want to use for playback in the “Test signal playback device” drop-down box (B).

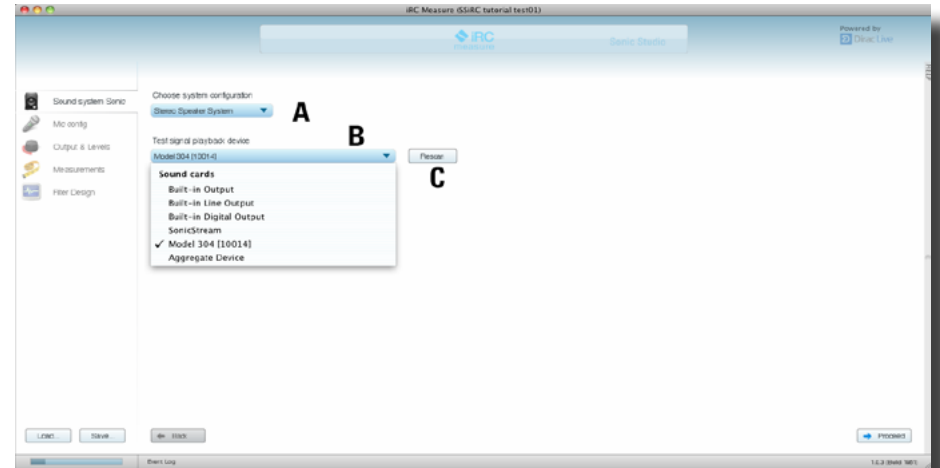


Use the same device and channel assignment that will be used for listening.

If a device is grayed out in the drop-down box, it may mean that it is being used by another application. In this case, please close all other audio applications and press the “Rescan” button (C). Clicking the “Rescan” button also searches for DACs or other devices that may have been added after starting the iRC Measure application.

Continue to the next tab by clicking the “Proceed” button in the lower right corner or by clicking the tab itself.

 
3.3.2 Microphone configuration

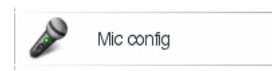

This is the second tab in the iRC Measure application

1. In the “Recording Device” drop-down box (F), select the device that your microphone is connected to.
2. In the “Recording Channel” drop-down box (G), select the input channel number that your microphone is connected to.

If a device shows two (or more) numbered channels, then usually “1” corresponds to Left and “2” to Right.

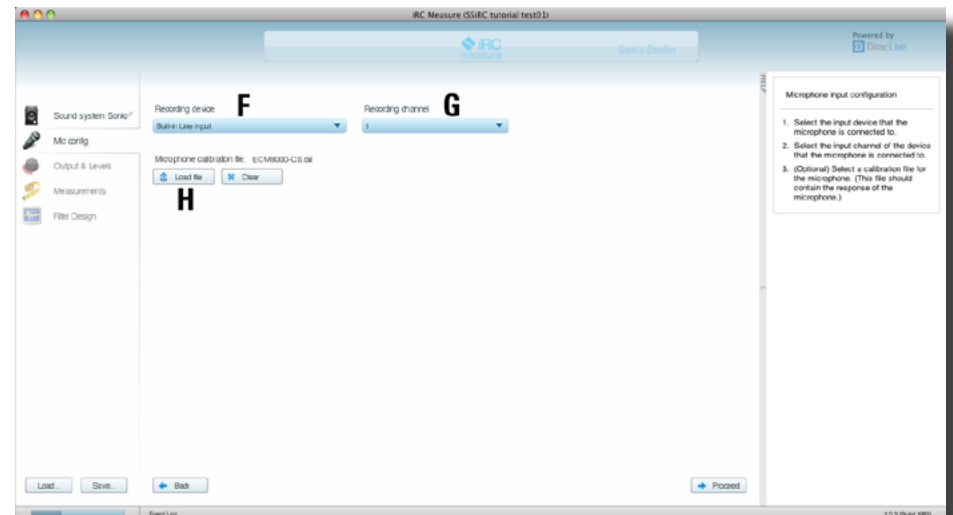

3. You may optionally load a microphone calibration file by clicking the “Load file” button (H).

 
Only the most expensive measurement microphones can be expected to have transparent recording characteristics. All other microphones can benefit from a calibration file to restore transparency.

The microphone calibration file is a text file that should contain the microphone magnitude response. The file format which is supported by iRC Measure application consists of lines of <frequency, level> pairs, where the level is given in decibels (dB).

Some calibration files instead specify the calibration adjustment for each frequency. Find out if your file has this format, and if so, then switch the signs on the level numbers to modify it to the supported format.

Continue to the next tab by clicking the “Proceed” button in the lower right corner or by clicking the tab itself.

3.3.3 Output & levels

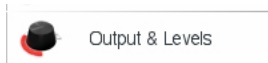


This is the third tab in the iRC Measure application

In order to get an accurate measurement of the sound system, some initial adjustments of the playback and recording levels are required. Start by placing the microphone inside the listening area.

1. For each loudspeaker channel, select the output channel that it is connected to using the corresponding “Output channel” drop-down box (J).

Use the same device and channel assignment that will be used later for listening. If the assignments don't match with the Amarra or Amarra Symphony player output, then filters may be applied to the wrong channels or audio output may even be muted.

Click the play button for the test noise in the selected output channel by pressing the Test button (K).

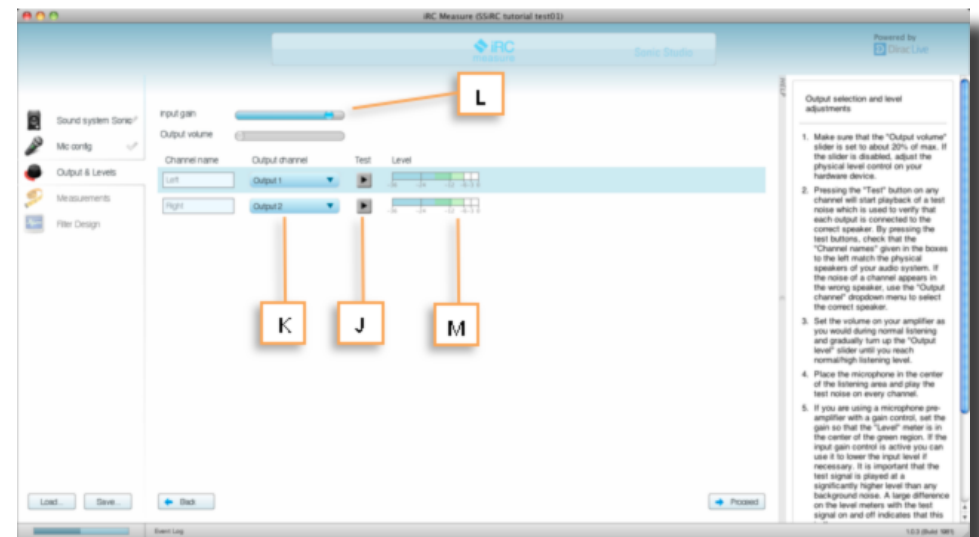



To protect your ears and equipment: Turn down the volume on your sound system before pressing the play button for the first time and then slowly turn up the volume.

See the section on Playback problems on page 30 for problem solutions.

Tip: You can use the space bar of your keyboard to trigger the test button for the selected output channel.

Tip: you can use the arrow keys on your keyboard to quickly both toggle between channels and adjust the volume for each channel.

2. Adjust the levels (M) for the recording to be within the green area on the level meter (L). Apply a three-step process (see Measurement problems on page 30 for problem solutions):

- I. If possible, set the sound card output level to 0 dB (usually max). Depending on the DAC, there may be a physical volume knob or a software level slider.
- II. On your amplifier, adjust the volume knob to a “normal” listening level. Not disturbingly loud, but not too low either.

Adjust the gain of the microphone input in order to arrive within the green area on the level meter.

Continue to next tab by clicking the “Proceed” button in the lower right corner or by clicking the tab itself.

3.3.4 Measurements



This is the fourth tab in the iRC Measure application

It is now time to built the acoustical model of your listening space by measuring the sound system in your room. The accuracy of the model is very important for designing optimal room correction filters, so follow the tips below to get the best result. Now would also be a good time to save and name your project before proceeding with the measurements. You can save the project at any time by clicking the “Save...” button in the lower left corner.


- Always use a stage-type microphone stand similar to the On-Stage Stands MS7701B Euro Boom Microphone Stand to firmly place the measurement microphone in the indicated positions. Do not hold the microphone in your hand during measurements as this will likely cause handling noise and taint the measurements significantly.

- Use a microphone stand with a boom arm attachment. A boom arm allows you to vary the height and placement of the microphone position within the listening area, which is important to get an accurate acoustical model.

- Minimize external noise such as talking, opening or closing doors or windows, and playback of sounds during the measurements. This is to avoid interruption in the measurement process and corruption of acoustical model data.

- Turn off any computer programs that may make any noise, such as Skype or your email client.

- Turn off any audio effects such as “low-cut” EQ or compression.

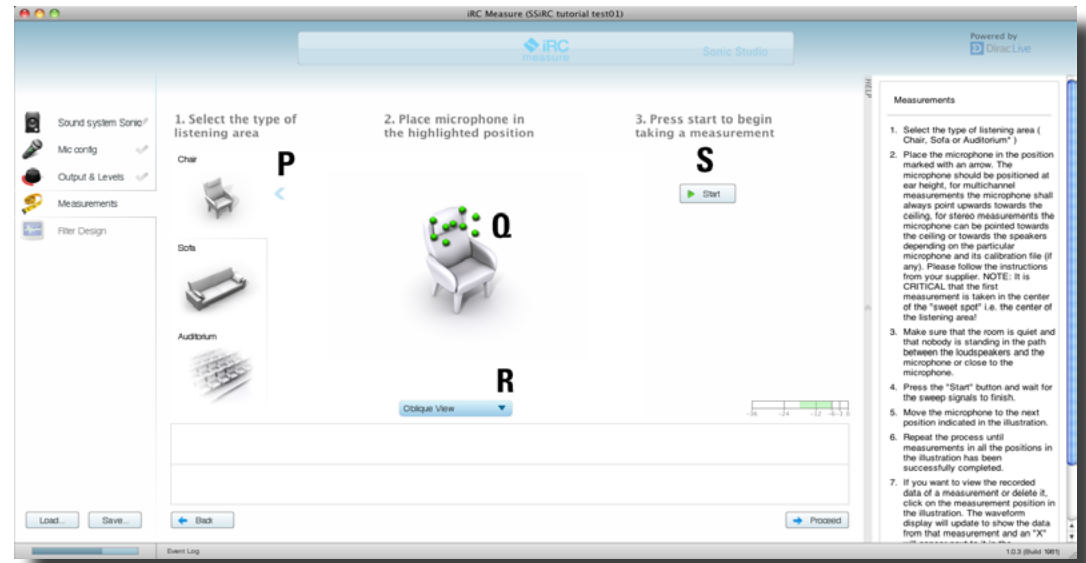

1. Select the most suitable listening environment preset by clicking on the corresponding graphic (P). In general, it is important to collect measurements in the most likely “listener’s head” positions (sitting, standing, leaning forward, etc.).

Avoid making measurements in a too small space. Even for the “Chair” listening environment, it is important to spread out the microphone positions in a sphere of at least 1 meter of diameter. A too small a space will result in over-compensation that will sound very dry and dull.

2. Place the microphone in the indicated position (Q).

The first measurement should always be taken in the center of the listening region, in the desired “sweet spot,” as this will be used for alignment of levels and delays between loudspeakers.

Direct the microphone upward, pointing to the ceiling, to get the most omnidirectional recording of the room response.

Switch the view selector (R) for each position to better localize the microphone positions. Carefully note the left and right positioning of each measurement position in the separate view graphs.


3. Press the Start button (S) to collect a set of measurements. This will play a sweep in each loudspeaker and one final sweep in the first loudspeaker again.

If the measurement was successful, then the position indicator will move to the next spot. Repeat the procedure from step 2 above until nine (9) positions have been covered.

If your microphone pre-amplifier has a clip indicator, then keep an eye on the microphone input. If it clips during measurement, then re-take that measurement. (Usually, the clipping will be detected by the iRC Measure application, but depending on level settings, the clipping event may fail to be detected.)

If the measurement failed, then usually an error message will be given. Follow the instructions in the error message, or refer to the troubleshooting section Measurement problems on page 30.

Tip: You can click each measurement point (T) to view its recorded sequence in the graph (U). You can also delete individual measurements by clicking the red X (X) that appears when the measurement point is marked. Doing so will allow you to retake that individual measurement.

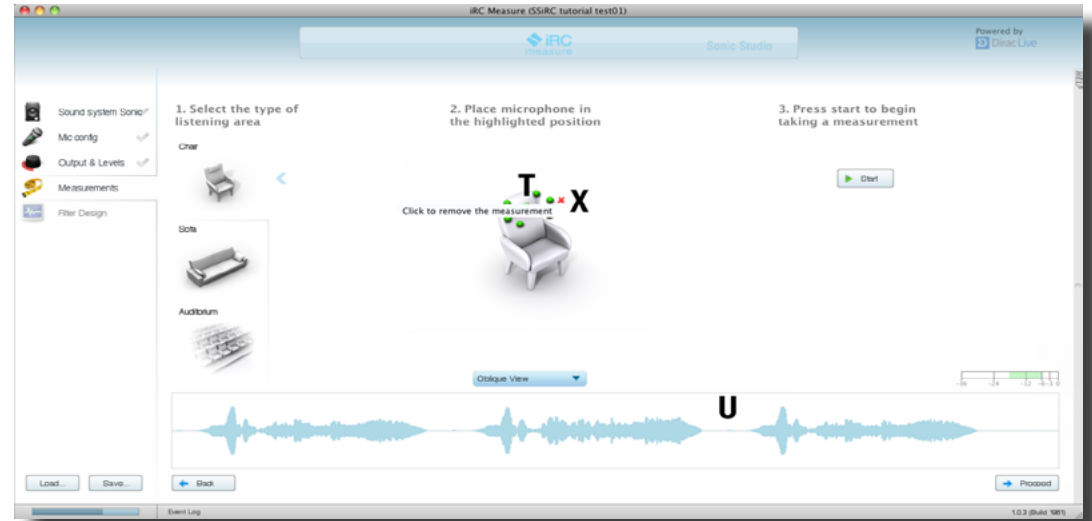

3. After all nine positions have been measured, there is enough data to design a set of filters.

 
Using the microphone positions indicated by the iRC Measure application will generally give you consistent results. However, the microphone positions are not required to be in exactly these positions; if your listening environment is unusual, then you may use a different set of microphone positions.

Taking all measurements close to the sweet spot will generally not give optimum performance because the microphone positions need some spread in order to acquire enough acoustical information about the room.

Don't forget to save the project before proceeding.

Continue to the next tab by clicking the "Proceed" button in the lower right corner or by clicking the tab itself.

3.3.5 Filter design

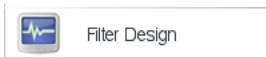

This is the fifth and last tab in the iRC Measure application.

The filter design algorithm uses the measured data together with a target frequency response to calculate filters that optimize the frequency response and the impulse response of the sound system. Finding the best target frequency response may require a little experimenting from your side. After completing the measurements, the iRC Measure application will automatically

generate a suggested target curve that matches the measurements; however, you can alter the curve for even better performance.

The filter design algorithm has a hard-coded maximum gain value that limits the boost at any frequency.

1. There are two ways to modify the frequency response:
 - i. Dragging the target frequency curve at the anchor points (a).
 - ii. Dragging the frequency limits on either side of the frequency range (b).

Refer to Target curve design guidelines on page 25 for advice on how to design a good target response.

The resulting filter will leave the audio signal unmodified in the shaded frequency regions. This can be useful if you, for example, are perfectly happy with the high frequency performance, but want to address room resonances in the bass.

It is possible to add (or delete) anchor points by double clicking on the target curve (or on the points).

The zoom level is shown at the top of the graph (c).

To zoom in, draw a box around the area that you would like to zoom into.

To zoom back to the previous level, click on the minus sign next to the zoom level (c) or double-click in the graph.

To view the impulse response of the system, before and after correction, click on the "IMPULSE" button (i). In the impulse response view, this button will change its label to "SPECTRUM" and clicking on it will take you back to the frequency view.

It is possible to set a target curve for all channels at once, a linked group of channels, or one channel at a time. Use the channel tabs (d) on the right side of the plot area to change the grouping configuration.

- i. Clicking on the chain symbol of a channel tab (e) causes the channel to detach from the linked group and showing the detached channel's curve in the plot area. You can also drag and drop to unlink.
- ii. Dragging and dropping a detached channel tab onto a linked channel tab causes the detached channel to join the group and show all the grouped channels' curves in the plot area.



2. Press Optimize (f) to create a set of filters.
3. When the optimization has completed (this may take some time depending on the speed of your computer and how many sampling rates you selected to make filters for), press "Save Filter" (g) below the target editor to save the filter to a file that you will be able to open into the Amarra or Amarra Symphony iRC filter bank window.

To be able to load the filter in the Amarra or Amarra Symphony application, make sure to save it in this directory:


~/Documents/Dirac/Filters

To design a new filter for the same sound system, repeat the procedure from step 1 above. To design filters for a different sound system, then go back to the Sound system tab and follow the instructions from Sound system on page 15.

Saving a project once a target curve has been set will save the state of the target curve in the project.

If you are testing several target curves it may be a good idea to save each target with the Save Target button (j). This will allow you to revisit and change the target curves from which a specific filter has been generated by loading them with the Load Target button (l). Loading a target will apply it to the currently visible channel (group).

Please note that there are two save buttons with different functions, one for saving the filter "Save Filter" (g) and one for saving the project "Save..." (h).

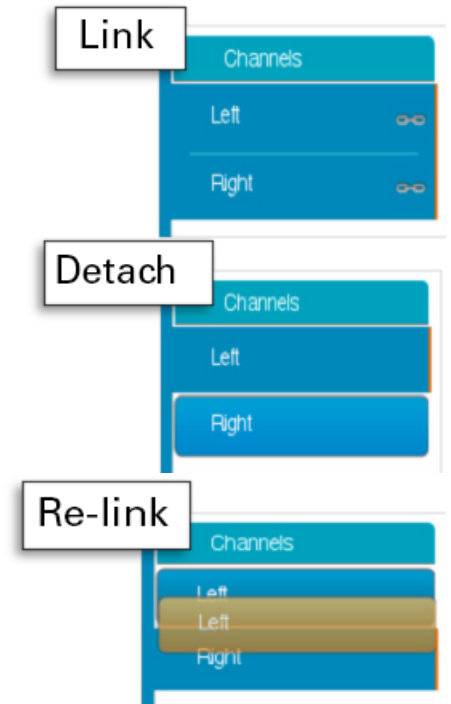

3.4 Using the Amarra with iRC(b) & Symphony with iRC applications

Amarra with iRC is an easy-to-use music player application. For this manual, the scope will be limited to the Sonic Studio iRC Filter Bank window. For a more complete list of Amarra or Amarra Symphony with iRC functions, please refer to the Amarra or Amarra Symphony User Manual located inside the Amarra or Amarra Symphony app folder.

To open the Sonic Studio iRC Filter Bank window, click the iRC button (a) in the Amarra window. That action opens the large iRC Filter Bank window.

3.4.1 Filter selection

Filter sets created for the Sonic Studio iRC Filter Bank window by the iRC Measure application must be loaded into an iRC processor slot.

The Sonic Studio iRC Filter Bank window has four (4) separate slots (c) where your filter files can be loaded for quick selection. To load a filter set into an empty slot:

1. Double-Click on an empty filter slot. This opens a Mac Finder dialog box where you can navigate to the folder where you stored your Amarra iRC filter sets created with iRC Measure. These are .filter files.

Select the filter set that you want to load, then select OK.

Listen to the result of applying the loaded filters:

1. Play a track through Amarra or Amarra Symphony.
2. Make sure that the "Filter" switch (b) on the Sonic Studio iRC Filter Bank window is set to "On". Click the switch to change it.
3. Switch between loaded filters by clicking the corresponding filter slot (c). The active filter slot has a blue indicator.
4. Gain – Because the filters files you create in iRC Measure may cause the output to overload, you may need to reduce the overall gain of a filter. Typing – (minus key) and entering a numerical value, then enter, turns down the overall output gain of Amarra or Amarra Symphony.



You can see the output level of Amarra by clicking on the M button in Amarra Symphony and use it to accurately set the Gain. We've prepared a special Pink Noise file at 0 vu level for you to calibrate the gain of each filter. This test file can be downloaded here:

[Download Gain Calibration File](#)

Chapter 4..... Understanding more

4.1 Impulse response

The impulse response measures how a transient such as a drum beat is reproduced in the room. Reflections, diffraction, resonances, misaligned drivers, etc., combine to smear out the transient. As the name indicates, the impulse response shows how the system and room responds to an impulse input signal. An ideal speaker adds no ringing, coloring, or time smearing to the recording, so its impulse response should look just like the input impulse.

The similarity between the different loudspeakers' impulse responses at the listening position affects the perception of stage and image. The more similar the impulse responses, the more easy it is to trick the brain that the loudspeakers are not really there, and that the sound emanates from a virtual stage spanned by the physical speakers.

The performance of Amarra iRC can be very successful in making your system response resemble that of an ideal speaker due to the robust design of so-called mixed-phase filters. The result of applying Amarra iRC can be viewed in the iRC Measure application, by clicking the IMPULSE button in the Filter Design tab.

4.2 Magnitude response

The magnitude response (or more commonly known by the imprecise term "frequency response") measures how much each frequency component, or tone, is attenuated. A good magnitude response should be as smooth as possible. Otherwise, different tones are reproduced with unequal strength, and the music is subjected to undesired coloration.

4.3 Mixed-phase filters

Infinitely many different filters can be designed to have the exact same magnitude response. They differ only in their impulse response. Therefore, it is useful to classify filters according to how their impulse responses behave.

Two commonly used filter classes in audio applications are minimum-phase filters and linear-phase filters. They are two special cases that are relatively easy to design, but that come with tightly constrained impulse response characteristics. A minimum-phase filter, by definition, is constrained to apply only the smallest possible delay to the signal given a desired magnitude

response. A linear-phase filter, by definition, applies a delay that is constant across the whole frequency range. Therefore, neither of these two filter designs can make a desired change to the phase or impulse response, unless the desired change is exactly the particular change they make by definition. Minimum-phase and linear-phase filters may even worsen both the impulse response and the magnitude response of a system, simply by applying their magnitude response corrections at the wrong time.

A more difficult design task is to make a mixed-phase filter that matches a desired magnitude response while also having a customized impulse response. A properly designed mixed-phase filter can make significant improvements to the impulse response of a sound system at the listening position:

- Misaligned drivers in multi-way loudspeakers can be corrected by automatically applying different delays to different frequency ranges.
- Energy from direct wave and early reflections can be optimally combined to arrive as a single wave front to the listener.

Amarra iRC uses mixed-phase filters to optimize the impulse response while applying a desired magnitude response.

4.4 Target curve design guidelines

In the iRC Measure application, the desired magnitude response for each loudspeaker can be drawn manually. The reason for providing this feature, instead of just optimizing for a flat magnitude response, is that different loudspeakers and different rooms may require slightly different target curves for the best result.

Normally you want to have the same target curve for identical pairs of channels like the left and right front speakers. Therefore, these are automatically grouped together by the iRC Measure application. Correcting for differences between the channels will often give a substantial improvement in the stereo image.

The shaded regions in the target editor illustrate regions where the magnitude response will be left untouched. These regions are adjustable by dragging in the handles on the shaded regions. Normally you want to correct the whole spectrum that is within the frequency limits of the loudspeaker.

All loudspeakers tend to have a low frequency limit, below which the response is dropping rapidly. It is important to not boost the bass too much under this low frequency limit, because it can easily overdrive the loudspeakers and lead to distortion. iRC Measure application tries to identify the frequency where the response starts to drop and the automatically generated target curve and correction frequency limits are adjusted accordingly.

If there is noise present during the measurements, this will often be visible in the measured frequency response as increasing low frequency levels below the loudspeaker low frequency limit. This is not part of the loudspeaker response so this frequency region is better left untouched.

Some guidelines to adjusting the target curve are as follows:

Even small changes in the target magnitude response can give audible results. It is worthwhile to tweak the target in order to address even the smallest nuance in the magnitude response.

Avoid sharp peaks in the target curve, as they may result in annoying tonal components in the frequency response. Generally you want to have a smooth target curve.

A target curve that is slightly tilting down towards high frequencies (like the auto-target) is often preferable - a flat target often sounds too bright. A loudspeaker with a flat on-axis response will usually have a slightly tilting in-room response. You can experiment with the amount of tilt, especially in the treble region, to get a good tonal balance in your room.

If you have strong room-resonances in the low frequency region, completely eliminating these may make the sound thin in comparison. You may want to apply a slightly increasing low-end below 100 Hz.

If you have dips in the magnitude response, sometimes it can sound better to not fill these in completely.

4.5 Loudspeakers in rooms

The topic of sound reproduction in small rooms, such as a living room as opposed to a concert hall, is huge. The room will define how reproduced music is perceived. Roughly, the effect of the room on the sound can be divided into two parts - the effect on frequency response (timbre, coloration) and the effect on spatial aspects of sound (spaciousness, envelopment, reverberation). Both parts are affected by speaker placement and listener position.

4.5.1 Loudspeaker placement

Correct placement of the loudspeakers in your room is vital to get the best possible sound. Therefore it is often worthwhile to experiment a bit with the loudspeaker placement. Always use the speaker manufacturer, acoustician or audiophile consultant's recommendations as a starting point.

4.5.2 Sweet spot and dispersion

The loudspeaker response varies with position in a room. The sweet spot is the region where the sound is perceived as best and with very little variations. Outside of the sweet spot, the sound character deteriorates and is quite different from that within the sweet spot.

Room correction systems cannot extend the size of the sweet spot! The dispersion of the speaker cannot be changed, unless several speakers are used together as a "super speaker". However, Amarra iRC can still improve the sound quality outside the sweet spot.

4.5.3 Reflections – Good and bad

The sound that is radiated from the loudspeakers will be reflected by the walls of the room and eventually reach the listener at different times and at different angles, depending on how many times the sound wave has been reflected off the walls.

Early reflections from angles close to the loudspeaker and diffraction reflections from the loudspeaker box itself are detrimental to perceived sound quality and lead to undesirable coloration of the timbre of the sound.

Side reflections and late reflections are generally not as detrimental and can even help in improving perceived sound quality. The reason for this difference lies in our hearing:

- In a reasonably sized room, we can tell a side reflection from a direct wave because of the time and direction differences which our brain has learned naturally to separate. These reflections often contribute to a larger, more enveloping sound stage. A small amount of reverberation is generally considered desirable in a room for sound reproduction. Amarra iRC leaves the late reflections almost untouched. It only corrects for their spectral coloration.
- Early reflections and loudspeaker diffraction, which are very close in both time and angle to the direct wave, make the sound more difficult for the brain to process properly. However, Amarra iRC corrects for these shortcomings by optimizing the early arriving sound at the listener position.

At bass frequencies, room reflections may build up and create what is known as standing waves or room resonances. Characteristic of these is that at certain frequencies, the bass is strong in some parts of the room and weak in other parts. Amarra iRC mitigates the effect of standing waves inside the listening area.

4.5.4 Useful tips

Room acoustics is a complicated field but there are a few simple things that one can do to improve the listening experience. Generally it is good to have quite much furniture on the walls and try to use soft furniture where possible. A large, thick rug on the floor is good.

Many loudspeakers benefit from being moved out from the front wall a bit, and also to be placed at some distance from side-walls. Experiment with toe-in: Many loudspeakers sound the best with the speakers pointing straight at the sweet spot or even slightly in front of it. This helps to stabilize the stereo image when you are listening outside of the sweet spot.

The listening location is important as well, having the sofa placed right up against the back wall is not ideal since there will be very early reflections coming from behind and also the sound timbre changes a lot close to the walls.

4.6 Recommended reading

For the interested reader, a good book for learning more about how loudspeakers and rooms interact and how to achieve good sound is "Sound Reproduction, Loudspeakers and Rooms" by Floyd E. Toole (2008).

Chapter 5..... Troubleshooting

If you run into any trouble, then please first refer to the common errors below.

If the problem remains, we would appreciate it if you would send us a description of the problem, perhaps including a supporting screenshot, and also provide information of the Amarra iRC version, Mac model and OS version, and the DAC you're using.

Submit a support request on http://www.sonicstudio.com/amarra/amarra_supportportal

5.1 Troubleshooting the iRC Measure application

5.1.1 Sound system setup problems

Problem	Possible Cause	Fix
DAC device does not show up in selection list	Cable disconnected Power to DAC is OFF Driver not installed properly	Connect a suitable cable between the DAC and the computer. Connect a power source and switch on If the problem persists, then refer to the manual of the DAC to re-install the device driver software.
Error message: "Could not open recording device, make sure it is not in use..."	Device is in use by other application Two USB devices share the same USB controller	Close all other audio applications, press the "Rescan" button in the "Sound System" tab, and try again. Try connecting one of the devices to a different USB port managed by a different USB controller.

5.1.2 Playback problems

Problem	Possible Cause	Fix
<p>No sound from level test or measurement playback</p> <p>Caution: To protect ears and equipment, never switch on or connect devices at a high volume setting!</p>	<p>Audio cable disconnected</p> <p>Amplifier is OFF</p> <p>Wrong source selected on preamplifier</p> <p>Volume too low</p>	<p>Connect audio cable to sound card output and to sound system (pre)amplifier input</p> <p>Switch on amplifier</p> <p>On the preamplifier, select the source corresponding to the input that the sound card has been connected to</p> <p>Increase volume on</p> <ul style="list-style-type: none"> (a) Preamplifier (b) DAC <p>If this does not help, then reduce the volume to a reasonable level before attempting any other fixes!</p>
<p>Measurement signal sounds distorted</p>	<p>Preamplifier input is overloaded</p> <p>Loudspeakers are distorting</p>	<p>Decrease the sound card output volume</p> <p>Decrease the playback volume</p>

5.1.3 Measurement problems

Problem	Possible Cause	Fix
Level test meter does not react Switch off sound playback while attempting to fix this problem. Instead, clap your hands or make some other sound to detect a reaction on the level meter.	Microphone disconnected Microphone needs phantom power Microphone preamplifier is OFF Volume too low	Connect microphone to mic preamplifier and connect microphone preamplifier to sound card or to computer. Enable the 48V phantom power on the microphone preamplifier input. Depending on the microphone preamplifier, this could be a physical button or a software setting. Switch on microphone preamplifier
Measurement does not complete successfully	Error message	Follow instructions given in the error message.

5.1.4 Filter design problems

Problem	Possible Cause	Fix
Filter optimization does not complete	Client is offline Firewall is blocking access	Connect the client computer to the web Disable firewall or set it to allow HTTP traffic

5.2 Troubleshooting the Sonic Studio iRC Filter Bank window

5.2.1 Account login or authorization problems

Problem	Possible Cause	Fix
Validation server is not accessible	Client is offline	Connect the client computer to the web
	Firewall is blocking access	Disable firewall or set it to allow HTTP traffic

5.2.2 Playback problems

Problem	Possible Cause	Fix
Sound is not clean	Audio device driver needs updating	Update your playback device driver to latest stable version Sometimes, there may be new drivers that have issues
	Sound is clipping or distorted	Reduce the Gain by 1 dB increments in the Sonic Studio iRC window until clipping goes away. Use the Meters in Amarra Symphony to verify levels.
	Sound card has a sound effect enabled	Disable all sound card sound effects. This may either be a physical setting on the sound card or a driver setting in the operating system.
Output sounds unfiltered	Amarra or Amarra Symphony iRC processor is not running	Click the iRC button and launch Amarra iRC
	"Filter" is set to "Off" in Amarra or Amarra Symphony iRC Filter Bank	Open the Amarra or Amarra Symphony iRC Filter Bank and set "Filter" to "On"

Chapter 6.....Appendix A

6.1 Operational Information

6.1.1 Measurement Sample Rate

If possible, make all measurements at 48 kHz. Amarra's iRC processor automatically interpolates the filter files for all sample rates, so there is no need to make measurements for each sample rate available on your DAC.

6.1.2 Saving iRC Measure Projects

Save your iRC Measure Projects to Documents/Dirac/Projects for easy recall.

Backup your Project files! Projects can be moved between computers, so saving these files to a backup device or CD is a good idea should your computer fail.

6.1.3 Saving Filter Files Created in iRC Measure

Save filter (.filter) made in iRC Measure to Documents/Dirac/Projects for easy recall.

Filter files cannot be exchanged between computers. Instead build new filters by opening the Project file your filter(s) was made from on the other computer, optimize and resave new filter files.

6.1.4 Mic Recommendations

To use iRC Measure software you need an omnidirectional full-bandwidth measurement microphone. We recommend that the frequency response is within ± 1 dB in the area of the speaker's frequency response range.

If the frequency response is not within ± 1 dB within the speakers frequency response range, we recommend that you use a calibration file. iRC Measure supports using a microphone calibration file, as long as it represents the frequency response of the

microphone and not the inverted frequency response. If your microphone does not have a flat frequency response it will give you false measurement information and you will have to consider this when setting your target curve.

NOTES ABOUT MICROPHONES:

- A live performance cardioid-pattern vocal or instrument mic is not recommended for use with iRC Measure.
- Use 48 kHz as the sample rate for measuring your room with Sonic Studio's iRC Measure app. 48 kHz is the default setting for iRC Measure. The iRC Filter Bank in Amarra Symphony automatically interpolates all sample rates from the 48 kHz filter file. This eliminates the need for an individual filter file for each sample rate.
- Sonic Studio recommends an 8 hour burn-in time prior to using all USB-connected mics for measurement.
- USB mics usually include a 2 meter (6 foot) USB cable. You may need to purchase a longer cable for measurement use.
- Always use a stage-type microphone stand similar to the On-Stage Stands MS7701B Euro Boom Microphone Stand to firmly place the measurement microphone in the indicated positions. Do not hold the microphone in your hand during measurements as this will likely cause handling noise and taint the measurements significantly.

XTZ Audio has a cost-efficient USB-connected microphone kit that includes a the calibrated mic, USB pre-amplifier, cables, clip, and storage case.

| [Buy Now - Europe](#) | [Buy Now - USA](#) |

[Download the XTZ Mic Pro Calibration File](#)

Note: the XTZ will work with both Dirac Live and iRC Measure.

The UMIK-1 is a 'Plug & Play' omni-directional USB microphone designed for acoustic measurement. This microphone provides low noise and accurate results you can rely on. Forget about driver installation, OS compatibility and un-calibrated mics. The Umik-1 is a USB Audio class 1 device automatically recognized by the Mac Operating System. After purchase, you can download a calibration file specifically for your UMIK-1 ensuring an accurate measurement.

| [Buy Now](#) |

| [How To Use The UMIK-1 With Amarra Symphony with iRC](#) |

- If you already have a microphone pre-amplifier, we recommend an individually calibrated Behringer ECM8000: [Information](#)

- [Click here to download the Behringer microphone calibration file](#)

- For reference use we recommend the Earthworks M23: [Information](#)

iRC & iRC(b) User Manual Index

Symbols

48 kHz 12, 13, 32, 33

A

acoustical 13, 16, 17, 18

Activation 11

algorithm 18, 19

amplifier 9, 11, 12, 16, 18, 29, 34

B

Behringer ECM8000 34

C

calculate 18

calibration file 9, 15, 32

configuration 14, 19

correction 5, 13, 16, 19, 24, 26

D

DAC 9, 11, 12, 13, 16, 28, 29, 32

device 14, 15, 28, 31, 32

Dirac 4, 5, 20, 32

E

Earthworks M23 34

effects 17, 31

EQ 5, 17

F

filter 9, 10, 13, 18, 19, 20, 21, 23, 24, 32
Filter Bank 21, 31
filter design 18, 19
frequency 5, 15, 18, 19, 23, 24, 25, 32, 33
frequency limits 19, 24

I

impulse 5, 13, 18, 19, 23, 24
Installation 7, 11
Installer 9
iRC 4, 5, 13, 21
iRC(b) 4, 5, 13, 21
iRC Measure 4, 5, 7, 9, 10, 11, 12, 13, 14, 15, 16, 18, 21, 23, 24, 28, 32, 38

L

linear-phase 23, 24
linked channel tab 19
listening 5, 14, 15, 16, 17, 18, 23, 24, 26, 27

M

Magnitude response 23
measurement 9, 15, 16, 17, 18, 29, 32, 33
microphone 9, 10, 12, 14, 15, 16, 17, 18, 30, 32, 33, 34
minimum-phase 5, 23
Mixed-phase filters 23

O

omnidirectional 17, 32
optimization 13, 20, 30
Output channel 15

P

phase 5, 23, 24
pre-amp 12

R

Recording 14
Recording Channel 14
Recording Device 14
Reflections 23, 26

S

Sample Rate 32
Skype 17
SPECTRUM 19
Sweet spot 25

T

target 18, 19, 20, 24, 25, 33
Target curve 19, 24
target frequency curve 19
timing 5
Troubleshooting 7, 11, 28, 31
Tutorial 10

U

UMIK-1 33

X

XTZ 33

©2014 Sonic Studio, LLC — All rights reserved. No part of this document may be reproduced, stored in a retrieval system or transmitted in an form or by any means, without the prior written permission of the publisher. Sonic Studio, Amarra, iRC Measure and the Sonic Studio and Amarra logos are trademarks of Sonic Studio, LLC.

All other company or product names are either trademarks or registered trademarks of their respective owners.