



BTS-303

WALL-MOUNTED BLUETOOTH SPEAKER



User Manual

Contents

 
Safety Information	1
Placement methods	3
Panels and remote control	4
General operation	5
Operations in different modes	6
Trouble shooting and Specifications	7

Accessories

User manual *1; Remote control *1; Power adaptor *1.

Warning


Please read and understand all the warnings given in the following and those marked on the unit. This unit has been manufactured and designed to assure personal safety.




Only use the power by sign on User Manual or system.



 Unplug the set from the outlet when you are not using it for a long time.



 
Never open the cover, avoid metals dropping in, e.g. needle, hairpin, coin.



Keep the unit and power plug away from water.




Avoid direct sunlight and near heater.

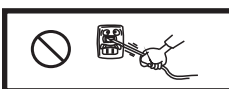

Protect power cable: avoid high pressure and standing on; do not pull & bend excessively.

Safety instructions

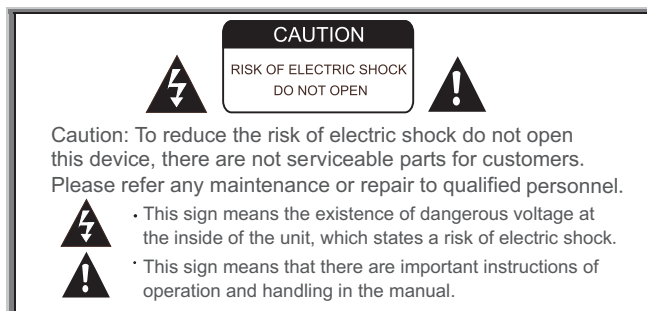

1. All the safety and operating instructions should be read carefully before use.
2. The safety and operating instructions should be retained for future reference.
3. All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water- The appliance should not be used near water or moisture, such as in a wet basin or near a swimming pool.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install the unit in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat Registers, stoves, or other apparatus, including amplifiers, that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug the apparatus during lightning storms or when not in use for long periods of time.
12. Send product to a qualified service department. Servicing is required when the device has been damaged in any way, such as power supply cord or plug is damaged.
13. Please keep the unit in a good ventilation environment.
14. These servicing manual are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operation instructions unless you are qualified to do so.
15. The main plug is used as a disconnect device, the disconnect device should remain readily operable.
16. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to the electrical earth.
17. The batteries (if included) should not be exposed to excessive heat such as sunlight, fire, etc.
18. The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
19. To reduce the risk of fire or electric shock, do not expose to rain or moisture.

Placement methods

Method 1: Place flat on a table.


Please place the unit on a stable table, and out of the reach of children.

Be careful not to expose apparatus to liquids, fire, chemicals, rain or moisture.


Method 2: Place on a the wall.

The unit can be mounted to a wall with 2 screws (not supplied). Refer to the below picture.


1. Find a wall with power supplies within the length of the power cable.
2. Insert a USB stick if you want to use the USB function.
3. Find 2 screws (not supplied) fitting the size of the mounting holes.
4. Measure the length between the mounting holes.
5. Mark the mounting holes on the wall (using a pencil).
6. Hit the screws in the wall.
7. Insert the power cable into the power socket to connect the unit to power.

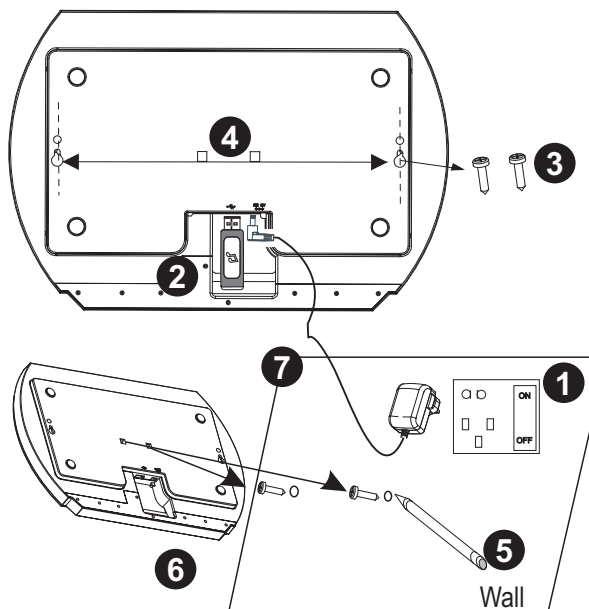


Panels and remote control

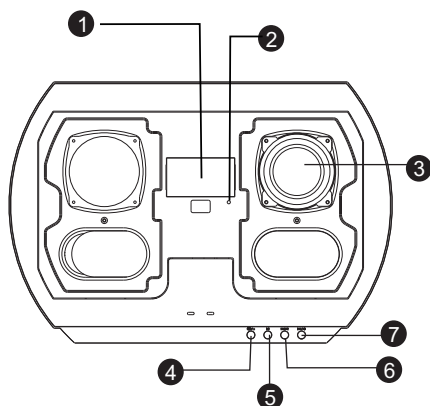

- 1. Display screen
- 2. Indicator light
- 3. Speaker
- 4. Source
- 5. Play/Pause
- 6. Previous
- 7. Next

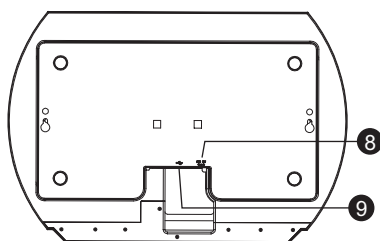

 - 8. Power input
- 9. USB port

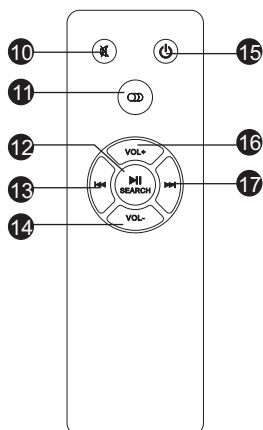

- 10. Mute
- 11. Source
- 12. Play/Pause
- 13. Previous
- 14. Volume-
- 15. Standby
- 16. Volume+
- 17. Next

General operation

Standby mode

Press the **STANDBY**  button to switch on the unit.

Press  on remote or press and hold  on the panel to put the unit into standby mode.

Switching modes

To switch between the modes: **Bluetooth**, **USB (with USB stick inserted)**, and **FM**, press the **SOURCE**  button.

Adjust the volume

Press and hold the **VOL+/-** buttons to adjust the volume level.

Mute the sound

Press the **MUTE**  button on the remote control to mute the sound, press again or press **VOL+/-** buttons to resume the volume level.

Skip tracks

Press the  or  buttons to skip to the previous or next track.

Play or pause the music

Press the  button to pause or resume the playback.

TIME SETTINGS OPERATION

1. Set the unit into standby mode.
2. Press and hold the **▶|** button to activate the time setting and enter the time setting interface.
3. Press **VOL+/-** buttons to select the digits in the interface to **HOURL:MINUTE**.
4. Press **▶|** button briefly to confirm and skip to the next digit selection.
5. When finished selecting the digits, press and hold the **▶|** button to confirm the settings.

Operations in different modes

FM OPERATION

1. Press the **SOURCE** button to enter FM mode.
2. Press and hold the **◀/▶** buttons on the panel to tune the frequency.
3. Press the **◀/▶** buttons on remote control to skip the stations.
4. Press **⏮** button to search stations from low to high frequency. Press again to stop.

USB OPERATION

1. Insert the USB stick into the USB port at the back of the panel.
2. Press the **SOURCE** button to enter USB mode.
3. Once the USB stick is inserted, the unit will detect the files and start playing.

NOTE:

1. Depending on the amount of data and media speed, it may take longer for the unit to read the file/s, this is not a malfunction.
2. Even though some files are format supported (Mp3), the unit may not play because of the format compatibility.

BLUETOOTH OPERATION

1. Put your Bluetooth device (e.g. smart phone) on the 10m search range.
2. Turn on the Bluetooth function on your phone.
3. Open the Bluetooth searching interface on the phone and start searching the unit.
4. Find the device named **BTS-303** from the found list.
5. Some device may ask you to select **OK/YES/PAIR** to pair the phone with the unit. For some devices, the system may ask you to input the pin "0000" (four zeros) as password.
6. When the devices are paired successfully, you will hear a audible sound and the indicator light in blue.

NOTE:

1. The unit can only be connected and play contents from one device at a time.
2. Some devices may connect immediately in pairing, some may take as long as 60 seconds to connect, this is not a malfunction.

Trouble shooting and Specification

Trouble shooting

Power supply can not be turned on

- * Make sure that the power cord is fully inserted in the power outlet.

The remote control does not work

- * Battery is used up.
- * The front end of the remote control is not aimed at the infrared reception part of the unit.

No sound

- * Make sure that the sound system is set to the correct mode.
- * Turn your unit off, then back on.

The unit does not work at all

- * The embedded microcomputer may have failed because of a lightning strike, static, or other interference.

Specifications

Input voltage	AC~240V/50Hz
Power consumption	9W
Frequency range	87.5-108.0MHz
Bluetooth range	10 meters
Remote control range	7 meters

(Use only the power supplies listed in the instructions)