 




Roadmaster

**9" Roof Mount TFT LCD
Monitor & DVD Player**

RM-MD900

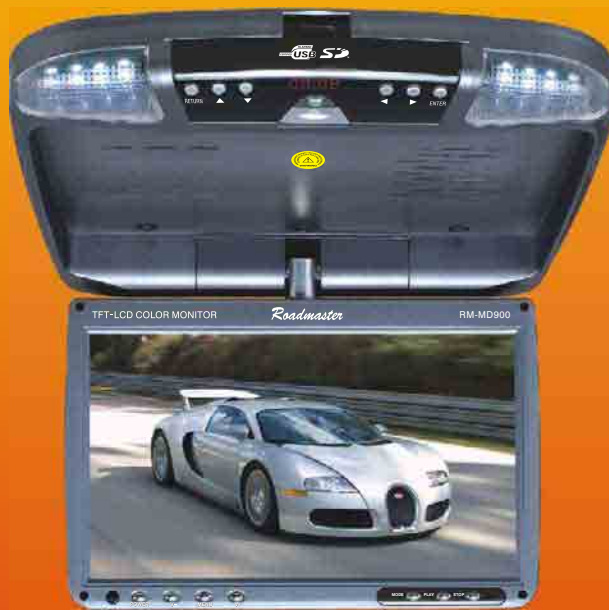

WARNING! HAZARD!
DO NOT OPERATE THIS UNIT UNLESS VEHICLE
IS PARKED IN SAFE AND LEGAL AREA.

USER'S MANUAL

Compatible with

DVD/SVCD/DVCD/VCD/CD/MP3/MP4/JPG/DivX

封二空白

TABLE OF CONTENTS

GENERAL INFORMATION	2-4
REMOTE CONTROL	5 & 6
OPERATION BUTTONS	7
WIRING INSTALLATION	8
DVD/SD CARD/USB LOCATIONS	9
MULTIDISC PLAYER OPERATION	10-14
MULTIDISC PLAYER SETUP	15
MP3 PLAYER OPERATION	18
SD CARD/USB OPERATION	19
TROUBLE SHOOTING	19
TECHNICAL SPECIFICATIONS	20

Roofmounting monitor with multi-media player

Please read the manual carefully before using and keep it well for your future reference.

Important instruction for safely:

For your safety, do not turn on, watch or operate the unit while driving. In some countries and regions, it may be against the laws. The product is comprised of many precision electronic components. Self-renovation or disassembling may cause malfunction to the device.

Note:

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

High voltage inside! Do not open or dismantle the unit. Do not repair yourself. Refer servicing to qualified personnel.

The product is a laser product. Make sure to read instruction manual before operating.

Do not try to open the covers to avoid direct laser radiation.

When the cover of the unit is opened or the interlocking system gets unlocked, the laser light can be visible. Direct vision of laser beam is hazardous to your eyes.

In order to prolong the life of the unit which has a large scale of integrate circuits and precision pick-up device, Frequent turn ON/OFF might damage the unit. More than 5 seconds interval is required.

Note:




LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicate defects or faults.

Roofmounting monitor with multi-media player

Features:

1. The display unit has built in DVD player.
2. Built in USB 2.0 host and SD card reader.
3. Built in wireless FM Audio transmitter.
4. Built in IR Audio transmitter.
5. AV input channel

Discs for playback

Type	Icon	Content	Size
DVD		Video & Audio (dynamic image)	12cm / 8cm
VCD		Video & Audio (dynamic image)	12cm / 8cm
CD		Audio	12cm / 8cm
MP3	MP3	Audio	12cm / 8cm
MP4	MP4	Video & Audio (dynamic image)	12cm / 8cm

Disc-related terms

- **Title (DVD only)**

The main film content or accompanying feature content or additional feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily.

- **Chapter (DVD only)**

Sections of a picture or a musical piece that are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a chapter number, enable you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

- **Track (Video CD and audio CD only)**

Sections of a picture or a musical piece on a video CD or an audio CD.

Each track is assigned a track number, enabling you to locate the track you want.

Diagram of DVD disc


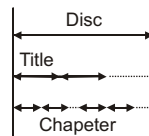 


Diagram of VCD/CD

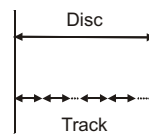 

Precaution

Safety

Please check the voltage in the car as the machine required before playing.

Please hold the plug tightly, and avoid dragging the power cords when insert the plug in or pull out it from the jack.

This machine has laser system which is harmful for the eyes, please do not open the crust. Any repair you need, it is necessary to ask for the specialized personnel.

Roofmounting monitor with multi-media player

Placement

The storage temperature ranges from -30°C to -75°C, operating temperature ranges from -10°C to 55°C.

Please keep the pick-up clean and away the dust. If so, the cleaning disc can help deal with this problem. For detailed operation instructions for cleaning the pick-up, you can consult the user's manual of pick-up cleaning disc.

Do not expose this unit to rain or moisture. Avoid dropping or impact to the unit.

Vapor on convex mirror and trouble shooting

There's liquid on convex mirror in following cases, but it is normal phenomena.

Due to sudden change in temperature and car air-conditioner is turned ON their will be a vapor formation on convex mirror. To de-vaporize it please take out the disc and power ON the unit about one hour.

Please wipe the machine with soft and dry cloth dipped optional washing liquor in case of scratching the screen.

Note

Handling discs:

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.

Storing discs:

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs:

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out. Do not use strong solvents such as alcohol, benzine, thinner.




Brief Instructions

Checking the accessories

remote controller	1
user's manual	1
rubber pillow	6

Roofmounting monitor with multi-media player

 
Instructions for remote control (shown as pictures)

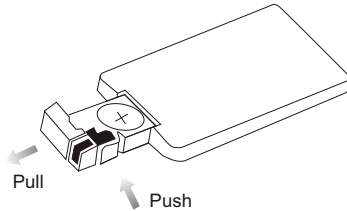

- * Press the catch and at the time pull out the battery tray. Insert the battery, type CR2025 battery with the stamped (+) mark facing upward. Insert the battery tray into the remote control.
- * Direct the remote controller to infrared receiver window of the machine within 60 and 3 meters, without any barriers between them.
- * Commonly, the life-span of the batteries is about one year, always replace the old set of new batteries.
- * Please take out the battery when not using the remote controller for a long time.
- * Please pull out the separation film before when using the remote controller.

Warning:

 Store the battery where children cannot reach. Do not recharge, short, disassemble or heat the battery or dispose it in a fire.

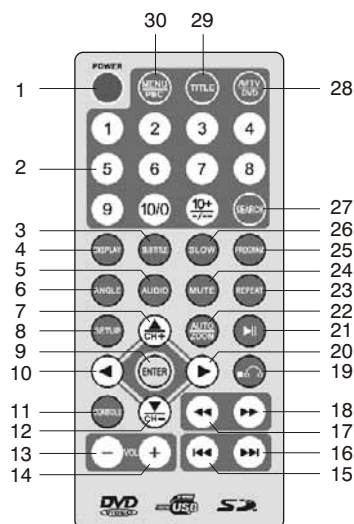

Roofmounting monitor with multi-media player

REMOTE CONTROL FUNCTION

1. POWER button: Press the POWER key to turn the power ON/OFF.
2. NUMBER button: In the DVD/SD/USB mode by pressing these button you can directly select the program. In TV mode, you can directly select the TV channel.
3. SUBTITLE button: muti-subtitle select.
4. DISPLAY button: show information about DVD/SD/USB/TV.
5. AUDIO button: muti-language select.
6. ANGLE button: muti-angle select.
7. UPWARD button: In DVD/SD/USB mode, press it to select the menu or program.
In TV mode, press to search upwards the TV channel.
8. SETUP button
9. ENTER button
10. LEFTWARD button: Press it to leftward select the menu or program.
11. CONSOLE button: Press CONSOLE that will display the select subtitle:
BRIGHTNESS-CONTRAST-SATURATION-HUE-FM-IR-RESET.
12. DOWNWARD button: In DVD/SD/USB mode, press it to select down the menu or program. In TV mode, press it to select down the channel.
- 13.14. VOLUME button: Press the button to increase or decrease the volume.
- 15.16. PREVIOUS/NEXT button.
- 17.18. FAST BACKWARD/FAST FORWARD button.
19. STOP button: Press STOP for memory stop, press STOP twice to stop playing.
20. RIGHTWARD button: Press it to rightward select the menu or program.
21. PLAY button: Press once, it plays or pause.
22. AUTO/ZOOM button: in the DVD/SD/USB mode, press it the picture can be zoomed. In the TV mode, press it to auto search TV channel.
23. REPEAT button: In the playing mode, press it to perform the repeated playing.
24. MUTE button: Press the key to turn on and off the volume output.
25. PROGRAM button.
26. SLOW button.
27. SEARCH button.
28. AV/TV/DVD button: Select among these three modes.
29. TITLE button.
30. MENU PBC button.

Roofmounting monitor with multi-media player

 
MONITOR DESCRIPTION:



1. REMOTE WINDOW
2. POWER BUTTON
3. VOLUME DOWN
4. MENU (PRESS TO DISPLAY OSD BRIGHTNESS, CONTRAST...CONTROL)
5. VOLUME UP
6. MODE
7. PLAY/PAUSE (IN TV MODE ,PRESS TO SELECT DOWN TV CHANNEL)
8. STOP
9. RETURN
- 10,11. RIGHT/LEFT DIRECTION CURSOR
12. OPEN (PRESS TO FLIP DOWN YOUR SCREEN)
13. LIGHT SWITCH AND TIME ADJUSTMENT
- 14,15. UP/DOWN MENU OR PROGRAM SELECTION
16. RETURN

Roofmounting monitor with multi-media player

Wiring Diagram

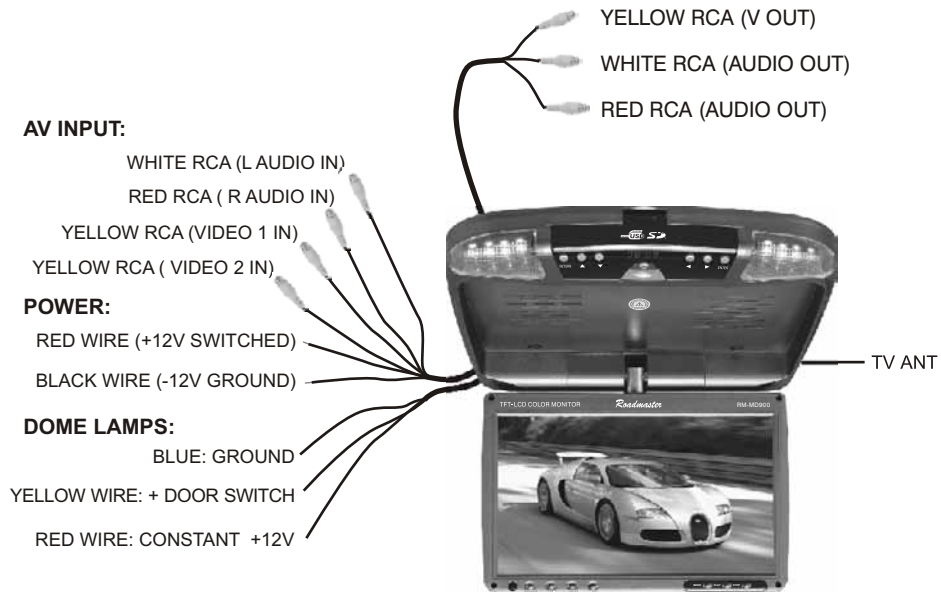

* FOR BETTER UNDERSTANDING ALL WIRES ARE PROPERLY TAGGED.

☀ key: LIGHT SWITCH / TIME ADJUSTMENT

A. Light switch

During initialization mode; Press ☀ shortly to switch on/off light.

B. Time adjustment

During any mode, Press ☀ 3 seconds to enter time adjustment mode.

The HOUR is twinkling, Press ☀ shortly to adjust the correct number

Press ☀ 3 seconds to finish hour adjustment and adjust MINUTE.

The MINUTE is twinkling, Press ☀ shortly to adjust the correct number.

 
Press ☀ 3 seconds again to finish time adjustment.

Note: This machine is suitable to some types of the car not all types.

Roofmounting monitor with multi-media player



Left-right 320° Rotating

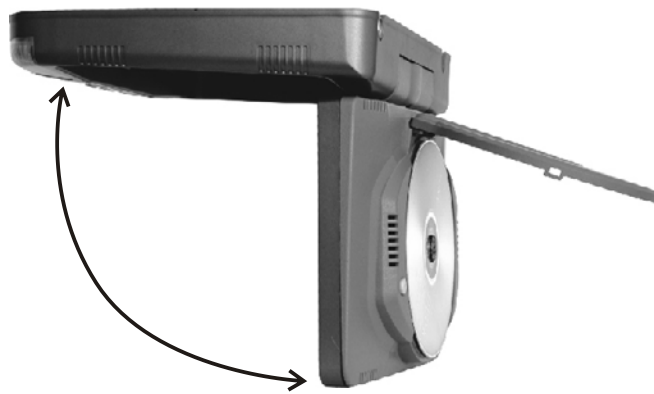

Up-down 105° Flipping

Roofmounting monitor with multi-media player

Basic Operation

Make sure that you have correctly connected your unit as described earlier in this book.

 
Turn on the power, and place the disc in.

- 1 press power button to turn ON (Power Indicator is OFF), display is ON and player will start loading the disc.
- 2 While playing DVD discs, please select one item in DVD menu or title menu. while playing VCD2.0 or CD, this player plays one by one.
- 3 Press Direction Buttons or the Number Buttons to select the desired item, then press Enter or Play to start.
- 4 The player will play automatically. Press Pause to stop temporarily, press again Pause or Play to cancel pause. while playing DVD disc, press stop for memory stop, press Play for memory play, press Stop twice to stop playing.


Note: To stop playing DVD by pressing Stop for twice.

Fast Forward/Fast Backward

While DVD disc is playing, Press Fast Forward to play at 2X, 4X, 8X, 16X, 32X speed circularly, screen shows as following:



 Press Fast Backward to play at 2X, 4X, 8X, 16X, 32X speed circularly, screen shows as following:



Press Play to shift to normal playing mode.

Slow

While DVD disc is playing, press Slow button, picture shows at 1/2, 1/4, 1/8, 1/16 speed circularly, the screen shows as following:



While VCD disc is playing, press Slow button, picture shows at 1/2, 1/4, 1/8, 1/16 speed circularly, the screen shows as following:



Note: Press Play to shift to normal playing mode.

Previous/Next

To select previous item or chapter by pressing Previous button, to select next item or chapter, press Next button.

Roofmounting monitor with multi-media player

Note:

When a title on a disc has more than one chapter or a disc has more than one track, using chapter function can move to another desired chapter/track to play. If there is no Chapter/track on the disc, the above functions will be disabled automatically.

Functions Explanation

Menu/PBC

 
- (1) Press Menu/PBC to return to the main menu or the Title menu while playing DVD disc.
- (2) While playing VCD disc, Press Menu/PBC to turn PBC on or off. (Unfunctional in DVD disc playing)
- (3) Only return to the main menu to select one song in PBC-on mode.
- (4) Pressing Number buttons to select one song in PBC-off mode.

Title/Return

- (1) While playing DVD disc, press Title to enter into title menu directly, select the desired item by pressing the Direction buttons or Number buttons.
- (2) While playing VCD2.0, press Title to return to previous menu; however this function is disabled in PBC-off mode (Only for functional disc).

MODE

Press MODE ,it will display a dialogue as below

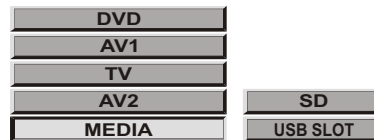

It is the interchange menu between DVD mode ,AV IN mode and MEDIA mode. Select DVD, will enter to DVD mode , You can load a disc and will play select AV IN ,will enter to AV IN mode,When USB or SD/MS found ,you can select media and then choose USB or SD/MS to play.

Display

User can check the elapsed time or remaining time of current title and chapter by pressing Display, Press Display continuously, the screen shows as below:

- (1) Playing DVD disc

Press Display for the first time, screen shows the elapsed time of current title.

Title 03 / 10 Chapter 01 / 04 0:06:39

Press Display for the second time, screen shows the remaining time of current title.

Title 03 / 10 Chapter 01 / 04 0:37:34

Roofmounting monitor with multi-media player

Press Display for the third time, screen shows the elapsed time of current chapter.

Title 03 / 10 Chapter 01 / 04 0:07:16

Press Display for the fourth time, screen shows the remaining time of current chapter.

Title 03 / 10 Chapter 01 / 04 0:03:26

Press Display for the fifth time to exit.

(2) Playing VCD discIn PBC ON mode

Press Display for the first time, screen shows the elapsed time.

Title 00 / 10 Chapter 00 / 04

Press Display for the second time, screen shows the remaining time.

Title 03 / 10 Chapter 44 / 04

Press Display for the third time to exit.

(3) Playing VCD discIn PBC Off mode

Press Display for the first time, screen shows the elapsed time of the current item.

Track 01 / 01 00 :04

Press Display for the second time, the screen shows the remaining time of the current item.

Track 01 / 01 45 :04

Press Display for the third time, the screen shows the elapsed time of the entire disc.

Track 01 / 01 00 :24

Press Display for the fourth time, the screen shows the remaining time of the entire disc.

Track 01 / 01 45 :24

Press Display for the fifth time to exit.

Search

Press Search, input a title, a chapter or a time, the player starts playing from the desired point to the end point.

Playing DVD disc:

(1) Search a title or a chapter

Press Search, screen shows as below:

Title 00 / 10 Chapter 00 / 04

Press Left or Right to select one title

For example: press Number button 3 to select title 3, select Chapter 1 by pressing Direction Buttons, the screen shows:

Title 03 / 10 Chapter 01 / 04

Roofmounting monitor with multi-media player

(2) Search by time

Press Search, screen shows:

Title 03/01 time : :

Title 04/01 time : :

For example: Press Number button to input 0, 1, 0, 6, 1, 8, the player will play from the point at 01:06:18

Title 08/10 time 01:06:18

(3) Playing VCD disc

Press Search to check the elapsed time for the entire disc, the item and the current item during VCD disc playing.

Press Number button to input a time, the player will play from the point you've selected.

Subtitle

While playing DVD disc with multi-subtitles, choose the desired subtitle, it shows on the screen.

⊙ Will show on the screen when this feature is not available on the disc.

Note: This feature setting is valid only for the current disc. the subtitle language can be changed from DVD setting menu.

Audio

There is multi-language feature while DVD disc is playing.

When playing discs with this function, you can select the desired voice by pressing Audio.

The left audio, right audio and the stereo shows on the screen while playing VCD disc. You can select the desired one when playing story disc with dual languages.

Note: This feature setting is valid only for the current disc which has multi-language settings.

ANGLE

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. (Only for the functional disc)

⊙ will show on the screen when this function is not available on the disc.

Zoom

In this mode, the dynamic or still picture can be zoomed in at most by 4 folds.

Press Zoom for three times, the picture is zoomed in by 2X, 3X, 4X folds per order. And press Zoom again to return to the normal playing mode.

Repeat

(1) While playing DVD disc, press Repeat for the first time to repeat playing one chapter, press Repeat for the second time to repeat playing one title, press Repeat for the third time to repeat playing the entire disc, and press Repeat to cancel.

Roofmounting monitor with multi-media player

(2) In PBC off mode:

While playing VCD disc, press Repeat for first time to repeat one song.

Press Repeat for the second time to repeat the entire disc.

Press Repeat for the third time to cancel.

Direction Buttons

Press Direction Buttons to make free selection in title, content and setup menu easily.

Note: Direction buttons on the player can perform Fast Forward/Fast Backward, Previous/Next functions.

Program

Press Program to enter into program menu, input the number of the title, the chapter or a song.

Press direction button to select the track you want to start playing.

To cancel program function, press Program to enter into program menu and select Stop.

Mute

Press Mute one or more to select mute on or mute off.

CONSOLE

Press CONSOLE button and you will be able to change the factory settings for Brightness, Contrast, Color and Hue levels and you can adjust FM transmitter and IR frequency as well with +/- buttons.

Note: By selecting RESET you will return to factory default settings.

Roofmounting monitor with multi-media player

 
Setup

Press Setup to enter into Setup page,

Move Up/Down to select the desired item,

Move Left/Right to select the desired item,

Press Enter to confirm

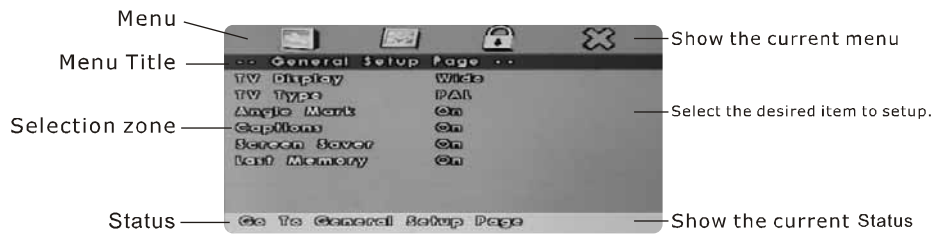

General Setup page

(1) TV Display

If the aspect ratio is 4:3, it is able to show in 16:9.

The image will be compressed horizontally, if the DVD disc system is in 16:9.

Because low-quality or pirated discs will result in bad effect, Please play high quality disc for your pleasant enjoying.

(2) TV Type



Roofmounting monitor with multi-media player

(3) Angel Mark

When Angel Mark is on, user can select a special angle for watching (only for discs with this function)



(4) Captions

Turn ON/OFF the captions

(5) screen Saver

Screen saver is to protect the screen from aging and extending its life-span. Screen Saver will be enabled while playing stops or the picture keeps unmoving for minutes.

(6) Last Memory

Disc will be played from the latest stop position in Memory-play-on mode.

Preference setup

(1) PBC

Set PBC state.

PAL/NTSC is compatible

(2) Audio

Please operate by setup menu.

Audio will be in English, French, Spanish, Chinese, Japanese, Korean, Russian and so on depending on the discs.

(3) Subtitle

Subtitle will be in English, French, Spanish, Chinese, Japanese, Korean, Russian and so on depending on the discs. User can either hide the subtitle or choose any subtitle language while playing DVD discs.



Roofmounting monitor with multi-media player

(4) Disc Menu

Disc has different languages such as French, Spanish, Chinese, Japanese, Korean, Russian, and so on, these languages can be played by this unit. And user can select any language from disc menu.

Note This function is valid to the discs which has multiple languages.

(5) Parental

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated different levels, more suitable scenes are available for selection on some discs. Ratings are country-dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.



(6) Default

Select default to restore original factory setting.



Password

The original password is 8888; please select Password to input yours.

 


Please operate by Setup menu.

Note: This function can be performing when the player is during stop.

Roofmounting monitor with multi-media player

TV Setup page

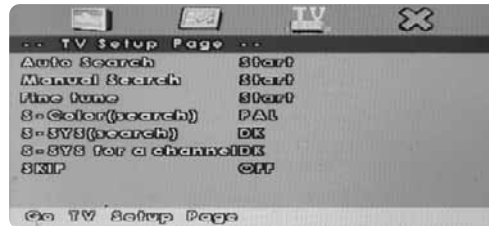

MP3

Basic Operation

MP3 can be played by List mode, Program mode and normal mode.

Select one mode during stop. Press Repeat to play, repeat playing one song or play by list.

Disc/MP4 Playing

- (1) Place the disc to the loader correctly, player begin to search the disc messages and enter into Normal Playing Mode.
- (2) Move Direction Button or use the Number button to select the desired item in submenu, Press Play to start.
- (3) Press Stop first, press Direction Button to select other submenu

Other Functions

Mute, Vol control, previous/next functions can be controlled directly from unit while MP3/MP4disc/Audio CD is playing.

JPEG

This unit can play the Picture in JPEG format. JPEG is the most popular picture compressing format currently.

Press Number Buttons to Select Pictures

- (1) Place the disc in the loader correctly, and the player starts searching messages, signal shows on the screen.
- (2) Press Number buttons to select the picture album.

Make selection by the disc menu

- (1) Place the disc to the loader correctly; player starts searching messages, Main menu shows on the screen, select from NO.1 by Direction Button, press Play to confirm.
- (2) Press Direction Buttons to select picture in current picture album, press Play to start

Roofmounting monitor with multi-media player

(3) Press Direction Buttons to select other pictures during stop.

(4) Return to previous menu by selecting File during stop. Then Press Play.

SD/USB

INSERT MMC/SD/MS or Connect USB , press MODE button , when MMC/SD/MS or USB found. You can select media and then choose MMC/SD/MS or USB to play.

Note: please do not use the removable hard disk. This will lead to abnormal working.

Trouble shooting

No Sound or bad sound effect

Please check if cables are connected properly

Please check audio shift setup.

Please adjust the receiving frequency to harmonized with the transmitting frequency.

No Picture

Check if cables are connected properly.

Video Input is not yet set up correctly.

The monitor is on or off.

Poor picture

The color is not properly adjusted; please operate the remote controller to adjust it

The disc is scratched or spotted.

The player does not work, or no disc

- Please check if DVD has not been placed backwards
- Check if disc is dirty or scratched.
- Make sure if there is no moisture inside the unit (disconnect the unit for one hour)
- Disconnect the power cord and reconnect to reset the unit from any wrong setting.

Roofmounting monitor with multi-media player

The remote control does not work properly

There is an obstacle in the path of the remote control and this unit.
Remove the obstacle. Check if remote control point to receiver or not.

The batteries in the remote control are exhausted. Replace the batteries with new ones.

Note:Please contact with the dealer or approved service center help if the troubles can't be solved by the methods offered.

Technical Specifications

Panel	TFT-LCD
Screen Size	9 inch (16:9)
Pixel	640x(RGB)x234
Temperature	Operation temperature $-10^{\circ}\text{C}\sim 55^{\circ}\text{C}$; Storage temperature $-30^{\circ}\text{C}\sim 75^{\circ}\text{C}$
Backlight	LED
Brightness	350cd/m ²
Color System	PAL/NTSC/Automatically
Midea types	CD-DA,VCD , SVCD,DVD-VIDEO,MP3,WMA,JPEG,MPEG1/2/4,DivX
Discs	DVD,DVD-R,DVD-RW,CD,CD-R,CD-RW,DVCD
Memory cards	SD
USB	USB 2.0
Audio S/N	> 80 dB
Isolation	> 65dB
Audio Input/Output	1.6V \pm 20%
Video Input/Output	1Vp_p \pm 20%/750hm
Power supply	DC12V
Power consumption	\leq 12W
Product Dimension	215mmX240mmX55mm
FM Frequency	87.7~89.1MHz
Product N.W	1.3kg

Your attention please:

The design and specifications are subject to change without notice.

封三空白

Thank you for purchasing the TFT LCD color monitor/DVD. To enjoy the features of this device and to ensure years of trouble-free operation, please read this manual carefully and follow the instructions.

WARNING:

Hazard do not operate this unit unless vehicle is parked in safe and legal area.



MADE IN CHINA UNDER LICENSE OF ATC INTERNATIONAL

www.roadmaster.biz