GARMIN

Garmin Que[®] GPS navigation software Windows[®] Mobile for the Pocket PC

application guide



Garmin International, Inc. 1200 East 151st Street, Olathe, Kansas 66062, U.S.A. Tel. 913/397.8200 or 800/800.1020 Fax 913/397.8282 Garmin (Europe) Ltd. Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9DL, U.K. Tel. 44/0870.8501241 Fax 44/0870.8501251

Garmin Corporation No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan Tel. 886/2.2642.9199 Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

 $Garmin^{\circ}$ and MapSource^{\circ} are registered trademarks and Que^m is a trademark of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.

INTRODUCTION

About the Manuals

Garmin Que[™] is designed to use Garmin GPS technology as an application with a Pocket PC to provide you with navigational guidance. Garmin Que comes with three instructions.

Setup Guide

The Setup Guide gives you software installation instructions, and other important details. Before reading the other manuals, read the Setup Guide which is included with the Installation CD.

Quick Start Guide

The Quick Start Guide tells you how to get started navigating with a convenient reference for basic features. You can carry this with you as a quick reminder of how features operate and how to access them.

Application Guide

This Application Guide describes, in detail, how to use the Garmin Que[™] application for navigation. Part of the installation CD, this document is in portable document file (pdf) form, it can be printed from as PC as a paper copy which may be of benefit when you take your device outside to navigate. (Available only on the Installation CD.)

Editor's Note:

The above manuals and guides were created using the Garmin Que operating software installed on a Pocket PC equipped with popular features and operating with Microsoft[®] Moble platform. If your make and model Pocket PC meets the minimum requirements stated below, it should operate in a manner similar to that described in these manuals and guides, but may not include some features discussed in the applications guide. Many Pocket PC features described in this guide are not essential to operation of Garmin Que and are used primarily as convenient alternate methods of operation.

It is also important that you understand the operation of your Pocket PC prior to using Garmin Que. The operation of the Garmin Que application requires understanding of standard procedures used for the Pocket PC that are not discussed in detail in the Garmin Que Application Guide. If you purchased your Pocket PC at the same time as the Garmin GPS receiver and are not yet familiar with its operation, it is strongly recommended that you learn how to operate the Pocket PC first

Minimum Pocket PC requirements for Garmin Que

Bluetooth[®] wireless technology enabled Pocket PC 2002 or Windows Mobile for the Pocket PC 2003 original and Second Edition operating system, 16 MB program memory.

IMPORTANT NOTE: The Garmin Que has been tested and found to operate in a satisfactory manner when installed in Pocket PC's that meet the minimum operational requirements stated on the product package and on page i of this guide. However, Garmin has no responsibility for the quality or the reliability of performance of those products.

A significant issue is the variance in maximum speaker volume for Pocket PCs of different manufacturers. You may find the speaker volume of your Pocket PC to be compromised by road noise and its location in your vehicle when receiving turn-by-turn voice direction prompts while navigating with Garmin Que. It is therefore recommended that you activate the "Attention Tone" feature to prepare you to listen in advance for each voice prompt. Instructions for activating the "Attention Tone" are found on Page 25 of this Guide. Other remedies may be third party devices that can amplify the speaker volume when connected to the auxiliary speaker port of your Pocket PC. Consult your Pocket PC retailer for information concerning these devices.

Touch-screen responsiveness for some Garmin Que operating features, such as slider controls, may vary from Pocket PC to Pocket PC.

Warnings and Precautions

CAUTION: Use Garmin Que[™] at your own risk. To reduce the risk of unsafe operation, carefully review and understand all aspects of this Application Guide—and thoroughly practice operation using the simulator mode prior to actual use. When in actual use, carefully compare indications from Garmin Que[™] to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety, always resolve any discrepancies before continuing navigation.

CAUTION: IT IS THE USER'S RESPONSIBILITY TO USE THIS PRODUCT PRUDENTLY. THIS PRODUCT IS INTENDED TO BE USED ONLY AS A NAVIGATIONAL AID AND MUST NOT BE USED FOR ANY PURPOSE REQUIRING PRECISE MEASUREMENT OF DIRECTION, DISTANCE, LOCATION OR TOPOGRAPHY. THIS PRODUCT SHOULD NOT BE USED AS AN AID TO DETERMINE GROUND PROXIMITY FOR AIRCRAFT NAVIGATION.


CAUTION: The electronic chart is an aid to navigation and is designed to facilitate the use of authorized government charts, not replace them. Only official government charts and notices to mariners contain all information needed for safe navigation – and, as always, the user is responsible for their prudent use.

MAP DATA INFORMATION: One of the goals of Garmin is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify as required in product literature and copyright messages displayed to the consumer. Virtually all data sources contain inaccurate or incomplete data to some degree. This is particularly true outside the United States, where complete and accurate digital data is either not available or prohibitively expensive.

WARNING: The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The system is subject to changes which could affect the accuracy and performance of all GPS equipment. Although Garmin QueTM is a precision electronic NAVigation AID (NAVAID), any NAVAID can be misused or misinterpreted and, therefore, become unsafe.

WARNING: This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at http://www.garmin.com/prop65.

Important! Because Garmin Que can be used for vehicular navigation, important safety considerations must be observed. Please read and observe the instructions on this page.

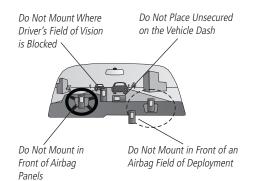

WARNING: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle equipped with a PDA with Garmin Que[™] installed, to place and secure the device so that it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause damage or personal injury in the event of an accident.

Do not mount the PDA over airbag panels or in the field of airbag deployment. Airbags expand with a rapid force that can propel objects in their path towards the vehicle driver or passengers causing possible injury. Refer to airbag safety precautions contained in the vehicle owner's manual.

Do not mount the PDA in a place where the driver or passengers are likely to impact it in a collision. The mounting hardware provided by Garmin is not warranted against collision damage or the consequences thereof.

WARNING: When used in vehicles, it is the sole responsibility of the driver of the vehicle to operate the vehicle in a safe manner, maintain full surveillance of all driving conditions at all times, and not become distracted by the PDA to the exclusion of safe driving practices. It is unsafe to operate the controls of the PDA while you are driving. Failure by the driver of a vehicle equipped with a PDA with Garmin Que installed to pay full attention to operation of the vehicle and road conditions while the vehicle is in motion could result in an accident with property damage and personal injury.

Introduction	i
	i
	i
	i
	i
	irements for Garmin Quei
Warnings and Precautions	incluents for Gammin Queii
	1
)ue1
	e
	ceiver 1
• • • •	ge Data Fields4
	the Mapping Data Fields4
	the Routing Data Fields5
Using the Main Menu	
	7
	Color and Auto Zoom Settings 7
	7
GPS Settings	
Marine Settings	
	59
Interface Settings	
	ress
Searching for an Inte	rsection
Searching for a Point	of Interest
	00int
	
	l location
Koute Navigation	
Customizing Koute N	lavigation
Koad and Area Avoid	ance

Set Home Point	27
Edit Vias	27
Detours	28
Recalculate	28
Voice Guidance	28
The Track Log Utility	29
The Sun and Moon Tables	30
The Hunt and Fish Tables	
The Measure Distance Utility	
The Trip Computer	
Hardware Mapping	
Using the Arrow Button to access Garmin Que features	
Using the Jog Button to change map scale or scroll lists	
Mapping Que feature access to device hard buttons	
Helpful Hints:	
-	
Mapping Data	
Transferring Other Detailed Maps from MapSource [®]	35
Transferring Waypoints & Saved Tracks to MapSource®	36
Additional Information	.37
Specifications	37
Troubleshooting Guide	38
Additional MapSource Data Sets	
Software License Agreement	
Index	
	-74

GPS Applications


Starting Up the Garmin Que

If you followed the Setup instructions provided with the product, then both the Garmin GPS receiver has been activated and the Garmin Que application software has been successfully installed in the Pocket PC. To start operation, turn on your device and tap Start to display the Start Menu, then tap

Programs to display the Programs List with the Garmin Que icon. Tap the Garmin Que icon to display an introduction page and then the Map Page and you're on your way to navigating.

Helpful Hint: To

shorten the process of restoring the Garmin Que application to visible status, open Settings and the Menus application on the Personal page. From the Menus page place a

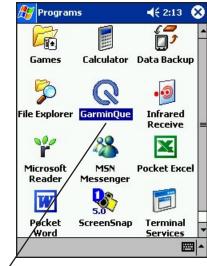

Tap to open the Application

check next to Garmin Que to place it on the Start List.

It is important to remember that the GPS receiver will continue to operate when the application is not in use. This can contribute to depletion of reserve battery power. To prevent accidental battery drain, it is recommended the you turn the GPS receiver off when the Garmin Que application is not in use.

The methods for closing the Que application are to tap

"Exit" from the Map Page Main Menu, or from any application, tap Start, then Settings, and finally Memory and tab to a list of Running Programs. Tap "Garmin Que" and then the Stop button.

Viewing the Map Page

The Map Page is the base for accessing all of the Que navigation features.



A message window at the top of this page keeps you informed of the status of the GPS receiver. When the GPS receiver is not in communication the Map Page will display a "No GPS Connected" message.

While the GPS receiver is first turned on, the Map Page will then display a "Waiting for GPS" message until the application connects with the receiver. Once connected an "Acquiring Satellites" message appears until GPS Location is achieved.

To return to the Map Page from any other Que feature page or option, tap OK.

Initializing the GPS Receiver

The GPS receiver must be initialized (given an opportunity to determine its location) before you can begin using it for navigation. Before it can receive signals from GPS satellites overhead, you must turn the receiver




on and position it parallel with the horizon for best satellite reception. In order to receive satellite signals, you must be outdoors and have a clear view of the sky. Satellite signals cannot pass through solid materials (except glass) or dense overhead tree cover. When the receiver initializes for the first time it may take as long as 15 minutes. This time can be shortened by using the GPS Info Page to select the general area in which you are currently located (see page 21). Anytime you have traveled more than 600 miles with the GPS receiver turned off, the receiver must again find its location by re-initializing.

If for any reason, you have difficulty initializing your receiver, refer to the Troubleshooting Guide on page 38. The solution could be as simple as moving slightly to avoid buildings or objects that are blocking or deflecting satellite signals.

Using the Map Page

The Map Page is the primary navigation feature of the Que application. From this page you can observe a triangular arrow that indicates your current location and direction of travel. As you move, this "Position Arrow" moves with you, turning when you turn and stopping when you stop.

The Map Page displays a detailed map of the area surrounding your current location. It allows you pan the map with the stylus as well as view your progress when navigating. When in the "Track Up" mode (oriented in the direction of travel), a north reference arrow appears at the top left corner to orient the map. When you activate the Track Log feature, your path of movement is indicated by a dotted line.

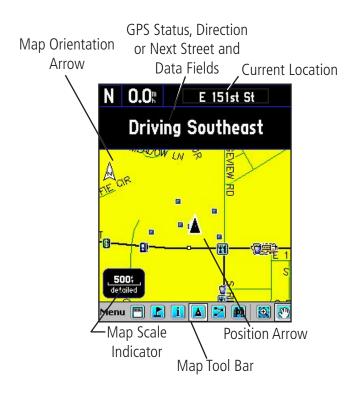

Use the Map Page to:

- Determine your current location.
- View your progress while moving.
- Locate and navigate to nearby map items.
- Follow a route line when navigating.
- Access other navigation features using the Main Menu.
- Mark your current location or a map point as a waypoint.

To use the Map Page:

1. Tap Start to open the Main Menu and then tap Programs.

2. Select Garmin Que to display the Map Page.

When first accessing the Map Page it will take a few moments for the GPS receiver to locate satellites overhead before it determines your location. While this takes place, an "Acquiring Satellites" message will display at the top of the page.

When your location has been determined, a "3D GPS Location" message replaces the original message. After you begin moving, it changes to display the next street ahead and you can also determine your direction of travel, speed and current location by observing the data fields below the message.

At the base of the page is the Map Tool Bar with the Main Menu, and icons for Waypoint Marker, Position Arrow, Details, Map/Data Fields option, Find Menu, Route, Zoom Map Scale and Pan Map. Tap and hold to display their function.

To change the map scale in increments, tapping the map scale at the lower left side of the map displays the map scale control panel. A scale bar is displayed with Zoom In and Out Arrows at the top and bottom. Tapping the Up Arrow moves to scales which show less map detail but more map area and the Down Arrow moves to scales which increase the detail but show less map area. Tapping a desired scale changes the map to that scale and closes the panel.

Tapping the Map/Data Fields icon allows you to view the Map Page in three modes, Full Map, Large Map with small Data Fields,

Map Scale Control Panel





With Data Fields Displayed

Map Tool Bar

Main Menu		Position		/		
Menu 📳						50
Map/Data Field	s Mark	Waypoint	Ro	outes	Pan	Мар

The Map Page also displays detailed geographic information such as highways and roads, lakes and rivers, cities, waypoints and residential streets, depending on the detail of map data being used. Detailed maps can be loaded from map data CD's using MapSource as explained on page 35 of this guide.


There are two map orientation options: North Up and Track Up. North Up orients the map like a paper map, while Track Up orients the map in the direction of travel and can be set to display only below a desired map scale. As you travel to the edge of the display, the map moves (redraws) to constantly show your current location.

When the "Pan Map with Stylus" mode is selected, dragging the stylus across the screen causes the map to pan with the movement of the stylus. This allows you view portions of the map surrounding your current location helping you to locate nearby cities, lakes or other geographical features. When this feature is not active, the "Zoom Scale" feature is in place which allows you to drag the stylus across a desired portion of the map, creating a rectangular box to zoom in on details.

Tapping the Details icon on the tool bar displays the Details Page with either an address description or latitude and longitude coordinates for your current location or a map point defined by the Map Pointer. Tapping the stylus on the map places the Map Pointer on any selected location on the map. If that location is supported by detailed mapping data, a description (name or address) will display (briefly). Any location on the map, marked by the Map Pointer, can be saved as a waypoint by tapping the Waypoint Marker Flag or the Information Page icon in the map tool bar. (More on waypoints on page 19.) To remove the Map Pointer, tap the Position Arrow icon on the tool bar or on the map and re-center the Position Arrow. When the Arrow is centered on the page, the icon is highlighted.

The map color can be set to automatically compensate for the difference in day and night lighting conditions to improve readability of the map. Switching from day to night mode reduces the amount of night glare produced by the screen when mounted on a vehicle dash. See Map Setup preferences on page 7.

When you zoom in from 500 feet on down and the Position Arrow isn't matched to a road on the map, an Accuracy Circle appears around the Position Arrow. The circle represents the area in which you are located. The diameter of the circle will vary in size depending on the number and geometry of overhead satellites. When zoomed in with the Track Log recording, you may also see many small track lines criss crossing in and out of the circle as the GPS receiver adjusts its location.

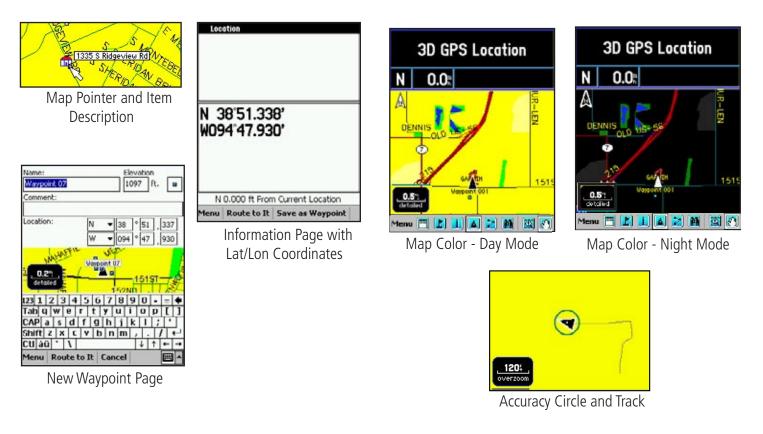


Setting Up the Map Page Data Fields


The Garmin Que software allows you to customize the display of Map Page Data Fields. You can customize the background and text colors from black to white or create a transparent background to increase the amount of map area displayed along with overlaying mapping and routing data. You can customize the way in which data fields are displayed by selecting the number of fields, the size and add descriptive labels.




Customizing Map Data Fields

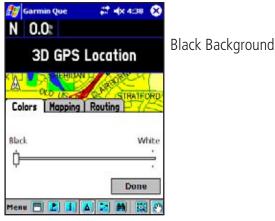

Data Field Color Adjustment

 

 

White Background

To set the background for the Data Fields:

- 1. Tap and Hold anywhere on a data field to display the "Customize" window, then tap the window to display the tabbed Setup Menu.
- 2. With the Background Tab active, select from Black, Transparent, or White to change the background of the data fields. Tap and drag the slider to your selection. Stopping at the center or the slider selects the Transparent background.
- 3. If you don't want to change the information or arrangement of the data fields for mapping or routing, tap Done to close the Setup Menu.

Setting the display of the Mapping Data Fields

When you are using the Map Page and not navigating a Route, the Data Fields can be setup to display only data useful for navigation using the Map Page.

To determine the arrangement of the Data Fields:

- 1. Tap and Hold anywhere on a data field to display the "Customize" window, then tap the window to display the tabbed Setup Menu.
- 2. Tap the **Mapping** Tab to display the Setup Menu.
- Tap the field next to each row number to display the list of setup options. The number refers to the number of fields in the row and "Large", "Medium", and "Small" refer to the text size.
- 4. Tap the "Show Label" box if you want each data field to have a descriptive label above the data. This is a good selection if choosing to display several fields that use similar units of measurement (i.e., Speed and Maximum Speed). Repeat for each row of data.

N	1/2	0.0 1/04	1097:
	10:24		
Colors	Mopping	Routi	ng 1.35TH
Row 1	3 Medium	-	Show Label
Row 2	1 Large	• •	Show Label
Row 3	<none></none>	-	Show Label
Tap & ho	d on an ite		Default



Mapping Data Field Setup

Data Field Row Options

To determine what data to display in each Data Field:

- 1. With the Data Fields Options Menu displayed and the Mapping tab selected, tap and hold the stylus on the data field you want to change.
- 2. Tap the desired subject from the Data Field Options list to select it or to display a subtopic list for that subject. "Position", "Time" and "Trip Computer" display subtopic lists when tapped.
- 3. Tap the desired option to change the data field and close the list.
- 4. Repeat this process for each data field you want to change.
- 5. Tap Done to close.

Setting the display of the Routing Data Fields

When you are navigating a Route, the Data Fields can be setup to display useful information for route navigation. When actively navigating a route, the mapping data fields will change to display routing data fields. If the same subject has been chosen for both mapping and routing it will be displayed in both modes but not necessarily in the same field location.


To determine the arrangement of the Data Fields:

- 1. Tap and Hold anywhere on a data field to display the "Customize" window, then tap the window to display the tabbed Setup Menu.
- 2. Tap the Routing Tab to display the Setup Menu.
- Follow steps 3 through 5 of the instructions for setting up Mapping Data Fields as explained on the previous page.

To determine what data to display in each Data Field:

- With the Data Fields Options Menu displayed and the Routing tab selected, tap and hold the stylus on the data field you want to change to display list of data options.
- Tap the desired subject from the Data Field Options list to select it or display a subtopic list for that subject. Data subjects with sub-topic lists can be identified by the small black arrow point to its right.
- 3. Tap the desired option to change the data field and close the list.

- Repeat this process for each data field you want to change. If you want data that is displayed on the Map Page to display while you are navigating a route, you must select it for the Routing Data Fields.
- 5. Tap Done to close.

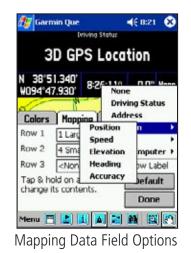

🎊 Garmin Que € 9:00 🗙 ♦Next Turn♦ 2125 9:38:31A (un Colors | Mapping | Routing Row 1 1 Large Show Label Row 2 2 Medium 💌 🗌 Show Label Row 3 1 Small Show Label Tap & hold on an item to Default change its contents. Done Menu 🗂 🚹 🚺 🔺 🎘 🕅 🔯 🕅

Routing Data Field Setup



Routing Data Field Options

Using the Main Menu


The Map Page Main Menu is the starting point for accessing all of the Garmin Que application features. Using the Main Menu you can access Que Help, Map Display Setup, make System Settings, use the Find feature, monitor GPS status from the Satellite Page, manage a Route, record a Track Log, and observe the Trip Computer. Here is a brief description of each of the Main Menu topics:

About Garmin Que - This page contains the application software version, Unit ID, and Garmin copyright notices.

 Help - This help file provides information about the Garmin

 Que application operation.

 About Garmin Que

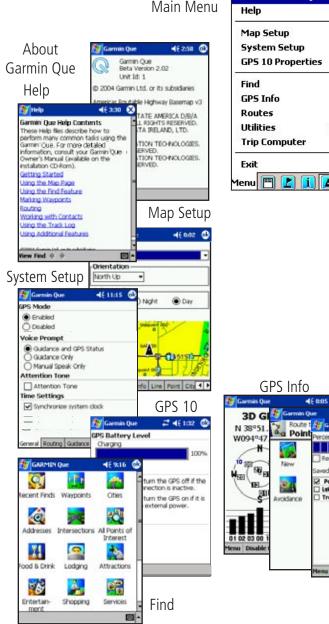

Map Setup - The feature allows you to customize the way the maps display on your device. There are factory default settings that make your application functional, so you won't need to perform a setup initially. For a detailed description about map setup see page 7.

System Setup - This feature allows you to select and adjust system operating features to meet your personal requirements. Factory default settings currently operate the application. For instructions on using System Setup, see page 10.

GPS Properties - This page displays when the system is connected to a GPS 10 wireless receiver. It provides access to controls for WAAS, Auto-Off, Auto-On and battery power level status.

Find - This feature provides you with lists by category of locations contained in the detailed map and basemap data stored in your device and on the Flash and SD cards. For instructions on using the Find Feature, see page 13.

GPS Info - This page provides current status information about the GPS receiver and satellites overhead. For more information about this page, see page 21.

Route - This feature is used to manage and modify a route after a destination has been selected. See page 25 for detailed instructions.

Utilities - This topic is divided into four sub-topics: Track Log, Sun and Moon, Hunt and Fish, and Measure Distance. For detailed instructions for recording and saving tracks, see page 29. For information about using the Sun and Moon and Hunt and Fish Tables, see page 30. Details about measuring distance are contained on page 31.

Trip Computer - The Trip Computer displays current information about your travel status. For detailed information about the Trip Computer, see page 32.



Map Setup

Detail, Orientation, Color and Auto Zoom Settings

Tap the Map Settings from the Main Menu.



Detail, Orientation and Color

💯 Garmin Que	4 € 3:49 🚳
Overland Park, Kansas, Kansas City, Missouri, I	nde
✓ Overlend Park Kans ✓ Charleston, South Ca ✓ Savannah, Georgia, I ✓ Hiltan Head Island, S ✓ Kansas City, Hissour ✓ Independence, Hisso ✓ Ilendersonville, Tenn	arolina, North Ameri North American City South Carolina, Nort I. North American Ci
North American City Se Park, Kansas, North Am	
Map Detailed Maps Del	ete GPS Road

76	Garmin Que		۵
Base	map on \SD Card		
Deto	illed maps on \SD C	ard	
Amer	icas Autoroute Card		

Delete Maps

To set the degree of map detail:

- 1. Tap the Map Detail Field to display the list of options.
- 2. Select from Least to Most to set the detail and close the list.

To select the map orientation:

- 1. Tap the **Orientation** field to display the options.
- Select North Up to orient the map with North at the top (like paper maps). Select Track Up to orient the map in the direction of travel and choose the map scale limit for displaying Track Up. Any scale above that limit reverts back to North Up.

To set the Color Mode:

Tap the option desired to place black dot next to it. "Auto" changes from "Day" to "Night" mode automatically, according to the time of day.

To activate Auto Zoom:

Tap Auto Zoom to activate this feature which automatically scales the map to display both your current location and the next turn in a route during active navigation.

Detailed Maps

To view the list of detailed map data and select maps for display:

- 1. Tap the **Detailed Maps** tab from the Map Setup Pages.
- 2. Tap the desired detailed map to add or remove a check from the activation box. Detailed information for that map will not display if unchecked.

Information at the top of the page is the description of the map set you loaded to Garmin Que using MapSource. To learn how to name map sets, refer to the MapSource User's Manual. The information at the bottom of the page indicates details of the selected map.

3. Tap and hold to enable groups of maps.

Delete Maps

To delete detailed and basemaps from storage locations:

- 1. Tap the **Delete** tab from the Map Setup Pages.
- 2. Tap the map you want to delete from the list to select it.
- 3. Tap the **Delete** button and follow the Yes/No prompt that follows.

GPS Settings

To set the Maximum Zoom level for Course Line, Bearing Line, Track Log, Saved Tracks, Lat/Lon Grid and Grid Labels:

- 1. For Maximum Zoom select from "OFF", "AUTO", or an increment from a scale of 120 feet to 800 miles.
- 2. Repeat for each listed map feature.

Road Detail Settings

To set the Text Size for Track Logs, Railroads and Street Labels:

- 1. Tap the **Road** tab from the Map Setup Pages.
- 2. Select from "Off", "Small", "Medium" and "Large" options for display of each listed map feature.

To set the Maximum Zoom:

- 1. For Maximum Zoom select from "**OFF**", "**AUTO**", or from an incremental scale of 120 feet to 800 miles.
- 2. Repeat for each listed map feature.

Map Point Settings

To set the Text Size for Waypoints, Interstate Exits, and Points of Interest:

- 1. Tap the **Point** tab from the Map Setup Pages.
- 2. Select the text size for each type of map item.

To set the Maximum Zoom level:

- 1. For Maximum Zoom select from "**OFF**", "**AUTO**", or from an incremental scale of 120 feet to 800 miles.
- 2. Repeat for each listed map feature.

Area Settings

To set the Text Size for Waypoints, Interstate Exits, and Points of Interest:


- 1. Tap the Area tab from the Map Setup Pages.
- 2. Select the text size for each type of map item.

To set the Maximum Zoom level:

- 1. For Maximum Zoom select from "OFF", "AUTO", or an increment from a scale of 120 feet to 800 miles.
- 2. Repeat for each listed map feature.



Map GPS Settings

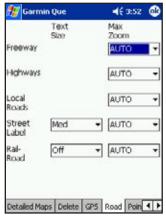

Map Road Settings



Map Point Settings

City Settings

To set the Text Size for Large, Medium and Small Cities, plus Small Towns:

- 1. Tap the **City** tab from the Map Setup Pages.
- 2. Select the text size for each type of map item.

To set the Maximum Zoom level:

- 1. For Maximum Zoom select from "**OFF**", "**AUTO**", or an increment from a scale of 120 feet to 800 miles.
- 2. Repeat for each listed map feature. It may be helpful to use a differ-ent text size for the three types of cities to help determine their size when observing the map.

Marine Settings

To set the Text Size for Navaids, Spot Soundings, and Tide Stations:

- 1. Tap the Marine tab from the Map Setup Pages.
- 2. Select the text size for each type of map item.

To set the Maximum Zoom level:

For Maximum Zoom select from "**OFF**", "**AUTO**", or an increment from a scale of 120 feet to 800 miles.

Topographic Settings

To set the Text Size for Major, Intermediate and Minor Contours:

- 1. Tap the **Topo** tab from the Map Setup Pages.
- 2. Select the text size for each type of map item.

To set the Maximum Zoom level:

For Maximum Zoom select from "**OFF**", "**AUTO**", or an increment from a scale of 120 feet to 800 miles.

🎊 Ga	rmin Que		₹€ 4:17	6
	Text Size		Max Zoom	
River, Lake	Med	*	AUTO	•
Park	Med	•	AUTO	•
Metro Areas			OFF	•
Land Cover			AUTO	•
Other	Med		AUTO	

Area Feature Settings



City Settings



Marine Settings

🔊 Garmi	n Que		10 🚯
	Text Size	Max Zoom	
Major Contours	Med	▼ AUTO	•
Intermed Contours	Med	▼ AUTO	•
Minor Contours	Med	 AUTO 	•
Point Area	City Mari	ne Topo Navi	

Topo Settings

System Setup

Although your Garmin Que software will function perfectly well using the factory default settings, you will want to customize its operation to meet your personal requirements. The System Setup consists of a series of seven tabbed pages with operating options for the system features

General Settings

To set the GPS receiver Operating Mode:

- 1. Tap System Setup from the Main Menu to display the first page.
- 2. Choose from two operating modes "**Enabled**" and "**Disabled**".

To set Voice Prompts:

- 1. To receive voice messages about upcoming turns in a route and updates on the status of the GPS signal reception select "Guidance and GPS Status".
- 2. To receive direction voice prompts only, select "Guidance Only".
- To receive guidance only when desired by pressing a hard button mapped to the "Speak Next Instruction" option from the Buttons setup, select "Manual Speak Only". See page 34 for instructions on mapping hard buttons.

To Activate/Deactivate the Attention Tone:

 To hear a tone prior to when a message is displayed on the device screen or a voice prompt, tap Attention Tone to place a check mark in the adjacent box.

To synchronize the time and date with the GPS Receiver:

1. Tap "Synchronize system clock" to place a check mark in the adjacent box. When checked, this will sync the device clock to GPS time each time the Garmin Que is turned on.

Routing Settings

To set Routing preferences:

Refer to page 25 for detailed instructions.


Guidance Settings

To set route Guidance preferences:

Refer to page 25 for detailed instructions.



General Settings Page

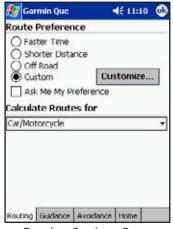

Routing Settings Page



Guidance Settings Page

Avoidance Settings

You can select specific sections of roads and define areas to avoid when calculating a route. This helps you to avoid road construction, heavy traffic areas, etc.

To select roads and areas to avoid:

Refer to page 26 for detailed instructions.

Units Settings

You can choose a unit of measure for Distance and Speed, Direction, Elevation and Depth.

To set the Units of Measure:

1. Tap the desired unit of measure for each type of measurement shown.

Distance and Speed - can be measured in miles or kilometers.

Compass or Bearing Direction - can be displayed in Cardinal Letters, Numeric Degrees or Mils.

Elevation - can be measured in Feet or Meters values.


Depth - can be measured in Feet, Meters, or Fathoms.

Buttons Settings

You can select hard buttons on the unit to perform specific Que Application functions.

To use hard buttons to operate Garmin Que features:


- 1. Tap the Arrow Button top or bottom to increase or decrease the map scale or to scroll a list.
- If a "Jog" Button is provided with your Pocket PC, rotate it Up or Down to increase or decrease the map scale or to scroll a list. See page 33 for more detail.
- There are additional hard keys that can be programmed to perform Que related tasks. Refer to page 34 for detailed instructions for mapping these keys. The availability of certain keys for mapping to Que functions can vary with types of Pocket PCs.

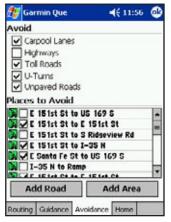

Avoid Roads/Areas Page

🎊 Garmin Que	∢ € 9:23 @
Distance and Spee	d
Statute	
O Metric	
Direction	
 Cardinal Letters Numeric Degrees Mils 	
Elevation	
Statute Metric	
Depth	-
 Statute Metric 	() Fathoms
Guidance Avoidance	Ints Battons La

Units Settings Page

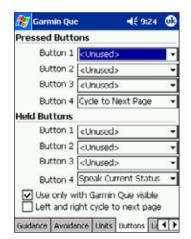

Buttons Mapping Page

Language Settings

You can choose a specific language for voice messages and prompts. The available languages are displayed on a drop-down menu.

To select a language:

- 1. Tap the language field to display the lists of text and voice languages.
- 2. Tap the desired language to both select the language and close the list.
- 3. To remove a voice language from the list (selected during Que installation), tap "Delete Voice Language" with the language highlighted.

Interface Settings

The Device field is preset. The GPS 10 Bluetooth option is available only when a Garmin GPS with Bluetooth[®] wireless technology is detected. The com port for communication with the GPS receiver should be detected automatically.

To select a Communcations Port:

Tap the Com Port field to view the available com ports. Use "Auto-Detect" or select the Com Port if known. Refer to the Bluetooth application guide provided with your PDA.


GPS 10 Properties

When you select the GPS 10 Bluetooth wireless receiver using the Interface 'GPS Device' setup, a GPS 10 Properties settings page becomes available when the GPS 10 is connected to your PDA. This page also contains a battery level status field and charging indicator. For these selections to be enabled or disabled, the GPS 10 must be powered On and communicating with your Pocket PC. (See "Enabled" on the "General Settings" page.

To set the GPS 10 options:

 To enable the feature that automatically turns off the GPS 10 receiver when communication from the Pocket PC has been broken for approximately 15 minutes, tap the box to place a check mark. This feature saves battery power when the GPS 10 is not in use. 2. To enable the feature that automatically turns on the GPS 10 receiver when external power (12 V DC from a vehicle cigarette lighter adapter) when the ignition is switched on, place a check mark in the box. This does not apply to vehicles which continuously provide power to a cigarette lighter.



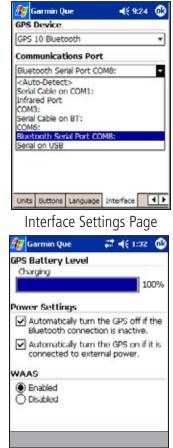

GPS 10 properites

The Find Feature

The Find feature allows you to search for any map data item and create a route to it. All Find items are part of the basemap and detailed mapping data downloads.

To access the Find Menu:

- 1. From the Map Page, tap the **Find** icon (binoculars) on the Map Page Tool bar. Or... tap **Menu** and select it from the list of topics.
- 2. The Find Menu has icon type buttons for seventeen major categories of geographic locations for such map items as cities, street addresses, points of interest and more.

Many of these categories have subcategories; e.g.. Food and Drink (Restaurants) will list types like barbecue, Chinese, Italian, etc. Restaurant chains with more than one location near you display a list of those in the area when you select the details option.

If you have already used the Find Feature to locate items, Recent Finds will display a list of those items. If you have saved any map points or Find category items as waypoints they will appear on the Waypoint category list.

 Tap the Find category of your choice to display the list of items for that category. The page displays with a category title field. Tapping that field displays the complete list of categories that can be accessed by tapping the item.

To refine your search for a location, tap the next field to display a list of search options; Near Current Location, Near Map Pointer, By Name, Near Other, and Near a Previously Selected Item.

Near Other selects a new item to replace the "Near previously selected item".

To further refine your search, you can select a sub-category by tapping the All Types field and choose from the list of options.

Finally, to speed selection from the remaining list, use the "Containing" field to enter a word or part of a word in the title of the item you are searching for. All items with that word in their title are then displayed on the list.

4. Once you have identified the item you are searching for, place the stylus on it and hold to display a list of options for that item.

The first option is to view the Details Page for that item. This page shows the location of the item in relation to your current location. Below the map is a description of the item and address and phone number (if available). At the bottom of the page is a Route button to create a route to the item.

The second option is to create a route without moving to the Details page.

The third option is to Find other map items near the selected item. Once selected the item will appear on the options list for all Find categories. It will remain as an option until you select another map item to replace it.

The fourth option is to save the item as a waypoint on the Waypoints List. Tapping the 'Save As Waypoint' icon with the item highlighted will also allow you to save the item as a waypoint. The last option is 'Add to Contacts'. Any Find item with a name and address can be added to the Contacts list.



🎊 Garmin (Jue		€ 11	:38 (sk
Lodging	*	All Type	s		•
Near Current	Locatio	n			
Containing:					•
Microtel I	nn & Sui	tes-Olat	W	0.81	
🛄 Holiday In	n-Olatha		w	1.17	
Econo Lod	se-Olati	e	NW	1.31	P
Sleep Inn-	-Kansas	City/Olat	w	1.5	
Pickerin Pickerin 123 1 2 3 Tab 9 W CAP a s Shift z x	Details Route I Find Ne Save a	to It ar Selec s Waypo Contact	int	e na	The second se
Ctl áü ` \ Menu Detai	Is Rout	te to It	ΙĮ.	t +	P
lterr	taO r	ions N	/ler	<u> </u>	



Find Item Details Page

Olathe, KS 66061

913-782-4343

Near Current Location By Name Near Route Destination Near Other Near Current Route

 
Search Options Menu

Searching for Cities

The Find feature allows you to search for a city and create a route to it. The cities listed are part of the basemap and detailed mapping data downloads.

To select a city from the Cities List:

- 1. From the Map Page, select Find from the Main Menu or tap the tool bar Find (Binoculars) icon to display the Find Menu.
- 2. Tap the Cities icon to display the list of cities. Use the Find Options Menu, as explained on page 13, to refine your search.
- If you select "By Name", you can further refine your search, when you enter the first few letter of the city in the Name Field. As you add more letters, the list of cities will change to display as many matches as possible.
- 4. Highlight a city from the list.
- 5. Then either place the stylus on the city until the drop down four option menu appears or tap **Menu** to display a five option menu.
- 6. Tap **Details** to view the Details Page which displays the city on the map and provides a brief description below the map. Tap the **Route To It** button to create a route to the city from your current location.
- 7. To create a route without first viewing the Details Page, tap **Route To It** from the drop down menu.
- 8. To search for other map items near this city, tap **Find Near Selected Item** from the drop down menu.
- 9. To add the item to the Waypoints List, tap **Save as Waypoint**.
- 10.If you opened the Menu at the bottom of the page, the only additional option is **Select Map**. Tap this to select from the routable base map or downloaded detail maps from which to base your search for a city.



Drop-Down Item Options Menu

11. Two other quick options are the **Information** and **Route** buttons at the bottom of the page.

🖥 Garmin Que

₩ 5:02


	4	
Cit	ies	

By Name	-
Name:	
100 Mile House, DC	NW 15511
105 Mile House, BC	NW 1554
108 Mile Ranch. BC	NW 1556"
111 Mile House, BC	NW 15591
114 Mile House, DC	NW 1561*
12 Mile, DC	NW 10131
122 Mile House, BC	NW 1569*
127 Hile House, BC	NW 1573"
141 Mile House, BC	NW 1584"
150 Mile House, BC	NW 1590"
Menu (i) 🎾 上	

List of Cities By Name



City Details Page

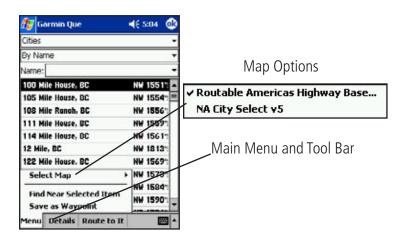



Searching for an Address

The Find feature allows you to search for an address and create a route to it. When you enter an address, the Find feature matches it with those contained in the basemap and detailed mapping data downloads. If the exact address you entered isn't in the database, then it presents the closest matches to that address. If there is no data to support your entry, a "None Found" message appears.

To find an address:

 - From the Map Page, select Find from the Main Menu or tap the tool bar Find (Binoculars) icon to display the Find Menu.
- 2. Tap the **Addresses** icon to display the Address Entry Page. You will observe data entry fields for City, Region, Street Number, Street and Postal Code.
- 3. Tap the **Region** field first. This will display all states and provinces available in the mapping data you have installed. Select a state or province.
- 4. Next tap the City field to display a list of cities in the selected state or province. Select a city. If you tap the City field first, the Region field is hidden.
- 5. Enter the street address next.
- Tap the Street field to display the Street Name dialog page. Enter the first few letters of the street name in the Name field. You need not insert North, East, Avenue, Street, etc. at the beginning or end of the street name.
- When the desired street name appears in the list below the name field, tap it to place it in the field. The tap the Prefix/Suffix button to display the Prefix and Suffix List for streets in that city.
- 8. Select the desired prefix and suffix and then tap **OK** to return to the Address Page.
- 9. Enter the postal code in the remaining field if desired, otherwise it may not be needed to find the address.
- Finally, tap the Search button to begin the search for matches to the address in the map database. A list of matches appears in the lower part of the screen. Highlight the desired address and then tap the Menu, Details or Route to It button on the bottom of the page to Select a Map, Find Near Selected Item, Save as Waypoint, Add to Contacts, view the address from the Details Page or Route To It immediately.



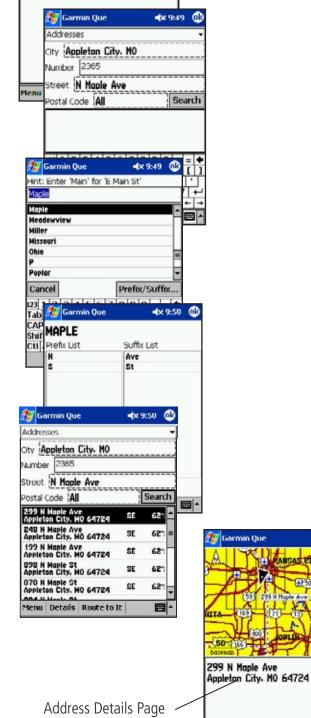

46 4:01

RINGFIELD

tenu Route to It Save as Waypoint


60

Searching for an Intersection

The Find feature allows you to search for an intersection and create a route to it. When you enter two street names to create an intersection, the Find feature matches it with those contained in the basemap and detailed mapping data downloads. If the intersection you entered isn't in the database, then it presents the closest matches to that intersection. If there is no data to support your entry, a "None Found" message appears.

To find an intersection:

- 1. From the Map Page, select Find from the Main Menu or tap the tool bar Find (Binoculars) icon to display the Find Menu.
- 2. Tap the **Intersections** icon to display the Intersection data entry page. You will observe data entry fields for City, Region, Two Streets and Postal Code.
- 3. Tap the Region field first. This will display several states or provinces near to where the Garmin Que has established your current location. Select a state or province.
- 4. Next tap the **City** field to display a list of cities in the selected state or province. Select a city. If you tap the **City** field first, the **Region** field will be hidden.
- Tap the first Street field to display the Street Name dialog page. Enter the first few letters of the street name in the Name field. You need not insert North, East, Avenue, Street, etc. at the beginning or end of the street name.
- When the desired street name appears in the list below the name field, tap it to highlight it. The tap the **Prefix/Suffix** button to display the Prefix and Suffix List for streets of that name in that city.
- 7. Select the desired prefix and suffix and then tap **OK** to return to the Address Page with the street name in place in the street field.
- 8. Repeat this above process for the second street.
- 9. Enter the postal code in the remaining field if desired, otherwise needed to find the address.
- 10. Finally, tap the Search button to begin the search for a match to the intersection in the map database. The match appears in the lower part of the screen.
- 11. Then tap the **Menu**, the **Details** or **Route** button from the tool bar to either view the intersection from the Details Page or Route To It immediately.

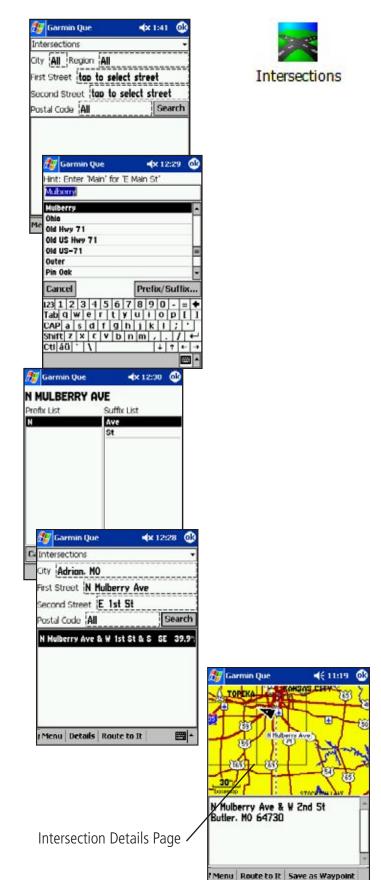

16

Searching for a Point of Interest

Because of the amount of information available in the Points of Interest category is so extensive, it is divided into smaller categories to refine your search for an item.

To find a Point of Interest:

- 1. From the Map Page, select Find from the Main Menu or tap the tool bar Find (Binoculars) icon to display the Find Menu.
- 2. Tap the desired category to display the list of items in that category.
- 3. If you selected a category with a list, you are given a choice of displaying items by name or only those near your current location. You can further refine your search by selecting a sub-category from the "All-Types" list.
- 4. Tap the desired subject to display the refined list of items related to that subject.
- 5. With the list displayed, highlight a single Point of Interest item.
- 6. When you tap **Details**, an information page displays, showing a location map and detailed information about the item (phone number, address, etc.). If your PDA is phone enabled, tapping the phone number allows you to dial that number.
- 7. After you have viewed details about a Find item, that item is added to the Recent Finds list to simplify the process for reviewing. To review an item, simply tap the "Recent Finds" icon to display the list.
- Or... You can save it as a Waypoint on the Waypoints List as the Recent Finds list will delete the earliest entries as it runs out of storage space.

Note: Certain Points of Interest categories list map items only when supported by specific type map data, downloaded from MapSource. Examples these types are Topographic Maps and Marine Charts.



Food and Drink Categories List

- 20

Menu Details Route to It

List of Items By Category

- **E**

Menu Details Route to It



Detail Page for Selected Item

Searching for a Waypoint

A waypoint is a geographical location which you have created by marking your current location, tapping a specific point on the map or selecting an item from the Find feature list of map items. Once created, a waypoint can be saved to the Waypoints list of the Find feature.

To learn more about creating and saving a location as a waypoint, refer to the section titled, "Creating Waypoints" on page 19.

To find a waypoint:

- From the Map Page, select Find from the Main Menu or tap the tool bar Find (Binoculars) icon to display the Find Menu.
- 2. Tap the Waypoints icon the display the Waypoints List.
- 3. Highlight a waypoint from the list.
- Then either place the stylus on the waypoint until the drop down four option menu appears or tap Menu to display a five option menu.
- 5. Tap **Details** to view the Details Page which displays the waypoint on the map and provides a brief description below the map. Tap the Route To It button to create a route to the city from your current location.
- 6. To create a route without first viewing the Details Page, tap Route To It from the drop down menu.
- 7. To search for other map items near this city, tap Find Near Selected Item from the drop down menu.
- 8. To delete the waypoint from the list, tap **Delete Waypoint** from the drop down menu.
- If you opened the Menu at the bottom of the page, the only additional option is **Delete All Waypoints**. Tap this only if you want to remove every entry from the Waypoints List.
- 10.Two other quick options are the Route To It and Save as Waypoint icons on the tool bar at the bottom of the page.
- 11.Once you have selected "Route To It", follow onscreen instructions and refer to route management information on page 24.

Using the Filter to find a waypoint:

- 1. Tap the symbol field below the word Filter to help you search large waypoints lists by filtering out those waypoints assigned specific symbols.
- 2. Scroll through the list of symbols and tap the one for the type of waypoint you are searching for to display list of those type waypoints.

Waypoints	▼ Fiter
	+ Filler
By Name	* E
Name:	
3650 N 6 7626 W 6 All Soints Baudette,	elected Item
123 1 2 3 4 5 6 7 8 Tab q w e r t y u CAP a s d f q h j Shift z × c y b n r CU aŭ ` \ Menu () 2 F	9 0 - = 4 0 0 [] k :


🎊 Garmin Que	◀€ 9:14	• 🚳
Waypoints		Filter:
By Name	•	iti.
Name:		
· 1 Garage Door Service &	E 4	93" +
3650 N 67th St	N	21"
a 7626 W 61st St	N	13":
😩 All Saints Episoopal Chu	E 9	17-
 Baudette, MN 	N 6	801
🚷 Bob Thompson's	E 9	07%
a car parked 07	Ε9	10"
Find Near Selected Item	SW	604
Delete Waypoint Delete All Waypoints	NE 43	
Menu Details Route to It		- 20

Waypoint Drop Down Menu

Waypoint Options Menu

Waypoints	∓ Fi	iter:
By Name	E All Waypoints	-
Name:	🗄 Airport	=
🖾 1 Garage Do	🖄 Amusement Park	
a 3650 N 67t	🛞 Ball Park	
a 7626 W 61s	🛙 Dank	
ఉ All Saints Ep	鏱 Bar	
• Baudette, MI		
🐴 Dob Thomps	💹 Boat Ramp	

Waypoint Filter List

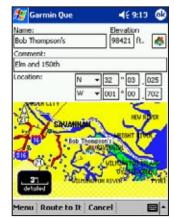

Waypoint Details Page

Creating Waypoints

A waypoint can be created three different ways as explained below. All waypoints are accessed from the Find Feature Waypoints List. A Waypoint can be renamed, assigned a graphic symbol, a more accurate altitude, moved to a new location, given new lat/lon coordinates, and provided with special comments. When no longer required, it can be transferred to MapSource for storage or deleted from the Waypoints List.

To mark your current location as a waypoint:

 From the Map Page, use the stylus to tap the Waypoint icon on the tool bar at the bottom of the page.

Be certain the Map Pointer (white arrow) is not displayed, or the loca-tion on the map, marked by the arrow will be saved as a waypoint.

- The "Mark Waypoint Page is displayed with the waypoint automatic-ally named as "Waypoint". (Each subsequently marked waypoint will be named "Waypoint 1, 2, 3", etc.)
- 3. You can change the name to one more descriptive of the location.
- 4. Tap **OK** to save the new waypoint to the Waypoints list.

To mark a point on the map as a waypoint:


- With the Map Page displayed, use the stylus to tap the desired loca-tion on the map which causes the Map Pointer (white arrow) to display. If the point on the map has descriptive information in the map database, it displays for six seconds.
- 2. Once the Map Pointer is at the desired location, tap the **Waypoint** icon on the tool bar to display the Waypoint Details Page.
- 3. Observe that the waypoint name reflects the data and that the "Comment" field is blank.
- 4. You may want to rename the waypoint or place a reference in the "Comment" field.
- 5. Tap **OK** to save the new waypoint to the Waypoints List.

To save a Find Feature item as a waypoint:

With the item highlighted, hold the stylus in place until the drop down menu displays. Then tap the "Save As Waypoint" option.

To use a waypoint as a Route destination:

- From the Waypoints List, highlight the desired waypoint and hold the stylus in place until the options list appears.
- 2. Then tap "Route To It". or...
- 1. From the Map Page with the waypoint displayed on the map. Place the Map Pointer (white arrow) on the waypoint until the description highlights.
- 2. Tap the **Route** icon to display the Routes Page and then tap the "Route To....." dialog.

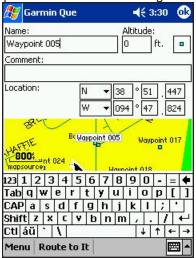

Mark Waypoint Page



A Waypoint as a Route Destination

Editing Waypoints

A waypoint can be edited while being created or when you desire to change a previously saved waypoint from the Waypoints List in the Find Feature. You can change the name of the waypoint, assign a specific symbol to display on the map, add information about the waypoint in the form of comments, and delete it from the waypoints list when no longer needed. You can place the Pointer Arrow on a waypoint on the map and tap the Details icon on the tool bar to display a location page. An Edit Waypoint option will take you to the Details Page for that waypoint.

To edit a waypoint name and description:

- 1. Access the desired Waypoint Details Page.
- 2. Highlight the Name field and then use text entry to change the name.
- 3. Highlight the Comment: field to enter a commentary about the waypoint.
- 4. Tap **OK** to close and return to the Waypoints List.

To adjust the elevation for a wavpoint:

If you know the precise altitude at a waypoint location, you can highlight the Elevation field and enter the adjusted altitude.

To assign a map symbol to a waypoint:

Adjacent to the Elevation field is a map symbol box. Tap the box to display the Map Symbols List and select the desired symbol for your waypoint.

To change the location of a waypoint:

- 1. Access the desired Waypoint Details Page from the Waypoints List.
- 2. Then tap Menu to display the list of options.
- 3. Select **Move** to display a map with the waypoint.
- 4. Use the stylus to place the Map Pointer at the new location for the waypoint. A dotted line connects the original with the new location.
- 5. Tap **OK** to complete the move.

If you know the latitude and longitude coordinates for the new waypoint location, you can enter them on the Waypoint Details Page. Highlight the fields for location and enter the new coordinates. Tap OK to close and move the waypoint to that precise location.






Map Pointer Location Page

To delete a waypoint:

- Access the waypoint on the Waypoints List or access the details page.
- 2. Hold the stylus on the desired waypoint on the list to display the drop-down menu, then select "Delete Waypoint". Or... tap Delete from the Details Page Menu.
- 3. You will be asked, "Are you sure you want to delete the waypoint?". Tap **Yes** to delete and close.

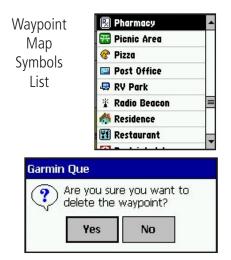

Delete Waypoint Query

Waypoint Details Page

GPS Info Page

The GPS receiver must determine its location on the earth by receiving signals from overhead satellites each time it is turned on. The GPS Info Page displays the current status of the GPS receiver.

To view the GPS Info Page:

- 1. Tap **Start** to display the main menu, tap Programs and then **Garmin Que** to display the Map Page.
- 2. Tap **Menu** on the menu bar at the bottom of the page and then select **GPS Info** to display the Satellite Status Page.

At the top of the Satellite Status Page is a message containing the status of the GPS receiver and a sky view array on the left side representing the position of satellites in the sky overhead with your position in the center of the two circles. The outer circle indicates the horizon while the inner circle a position 45° from the horizon. The numbers displayed indicate the number assigned to those satellites.

A bar graph at the bottom of the page displays the strength of signals being received from each satellite. An "Acquiring Satellites" message is displayed until at least three satellites with sufficient signal strength have been received. When the GPS receiver has determined its location, a "2D" message appears and your location coordinates display at the top of the left hand column.

On the right, the date and time displays along with your approximate elevation, and, if you are moving, your current speed displays as well.

When you have sufficient signals from four or more satellites, a "3D GPS Location" message appears and the approximate elevation also displays at the bottom of the column.

The accuracy of your current position displays at the bottom of the list. All of this information continues to update as you navigate.

Establishing an initial location


When starting up for the first time, or when you have moved to a new location more than 600 miles from the last one, it will take some time for the Garmin Que to determine its new location.


To facilitate the initialization process :

 Tap Menu tab at the bottom of the page to display the "New Location" and "North Up" or "Track Up" options. 2. Tap **New Location** if you want to go to the Map Page and mark your approximate location to help the satellite narrow its search for satellites. Using its built-in almanac of satellite positions, the Garmin Que looks for signals from only those satellites that are in sight at that location.

The Options Menu also allows you to orient the sky view graphic to "North" or to "Track" in the direction of your movements.



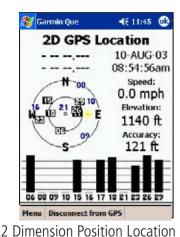

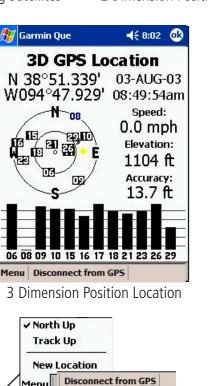

- Main Menu Location Option

Routes

The Route feature allows you to navigate to a destination of your choice. You can determine your destination using either the Map Page or the Find Menu. Once a destination is selected, the Route feature provides active navigation in the form of a route line superimposed over the map, and both graphic and voice turn-by-turn instructions. You can modify any route to include via points (points along the route that you specify) and also change many aspects of route navigation using the Route Preferences options. Once created, a route can be saved for later use.

To access the Routes Menu:

 From the Map Page, open the Main Menu and tap Routes to display the Routes Menu or tap the Routes icon on the Map Page tool bar. If there is no active route, only three options appear, Route Preferences, Resume Navigation (if you have previously been navigating a route), Saved Routes and Speak. A new route can only be created after you have selected a destination from the Map Page or from the Find Feature.

When a route is active the Route Menu will display Stop Navigation, Recalculate, Detour, Edit Vias and Turns Page options in addition to those previously mentioned.

A route cannot be calculated unless the GPS receiver has determined your current location and you have selected a destination. Check the GPS status message at the top of the Map Page before selecting a destination. Routes are simulated if the is no GPS connection.

Creating a Route

Before beginning route navigation, you must select a destination. Once the destination is determined and you tap the on-screen "Route To It" button, the Route feature creates a route to that destination.


To create a Route to a destination using the Map:

- 1. From the Map Page, use the stylus to place the Map Pointer on a map item.
- 2. Then tap the **Details** icon to display the Location Dialog. Confirm that the location displayed is your desired destination and tap the **Route To It** button at the bottom of the display.

3. Observe the small pop-up graphic at the bottom of right of the display indicating that the route is being calculated. If checked in the routing preferences options (refer to page 25), a Route Preference options menu appears, allowing you to select Faster Time, Shorter Distance or Off Road routes. When the routing calculation is complete you will observe a highlighted overlay showing your route on the map.



Route Highlighted on Map Page

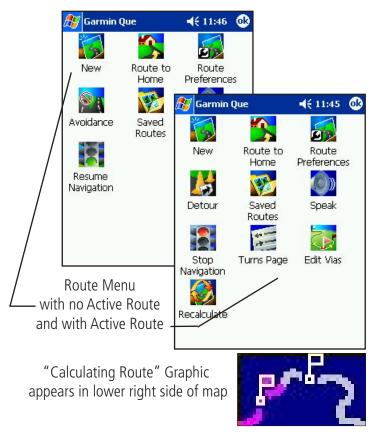

To create a Route to a destination using the Find feature:

- 1. From the Menu tool bar, tap the Find (binoculars) icon to display the Find Menu.
- 2. Choose a Find category to search for the desired destination location. Refer to detailed instructions for using the Find feature on page 9.
- 3. When you have selected a destination, place the stylus on the listing until an options menu appears, then either select "Details" or "Route To It". "Route To It" begins route calculation, while the "Details" option allows you to view information about the destination before tapping the "Route To It" button at the bottom of the page.
- 4. Tap **OK** to return to the Map Page to view the route on the map.

To create a Route to a Contact Location using the Find Feature:

- 1. From the Contacts List, use the stylus to select an entry with an address.
- 2. Then hold the stylus in place to display the dropdown menu and select **Locate in Garmin Que** to display the Find Address Page.
- 3. If the address from the Contacts List is in the map database, the City, Number, Street and Postal Code fields will contain the address data.
- 4. Tap **Search** to display the best matches.
- 5. Highlight your choice and hold the stylus in place to display the drop-down menu.
- Select Route To It to begin the route calculation. You can also tap the Main Menu at the bottom of the page with the address highlighted and select the same option.

Or... tap the **Location** icon on the tool bar to begin route calculation.

Note: If the address from the Contacts List is not in the map database, a "No address found" message will appear. The address can be correct, but you may not have map data loaded that supports the region where the address is located. For example: If you are in the Los Angeles area and have map data loaded to support only that region and you choose an address in the Seattle region, without map data for that region, no match can be achieved.



🎊 Contacts		-{ € 8:2	7 🤅	3
All Contacts 👻				
#ab cde fgh ij	k Imn opq	rst uv	w xy	/Z
Graff H and R Auto S	21335466 913-262-1		h w	
Jam JD_GARMIN JD_Group				
Locate in Garn	ninQue	560	w	
			w	
Create Copy Delete Contac	t	340		
Send E-mail to Beam Contact		7 260	h w	
Beam Lontact		409	w	
Peterson, Pete	913-381-7	622	h	L
Pierre	33255241	41	h	-
New View Tools	£			

Locate Address in Garmin Que

🎊 Garr	nin Que	4 € 8:32	•
Addresse	es		٠
City Ove	erland Park, KS		
Number	11011		3
Street			
 Postal Co	de (66210	Sear	ch
11011 K Overland	ing St Pa Details Route to It		
CAP a Shift z	Find Near Se 3 Save as Way 4 Add to Conta 5 A Save as Way 4 C V D N M	point	n I
Cti áü Menu D	۲ مراجع الم	→ ↑ ↓	→ ▲]

Matched Address "Route To It"

To Add a Find Feature Item to the Contacts List:

 From the Main Menu for a Find Feature Address, Intersection or highlighted Point of Interest, select "Add to Contacts" and any item with an address

will be added to the Contacts List. For addresses and intersections, you will be prompted to enter a name before adding to Contacts.


Name:	Garmin Inti.
0	K Cancel

Route Navigation

Once active, the route provides you with a variety of navigation aids. The data fields at the top of the Map Page change to display your speed, the distance to the next turn on your route, the time to the next turn based on your current speed and the time of arrival at your destination. A message field below the data fields provides directions for each leg of the route. Prior to each turn, a turn preview page displays along with voice instructions. You can view a list of all turns for a particular route.

To view the Turns Page:


- 1. From the Map Page with a route active, tap the Main Menu to select the Routes option or just tap the Route icon on the tool bar.
- 2. When the Route Menu displays, tap the Turns icon to display the Turns Page. Each turn on the route is displayed on this page. Each turn entry provides written instructions, the distance to the next turn, a turn direction arrow, the time required to drive to the next turn and the time of arrival at the next turn based on your current speed.

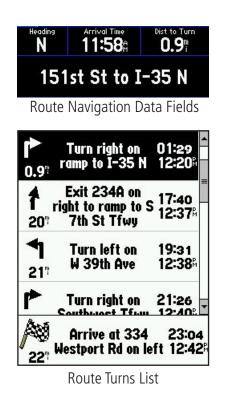

3. To view the turn in detail, tap the turn entry to display the Turn Preview Page with a detailed graphic of the turn. Tap the Turn Preview page to return to the Turns List.

To Save a Route:

- 1. From the Routes Page, tap the Saved Routes icon to display the Saved Routes List.
- 2. The current or last navigated route "To and From" description will be displayed at the top of the page. Tap the Save button to save it to the list.
- 3. From the Saved Routes Main Menu, you can Activate, Edit, and Delete a selected route.
- Or... Delete All routes on the list.

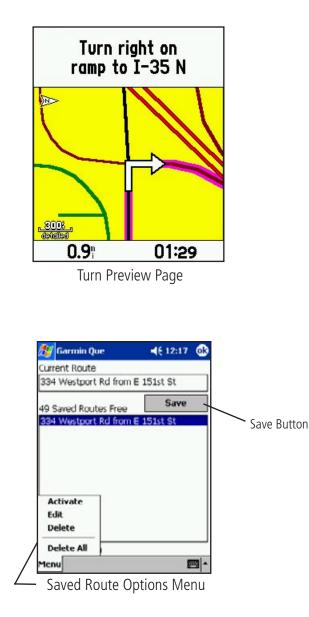

Customizing Route Navigation

You can use the Route Preferences, Detour, Edit Vias, and Recalculate options to customize route navigation to meet your requirements. To determine the way a route is calculated, whether or not some routing features are implemented automatically, modified or turned Off, you can use the System Setup and Routing options from the Main Menu on the Map Page. A set of factory default preferences operate route navigation if you do not choose to make your own settings.

To set General Preferences:


- 1. From the Map Page, tap Menu then System Setup to display the General Preferences Page.
- Under Voice Prompt options, tap Guidance and GPS Status if you want guidance prompts and GPS status information. Tap Guidance Only if you want prompts for routes only and tap Manual Speak Only if you only want prompts and status when you press a hard button.
- 3. On the same page under Attention Tone, tap Attention Tone to place a check mark next to this option to present a tone to prepare you to listen before each voice prompt. See notes on inside cover of this guide about voice prompts and speaker volume of your particular Pocket PC

To set Routing Preferences:

- On the "Routing" preferences page, under Route Preference, tap Faster Time, Shorter Distance, Off Road or Custom. If you want this option to display every time you begin a route, tap "Ask Me My Preferences" to place a check mark next to it. When the checked, this option displays the route preference pop-up window before a route is calculated.
- 2. Next is the Calculate Routes For: option. Tap the displayed option to open the list of modes of travel and select the most appropriate.
- 3. If you selected Custom from the Route Preference options, you can improve the accuracy of the route calculation by adjusting the speed assumption for the types of roadways on a route.
- 4. Tap the Customize button to display a page with an adjustment slider for three roadway categories, place the stylus on the slider and drag in the direction desired.

Note that increases and decreases represent a range of approximately plus and minus 90%.

5. To use settings from previous driving, tap **Use Habits**, to reset all three categories, tap the **Reset** button.

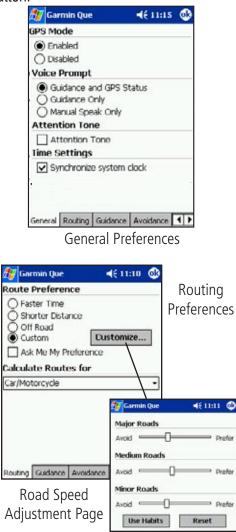

To set Guidance Preferences:

- 1. On the "Guidance" preferences page, under Off-Route Recalculation,
 - tap **Prompted**, **Automatic** (Announced or Silent) or **Off**.
- For Next Turn Pop-up options, tap Off, SPEAK Button Only, Automatic Only, or Both.



Road and Area Avoidance

You can select specific sections of roads and define areas to avoid when calculating a route. This helps you to avoid road construction, heavy traffic areas, etc.

To select types of roads to avoid:


- Tap the desired type(s) of roads you wish to avoid when calculating a route to place a check in the adjacent box. You can choose from Highways, Toll Roads, U-Turns and Unpaved Roads.
- 2. To unselect a road tap the road type to remove the check mark.

To select specific sections of roads to avoid:

- 1. Tap the **Add Road** button to display Avoid Roads Setup Page.
- 2. Select a Start Point by using your current location or tap the "Measure From Pointer" icon to place a start point on a selected road.
- 3. To determine the end point of the section of road to avoided, drag the stylus to the desired location on the map.
- 4. Tap the **OK** button to display the section on the map.
- 5. Tap **OK** to place it on the Avoid Roads list. Tap the box next to any item on the list to place an "active" check in the box.
- 6. Tap and hold the stylus on a selected Avoid Roads item to View, Edit or Delete.

To select areas to avoid:

- 1. Tap the **Add Area** button to display the Avoid Areas Setup Page. The page will display a map with your current location centered on the map.
- 2. Use the **Drag and Zoom** tool zoom in on the area you want to avoid, or use the **Pan Map** tool to move to the area on the map.
- 3. Use the Draw Box tool from the Tool Bar to define the area you want to avoid.
- 4. Then tap the **OK** button and display the Avoid Area Detail Page where you can rename it and set an expiration date.
- 5. Tap **OK** to place it on the Avoid Area list. Tap the box adjacent to any item to place an "active" check.
- 6. Tap and hold the stylus on a selected Avoid Areas item to View, Edit or Delete.

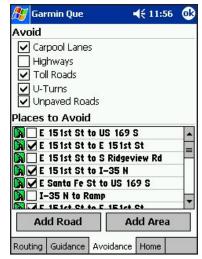


Avoid Roads and Areas Page





Road Section to Avoid Defined

Avoid Areas Selection Page

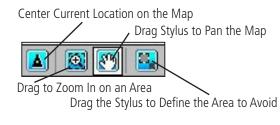

View/Edit Delete Delete All Tap the View/Edit Option to display the Selected Area to Avoid Page

View Selected Area to Avoid Page



Set Home Point

You can select specific location as a Home Point to route to at any time you desire to stop navigating a route and return to that location. The Routing feature will create a route back to the Home Point from your current location.

To select a home point:

- 1. Tap the **Home** tab to display Set Home Point Page.
- 2. Select either the "Set From Find" or "Set From Map" option and tap the appropriate button.

To Set From Find: Choose the desired category icon and then an item from the category. Tap the OK button at the bottom of the Find Page. The New Home Point will display as "Home" on the Set Home Point Page.

To Set From Map: Use the tools at the bottom of the Set From Map Page to locate the map point you want to select. Tap the Point on the map and then tap OK to display the point as "Home" on the Set Home Point Page.

- 3. From this point on, anytime you want to create a route to your Home Point, tap the **Route** icon on the tool bar and then the **Route To Home** icon on the Routes Menu.
- 4. To change the Home Point, tap the **Home** tab of the Route Preferences Pages and repeat the process above.

Edit Vias

To make turns or stops at points along or near to your route, you can add via points that are incorporated into the route.

To create new waypoints along the Route (Edit Vias):


- 1. With a route active, open the **Routes Menu**, tap the **Edit Vias** icon to display the Edit Vias Page. The Route destination appears at the top of the page.
- 2. Tap the **Menu** to view the list of options. You can add via points from the Map or from the Find feature.

If using the Map, place the stylus on the point you want to add to the route and then tap the **OK** button to return to the Edit Vias list.

If using the Find feature, follow instructions for using the feature on page 13, select the item and tap **OK** to return to the Edit Vias list.

3. To change the order of vias on the list, highlight the desired via and then tap the **Up** arrow to move it up in the order or the **Down** arrow to move it down. The order of vias with determine path of the route.



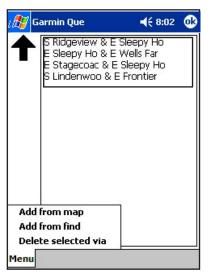

Route Via Points List

Detours

To navigate around obstacles such as traffic jams, construction, etc., you can use the Detour feature to recalculate your current route.

To Detour a specified distance around an obstacle on a Route:

- 1. Tap the **Detour** icon to display the Detour Options page.
- 2. Tap the **Distance** option and select the desired length of the route you want to avoid before returning to the route. Then tap OK to recalculate the route.

To Detour around a turn and section of roadway on a Route:

- 1. With the Detour Options page displayed, tap the Turns option to display the list of turns for the active route.
- 2. Scroll the list to find the turn you want to avoid and then tap the turn description. Then tap **OK**, the route will recalculate to avoid the selected turn and the section of roadway leading to the next turn on the list.

To Detour around a turn only on a Route:

- 1. Follow the instructions in step 1 above.
- 2. Scroll the list to find the turn you want to avoid then tap the turn description and then OK to recalculate the route to avoid the turn.

To Detour a specified section of a roadway on a Route:

Tap the Avoidance icon in the upper right corner of the screen to display the Avoidance page. Refer to page 26 for detailed instructions.

Recalculate

If you travel off a route you can quickly recalculate the route to get back on track to your destination. Routes can be recalculated manually or set to automatic.

To manually Recalculate a Route:

- 1. Tap the **Recalculate** icon from the Route page.
- 2. If you selected "Prompted" from Off-Route Recalculation in System Setup, you will be prompted to recalculate when you leave the route. To automatically recalculate a Route, see Preferences on page 25.

Voice Guidance

Whenever you approach a turn on a route a voice describes the direction to turn and the distance ahead to the turn. You can use a hard button to play the voice when desired.

To map a Hard Button to Speak Next Instruction or **GPS Status:**

 
1. Follow detailed instructions for mapping Hard Buttons on page 34.



Route Detour Options Page



Detour Turns List



Guidance Voice Prompt Options

The Track Log Utility

The Track Log is a feature that allows you to create a log (record) of your travels, which you can save for later use.

To access the Track Log:

From the Map Page, open the Main Menu and then tap **Track Log**.

To record a Track:

 From the Track Log page, tap **Recording** to place a check mark in the box adjacent to it. To stop recording a track log, tap **Recording** again to remove the check mark.

When the track log is full it will begin to record over the previous log.

A bar graph indicates the percentage of available space used. When the log approaches full capacity you may want to save it before it is lost.

To save a Track:

- 1. Tap the Menu on the tool bar at the base of the page to display the Options Menu.
- 2. Tap Save Track Log to display the Track Log dialog.
- 3. In the first field is the Track Name (it is automatically given a numeral identity). You can personalize it by renaming to a title of your choice.
- 4. The next two fields are "Track Start Time" and "Track End Time". Tap each field to select a beginning and end time for the saved track.
- 5. From the "Track Style" field, select a color for the track line when displayed on the Map Page.
- 6. Tap **Save** to save the track to the "Saved Tracks" list.

To view and edit Track details:

- 1. With the Track Log page displayed, place the stylus on the desired track from the track list and hold until a menu displays.
- 2. Tap **Saved Track Details** to edit the details page for that track.

To delete saved Tracks:

To delete a selected saved track, with the track highlighted, tap the appropriate option from the menu. To delete all saved tracks, tap the appropriate option from the menu.

To clear the Track Log:

1. Tap the Menu tool bar at the bottom of the screen and select "Clear Track Log", then tap Yes when asked, "Clear the active track?".

🎊 GARMIN Que	∢ € 2:55 💽
Percentage Full	17%
Recording	
Saved Tracks	19 Unused
✓ Pathway to Store	
Pathway to Lake	
🗹 Dalton Woods Path	
🗹 Lake Jogging Trail	
🗖 Track Log 01	
🗹 Track Log 02	
Menu	
Track Lon	Page

Track Log Page

🎊 Garmin Que	4 € 8:54	03		
Track Name				
Track Log				
Track Start Time		Sa	red Tracks	22 Unused
Beginning of Track L	og	-	Arrowhead	Park Path
Track End Time End of Track Log		-	Saved Track Details	
Choose Date & Time End of Track Log				Delete Saved Track Delete All Saved Tracks
Today 8:56 am			Caura	d Tua aly Quations
Cancel	Save		Save	d Track Options

Save Track Dialog

🎊 Garmin Que	4€ 2:58 🐽
Track Name	
Arrowhead Park Path	
Track Style White 🗸	
Display on map	
Start Time 11-	-AUG-03 09:19:15A
Track Distance	0.629m
Elapsed Time	28:45
Average Speed	0.0%
200:	RIDGEVIEW RI



Saved Track Details Page

The Sun and Moon Tables

The Sun and Moon Page is a feature with tables that allow you to view the position of the sun and moon in relationship to the earth at any time, date and location.

To access the Sun and Moon Page:

- 1. From the Map Page, open the Main Menu and then tap Utilities.
- 2. Tap Sun and Moon to display the Sun and Moon Page. The sun and moon positions displayed are for your current position, date and time.

To display sun and moon positions for a specified time, date and location:

- To view positions for a different date and time, tap the Date/Time field to display the Date and Time Setup Page and enter a new date or time. Tap the arrow at the end of the Date Field to display the Calendar (see below) and use the arrows at the end of the Time Field to change the time.
- 2. Tap **OK** to return to the Sun and Moon Page.
- To view positions for a different location, the "Current Location" field and select either "Use Map" or "Use Find". If you have previously identified a map location with the Pointer, then "Point" will also be available as a choice. Make your selection and tap **OK** to return the Sun and Moon Page. To control Sun and Moon graphic animation, tap Menu on the Tool Bar, then tap your selection. Choose from "Stop", "By Hour" or "By Day".

💱 Garmin Que	📢 3:39 🐽
2/1/04 3	:44 PM
Current Location	-
Sunrise: 7:26 AM Sunset: 5:38 PM	
Moonrise: 1:20 PM Moonset: 4:03 AM	
1enu	-5- = +

Sun and Moon Page

n 🔽
tion Options
ur -
Y

The Hunt and Fish Tables


The Hunt and Fish Tables provide you with a listing of predicted best times for hunting and fishing for a chosen date and location.

To access the Hunt and Fish Page:

- 1. From the Map Page, open the **Main Menu** and then tap **Utilities**.
- 2. Tap Hunt and Fish to display the Page. The prediction and times displayed reflect the current location and date.

To display hunting and fishing predictions for a specified dat and location:

- To view predictions for a different date, highlight the date field to display the Date and Time Setup Page. Tap the arrow at the end of the Date Field to display the Setup Calendar, then tap the arrows on either side of the Month and Year to move back or ahead, then tap the desired date.
- To view predictions for a different location, tap the "Current Location" field and select either "Use Map" or "Use Find". If you have previously identified a map location with the Pointer, then "Point" will be available as a choice. Make your selection and tap OK to return to the Page.

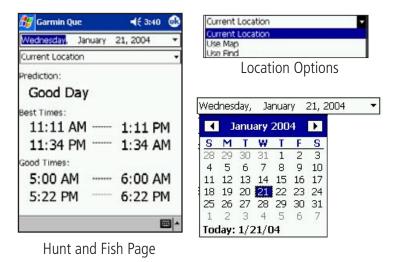

The Measure Distance Utility

Measure Distance is a feature that allows you to determine the distance between two items on the map.

To access Measure Distance:

- 1. From the Map Page, open the **Main Menu** and then tap Utilities to display the **Utilities** List.
- 2. Tap **Measure Distance** to display the Measure Distance Page.


To Measure Distance from your current location:

- Adjust the map scale to include your current location and the point you want to measure to. Tap the map scale in the lower left corner of the map to display the map scale control panel. Select the desired scale.
- Or... use the **"Zoom Out"** tool from the Tool Bar to define an area on the map and enlarge it.
- 2. Tap an item on the map and observe the direction and distance in the field above the Tool Bar.

To Measure Distance between two points on the map:

- 1. Adjust the map scale to include the points you want to measure between. See Step 1 above.
- 2. Tap the first item on the map and observe the measurement line connecting your current location to the item. Note the Map Pin icon located behind the Current Position Icon.
- 3. Tap the Map Pin icon on the Toolbar to move it to the first map item. Then tap the second map item to measure the distance between the two. The distance displays in the field above the Tool Bar.

If you don't want to lose map detail by zooming out in order view both points on the map, you can tap the Pan Map icon and use the stylus to pan the map to the second point on the map.

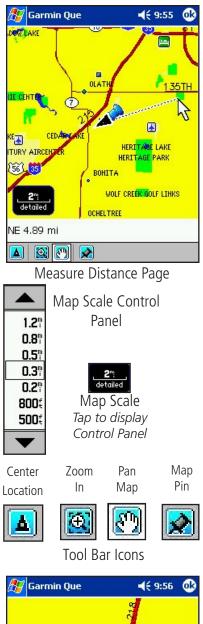



The Trip Computer

The Trip Computer is the feature that allows you to monitor your progress when navigating. Designed primarily for vehicular travel, it also works for other modes of travel as well.

When displayed, the Trip Computer provides you with information fields to show the GPS receiver status, the date and time, direction of travels and current speed. There are fields that display distance traveled for a particular trip, Stopped Time, Driving Speed Average, Driving Time, the Overall Average Speed (includes stopped and driving time), the Total Time elapsed since beginning a trip, the Maximum Speed attained and an Odometer totaling distance for all trips. Menu options allow you to Reset the Computer, Reset the Maximum Speed and Reset the Odometer.

To access the Trip Computer:


From the Map Page, open the Main Menu and then tap **Trip Computer**.

To use the Trip Computer Reset Options:


- 1. From the Trip Computer, tap the Menu bar and then tap the desired Reset option to display the option dialog window.
- 2. Tap the Yes option when asked, "Are you sure you want to reset the...".
 - **Reset Odometer** Resets only the Odometer at the top of the page.
 - Reset Trip Computer Resets the trip information list from Distance Overall Average.
 - Reset Max Speed Only Resets only the Maximum recorded Speed.
 - Reset All Resets all information to zero.

To return to the Map Page:


Tap the "**OK**" icon at the top of the screen to return directly to the Map Page.

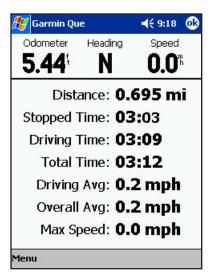

Trip Computer Page

 

Trip Computer Options Menu

 

Reset Prompt

HARDWARE MAPPING

Using the Arrow Button to access Garmin Que features

All Pocket PC's have a four or five position button used for scrolling lists, etc. For our purposes we will refer to this button as the Arrow button. You can use this button to operate many of the Garmin Que navigation features.

To change the Map Scale on the Map Page:

With the Map Page displayed, press the **Top** or **Bottom** of the Arrow Button to increase or decrease the map scale. Hold the button down to zoom the scale. Observe the map scale window in the lower left corner of the map to determine the desired scale.

To scroll any list:

With an entry on the list highlighted, press the top or bottom of the Arrow Button.

Using the Jog Button to change map scale or scroll lists


Mny Pocket PC's have a special button on the side of the device used for scrolling lists, etc. For our purposes we will refer to this button as the Jog Button. You can use this button to not only scroll lists but change the map scale up or down when viewing the Map Page. Note that for some lists in the Que application, an item must be highlighted before you can scroll the list.

To change the Map Scale on the Map Page:

With the Map Page displayed, press or rotate **Up** or **Down** to increase or decrease the map scale.

To scroll a list:

With the list displayed and an item highlighted, move the button **Up** or **Down** to scroll the list.

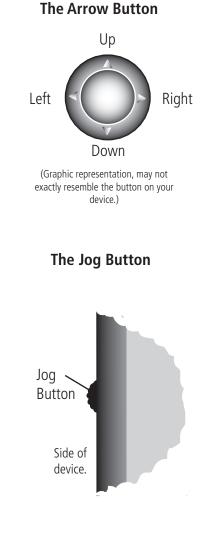

Mapping Que feature access to device hard buttons

All Pocket PC's have hard buttons that can be programmed (mapped) to perform a specific function. When the Que application is running and visible, pressing a programmed hard button will display a specific feature.

To map a hard button to display a Que feature:

- 1. From the Map Page, tap the **Main Menu** and select **"System Setup"**.
- 2. Tap the Buttons tab to display the Hard Button Mapping Page.
- 3. To map buttons 1 through 4 for <u>press and release</u> functions, tap each field to display a list of featurre options. Then tap the feature you desire mapped to that button.
- 4. To map buttons 1 through 4 for <u>press and hold</u> functions, tap each field to display a list of feature options. Then tap the feature you desire

5.


Hard Button Positions 1 to 4



Arrow Button

🎊 Garmin Qı	ue		4 € 2:3	35	•
Pressed Buttons					
Button :	1 <0	nused:	>		-
Button 2	2 <0	<unused></unused>			٠
Button (3 <0	<unused> 👻</unused>			•
Button 4	4 Cyc	Cycle to Next Page 🛛 👻			•
Held Buttons	s				
Button :	1 <0	<unused> 🔹</unused>			
Button 2	2 <0	<unused> 👻</unused>		•	
Button (3 <0	<unused> 🔻</unused>			
Button 4	tton 4 Speak Current Status 🔻				
✓ Use only with Garmin Que visible ☐ Left and right cycle to next page					
Guidance Avoid	dance	Units	Buttons	La	()

Hard Button Mapping Page

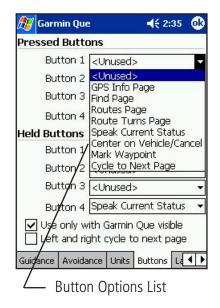


MAPPING DATA

Transferring Other Types of Detailed Maps from MapSource®

Garmin MapSource offers a wide variety of detailed mapping data other than those provided with your unit, such as topographic and marine charts. If you plan to add additional mapping data or already have other versions of MapSource maps, other than those provided with Garmin Que, you can transfer those maps to the device using the methods described below.

To transfer additional detailed maps to Garmin Que:

- 1. Open MapSource on your PC and be certain the Pocket PC is synched.
- 2. Select the Map Tool to highlight desired maps from the program and place in the Maps dialog.
- 3. Then click the **Send To Device** button and it will select Garmin Que.
- 4. When the "Send To Garmin Que" window opens, select a storage location from the options in the "Map Storage Location" dialog and then click the **Send** button.
- 5. A "Sending To Garmin Que" window appears and then states "The data was successfully saved" when transfer is complete.

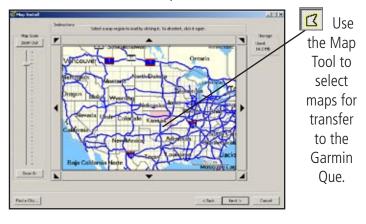

6. Click **OK** to finish.

To transfer detailed maps from the Garmin Que to MapSource:

- 1. Open MapSource on your PC.
- 2. Select the **Maps** tab to display the Maps List dialog box.

- 3. Then click the **Receive from Device** button and it selects Garmin Que.
- When the "Receive From Garmin Que" window opens, select "Maps" and "What To Receive" from the options and then click the Receive button.
- 5. An "Receiving From Garmin Que" window appears and then states "The data was successfully received" when transfer is complete.



"Send To Device" Window

connect it to the compu- then click Find Device.	ter and turn it on,
Find De	vice
Device: Garmin Que	
Map Storage Location:	
Available Locations	Used Space
(SD Card	7.07 MB
what To Receive	
🔽 Maps	F Boutes
☐ Waypoints	Tracks

"Receive From Device" Window

Transferring Waypoints and Saved Tracks to MapSource®

Garmin MapSource allows you to transfer lists of waypoints and saved tracks for storage for later use. This allows you to reduce the number of items stored on your Pocket PC in order to add more without the need for deleting those items you would like to save for future reference.

To transfer Waypoints to MapSource on your PC:

- 1. Open MapSource on your PC.
- 2. Select the Waypoints tab to display the field for the list of waypoints to be placed.
- 3. Then click the **Receive** from Device button and it will select "Garmin Que...".
- 4. When the "Receive from Device" dialog displays, check "Waypoints" and "Tracks", if you want to receive both, and then click **Receive**.
- 5. A "Receiving from Garmin Que" window displays and then signal "The data was successfully saved" when all waypoints have been received. Click **OK** to transfer the waypoints to the MapSource Waypoints field.
- 6. If you haven't already edited the list of waypoints to remove those you don't want to save, you can use the edit feature in MapSource to edit your list.
- 7. Before closing, save the list of waypoints to a file on your PC.

To transfer only Saved Tracks to MapSource on your PC:

Follow the same steps above, only check just the Tracks box.

NOTE: To transfer Waypoints or Tracks from MapSource to the Garmin Que, follow the same steps for transferring Maps to the Garmin Que above, only select Waypoints or Tracks from the "What To Send" options.

Currently, you cannot transfer Saved Routes from Garmin Que to MapSource.

connect it to the con then click Find Devic	r device listed below, nputer and turn it on e.
Find	Device
Device: Garmin Qu	e
Map Storage Locatio	n:
Map Storage Locatio	

Receive From Device Window with Waypoints and Tracks Checked

×

Receiving From Garmin Que

Transfer Complete	×
The data was successfully received.	
	OK
	1 A / 1

Transfer Complete Window



List of Transferred Waypoints

Additional Information

Specifications

Internal System

Operating System: Microsoft® Pocket PC 2002 -2003

Application Software

Garmin "Que": GPS Info, Address Lookup, Electronic Mapping, Track Log, Trip Computer, Automatic Route Generation, and Turn-By-Turn Voice Guidance

Moving Map Features

Basemap: Routable basemap contains state and country boundaries, lakes, rivers, streams, airports, cities, towns, coastlines, state and interstate highways, local thorough-fares and secondary roads within metro areas

CD-ROM: Accepts downloadable map detail from Garmin PC-based MapSource City Select and City Navigator Data Disks which provide street-level detail, addresses, listings of nearest restaurant, hotels, ATMs and more. Accepts most other MapSource map data as well as U.S. Topos and Marine charts

Navigation features

Routes: Automatically calculated with turn-by-turn instructions; using built-in basemap, routes include interstates, highways and major thoroughfares; with detailed data from mapping data disks, routes include residential street-level detail

Trip computer: Resettable odometer, timers, average and max. speeds

Specifications are subject to change without notice.

If you encounter operational problems that you cannot solve using this guide, first determine that they are not related to operation of your Pocket PC, then: Contact Garmin Product Support at 913/397.8200 or 800/800.1020

Troubleshooting Guide				
Symptom	Probable Cause	Remedy		
GPS Signal Related Problems "No GPS Connected" message GPS receiver is not powered.	GPS receiver is not turned on. Connect power source or charge battery. GPS receiver (if wireless) is out of range. GPS receiver (if wireless) is not paired.	Turn On receiver. Relocate. See GPS receiver setup instructions.		
"Waiting for GPS" message stays on	GPS receiver is not powering up	Battery low, check battery charge.		
"Acquiring Satellites" message stays on	GPS receiver is collecting satellite data.	Wait for data to be collected.		
"Lost Satellite Reception" message appears repeatedly	GPS receiver cannot maintain a constant signal Antenna is incorrectly positioned	Move to location with less interference Relocate antenna for best reception		
Cannot achieve reliable satellite signals when the GPS receiver is mounted on my auto dash.	Some auto windshields are tinted using a thin metallic coating to reflect ultraviolet sun rays.	Most vehicles with this type windshield block satellite signals as well. GPS receivers will not operate inside the vehicle.		
With the receiver on my auto dash, the satellite signal reception is weak.	Car radios and CD players can generate electrical fields that can interfere with satellite signals	Relocate the GPS receiver away from the radio or turn off the radio when using the Garmin Que to navigate		
Map Messages at Startup or Card Insertion				
"Can't Unlock Maps"	You must enter the unlock code during MapSource installation	Follow installation instructions on the setup Disk		
"Detailed Maps Don't Support Routing"	These maps are not the type used for auto-routing	Select maps designed for auto-routing.		
"Too Many Maps on Data Card"	The map sets you are trying to load are too large for the space available in the storage location	Check the space available in the chosen location and choose another location with enough space or reduce the map set size		
Map Data Related Problems				
No Find Feature items listed for "By Name" options Que	Maps that support that option are not installed from MapSource	Open MapSource and select maps from City Select version 6.5, then save to Garmin		
"None Found" message when accessing the Man made Places, Water Features, and Land Features Find Options	These options only display data from topographic maps and marine charts	Load maps of this type using MapSource topographic and marine chart map data		
Find Feature Search Messages				
"Select Street Before Searching"	You have tapped the "Search" button before entering the name of the street for an address	Enter a street name before beginning your search for an address		
"Select Two Streets Before Searching"	You have entered none or only one street before searching for an intersection	Enter both street names to complete the intersection description		
"None Found"	This message appears when there is no data in the loaded maps matching the entry	Try entering a variation of the item description		


Additional MapSource Data Sets

MapSource[®] Cartography

You may want to purchase additional MapSource[®] map data disks with maps for another country, topographic maps or marine charts. Consult your Garmin Dealer or the Garmin website *www.garmin.com* for pricing and availability.

Additional MapSource map data sets can be purchased from your Garmin Dealer or on-line from Garmin. Consult your Garmin Dealer for a vial able MapSource maps compatible for use with the Garmin Que or visit the Garmin website at (www. garmin.com). world when others under development reach operational status.

In addition to satellites in orbit over the Earth, ground based reference stations must also be in place near the region you are located. Enabling WAAS in regions that are not supported by ground stations, which correct position data, typically, does not improve accuracy even when receiving signals from an SBAS satellite. In fact it can degrade the accuracy to less than that provided by GPS satellites alone. For this reason, your Garmin GPS receiver, when in the "WAAS Enabled" mode, uses the method that achieves the best accuracy. To enable/disable WAAS, refer to the General Settings tab of the System Setup Page of Garmin Que. For more information, go to http://gps.faa.gov/Programs/WAAS/waas.htm.

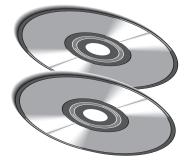

MapSource Detailed Mapping Data Disks

What is WAAS?

The Wide Area Augmentation System (WAAS) is an FAA funded service to improve the overall integrity of the GPS signal for users in North America. WAAS is just one service provider that adheres to the MOPS (Minimum Operational Performance Standard) for global Satellite Based Augmentation Systems (SBAS). Eventually there will be several services of worldwide geostationary communication satellites that broadcast integrity information and differential correction data as transmitted by ground reference stations.

At this time WAAS is still in the developmental stage with a goal of providing reliable signals with an accuracy of 7 meters (21-22 feet) both horizontally and vertically 95% of the time. Current tests have shown the actual accuracy to be on the order of 2-3 meters (7-10 feet). This accuracy is comparable to DGPS (as explained below), but without the need for a separate beacon receiver. Since all SBAS systems use the same receiver frequency, any SBAS system should be capable of providing your GPS unit with increased accuracy at any location in the

Software License Agreement

THIS SOFTWARE IS OWNED BY GARMIN CORPORA-TION ("GARMIN") AND IS PROTECTED UNDER COPY-RIGHT LAWS AND INTERNATIONAL COPYRIGHT TREATIES. THIS SOFTWARE IS LICENSED, NOT SOLD. THIS SOFTWARE IS PROVIDED UNDER THE FOLLOW-ING LICENSE WHICH DEFINES WHAT YOU MAY DO WITH THE PRODUCT AND CONTAINS LIMITATIONS ON WARRANTIES AND/OR REMEDIES.

IMPORTANT: CAREFULLY READ THIS LICENSE BEFORE USING THIS PRODUCT. INSTALLING, COPY-ING, OR OTHERWISE USING THIS PRODUCT INDICATES YOUR ACKNOWLEDGMENT THAT YOU HAVE READ THIS LICENSE AND AGREE TO ITS TERMS. IF YOU DO NOT AGREE, RETURN THE COMPLETE PRODUCT TO GARMIN INTERNATIONAL. INC. CUSTOMER SERVICE, 1200 EAST 151st STREET, OLATHE, KS 66062 WITHIN 10 DAYS OF THE DATE YOU ACQUIRED IT FOR A FULL REFUND.

1. LICENSE: GARMIN ("we" or "us") provides you with storage media containing computer software (the "Program") which may also include digital cartographic data and "online" or electronic documentation, and printed materials (together called the "Product") and grants you a limited non-exclusive license to use the Product in accordance with the terms of this License Agreement. The copyright and all other rights to the Product shall remain with us. You must reproduce any copyright or other notice marked on the Product on all copies you make.

2. YOU MAY:

a) install and use one copy of the Product on a single computer or network. This copy is to be used by only a single user at a time. If you wish to use the Product for more users, you will need an additional license for each user.

b) make one copy of the Product for archive or backup purposes.

c) use a copy of the Product on a home or portable computer if that copy is never loaded at the same time it is loaded on your primary computer.

d) transfer the Product to someone else only if you assign all of your rights under this License, cease all use of the Product, erase or destroy any copy (including the hard disk copy) made in support of your use of the Product, and ensure that the other person agrees to the terms of this License.

3. YOU MUST NOT:

a) make copies of the Product except as expressly permitted in Section 2 of this License.

b) translate, reverse engineer, decompile, or disassemble the Product except to the extent the foregoing restriction is expressly prohibited by applicable law.

c) rent, lease, loan, sub-license, distribute, assign, or transfer the Product except as set out in Section 2 (d) above.

d) modify the Product or merge all or any part of the Product with another program.

4. TERM: This License shall continue for as long as you use the Product. However, this License will terminate automatically without notice from GARMIN if you fail to comply with any of its terms or conditions. You must agree, upon termination, to destroy all copies of the Product. The Limitations of Warranties and Liability set out below shall continue in force even after any termination.

5. LIMITATION OF WARRANTIES AND LIABILITY: THE PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITH-OUT ANY WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WAR-RANTIES OF MERCHANTABLE QUALITY, MERCHANT-ABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE PRODUCT IS ASSUMED BY YOU. NEITHER WE NOR OUR DEAL-ERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUEN-TIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECO-NOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGRE-GATE LIABILITY TO YOU SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE PRODUCT. THE LIMI-TATIONS IN THIS SECTION SHALL APPLY WHETHER OR NOT THE ALLEGED BREACH OR DEFAULT IS A BREACH OF A FUNDAMENTAL CONDITION OR TERM OR A FUNDAMENTAL BREACH. SOME STATES/COUN-TRIES DO NOT ALLOW THE EXCLUSION OR LIMITA-TION OF LIABILITY FOR CONSEQUENTIAL OR INCI-DENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

6. RESTRICTED RIGHTS: If this Product is acquired by or for the U.S. Government, then it is provided with Restricted Rights. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of The Rights in Technical Data and Computer Software clause at DFARS 252.227-7013, or subparagraphs (c)(1) and (2) of the Commercial Computer Software - Restricted Rights at 48 GarminR 52.227-19, or clause 18-52.227-86(d) of the NASA Supplement to the FAR, as applicable. The contractor/manufacturer is GARMIN International, Inc., 1200 E. 151st Street, Olathe, KS 66062, USA.

7. EXPORT CONTROLS: You agree not to export or re-export the Product to any country in violation of the export control laws of the United States of America.

8. GENERAL: This License is the entire agreement between us, superseding any other agreement or discussions, oral or written, and may not be changed except by a signed agreement. This License shall be governed by and construed in accordance with the laws of the State of Kansas, United States of America. If any provision of this License is declared by a court of competent jurisdiction to be invalid, illegal, or unenforceable, such a provision shall be severed from the License and the other provisions shall remain in full force and effect.

INDEX

Α

Accuracy Circle 3 Active Route 22, 24 Addresses Finding 15 On Map 3 Add to Contacts 23 All Points of Interest 17 Altitude (Elevation) 20, 21 Arrow, Pointer (Map Pointer) 3 Attention Tone 25 Attractions, Finding 17 Audio (Voice Prompts) 10, 25, 28, 34 Automatic Off-Route Calculation 25 Auto Zoom 7 Avoidance, Road and Area 10, 26

В

Buttons 11, 26, 34 By Name, Search 13

С

Calculating a Route 22 Cities Finding By Name 14 Finding Nearest 14 Information Page 14 On Map 14 Color Mode, Map Display 3, 4, 7 Contact Location 23 Creating a Route 22 Current Location (Position Arrow) 2 Current Time Synchronization 10

D

Deleting A Route 24 A Track 29 A Waypoint 20 Detailed Maps 7 Details Pages (Find) 13 Detours (Adding) 28 Distance, Measuring 31

E

Editing Via Points on a Route 22 Waypoints 20 Elevation 20, 21 Emergency and Gov., Finding 17 Ending a Route (Stop Navigation) 22 Entertainment, Finding 17

F

Faster Time (Route 25 Find Menus Addresses 15 All Points of Interest 17 Attractions 17 Cities 14 Emergency and Gov. 17 Entertainment 17 Food and Drink 17 Intersections 16 Land Features 17 Lodging 17 Recent Finds 13 Services 17 Shopping 17 Transportation 17 Water Features 17 Waypoints 18

G

GPS Location 2, 20 Mode 1, 10 Receiver 1, 21 GPS 10 Properties 12 Guidance Preferences 10, 25

Η

Help 6

I

Initialization (GPS) 1 Interface Settings 12 Intersections, Finding 16

L

Language Selection 12 Locate in Garmin Que 23 Location Information 3

Μ

Map Orientation 2, 7 Page 2 Panning 3 Pointer 3 Scale 2 Selection 7 Setup 4, 7 Mapping Hard Buttons 34 Map Details, Setup 7 Map Page 1 Marking Your Location 19 Maximum Speed 32 Measuring Distance 31

Ν

Navigating Routes 24 Near Current Location 13 New Location 21 Next Turn 24 Night Mode 3 North Up 2, 3

0

Odometer 32 Off-Route Recalculation 25 Off Road Navigation 25 Orientation, Map 2, 3 Overall Average Speed 32

Ρ

Panning the Map 3 Pointer Arrow (Map Pointer) 3 Points of Interest 17 Position Coordinates 3, 21

R

Recalculate Route 22, 25 Receiver Status 21 Recently Found Places 13 Renaming Waypoints 20 Resetting Trip Information 32 Resume Route Navigation 22 Routes Menu 22 Route Navigation 24 Routing Preferences 25

Garmin Que Applications Guide

S

Satellite Status Page 21 Saving Routes 24 Saving Tracks 29 Signal Strength 21 Software License Agreement 40 Specifications 37 Start Up 1 Status Messages (GPS) 21

Т

Table of Contents iv Text Size 8 Time Synchronization 10 Track Log 29 Track Up 3, 7 Trip Computer 32 Troubleshooting 38 Turns Page 24 Turn Preview 24

U

Units of Measure 11 Unit ID 6

V

Vehicular Safety iii Via Points 27 Voice Prompts 10, 25, 28, 34

W

WAAS 39 Warnings and Precautions ii Waypoints Creating 19 Editing 20 Moving 20 Searching for 18 Symbols 20

Ζ

Zooming the Map Scale 2, 3, 33 Zoom Scale 2, 3



© Copyright 2005 Garmin Ltd. or its subsidiaries

Garmin International, Inc. 1200 E 151st Street, Olathe, Kansas 66062 U.S.A. Tel. 913/397.8200 Fax. 913/397.8282

Garmin (Europe) Ltd. Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9AQ U.K. Tel. 44/0870.8501241 Fax. 44/0870.8501251

> Garmin Corporation No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan Tel. 886/2.2642.9199 Fax. 886/2.2642.9099

> > Part Number 190-00505-00 Rev. C