

SAMSUNG TECHWIN

Video Door Phone User Manual

SVD-4332/4332W

Üretici: SAMSUNG TECHWIN CO.,LTD
Adres, Şehir: Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea
posta kodu: 463-400

Ülke: Kore
Üretici Tel / Faks : 82 70 7147 8740-60 / 82 31 8018 3745

Üretici: TIANJIN SAMSUNG TECHWIN OPTO-ELECTRONIC CO.,LTD
Adres, Şehir: No. 11, Weiliu Road, Micro-Electronic Industrial Park Jingang Road, Tianjin, China
posta kodu : 300385

Ülke: Çin
Üretici Tel / Faks : 86 22 2388 7788(8773) / 86 22 2388 7788(8505)

Türkiye Yetkili Distribütörü : KOYUNCU ELEKTRONİK BİLGİ İŞLEM SİSTEMLERİ San. Ve Tic. A.Ş.
Adres, Şehir: Emek Mahallesi Ordu Cad. No:18 SARIGAZI 34785 / İSTANBUL
Distribütör Tel / Faks : 0216 528 88 88 / 0216 313 57 05

Adres, Şehir: EDS ELEKTRONİK DESTEK San. Tic. Ltd. Sti.
Meclis Mah. Kılıc Sok. No:4 Sarigazi / İstanbul - Turkey
Distribütör Tel / Faks : +90-216-528-4500, FAX : +90-216-528-4599

Adres, Şehir: KONT BİLİSİM TEKNOLOJİLERİ ve Dis Ticaret A.S.
Mehmet Akif Ersoy Cad. No:37 Orhanlı / Tuzla / İstanbul - Turkey
Distribütör Tel / Faks : +90-216-581-5535, FAX : +90-216-394-4478

Ülke: TÜRKİYE



SALES NETWORK

SAMSUNG TECHWIN CO., LTD.
Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

SAMSUNG TECHWIN AMERICA Inc.
1480 Charles Willard St, Carson, CA 90746, UNITED STATES
Toll Free : +1-877-213-1222 FAX : +1-310-632-2195
www.samsungcctvusa.com

SAMSUNG TECHWIN EUROPE LTD.
Samsung House, 1000 Hillswood Drive, Hillswood Business
Park Chertsey, Surrey, UNITED KINGDOM KT16 OPS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungsecurity.com

Z6806140601A (GC68-01539A ED:02)



Video Door Phone

User Manual

Copyright

©2010 Samsung Techwin Co., Ltd. All rights reserved.

Trademark

SAMSUNG TECHWIN  is the registered logo of Samsung Techwin Co., Ltd.
The name of this product is the registered trademark of Samsung Techwin Co., Ltd.
Other trademarks mentioned in this manual are the registered trademark of their respective company.

Restriction

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

Disclaimer

Samsung Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Samsung Techwin reserves the right to change the contents of this document without prior notice.

Warranty

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.
This product should not be mixed with other commercial wastes for disposal.

Preface

Precautions

- Safety Precautions 2

Chapter 1 : Preparation

Names and Functions

- Product - Monitor 4

Chapter 2 : Operation

Entrance Functions

- When a visitor is outside the entrance 5
- Checking outdoor status 6

Interphone Functions (Optional)

- Making internal calls 7

User Setting Functions

- Entering for user setting mode 8
- Setting the melody type 8
- Adjusting voice volume/screen 9
- Setting the time 9
- Deleting all stored images 10
- System initialization 10

Supervisor setting Functions

- Entering for supervisor setting mode 11
- Setting the ID 11
- Setting the Camera Quantity 12
- Setting the Bell 12
- Setting the Multi panel 13
- Setting the Door Open 13
- Setting the Open Time 14
- Setting the Call Time 14
- Setting the Talk Time 15
- Setting the NAND Flash Bulk Check 15
- Setting the Video mode 16
- Initializing the Supervisor mode 16
- Setting the Chroma Delay 17
- Setting the Storage Image Number 17

Visitor Image Functions

- Auto-recording of missed visitor images 18
- Recording visitor images manually 18
- Replaying stored images 19
- Deleting the current image 19

Chapter 3 : Installation

Installation

- Monitor 20
- Door Camera 21

Wiring

- 4 Monitors + 2 Door Cameras (2 Door locks) 22
- 4 Monitors + 1 Door Camera + 1 Multi Panel 24
- 1 Monitor + 1 Door bell + 1 Door Lock 24

Settings

- Connection cable specifications 25
- Various settings 25

Chapter 4 : Useful Information

Components

- Monitor [SVD-4332 Series] 26
- Door Camera 26

Troubleshooting

- Check this first! 27

Product Specifications

- Monitor [SVD-4332 Series] 28
- Door Camera 29

Precautions

* Please review the content below to ensure safe and precise product usage.

Safety Precautions

Warning

Neglect to follow directions can result in death or serious injury.

Caution

Neglect to follow directions can result in injury or material loss.

Warning

Do not disassemble, install, or repair this product on your own accord.

- Contact the service center for any repair needs. Unauthorized handling may cause product malfunction, electric shock, and/or fire.



Do not place the product near a heat source (e.g. heater) or source of moisture (e.g. aquarium, humidifier).

- It may cause product malfunction and/or fire.



Do not subject the product to any heavy shock such as striking with a hard object (e.g. hammer, etc.).

- It may cause product malfunction, electric shock, and/or fire.



Do not allow water or other liquid to enter the product interior.

- It may cause product electric shock and/or fire.




If the product emits a peculiar noise, odor, and/or smoke, immediately lower the circuit breaker connected to the electric heater switch (ONT product connection) in the power cabinet panel, and then contact the service center.

- Beware the risk of electric shock and/or fire.



Do not allow water to enter the camera interior when cleaning.


- It may result in electrical shock and/or fire.

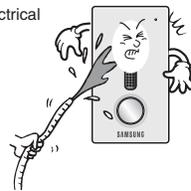

Warning


Do not use pins or any sharp, pointy objects to press buttons or to insert into holes.

- It may cause product electric shock and/or fire.

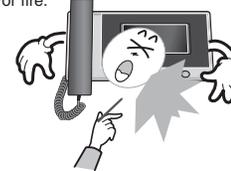

Do not clean using wet cloths or volatile substances (e.g. alcohol, benzene, thinner).

- It may cause product electric shock and/or fire.

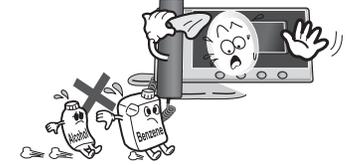

※ After receiving service, ask the service representative to perform a safety inspection.

Caution

Do not hang from or pull on the installed product.

- Take special care to prevent such abuse by small children as injury may occur.



Be careful when standing up after sitting under the installed product.

- Head injuries may occur from any impact with the installed product.




Make sure to pass the user manual onto the new home owner/tenant when moving.

- It can prevent any product misuse by the new home owner/tenant.



Names and Functions

Product - Monitor

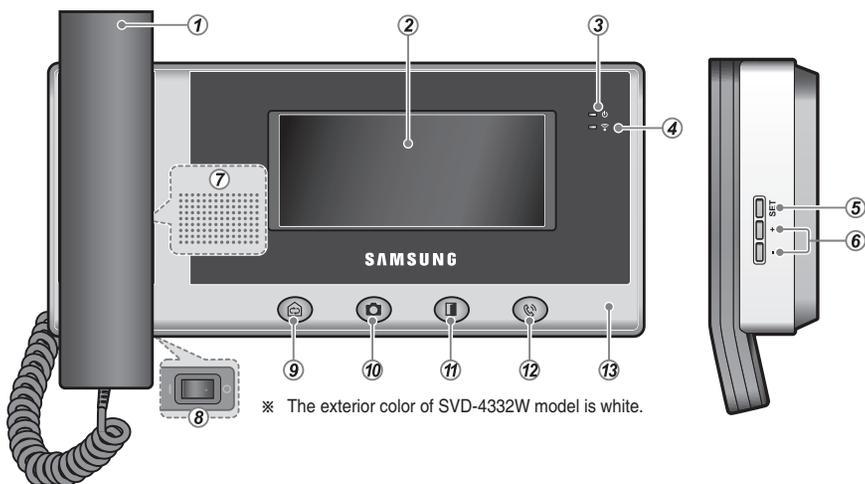

- ① **Handset**
This is used to communicate with a visitor outside the entrance or the common entrance or make calls to the interphone.
- ② **LCD screen**
This shows the visitor's image.
- ③ **POWER indicator**
This lamp turns red when the power is normal and blinks in communication failure.
- ④ **DOOR indicator**
When doorbell is connected, this lamp blinks if the bell rings.
- ⑤ **SET button**
This button is used to change various settings (e.g. Bell sound, call volume, screen brightness, initialization, etc.)
- ⑥ **+/- button**
This is used to adjust bell sound, call volume and screen brightness.
- ⑦ **Speaker**
This is used to output bell sound or voice during communication with a visitor outside the entrance (doorbell)/common entrance or when making a call to the interphone.
- ⑧ **Power switch**
This is used to turn the power on/off.
- ⑨ **Interphone button**
This is used to make calls to subphone.
- ⑩ **Record/Replay button**
This is used to store images on the screen or play stored images.
- ⑪ **Door Open[release] button**
This is used to open the entrance/common entrance during a call.
- ⑫ **Call button**
This is used to check the status outside the entrance, answer an incoming call with the handset picked up or to make a speakerphone call.
- ⑬ **Microphone**
This is used to make a call with a visitor outside the entrance/common entrance or to the interphone.

Entrance Functions

These functions enable user to make a call to a visitor outside the entrance or open the entrance door.

When a visitor is outside the entrance

7 Bell rings and the screen displays the image of the visitor outside the entrance.

If you want to make a call to the visitor, pick up the handset and make a call.

- If an interphone is connected, the incoming bell rings from the interphone.
- For interphone call (option), pick up the interphone and make a call.

- Each time the doorbell rings, the Call LED blinks.
- The limits for a call time and talk time are 1 minute and 3 minutes, respectively. If a call is not made within the call time limit, the visitor's image is recorded/stored automatically.

2 You can open the entrance door by pressing the **Door Open** button during a call.

- For interphone (option), you can open the entrance door by pressing the **Door Open** button during a call.

- If the current call is switched to speakerphone mode by pressing the **Call** button in handset mode, you can continue the call in speakerphone mode after replacing the handset.

3 To hang up a call, replace the handset.

- For interphone (option), replace the interphone handset to hang up a call.

Note

1. Installing the door lock system designated by our company to your entrance door enables you to open the door by pressing the **Door Open** button during an entrance call.
2. You can adjust voice volume, color, contrast or brightness with + or - button referring to the text under the screen after pressing the **SET** button.
3. When doorbell rings, you can open the relevant door by pressing the **Door Open** button with no call connection.

Entrance Functions


These functions enable you to check the status outside the entrance.

▶ Checking outdoor status

When there is one door pin

If you press the Call button in standby mode, the entrance image is displayed on the screen and a call is connected.


- If you press the Call button with the handset picked up, the phone is connected in handset mode.
- If you press the Call button in standby mode, the phone is connected in speakerphone mode.

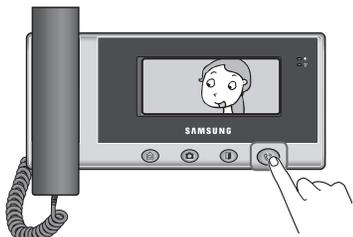

- The outdoor image can be displayed for up to one minute.
- You can open the entrance door by pressing the **Door Open** button while the outdoor image is displayed.

When there are two or more door pins

If you repeatedly press the Call button, the entrance hall images are displayed in turn.

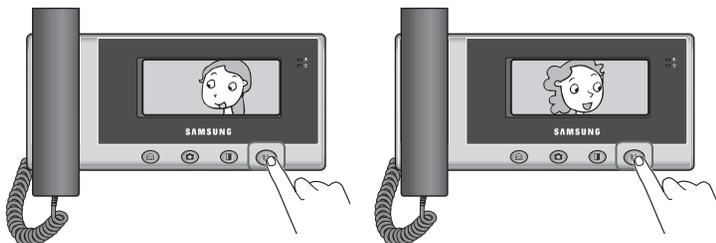


- The outdoor image screen is automatically turned off after 50 ~ 60 seconds.
- Doorbells and multi panels do not support "Checking outdoor status."
- You can open the entrance door by pressing the **Door Open** button while the outdoor image is displayed.

Interphone Functions (Optional)

These functions enable you to make internal calls when another monitor is installed.

▶ Making internal calls

1 Press the **Interphone** button with the handset picked up.

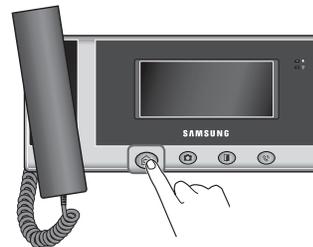

- An incoming bell signal occurs in another monitor

2 A melody sounds from sub-phone.




3 Now, you can accept the call with the handset of the subphone.



- If the current call is switched to speakerphone mode by pressing the Call button in handset mode, you can continue the call in speakerphone mode after replacing the handset.

4 To hang up the call; During the speakerphone mode, press the Call button of the Monitor, during the handset mode, replace the handset of the Monitor.

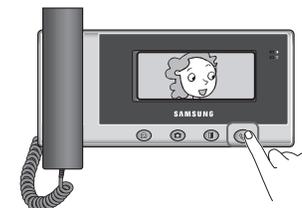

Note

1. If internal calls are not answered for one minute, the calls are disconnected.
2. Internal calls are automatically hung up after 3 minutes.


User Setting Functions

These functions are used to customize some product functions in the user's environment.

▶ Entering for user setting mode

7

Select a desired setting mode by repeated pressing the **SET** button in standby mode. Press +/- button to enter the selected mode.

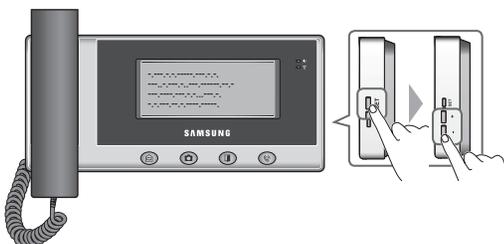

< USER MODE >	
1. DOOR1 MELODY SELECT	1
2. DOOR2 MELODY SELECT	2
3. SLAVE MELODY SELECT	3
4. MELODY VOLUME ADJUST	2
5. ALL IMAGE DELETE	NO
6. FACTORY DEFAULT	NO
7. VIDEO MODE OSD COLOR	RED
8. RTC YEAR ADJUST	2009
9. RTC MONTH ADJUST	01
A. RTC DATE ADJUST	02
B. RTC HOUR ADJUST	03
C. RTC MIN ADJUST	04
D. EXIT	

Ver1.0


- To exit the user setting mode, select **D.EXIT**, and then press the **Interphone** button to save your settings. In addition, if there is no input for more than 10 seconds, the mode is automatically ended.

▶ Setting the melody type

Set/select melodies for Door 1, Door 2 (Lobby) and/or Slave.

- During the standby mode, press the **SET** button repeatedly to select the desired melody selection item. (1.DOOR1 MELODY SELECT ~ 3.SLAVE MELODY SELECT)
- Press the +/- buttons to select the desired melody type as below;


1. Ding-dong 1	2. Ding-dong 2	3. Ding-dong 3	4. Guitar bell 1
5. Guitar bell 2	6. Love's greeting	7. Tambourine	8. Canon (Pachelbel)
- To save the selected settings, press the **Interphone** button.

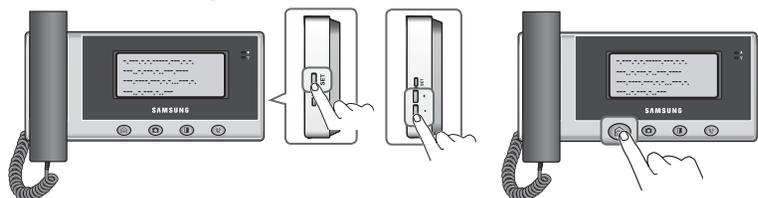

- Melodies can be repeatedly selected for each bell sound of Door 1, Door 2 (Lobby) and Slave.
- To exit the user setting mode, select **D.EXIT**, and then press the **Interphone** button to save your settings. In addition, if there is no input for more than 10 seconds, the mode is automatically ended.

▶ Adjusting the voice volume/screen


- While an image is displayed on the screen, press the **SET** button repeatedly to select the desired adjustment mode as below;
TALK VOLUME 2 → **COLOR STEP 2** → **CONTRAST STEP 2** → **BRIGHT STEP 2** → **EXIT**.
- Press the +/- buttons to select the desired value.
 - + : Increase the setting value - : Decrease the setting value
 - Each setting can be set up to level 4, and the initial setting value is 2.
- To save the selected settings, press the **Interphone** button.

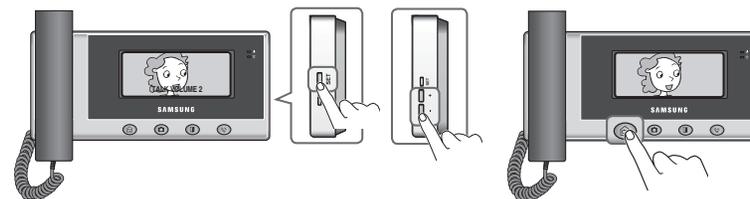

- To exit the user setting mode, select **EXIT**, and then press the **Interphone** button to save your settings. In addition, if there is no input for more than 10 seconds, the mode is automatically ended.

▶ Setting the time

- During the standby mode, press the **SET** button repeatedly to select **8.RTC YEAR ADJUST** ~ **C.RTC MIN ADJUST**.
- Press the +/- or **SET** buttons to adjust the desired time.
 - + : Increase the setting value - : Decrease the setting value
 - SET** : Move to the specified item. (Move to YEAR → MONTH → DAY → HOUR → MIN in turn.)
- To save the selected settings, press the **Interphone** button.

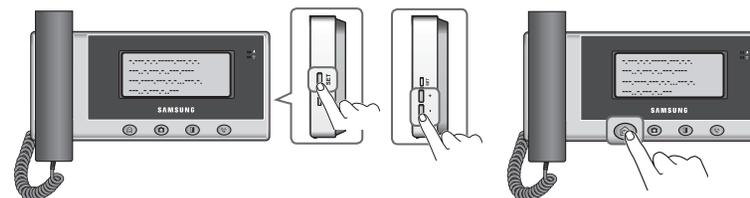


- To exit the user setting mode, select **D.EXIT**, and then press the **Interphone** button to save your settings. In addition, if there is no input for more than 10 seconds, the mode is automatically ended.
- If the unit power is off for more than 5 minutes, the RTC settings will be reset automatically.

User Setting Functions

These functions are used to customize some product functions in the user's environment.

▶ Deleting all stored images


1. During the standby mode, press the **SET** button repeatedly to select the **5.ALL IMAGE DELETE**.
2. Press the **+ / -** buttons to select the **YES** or **NO**.
YES : perform the deleting all images **NO** : cancel the deleting all images
3. To excute the selected condition, press the **Interphone** button.

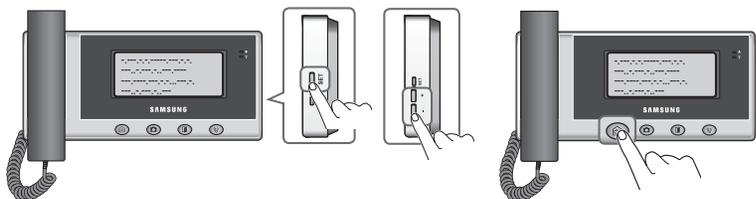

- To exit the user setting mode, select **F.EXIT**, and then press the **Interphone** button to save your settings. In addition, if there is no input for more than 10 seconds, the mode is automatically ended.

▶ System initialization

1. During the standby mode, press the **SET** button repeatedly to select the **6. FACTORY DEFAULT**.
2. Press the **+ / -** buttons to select the **YES** or **NO**.
Yes : Perform the initialization **No** : Cancel the initialization
3. To excute the selected condition, press the **Interphone** button.

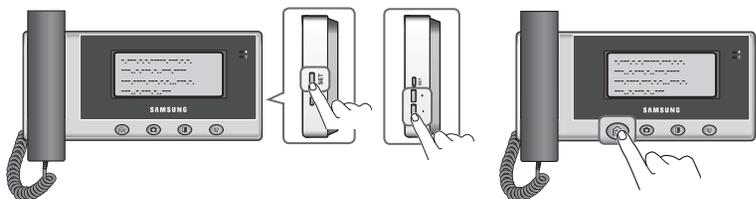

- To exit the user setting mode, select **F.EXIT**, and then press the **Interphone** button to save your settings. In addition, if there is no input for more than 10 seconds, the mode is automatically ended.


- **Default setting values**
 - Door 1 melody : Ding-dong 1
 - Door 2 melody : Ding-dong 2
 - Slave melody : Ding-dong 3
 - Voice volume/melody volume : 2 levels
 - Color/Contrast/Brightness : 2 levels

Supervisor setting Functions

These functions are used to customize some product functions in the user's environment.

▶ Entering for supervisor setting mode

1. Remove the **J1 Jumper** on the SVD-4332's bottom to enter supervisor mode.(refer to 25 page)
2. Press the **SET** button to select a desired supervisor setting item.
3. Press **+ / -** button to select the value for selected setting item.

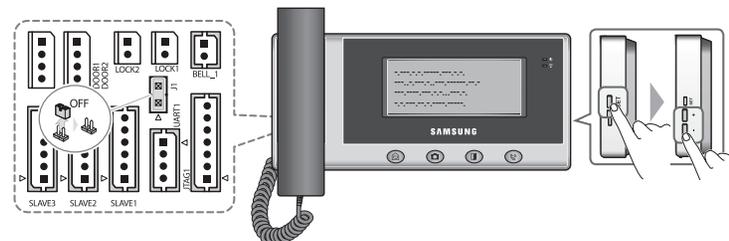


< SUPERVISOR MODE >			
1. ID SET	MASTER	A. DOOR2 CALL TIME SET	1MIN
2. CAMERA QUANTITY	1	B. SLAVE CALL TIME SET	1MIN
3. BELL SET	RELEASE	C. DOOR1 TALK TIME SET	3MIN
4. MULTI LOBBY SET	RELEASE	D. DOOR2 TALK TIME SET	3MIN
5. DOOR1 OPEN SET	MAIN	E. SLAVE TALK TIME SET	3MIN
6. DOOR2 OPEN SET	MAIN	M. NAND BULK ADJUST	NO
7. DOOR1 OPEN TIME SET	1SEC	N. VIDEO MODE SELECT	NTSC
8. DOOR2 OPEN TIME SET	1SEC	O. SUPERVISOR DEFAULT	NO
9. DOOR1 CALL TIME SET	1MIN	Q. CHROMA DELAY	1SEC
		R. STORAGE IMAGE NUM	128

- To save and exit your settings, press the **Interphone** button.

▶ Setting the ID

Set to the Master or Slave mode, and select to Slave's ID.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select **1.ID SET**.
2. Press the **+ / -** buttons repeatedly to select the **Master, Slave 1, Slave 2 or Slave 3**.
3. Press the **Interphone** button to store your setting, then exit.

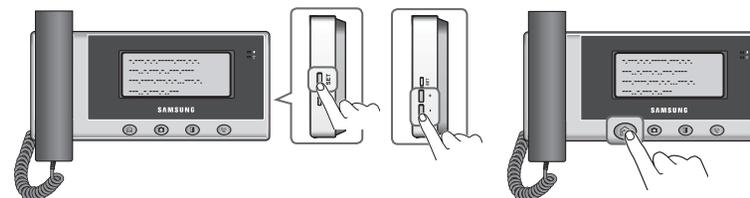

- After connecting to the slave unit, be sure to set the SLAVE ID without overlap. Do not overlap the SLAVE ID when multi-units are connected, it may cause malfunction of the master or the slave unit.


Supervisor setting Functions

These functions are used to customize some product functions in the user's environment.

▶ Setting the Camera Quantity

Set to the camera quantity for the monitoring function.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select **2. CAMERA QUANTITY**.
2. Press the **+/-** buttons repeatedly to select the **1**, or **2**.
3. Press the **Interphone** button to store your setting.

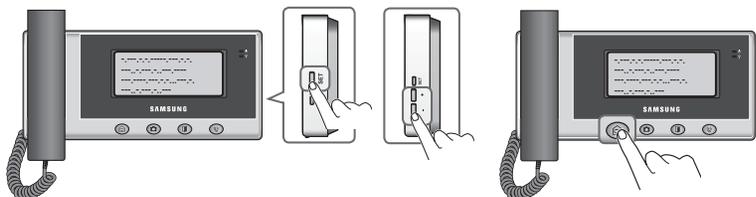


- After connecting to the cameras, set to be sure correctly that you connected all cameras quantity. Do not set incorrectly, it may cause malfunction of the monitoring.

▶ Setting the Multi panel

Set to activation of the Multi Panel mode.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select **4.MULTI LOBBY SET**.
2. Press the **+/-** buttons repeatedly to select the **SET**, or **RELEASE**.
SET : The DOOR2 port is connected the multi panel.
RELEASE : The DOOR2 port is connected the door camera.
3. Press the **Interphone** button to store your setting.

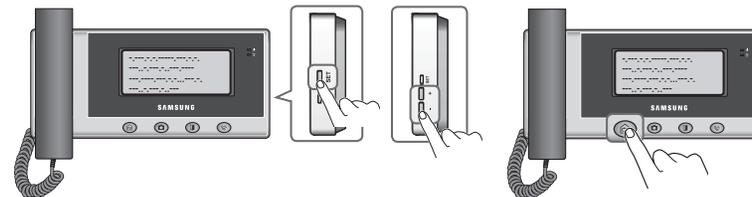


- After connecting to the Multi panel instead of the DOOR2, be sure set to "SET" on the 4.MULTI LOBBY SET item. The DOOR2 monitoring function is disabled.

▶ Setting the Bell

Set to activation of the door bell mode for the DOOR1 port.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select **3. BELL SET**.
2. Press the **+** and **-** buttons repeatedly to select the **SET** or **RELEASE**.
SET : The BELL_1 port is connected the door bell.
RELEASE : The DOOR1 port is connected the door camera.
3. Press the **Interphone** button to store your setting.

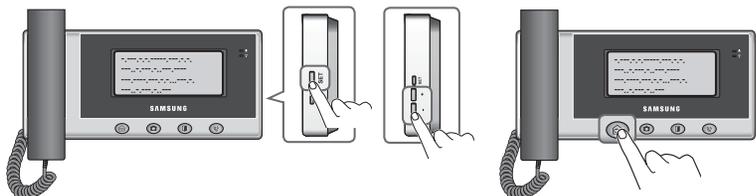


- After connecting to the bell instead of the DOOR1, be sure set to "SET" on the 3.BELL SET item and the DOOR1 port can not connect to nothing.
- When the BELL SET is SET, call time is set 30 seconds, door open function is activated, talk and monitoring functions are disabled.

▶ Setting the Door Open

Set to a door lock or door camera function for the Door1/2 port.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select **5.DOOR1 OPEN SET** or **6.DOOR2 OPEN SET**.
2. Press the **+** and **-** buttons repeatedly to select the **MAIN** or **CAMERA**.
MAIN : The LOCK1/2 port is connected the door lock.
CAMERA : The LOCK1/2 port is connected the door camera
3. Press the **Interphone** button to store your setting.

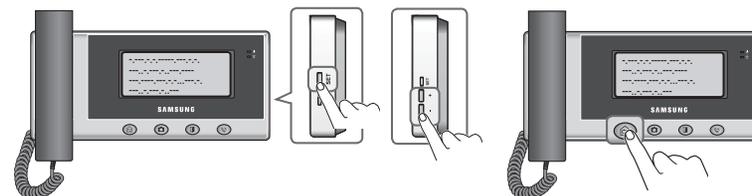

- After connecting to the door lock or door camera to the LOCK1/2 port, be sure set to "MAIN" or "CAMERA" on the 5/6. DOOR1/2 OPEN SET item. If the DOOR1/2 OPEN SET is CAMERA, the door lock's open function is disabled .


Supervisor setting Functions

These functions are used to customize some product functions in the user's environment.

▶ Setting the Open Time

Set to the door lock open time for the Door1/2 port's door open function.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select **7.DOOR1 OPEN TIME SET** or **8.DOOR2 OPEN TIME SET**.
2. Press the **+ / -** buttons repeatedly to select the **desired time (1SEC ~ 10SEC)**.
3. Press the **Interphone** button to store your setting.

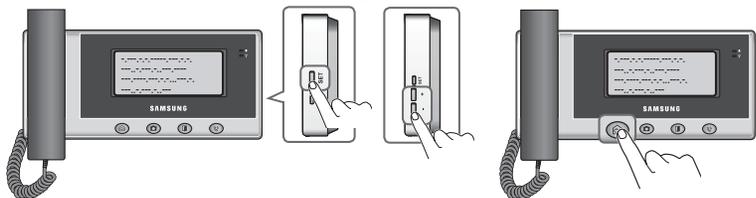


- After connecting to the door lock to the DOOR1/2 port, be sure set to the door open time on the 7/8.DOOR1/2 OPEN TIME item.

▶ Setting the Talk Time

Set to the each talk time limit for the Door1/2 or slave port's.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **C.DOOR1 TALK TIME SET**, **D.DOOR2 TALK TIME SET** or **E.SLAVE TALK TIME SET**.
2. Press the **+ / -** buttons repeatedly to select the **desired time (30SEC ~ 1 HOUR)**.
3. Press the **Interphone** button to store your setting.

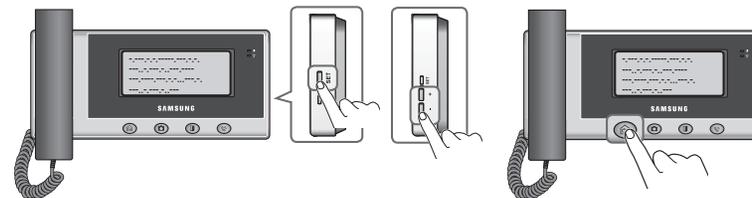


- After connecting to the DOOR1/2 or SLAVE port, be sure set to the talk time limit on the C/D.DOOR1/2 TALK TIME SET and E.SLAVE CALL TIME SET item.
- When the DOOR1 port is connected to door bell, the C.DOOR1 TALK TIME SET is not activated.

▶ Setting the Call Time

Set to the each call time limit for the Door1/2 or slave port's.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **9.DOOR1 CALL TIME SET**, **A.DOOR2 CALL TIME SET** or **B.SLAVE CALL TIME SET**.
2. Press the **+ and -** buttons repeatedly to select the **desired time (15SEC ~ 10MIN)**.
3. Press the **Interphone** button to store your setting.

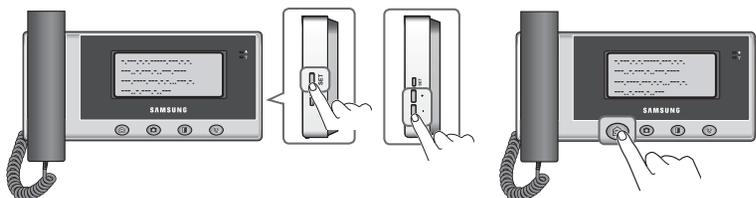


- After connecting to the DOOR1/2 or SLAVE port, be sure set to the call time limit on the 9/A.DOOR1/2 CALL TIME SET and B.SLAVE CALL TIME SET item.
- If a call is not made within the DOOR1/2's call time limit, the visitor's image is recorded/stored automatically.

▶ Setting the NAND Flash Bulk Check

Set to the NAND flash bulk check function enable or disable.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **M.NAND BULK ADJUST**.
2. Press the **+ and -** buttons repeatedly to select the **YES** or **NO**.
Yes : Activate the NAND flash bulk check function
No : Disable the NAND flash bulk check function
3. Press the **Interphone** button to store your setting.
 - If the M.NAND BULK ADJUST set to YES, the unit will start NAND flash bulk checking for more than 7 minutes.

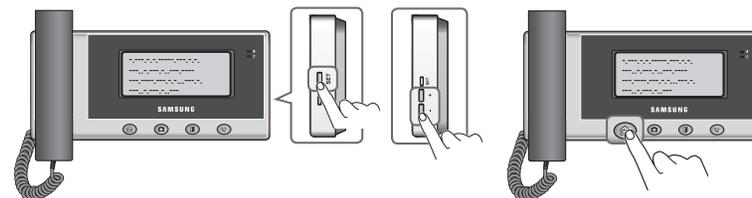


Supervisor setting Functions

These functions are used to customize some product functions in the user's environment.

▶ Setting the Video mode

Set to the video signal scanning type for door camera1/2.


1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **N.VIDEO MODE SELECT**.
2. Press the **+ / -** buttons repeatedly to select the **NTSC** or **PAL**.
3. Press the **Interphone** button to store your setting.

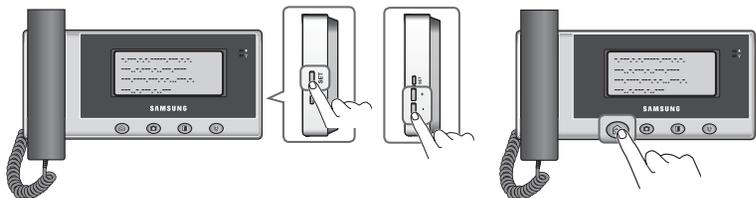

- After connecting to the DOOR1/2 port to camera (lobby), be sure set to the camera's video signal scanning type on the N.VIDEO MODE SELECT item.
- When the DOOR1 and DOOR2 port are connected to cameras, the both camera device's video signal type are same mode, otherwise display will be abnormal.

▶ Initializing the Supervisor mode

1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **O.SUPERVISOR DEFAULT**.
2. Press the **+ / -** buttons repeatedly to select the **YES** or **NO**.
Yes : Perform the initialization **No** : Cancel the initialization
3. Press the **Interphone** button to store your setting.

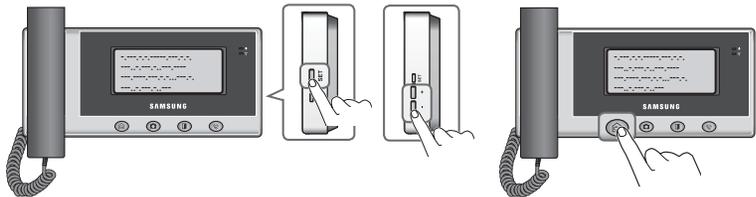


- **Supervisor Default setting values**

- ID	MASTER	- Door2 open time	1sec	- Nand bulk adjust	no
- Camera Quantity	1	- Door1 call time	1min	- Video mode	NTSC
- Bell set	Release	- Door2 call time	1min	- Indicate LED	OFF
- Multi lobby	Release	- Slave call time	1min	- Chroma delay	1sec
- Door1 open	Main	- Door1 talk time	3min	- Storage image num	128
- Door2 Open	Main	- Door2 talk time	3min		
- Door1 open time	1sec	- Slave talk time	3min		

▶ Setting the Chroma Delay

Set to the Chroma delay time for image displaying.


1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **Q.CHROMA DELAY**.
2. Press the **+ and -** buttons repeatedly to select the **desired time (1SEC - 3SEC)**.
3. Press the **Interphone** button to store your setting.

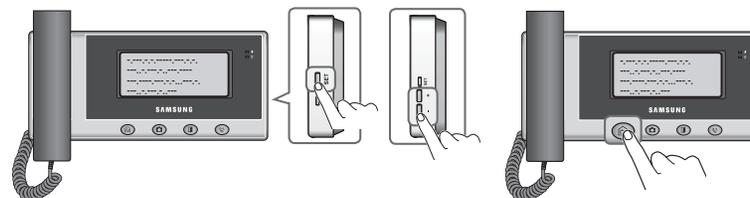

▶ Setting the Storage Image Number

Set to the number of storage image.

1. During the Supervisor setting mode, press the **SET** button repeatedly to select the **R.STORAGE IMAGE NUM**.
2. Press the **+ and -** buttons repeatedly to select the **desired number (32, 64, 128 or 333)**.
3. Press the **Interphone** button to store your setting.

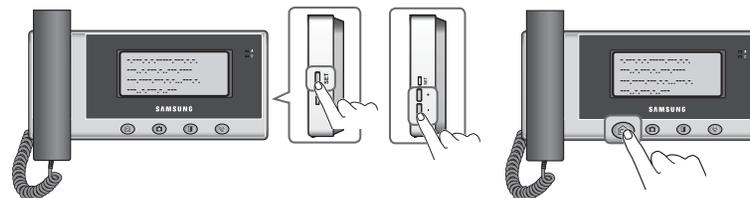

- After set to the R.STORAGE IMAGE NUM, the stored all images are deleted.


Visitor Image Functions

These functions are used to record/store visitor images.

Auto-recording of missed visitor images

- The calling visitor's images are automatically recorded/stored in absent status or during sleeping time.

7 If a call by a visitor is disconnected by not answering the call within **CALL TIME** by supervisor setting, the visitor's image is recorded/stored automatically.

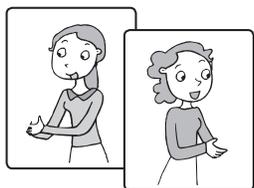


- The recorded/stored images can be replayed/checked/deleted in visitor image replay mode.

Recording visitor images manually


- Visitor images are manually recorded/stored when the images are displayed on the screen.

7 When an image is displayed on the screen, the screen image can be recorded/stored at any time by pressing the **Record/Replay** button.

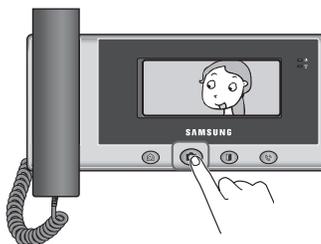


Replaying stored images

7 The stored images can be replayed by pressing the **Record/Replay** button in standby mode.

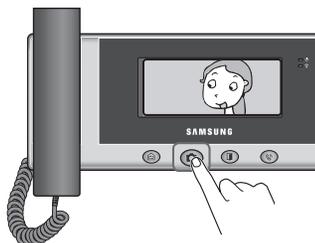


2 The next image can be replayed by pressing the + and - buttons in image replay mode.

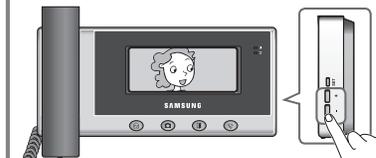

- If no image is stored, the text showing "No Image" is displayed on the screen.



Deleting the current image

7 The current image can be deleted by pressing **Interphone** button in image replay mode.

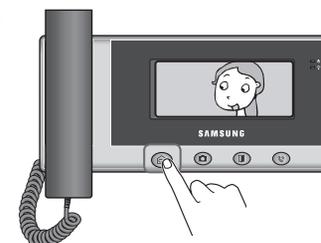

Monitor

Product Installation Drawing - Installation method and height of Monitor.

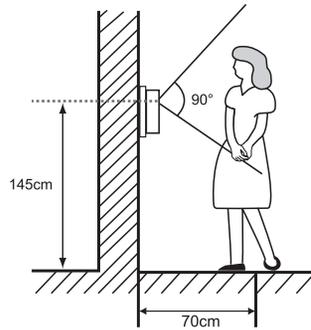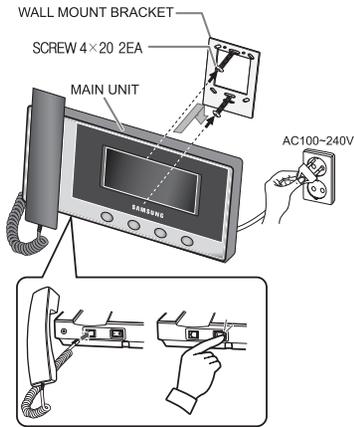


How to install

1. Select a place to install the product.
(Install the product and place the center of the Monitor at a height of 145 cm from the floor.)
2. Fix the wall mount bracket on the selected place with 2 screws.
3. Connect the wires of the door camera and interphone (optional) to the Monitor terminal.
4. After mounting the Monitor on the bracket, secure it with screws on the bottom of the Monitor.
5. Connect the AC power cord.
6. Turn on the power switch on the bottom of the product and make sure that the power is applied.


Door Camera

Camera Installation Drawing



◆ SVC - 0270P

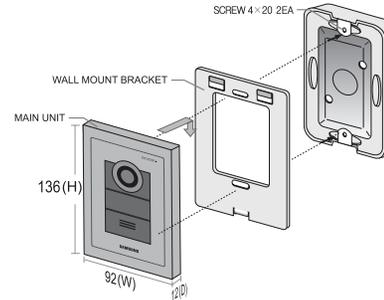

◆ SVC - 0271M

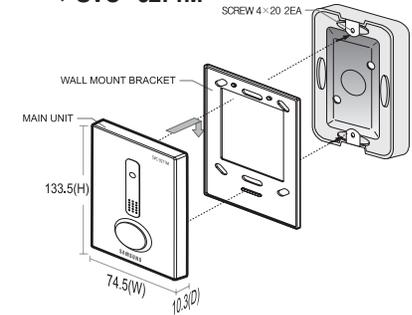

◆ SVC - 0270M

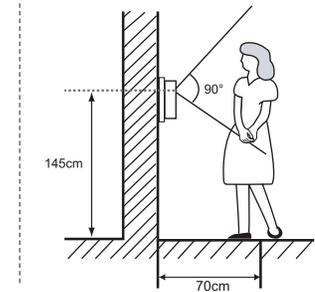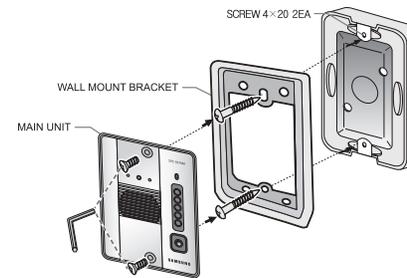

How to install

1. Select a place to install the product.
(Install the door camera and place the center of the camera at a height of 145 cm from the floor.)
2. Fix the wall mount bracket on the selected place with 2 screws.
3. Connect the connection wire of the Monitor to the door camera terminal.
4. Check that the Monitor can be called.


Cautions for installation

1. Avoid the direct sunlight, or a place where rainwater spatters, or it is near chemicals and high voltage power lines.
2. Do not install in a place with too high or too low temperatures if possible.

Wiring

For safety and correct product connection, always install the product as shown in the wiring diagram below;

▶ 4 Monitors + 2 Door cameras (2 Door locks)

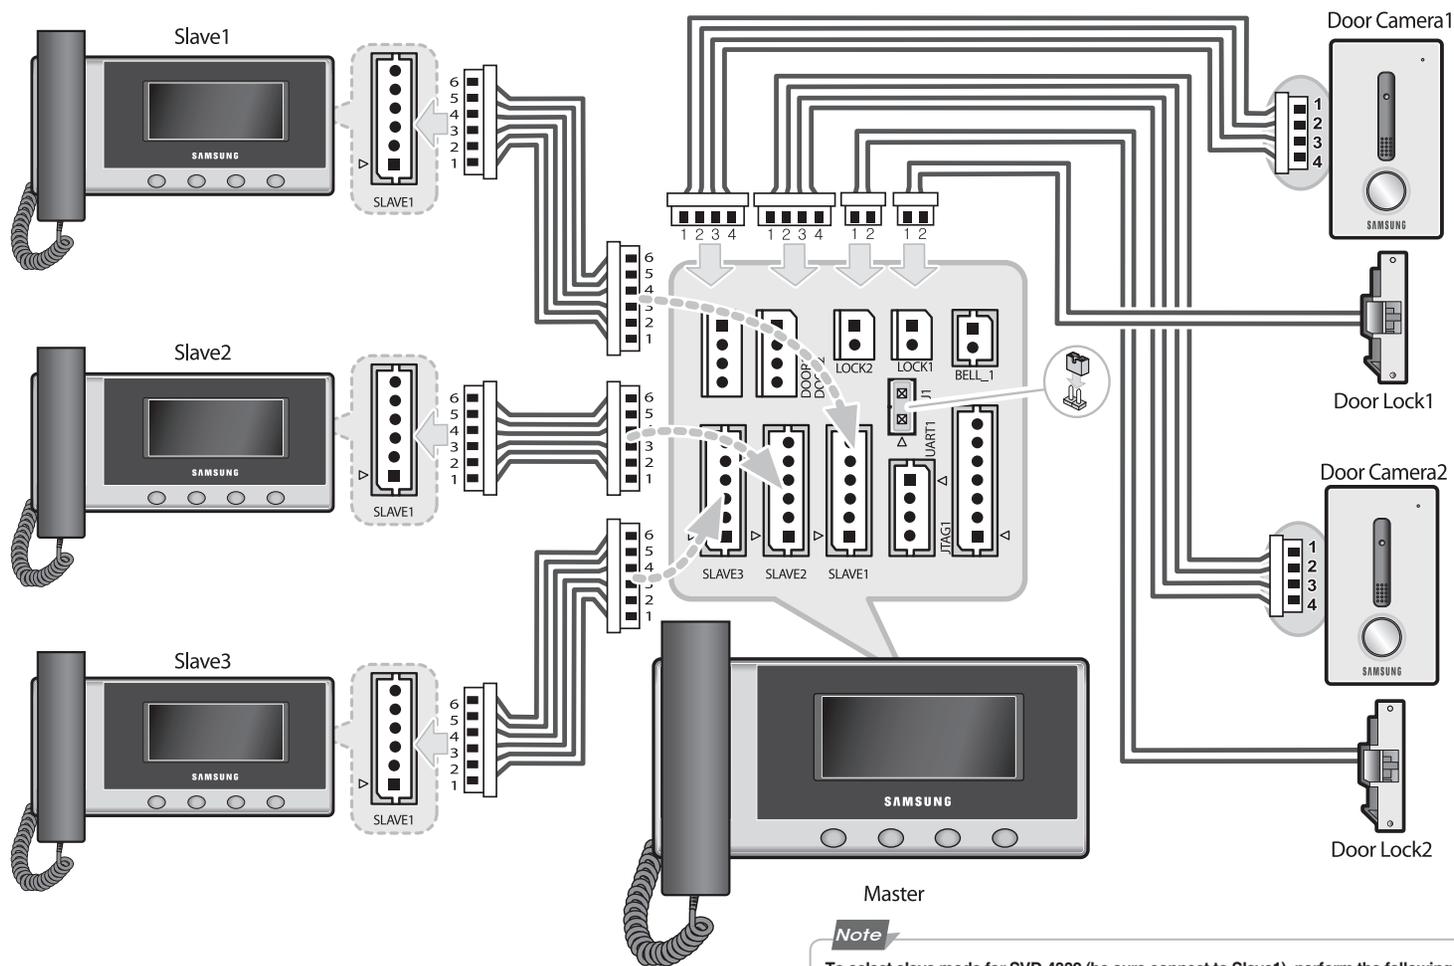

Note

To select slave mode for SVD-4332 (be sure connect to Slave1), perform the following procedure:


1. Remove the J1 shunt on the bottom of SVD-4332 to set to supervisor setting mode.
2. Press the **SET** button in supervisor mode to select [1. ID SET SLAVE1].
3. Press the **+** and **-** buttons to select the [SLAVE1].
4. Press the **Interphone** button to save and exit.

To set the connected unit to SLAVE device, be sure set to the SLAVE ID without overlap.
If the SLAVE ID is overlapped, the unit may malfunction.

Wiring

For safety and correct product connection, always install the product as shown in the wiring diagram below:


▶ 4 Monitors + 1 Door camera + 1 Multi panel

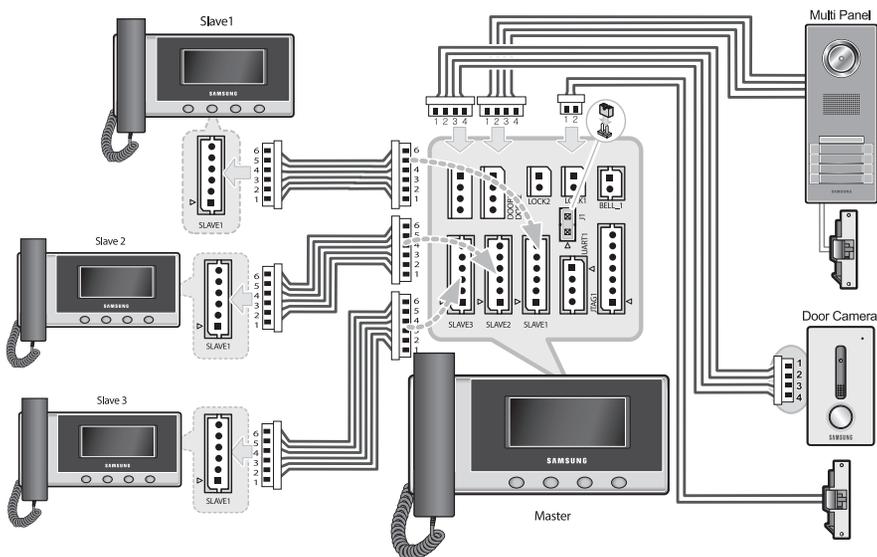

Note

- Be sure the multi panel connect to the DOOR2 port.
- The door lock can connect to the doorphone. If the door lock is connected, be sure set the DOOR OPEN SET item of the supervisor setting mode is CAMERA for door open function.
- Installing the door lock system designated by our company to your entrance door enables you to open the door by pressing the **Door Open** button during an entrance call.

▶ 1 Monitor + 1 Doorbell + 1 Door lock

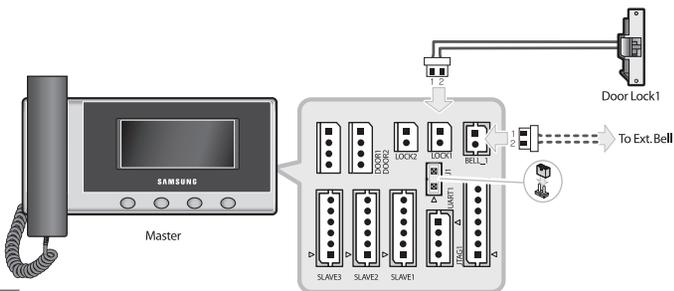

Note

- If a doorbell is connected, the DOOR1 port does not connect anything.
- If a doorbell is connected, be sure set the BELL SET item of the supervisor setting mode is SET.

Settings

▶ Connection cable specifications

Monitor VS Door Camera		
1	[RED]	+ 12 V
2	[GREEN]	VOICE
3	[WHITE]	VIDEO
4	[BLACK]	GND

Monitor VS Multi Panel		
1	[RED]	+ 12 V
2	[GREEN]	VOICE
3	[WHITE]	VIDEO
4	[BLACK]	GND

Monitor VS Door Lock		
1	[RED]	DOOR LOCK
2	[BLACK]	

Monitor VS Slave		
1	[RED]	+ 12 V
2	[BLUE]	DATA
3	[ORANGE]	SOUND 1
4	[VIOLET]	SOUND 2
5	[WHITE]	VIDEO
6	[BLACK]	GND

Monitor VS Bell		
1	[RED]	Door Bell
2	[BLACK]	


Warning

- Do not connect to AC Power. It may result in electrical shock and/or fire.

▶ Various settings

◆ Setting supervise mode

[Setting J1 Jumper on the SVD-4332' s bottom]

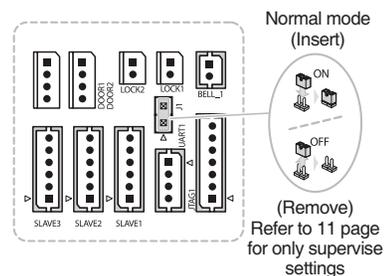


Caution

- After changing the setting switch, always turn the power off and on.

Components


The product packages are as shown in the figure below. Check they contain all components.

▶ Monitor (SVD-4332 Series)

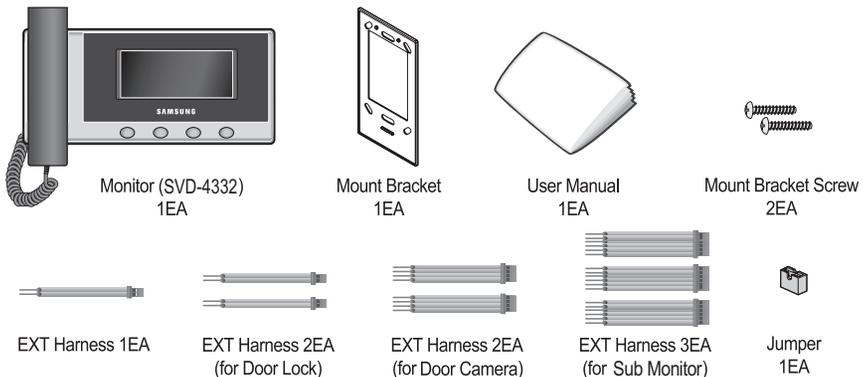

▶ Door Camera (optional)


◆ SVC - 0270P

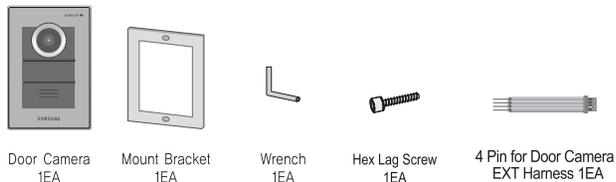

◆ SVC - 0271M



◆ SVC - 0270M

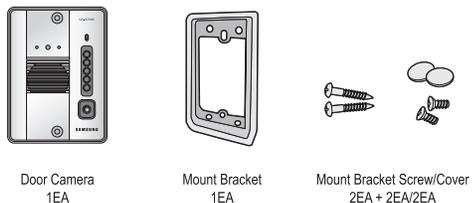

Troubleshooting

▶ Check This First!

The power does not turn on.

- Make sure if the power is connected.

The screen is too dark.

- Check the condition of the exterior lighting in the area of the camera.
- Clean the exterior surface of the door camera.
- Adjust the screen brightness in the function settings. (refer to page 9)
The screen brightness settings consist of 4 phases and factory default set is 2.

There is too much noise during calls.

- Check to see if the door phone line has been short-circuited with the ground.

Calls are not audible.

- Check the volume setting.
- Check the wire connection between the monitor and the camera.