

### User Manual

JUICE by Elexa: MG4, MG4-CP MICRO SPEAKER POD

#### NEED HELP?

If you have questions about this speaker, please go to [www.juice-usa.com](http://www.juice-usa.com) to view product tutorials.

#### CONTACTING JUICE CUSTOMER SERVICE

If you have questions, our trained Customer Service Department is happy to assist you 24 hours a day, 7 days a week, every day of the year. Contact Juice Customer Service as follows:

 
- In North America dial: 1-888-229-1459
- Email Juice at [www.customer.support@elexausa.com](mailto:www.customer.support@elexausa.com)

#### DO NOT RETURN THIS PRODUCT TO THE STORE OR WEBSITE FROM WHICH IT WAS PURCHASED

If you believe the product is defective, has a missing or broken part or are having difficulty with it, please contact Juice directly, 24 hours a day, 7 days a week, 365 days a year as listed above, for a quick and efficient solution to the problem.


#### PACKAGE CONTENTS

- Rechargeable Speaker
- 3.5mm audio cable
- USB Charging cable
- User guide
- Microfiber Bag (MG4-CP Model Only)

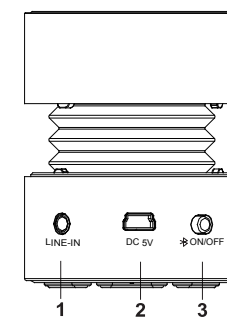


#### PRODUCT DESCRIPTION

 1. Line in
2. DC 5V charging jack
3. Power ON/OFF (Bluetooth mode and OFF)

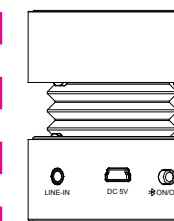


#### PLAY MODES

 Slide to the "ON" position to choose Bluetooth play mode. Use LINE IN cable to plug into LINE IN jack will automatically go to AUX play mode

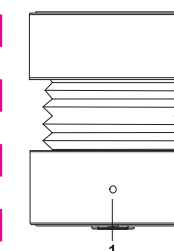

#### CONTROLS AND INDICATOR

 1. Indicator  
A green LED indicates the unit is powered on.  
A red LED indicates the unit is charging but the battery is not fully charged.  
A flashing green LED indicates the battery is low and needs to be recharged.

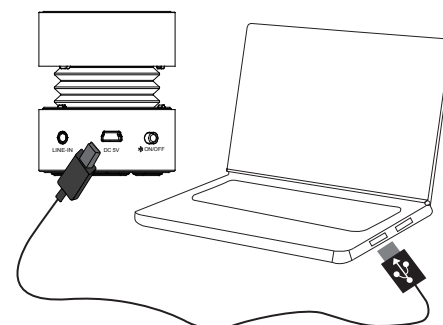

#### CHARGING THE BATTERY

1. To use the included USB Charging cable, plug one end into the DC 5V jack located at the bottom of the unit and the other end into a USB powered port or any other USB AC adapter (not included).
2. The battery is fully charged in 1.5 hours.
3. The red LED light indicates that the unit is charging and turns off when the battery is fully charged. You can disconnect the cable when charging is complete.

#### BLUETOOTH PLAY MODE

The reception range between the speaker and music device is 30 feet, however different environments may affect this distance.

1. Slide the power switch of the speaker to the ON position, the unit will "Beep" to show it is in Bluetooth mode.
2. To sync the speaker with your music device go to the settings area where Bluetooth devices are paired; select the listing for **Juice MG4**.
3. Enter the password "0000". You will hear a sound indicating that the speaker and music device have been paired. Once the sync has been established, it will not be necessary to enter the password again.

**NOTE** : When the sound becomes distorted or the LED light starts flashing, indicates the battery is low and the speaker needs to be recharged.

#### AUX PLAY MODE

1. Plug one end of the included 3.5mm audio cable into the headphone or line-out jack of your audio device.
2. Plug the other end of the cable into the LINE IN jack located on the back of the unit.
3. Slide the power switch of the speaker to the ON position.
4. Turn on your audio device and play music.
5. Adjust the volume of your audio device to the desired level.
6. Slide the power switch to the off position when you are finished listening.

**NOTE** : When the sound becomes distorted or the LED light starts flashing, indicates the battery is low and the speaker needs to be recharged.

 
#### BEFORE USE

Make sure the speaker is in its open (expanded) position, it is already in this position when you take it out of the package, if it is closed, follow these steps before use:

Grip the top and bottom of the unit and gently twist the top of unit counter-clockwise, DO NOT pull hard once it is open, as it will automatically extend to the proper position. To close the speaker: Press the top and bottom of the unit together and twist the top of unit clockwise to lock into place.

**NOTE** : Do not tamper with the center tube at any time, damage to the tube will result in distorted sound and diminished sound quality. Keep the rubber feet of the unit clean to reduce vibration. Use the speaker on smooth, clean surface, a textured surface may result in unwanted vibration and diminished sound quality.

 Pulling the expandable speaker into the open position too forcefully may lead to permanent damage and void the warranty.

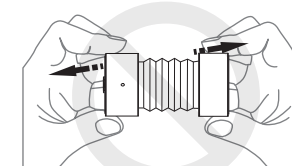

440X230MM

**Juice** by Elexa<sup>®</sup>  
squeeze the sound out™  
[www.juice-usa.com](http://www.juice-usa.com)