




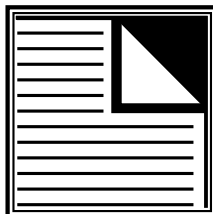

**SMITH
CORONA®**

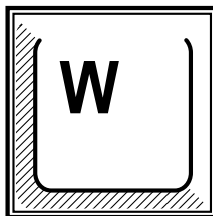

User's Manual

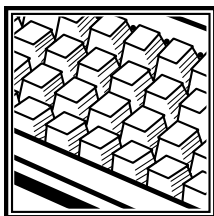

My Most Popular Features



Correcting Cassette

Easy to change and snap into place.

Automatic Memory Correction

Instant correction.



WordEraser

Erases an entire word.



Spell-Right Dictionary

Identifies spelling errors.

Self Demonstration...

Activate this Self Demonstration Program and discover my most popular features.

This built-in Demo is easy to use. Follow the instructions below.

1. Insert Paper.
2. Press and hold **Code** while pressing **Z**.
3. Release both.



This User's Manual should be used with the following models: Spellmate 500 and Spellmate 700. Both the software contained in this model and this User's Manual are protected by © Copyright Smith Corona Corporation, 1994.

Table of Contents

Hardware Basics

Typewriter Diagram	5
Setting Up	6
Paper Support	7
Turning the Typewriter On	7
Inserting Paper	7
Automatically Ejecting Paper	8
Platen Knob/Variable Line Spacer	8
Selecting Volume Control	9
Turning the Typewriter Off	9
Keyboard Diagram	10
Code Key	10
Shift Keys	10
Lock Key	10
Indicator Light	11
Caps Lock Key	11
Activating Caps Lock	11
Repeat Action	11

Format

Margins and Tabs	12
Margins	12
Changing Margins	12
Tabs	13
Regular Tabs	13
Decimal Tabs	13
Using Tabs	14
Clearing a Tab	14
Clearing All Tabs Quickly	14
Pitch	15
Line Spacing	15
Impression Control	16
End of Page Warning	16
Deactivating the End of Page Warning	16
Auto Indent	17
Setting Temporary Indents	17

Correcting Text

On-Line Correction	18
Correct Key	18
WordEraser® Key	19
LineEraser® Key	19
To Stop LineEraser	19
Half Space	20
Adding a Character	20
Removing a Character	20
Character Swap®	21
Word Swap®	22
Off-Line Correction	23
Forward Correct	23

Enhanced Text

Bold	24
Auto Underscore	24
Activating Word Underscore	24
Activating Underscore All	24
Manual Underscore	24
Auto Center	25
Superscript/Subscript	25
Typing Superscripts	25
Typing Subscripts	26
Correcting Superscript and Subscript Errors	26
Keyboard II Characters	26
Accessing Keyboard II	26

Spell-Right® Dictionary

The Dictionary	27
Spell-Right	29
Turning Off/On Spell-Right	29
WordFind®	29

Other Features

Index Up/Index Down	30
Auto Return	30
Deactivating Auto Return	30
Abbreviation Feature	31
Abbreviation Lists	32
General Words and Phrases	32
Request Phrases	32
Salutations and Closings	33
Holidays	33
Months and Days	33
Thank You Phrases	33

Care and Maintenance

Ribbon Cassette and	
Correcting Cassette	34
Correctable Film with Lift-Off Correction	34
Multi-Strike Film with Cover-Up Correction	34
Removing the Ribbon Cassette	35
Inserting the Ribbon Cassette	35
Correcting Cassette	35
Removing the Correcting Cassette	35
Inserting a New Correcting Cassette	36
Printwheels	36
Removing the Printwheel	36
Inserting a Printwheel	37

Cleaning	37
Printwheel	37
Platen	37
Cover/Keyboard/Sound Shield	37
Check Points	38
Obtaining Service	38
Shipping Instructions	39
Stabilizing the Carrier Mechanism	39
Packing the Typewriter	40

Supplies and Accessories

Correctable Film Ribbon Cassettes	41
Multi-Strike Ribbon Cassettes	41
Start-Rite®	42
Changeable Printwheels	42

Important Papers


Safe Operating Recommendations	43
Product Consumer Warranty	44
Limited Warranty	44
90 Day Warranty	44
Limited Warranty	44
FCC	45
Quick Reference Guide	48

Hardware Basics

Typewriter Diagram

IMPORTANT: Be sure to save all packing materials. If you move or ship the typewriter, it should be repacked in the original carton. To secure the unit for transport, see "Care and Maintenance."

This diagram depicts only basic features. For information on coded features, see specific chapters or Quick Reference Guide on back cover.

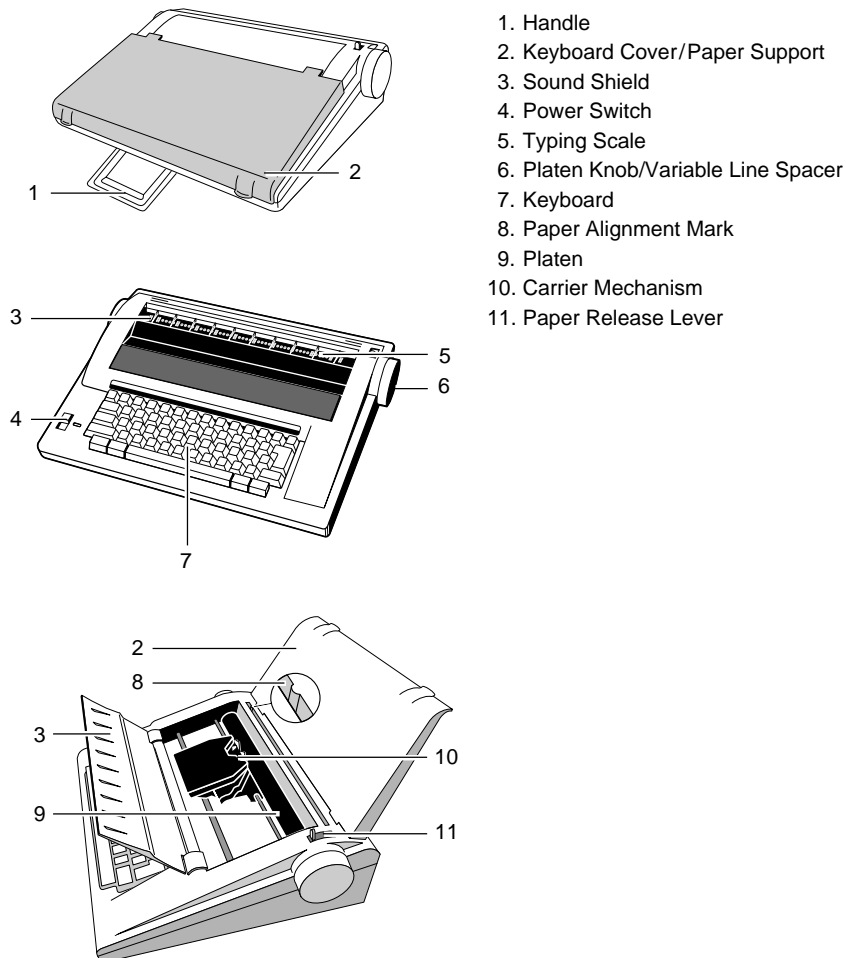


Product appearance and/or specifications are subject to change without notice.

Setting Up


Before you can use your typewriter, you must remove the packing materials from the carrier mechanism. This is essential to the proper functioning of your typewriter. **Do not turn the unit on until you have released the carrier mechanism (10).** Follow the steps listed below using the typewriter diagram for reference. The numbers on the diagram correspond to those in the instructions.



1. Remove keyboard cover (2) from the typewriter. The cover also functions as a paper support. (See "Paper Support.")
2. Tilt the sound shield (3) toward you.

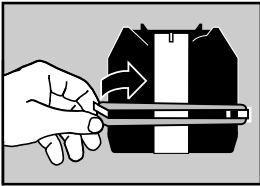

3. Remove the rubber band (left side first) from the tabs.
4. Remove the carrier restraint card.

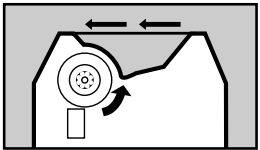


5. Remove the ribbon cassette. If the typewriter ribbon is slack, advance it by turning the gear wheel on the bottom of the cassette in the direction indicated (see illustration).
6. Place the cassette back on the carrier, and return the sound shield to its original position. You will hear it snap into place.

Paper Support

Your keyboard cover also functions as a paper support.



1. Remove the cover from the keyboard if you have not already done so.
2. Turn the cover upside down and align the tabs with the slots behind the paper alignment mark (8).
3. Slide the tabs into the slots to provide an angled paper support for your typing page.

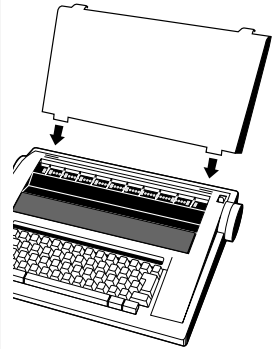

Turning the Typewriter On

The electrical cord is stored on the back of the unit. Remove the plug from the protective slot and unwind the cord for use.

1. Plug the typewriter into a proper electrical outlet. (Use the correct electrical current.)
2. The ϕ symbol indicates the unit is in Standby mode. This means your keyboard is inactive until you select ON (|). Move the power switch (4) to ON (|). The carrier (10) moves to the preset left margin.

 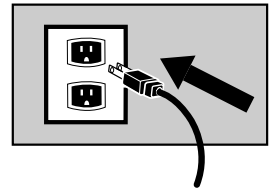


Inserting Paper

NOTE: Your typewriter handles 12" wide paper and a 9" typing line. Standard bond paper stock is recommended for best quality. Copier paper, erasable bonds and very heavily textured bond papers do not print well with Correctable Film Ribbons. For these papers, we recommend High Density Correctable or Multi-Strike Film. If typing stencils, use those specifically designed for daisywheel printers.

1. Insert paper securely in the slot behind the platen (9) against the paper alignment mark. (For 12" wide paper, center on the platen area.)
2. Press **Code + Left Shift/Paper In**. Paper automatically advances to approximately one inch from the top of the page.



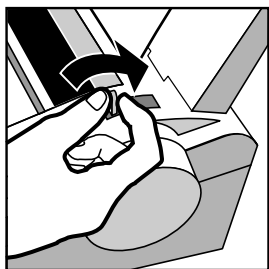

3. Advance the paper by using the Index Up/Down feature or **Return** key.
4. Push the paper release lever (11) back, and straighten the paper if necessary. Return lever to original position.



Automatically Ejecting Paper

When you reach the end of a page you can automatically eject your paper by pressing **Code + Right Shift/Paper Out** key. The paper begins ejecting immediately.

NOTE: *The platen may rotate a few seconds after ejecting paper.*

 


Platen Knob/Variable Line Spacer

Rotate the platen knob to position the paper up or down at variable line positions. (You should not use this feature if you are using the end of page warning option.)


Selecting Volume Control

The typewriter will sound a beep when you activate certain features or type a word the unit does not recognize (see “The Dictionary”). You can adjust the volume of these beeps by pressing and holding **Code** while pressing the **V** key until the volume setting you wish is reached or the volume is turned off. When turned off, no beeps will be heard. The volume has been set to a medium level at the factory. Each time you turn your typewriter on, it will be reset for the medium volume.




Turning the Typewriter Off

 When typing is completed, move the power switch to Standby. We suggest you unplug the typewriter if it will not be used for an extended period of time.



Keyboard Diagram

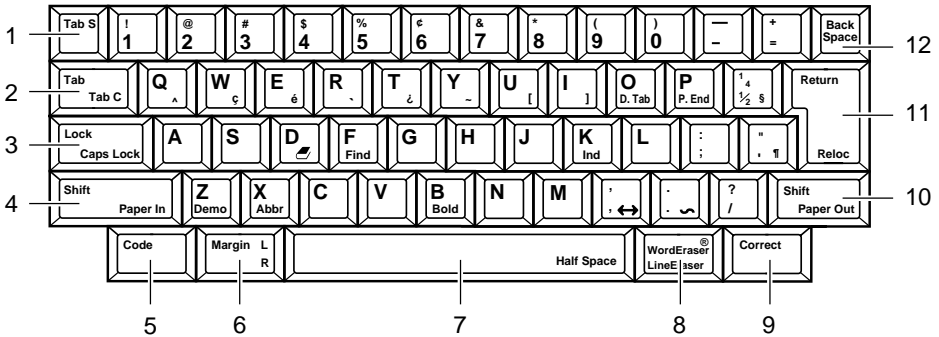

- | | |
|-------------------|--------------------------|
| 1. Tab Set | 7. Spacebar/Halfspace |
| 2. Tab/Tab Clear | 8. WordEraser/LineEraser |
| 3. Lock/Caps Lock | 9. Correct |
| 4. Shift/Paper In | 10. Shift/Paper Out |
| 5. Code | 11. Return/Relocate |
| 6. Margin L/R | 12. Back Space |

Code Key



The **Code** key is used in combination with other keys to activate features. **Code** key combinations are activated by pressing and holding the **Code** key while pressing the second key. For a complete list of Code functions, see the back of this manual.

Shift Keys



Press **Shift** while typing an alpha key to type upper case letters or to type the characters located on the top of certain keys, such as \$, %.



press again...



Lock Key

Press **Lock** to type continuously in upper case characters. The Lock light will come on when **Lock** is pressed. To deactivate Lock, press **Lock** or a **Shift** key. The light goes out.

Indicator Light

The Shift Lock light will flash to indicate an error condition. See the chart below on how to deactivate it.

Reason	To Stop
The typewriter sound shield is not closed properly.	Snap sound shield shut.
The typewriter has received an incorrect command.	Press either Shift or Code .
You typed an error or a word not in the dictionary (if activated).	Correct word or type a space.

Refer to the appropriate section in this manual for proper instructions.

Caps Lock Key

The Caps Lock feature enables you to type both numbers and capital letters without accessing the **Shift** keys.

Activating Caps Lock

1. Press **Code + Caps Lock**. A beep is heard, and the Shift Lock Light goes on.
2. Type your text. All letters will print in upper case. All numbers and punctuation will print normally.
3. Press **Code + Caps Lock** or **Caps Lock** to deactivate Caps Lock.

NOTE: If **Shift** is pressed, lower case characters and other punctuation/symbols on the top of the number keys can be accessed.

Repeat Action

All keys will automatically repeat when held down except the following Keyboard II characters: ^ ` ~ .



RRRRRR




Each time you turn on your typewriter, a preset format is activated. It is set for general typing purposes. These settings remain active until you change them.

Margins and Tabs

Margins

Margins are preset depending on your pitch setting. They are:

	10 Pitch (Pica)	12 Pitch (Elite)	15 Pitch (Micro)
Left Margin	12	14	18
Right Margin	72	86	108

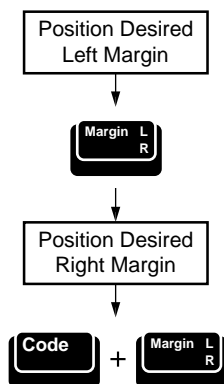

Changing Margins

When you need to change the margins, follow the instructions below:

1. Press **Spacebar** to desired left margin.
2. Press **Margin**. Unit beeps.
3. Press **Spacebar** to desired right margin.
4. Press **Code + Margin**. The unit beeps.

NOTE: Your typewriter will beep once to signal that you are 5 spaces from the right hand margin.

Tabs

You can set up to eight tabs, either regular or decimal. Tabs may be set outside of margins.

Regular Tab	Decimal Tab Stop
This is	123.56
a Regular	12.47
Tab	2.09

Regular Tabs



Regular tabs justify text at the tab stop. To set a regular tab:

 

1. Position print hammer to desired location.
2. Press **Tab S**. Unit beeps.

Decimal Tabs

Decimal tabs are used to align numbers with the decimal point. To set a decimal tab:

1. Position the print hammer at desired location.
2. Press **Code + D. Tab (O)**. Unit beeps.
3. Repeat steps 1 and 2 to set more decimal tabs if desired.
4. Press **Return** when all tabs are set.

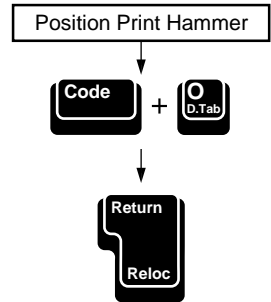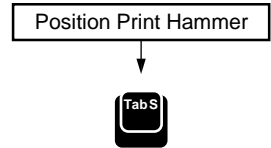

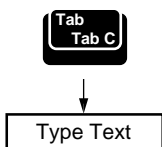

(hold down)

Using Tabs

Once tabs are set, they can be used as you are typing your text.

1. Press **Tab (Tab C)** to tab location.
2. Type text. If using a decimal tab, type the numbers preceding the decimal point. The carrier moves to the left for each number you type. If you make a mistake, press **Tab** to start again.
3. Type the decimal point. The numbers print to this point.
4. Type the numbers following the decimal point.

Clearing a Tab

Both types of tabs are cleared the same way.

1. Position print hammer to tab setting.
2. Press **Code + Tab (Tab C)**. Release immediately. Unit beeps.

Clearing All Tabs Quickly

Press and hold **Code + Tab (Tab C)** until 2 beeps are heard. If you are positioned at a tab stop, you will hear 3 beeps.

Pitch

Your typewriter has been designed with triple pitch capabilities. To set the Pitch:

Press **Code + Tab Set** for 10 Pitch.

Press **Code + 1** for 12 Pitch.

Press **Code + 2** for 15 Pitch.

Unit beeps when selecting pitch.

***NOTE:** Your typewriter is set at 10 pitch. Change the printwheel if you select another pitch. Changing pitch in the middle of a line erases Correction Memory. However, after the new pitch is selected, Correction Memory begins again.*

Line Spacing

Each time you turn the typewriter on, it is set for single line spacing. You can change line spacing to 1½ line spacing or double line spacing. To change line spacing:

Press **Code + 3** for single line spacing.

Press **Code + 4** for 1½ line spacing.

Press **Code + 5** for double line spacing.

 
Unit beeps when selecting line spacing.




10 Pitch



12 Pitch



15 Pitch

 

Single Line



 
One and a Half Line




Double Line



Light



Medium

 

Heavy

Impression Control

Impression control is the force used by the print mechanism to strike the paper. When you turn the typewriter on, impression control is set at medium. You can change to light or heavy impression. It is recommended that you select heavy impression when typing stencils or carbons and when using Script or Orator printwheels. For normal typing, use medium impression. To set impression control:

Press **Code + L** for light impression.

Press **Code + M** for medium impression.


Press **Code + H** for heavy impression.

The unit beeps when Impression Control is changed.

NOTE: *Standard bond paper stock is recommended for best quality. Copier paper, erasable bonds and very heavily textured bond papers do not print well with Correctable Film Ribbons. For these papers, we recommend High Density Correctable or Multi-Strike Film. If typing stencils, use those specifically designed for daisywheel printers.*

End of Page Warning

You can program your typewriter to beep 1" from the bottom of 11" paper. After you hear the beep, do not attempt to add additional lines of text. To set the End of Page Warning:

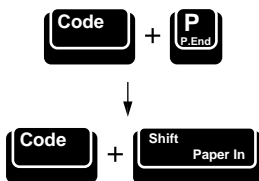

1. Press **Code + P. End (P)**. Unit beeps.

2. Insert paper using **Code + Paper In (Shift)**.

IMPORTANT: *Do not use the platen knob while using the End of Page feature. If you do, the line count will be inaccurate. Use the Automatic Paper Insert feature to insert paper. To adjust the typing position, use **Code + Index Up**, **Code + Index Down** or **Return**. The line counter is reset each time you use the Automatic Paper Insert feature.*



Deactivating the End of Page Warning

Press **Code + P. End (P)**. The unit does not beep.


Auto Indent

Your typewriter can set a temporary left margin. In the example below, the second paragraph automatically indents twelve spaces.

Section V: This section evaluates the Bold Print feature. Research indicates that boldfaced text is a popular and frequently used feature on the typewriter. It improves the appearance of letters and documents...

Setting Temporary Indents

1. Press **Spacebar** or **Tab** to position print hammer to indent location.
2. Press **Code + Ind (K)**. Unit beeps.
3. Type Text. When **Return** is pressed carrier returns to indented position.
4. Press **Code + Ind (K)**. Carrier advances one line and returns to the original margin.

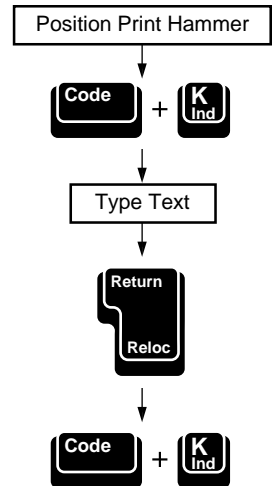

Correcting Text


While you are creating text, there are several ways to correct errors. You can remove characters, words, or entire lines of text.

IMPORTANT: *Bold or Auto Underscore must be reactivated prior to correcting characters with those enhancements or correction will not occur.*

On-Line Correction

The typewriter can automatically correct all characters in a one-line memory buffer. You can also correct characters no longer in this Correction Memory buffer with an extra step. After correcting an error, you can quickly return/relocate to your previous typing position.

IMPORTANT: *If you changed printwheels, be sure to insert the proper printwheel before making corrections.*

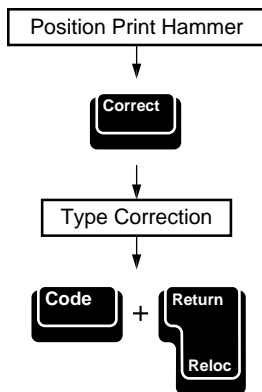

Correct Key

Use **Correct** for erasing character(s) in Correction Memory.

1. Position the print hammer on the incorrect character and then press **Correct**. Hold down **Correct** to continue correcting, or press **Back Space** and then **Correct** again until all characters are removed.
2. Type correction.
3. Press **Code + Reloc (Return)** if necessary to relocate. The unit beeps.


NOTE: *You erase Correction Memory when you turn off the typewriter, press **Return**, change pitch, or use the Half Space feature.*

WordEraser® Key

Use **WordEraser** for erasing word(s) in Correction Memory.

1. Position the print hammer on any character of the right most word to be corrected, and then press **WordEraser**. If you press **WordEraser** while between words, the word to the left of the space will be deleted.
2. Type correction.
3. Press **Code + Reloc (Return)** if necessary to relocate. The unit beeps.

NOTE: You can use the WordFind feature to quickly locate to misspelled words within Correction Memory.

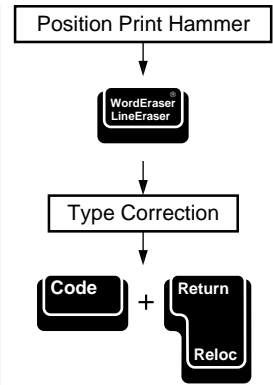


LineEraser® Key

Use **LineEraser** to erase a line in Correction Memory.

1. Position the print hammer on any character in the line to be erased.
2. Press **Code + LineEraser (WordEraser)**. The entire line is erased, and the carrier rests on the last erased character.

To Stop LineEraser

Press **Code + S**. Erasing will stop immediately; the print hammer remains at the last character erased.

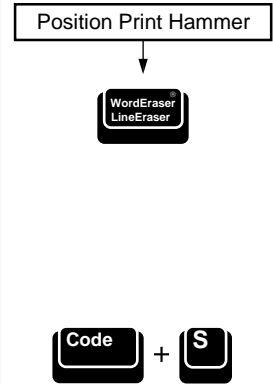

Half Space

The Half Space feature is used when making corrections when you omit a character or type one too many. When the Half Space feature is activated, the typing position moves a half space to the right. Regular spacing returns when the Half Space feature is deactivated.

***NOTE:** When you activate the Half Space feature, the character Correction Memory is erased. The typewriter remembers the half spaced characters until the Half Space feature is deactivated. Then, the typewriter begins to remember normally spaced characters again.*

Adding Another Character

Find

Quick brwn fox

Erase

Quick brwn fox



Back Space

Quick brwn fox



Correct

Quick brown fox



Removing Another Character

Find

Quick broown fox

Erase

Quick broown fox



Correct

Quick brown fox



Adding a Character

1. Press **Correct** or **WordEraser** to erase error.
2. Press **Backspace** to position the carrier one space before the first character of the erased word.
3. Press **Code + Halfspace (Spacebar)**. Print hammer advances a half space.
4. Type correct word.
5. Press **Code + Halfspace (Spacebar)**.

Removing a Character

1. Press **Correct** or **WordEraser** to erase error.
2. Press **Code + Halfspace (Spacebar)**. Print hammer advances a half space.
3. Type the correct word.
4. Press **Code + Halfspace (Spacebar)**.


***NOTE:** Before activating the Half Space feature on another line, you have to remove the error using off-line correction procedures. (See "Off-Line Correction.")*

Character Swap®


Character Swap allows you to correct immediately adjacent transposed letters. For example, you can quickly change “Teh” to “The” and “Ad og” to “A dog.” The characters must be in the Correction Memory; that is, they must be on the current line of text.

Characters will maintain upper or lower case status when swapped. Characters and spaces can also be swapped. Bold and Underscore must be activated if swapping characters with these enhancements.

To use Character Swap:

1. Press **Back Space** to second of the two characters.
2. Press **Code** +  to swap a character with the preceding one. The print hammer relocates to the right of the swapped character.
3. Press **Code** + **Reloc (Return)**, if necessary, to relocate.

NOTE: If you try to swap non-adjacent characters, the Shift Lock light will flash. Press any key, and the light will stop flashing.

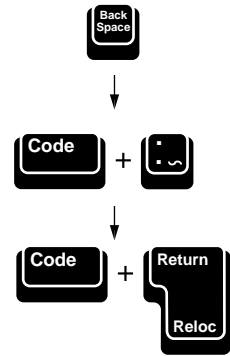

Word Swap®

Word Swap allows you to reverse the order of two words or group of alpha characters immediately adjacent to one another on a line within Correction Memory. For example:

To **or be** not to be To **be or** not to be

Words that are transposed must be separated by a single space. Characters such as a hyphen (-) and apostrophe (') are considered part of a word. If you use any other symbol at the end of a word or between words (such as a number, punctuation, etc.), the Shift Lock light will flash to indicate an error. If you try to swap non-adjacent words, the Shift Lock light will flash. Press any key and the light will stop flashing.

Words will maintain original upper/lower case status. For example:


WORD great great WORD

Bold and Underscore must be activated to swap words with these enhancements.

NOTE: Words can only be up to 25 characters in length.

To use Word Swap:

1. Press **Back Space** to any character in the second word.
2. Press **Code** + **↔** to swap it with preceding word. The print hammer locates to the right of the right-most word that was swapped.
3. Press **Code** + **Reloc (Return)**, if necessary, to relocate.

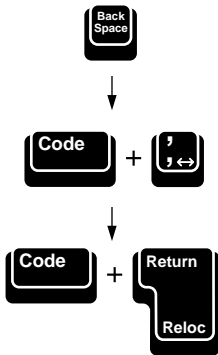

Off-Line Correction

You can use the Off-Line Correction feature to correct several characters on previous lines.

IMPORTANT: If *End of Page Option* is activated, do not use the platen knob when positioning the print hammer on the line where the error is located as the line count may be inaccurate.



To correct an error not in the Correction Memory:

1. Press **Code + Up (6), Down (7), or Return** to position the print hammer on the line containing the incorrect character.
2. Press **Back Space** or **Spacebar** to incorrect character. (See note next page for enhanced text.)
3. Press **Code + Correct**. The unit beeps.
4. Retype the incorrect character to remove it.
5. Type the correct character.
6. Press **Code + Reloc (Return)**, if necessary, to relocate.

Forward Correct

To correct several characters or words not in Correction Memory:

1. Press **Code + Up (6), Down (7), or Return** to position the print hammer on the line containing the incorrect characters or words.
2. Press **Back Space** or **Spacebar** to the first incorrect character.
3. Press **Code + Correct** twice. Two beeps are heard.
4. Retype the error to remove it. (As you type, the typewriter erases each character. You may have to adjust typing speed so that the typewriter removes characters correctly.)
5. When all characters are erased, press **Code + Correct**. The print hammer returns to the location where you activated forward correct.
6. Type the correction.
7. Press **Code + Reloc (Return)**, if necessary, to relocate.

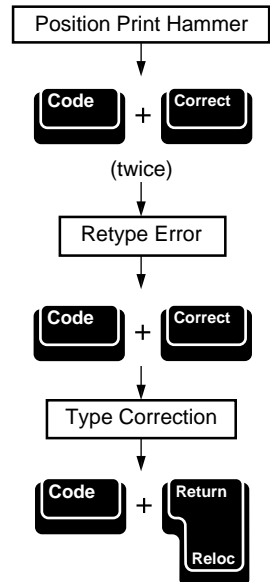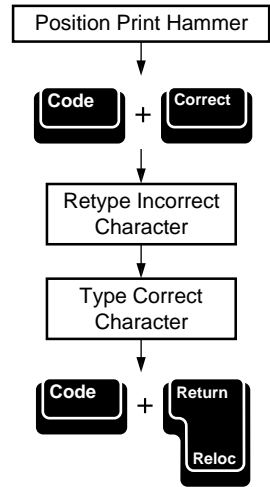

Enhanced Text

You can enhance your text by using Bold, Auto Center, Underscore, or a different Typestyle or Pitch.

IMPORTANT: *Bold and Auto Underscore must be activated before correcting characters having these enhancements.*



 
Bold

This feature is used for highlighting text. To use Bold:

1. Press **Code + Bold (B)**. Unit beeps.
2. Type text.
3. Press **Code + Bold (B)** to deactivate Bold.


Auto Underscore

You can automatically underscore just the words or the words and spaces using the Auto Underscore feature.




Activating Word Underscore

 1. Press **Code + Word (_/-)**. Unit beeps.
2. Type text.
3. Press **Code + Word (_/-)** to deactivate Underscore.



Activating Underscore All

 1. Press **Code + All (+/=)**. Unit beeps.
2. Type text.
3. Press **Code + All (+/=)** to deactivate Underscore.



Manual Underscore

You can manually go back and underscore text.

1. Position print hammer under the first character of the text to be underscored.
2. Press **Shift + —**.

Auto Center

This feature automatically centers text between current margins. To use Auto Center:

1. Press **Code + Center (0)**. Unit beeps. The carrier moves to the center.
2. Type the text. The carrier will back space in half space increments for each character typed.
3. Press **Return**. Text types onto the page automatically centered.
4. Press **Return** again to move to the next line and return to normal margins.

 

*NOTE: If you make a mistake, press **Code + Center** to restart centering. If you decide not to center text, press **Return** prior to entering text. Press **Return** again to return to the left margin.*


Superscript/Subscript

Your typewriter easily creates superscript and subscript characters.

Typing Superscripts

1. Press **Code + Super (9)**. The typing position moves up $\frac{1}{2}$ line.
2. Type the superscript. The carrier returns to the original line.

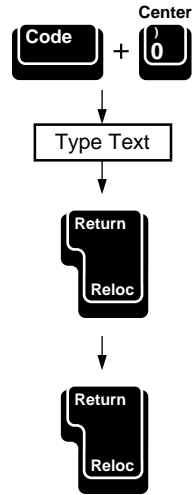

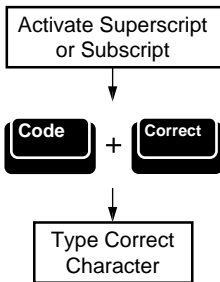

Typing Subscripts

1. Press **Code + Sub (8)**. The typing position moves down ½ line.
2. Type the subscript. The carrier returns to the original line.

*NOTE: If you superscript or subscript more than one character, you must repeat steps 1 and 2 above. If you decide not to type a superscript or subscript after activating the feature, press **Correct** to return to the original line.*

Correcting Superscript and Subscript Errors

To correct errors made while using Superscript or Subscript:

1. Press **Back Space** to error.
2. Activate superscript or subscript.
3. Press **Code + Correct**.
4. Type the incorrect character. It is erased and carrier returns to original line.

Keyboard II Characters

The Keyboard II feature allows you to access the international characters and special symbols that appear on the bottom right of certain keys.

Accessing Keyboard II

Press **Code + Keyboard II character** key.

For those characters (^ ~ `) printed above the letters, type the KB II character first. The print hammer remains in place so you can type a letter below the symbol.

NOTE: You may wish to deactivate the dictionary when typing KBII characters.

Spell-Right® Dictionary

Spell-Right Dictionary is an electronic dictionary which instantly signals misspelled words. WordFind finds misspelled words.

The Dictionary

Each time your typewriter is turned on, the dictionary is activated. It beeps to alert you of a possible misspelling.

NOTE: A group of letters will be considered a word if it is followed by a space, carrier return, tab, index up, index down, subscript, superscript, pitch change, number or any non-alpha character.

Spell-Right will check for the following errors:

- **Double Word Check**

Examples:

as as

word word

- **Capitalization Check**

If the first character following a period, question mark, or exclamation point and two spaces is not capitalized. For example:

at the dance. we

The dictionary also beeps when it finds:

werd - misspelling

wrod - transposition

worrd - double strike

wo rd - unwanted space

wrd - character omission

continued...

- **Hyphens**

If a word is hyphenated and the hyphen is followed by a carrier return, the dictionary will continue from one line to the next.

Example:

“Congratulations on the purchase of your new electronic typewriter.”

The word “electronic” would be checked.

Only the root words of hyphenated words and words followed by an apostrophe (') or apostrophe S (’s) will be checked – not the placement of hyphens or uses of apostrophes.

Examples:

Mother-in-law (would be accepted.)

Mother in-law (would also be accepted although incorrect.)

- **Spell-Right will not check:**

Capitalization (except as noted under capitalization check.)

Single characters

Numbers


Any non-alpha character

Spell-Right


1. Type text as usual. When you misspell a word or type one that is not found in the dictionary, a two-toned beep is heard, and the Shift Lock light flashes.
2. Press **Correct** or **WordEraser**. The corrected word will also be checked.

Turning Off/On Spell-Right

To turn the dictionary off:

Press **Code** +  (**D**). No beep is heard.

To turn it back on:

Press **Code** +  (**D**) again. A beep is heard.



WordFind®

When you type very fast, you may type a few words after you hear the beep signal an incorrect word. You can use WordFind to locate an error made within Correction Memory. To Find an incorrect word:


1. Press **Code** + **Find (F)**. The print hammer glides back to the incorrect word.
2. Press **Correct** or **WordEraser**.
3. Press **Code** + **Find (F)** to locate other errors. When you press **Code** + **Find (F)** and there are no more errors, the print hammer automatically returns to your previous typing position.



NOTE: *Changing pitch in the middle of a line or using the Half Space feature deletes Correction Memory. After a pitch change or the use of a half space, the Find feature will not operate on text entered prior to the pitch change or use of a half space. The Find feature will operate only on the current line.*

Other Features

Your typewriter also has Index Up/Down, and Auto Return.

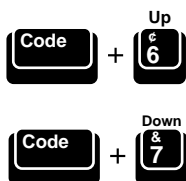

Index Up/Index Down

 
This feature moves the paper up or down in increments equal to the current line space setting. This feature is useful to maintain accurate line spacing when correcting errors on different lines. Also, it is necessary to use this feature instead of the platen knob when End of Page Warning is activated so the unit can keep track of lines. To use Index Up/Down:

1. Press **Code + Up (6)** to move the typing position up (paper down).
2. Press **Code + Down (7)** to move the typing position down (paper up).

NOTE: These are repeating keys. If they are held down, the paper will continue to move up or down.

Auto Return

You can program your typewriter to automatically return at the end of each line. When a space or hyphen is typed in the “warning zone,” which begins five spaces before the right margin, the carrier automatically returns to the next line. For lengthy words falling at the end of the line, simply type a hyphen as you normally would, and the carrier returns automatically. To activate Auto Return:



1. Press **Code + Return (Back Space)**. Unit beeps.
2. Type text. Do not press **Return** at the end of a line.

Deactivating Auto Return

Press **Code + Return (Back Space)**.

Abbreviation Feature

The Abbreviation feature allows you to quickly insert a pre-programmed word or phrase into your document. For example, if you frequently find yourself typing “Best Regards,” you can insert its abbreviation, and the unit will type the phrase. A list of all the abbreviations available follows the instructions.

You may use Bold, Underline, or Caps Lock to enhance this text if you activate it before inserting the abbreviation.

***NOTE:** The Abbreviation feature can not be activated when the Auto Center or Decimal Tab features are activated.*

To activate the Abbreviation feature:

1. Position the print hammer where you want the phrase to appear.
2. Press **Code + Abbr (X)** to activate the Abbreviation feature. A beep is heard.

***NOTE:** If you wish to exit the feature prior to typing in a label or after the first character of the label is entered, simply press **Code + Abbr (X)** to deactivate the feature.*

3. Type the two-character abbreviation. Both upper or lower case characters are accepted. If you make a mistake on the first character of the abbreviation, press **Correct** or **WordEraser**. If the second character typed is incorrect, the unit beeps and the Shift Lock light flashes. Reenter the full two-character abbreviation again.
4. Phrase prints and the feature is deactivated. The abbreviation, however, will not print. Once the phrase is printed it will be in the correction buffer on the line.



Abbreviation Lists

General Words and Phrases

(Labels in upper or lower case accepted)

AM Air Mail
AP Appendix
AN Any help you can give me will be greatly appreciated
AS as soon as possible
BI Bibliography
CM Certified Mail
CF Confidential
DI Distribution
DH Do not hesitate at any time to call on me
ED EDUCATION:
EM EMPLOYMENT:
EF Enclosed you will find
EN Enclosures
FX Facsimile
FE For example,
HC Handle with Care
ND Have a nice day
IE I am enclosing
AC I appreciate your cooperation
LR I look forward to your reply
IN Introduction
IT Itinerary
PH It is always a pleasure to hear
TN My telephone number is
NA Name and Address
NL Newsletter
OB OBJECTIVE:
PO Per our telephone conversation,
PC Personal & Confidential
PT Please take into consideration
RN Reference No.:
RM Registered Mail

RD Revision date:
SF satisfactory
SS Social Security
SI SPECIAL INTERESTS:
SJ Subject:
SU substantially
TC Table of Contents
QR The best of wishes for a quick recovery!
CD The completion date
IL The information listed below
UC Under the circumstances
UV University of
UM U.S. Mail
AB We appreciate your business
MH We must hear from you by
FH We will be looking forward to hearing from you
WE WORK EXPERIENCE:
YI You are invited to
YA Your attention to this matter will be greatly appreciated.

Request Phrases

FA If I can be of further assistance, please contact me
HQ If you have any questions, please don't hesitate to call
PA Please confirm this action upon receipt
PM Please contact me at
PL Please let me hear from you
PK Please let me know
PR Please let us have your reply by
PS Please sign the enclosed documents
WS Please write soon
ER Please use the enclosed envelope for your reply

RR Return receipt requested

Salutations and Closings

AF Affectionately,
BR Best regards,
CG Congratulations
CO Cordially,
CY Cordially yours,
MI Dear Miss
MR Dear Mr.
DM Dear Mr. and Mrs.
RS Dear Mrs.
MS Dear Ms.
SM Dear Sir or Madam:
GY Gratefully yours,
HB Happy Birthday
HH Happy Holidays
KR Kind regards,
MC Merry Christmas and Happy
New Year
RY Respectfully yours,
SC Sincerely,
SY Sincerely yours,
VS Very sincerely yours,
VT Very truly yours,
VB With our very best wishes,
VR Yours very respectfully,
YV Yours very truly,
YT Yours truly,

Holidays

XM Christmas
ID Independence Day
HA Halloween
HK Hanukkah
LD Labor Day
MD Memorial Day
NY New Year's Day

TD Thanksgiving Day


Months and Days

JA January
FB February
AU August
SE September
OC October
NO November
DE December
MO Monday
TU Tuesday
WD Wednesday
TS Thursday
FR Friday
SA Saturday
SN Sunday

Thank You Phrases

TY Thank you
TH Thank you for your help
TL Thank you for your letter
TR Thank you for your recent
inquiry
TV Thank you very much
ET I want to express my thanks
TO I would like to take this
opportunity to

Care and Maintenance

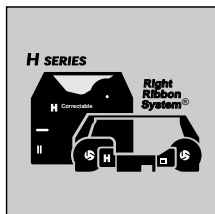

Ribbon Cassette and Correcting Cassette

WARNING: Use Smith Corona brand “H” Series supplies. Use of non-Smith Corona (brand or manufactured) supplies or accessories will not (except as noted below) void this warranty.

THE WARRANTY WILL BE VOID if the typewriter is damaged or rendered wholly or partially inoperable as a result of using a non-Smith Corona supply or accessory item(s).

Your Smith Corona typewriter uses Ribbon and Correcting Cassettes with the Right Ribbon System® feature. Smith Corona’s patented Right Ribbon System feature assures that the right combination of ribbon and correcting cassette is inserted in the typewriter.

- Assures use of Correctable film with Lift-Off correction.
- Assures use of Multi-Strike film with Cover-Up correction.

For example: Correctable film ribbon with Cover-Up correcting cassette. If a mismatched set is inserted, the ribbon cassette cannot be fully or properly inserted into your typewriter.

The exclusive Right Ribbon System feature using the patented Smith Corona Ribbon and Correcting Cassettes is designed to make changing ribbons and correcting tapes quick, easy, and error-free.

Because of Smith Corona’s patented correcting tape feed mechanism, the lift-off correcting cassette has approximately two times the yield of spooled tapes found in other machines.

Replace the ribbon cassette when a different colored portion begins to unwind from the Cassette. Be sure to use the Right Ribbon System combination.

Correctable Film with Lift-Off Correction

When using Correctable film ribbon cassettes, use Smith Corona Lift-Off correcting cassettes. Lift-Off tape *removes* your errors quickly and cleanly. It will not remove the print of a Multi-Strike ribbon. Lift-Off correcting cassettes have a *yellow* cut-out on the lower right. See “Supplies and Accessories.”

Multi-Strike Film with Cover-Up Correction


When using Multi-Strike film ribbon cassettes, use Smith Corona Cover-Up correcting cassettes.

Cover-Up tape *covers* your errors neatly and quickly. Cover-Up correcting cassettes have a *pink* cut-out on the lower right. See “Supplies and Accessories.”

Removing the Ribbon Cassette



Replace the ribbon cassette when a different colored portion begins to unwind from it.

1. Tilt sound shield toward you.
2. Grasp cassette on both sides.
3. Lift cassette STRAIGHT up and out.

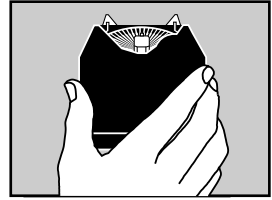

Inserting the Ribbon Cassette

1. Turn the gear wheel on the bottom of the cassette in the direction indicated to tightly wind the cassette.
2. Turn the cassette over with the name face up and the ribbon toward the print hammer.
3. Set the cassette in the carrier while guiding the ribbon between the printwheel and the typing guide. Press down. Ribbon snaps into place.
4. Return the sound shield to its original position. Be sure it snaps into place.

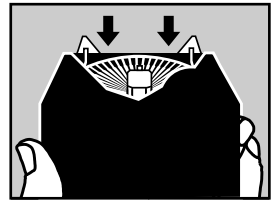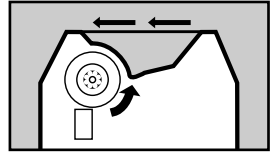


NOTE: Stencils designed specifically for daisywheel typewriters perform best when the print ribbon is inserted. To determine which brand best fits your individual requirements, check with your office supplies retailer.




Correcting Cassette

Replace the correcting cassette when a different colored portion unwinds from the right spool. Be sure to use the Right Ribbon System combination.

Removing the Correcting Cassette

1. Tilt sound shield toward you, and remove the print ribbon cassette.
2. Grasp the correcting cassette on both sides as shown. Lift it up and out.

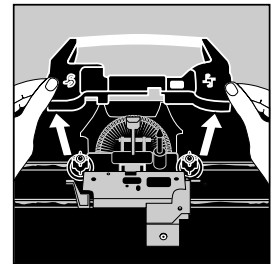

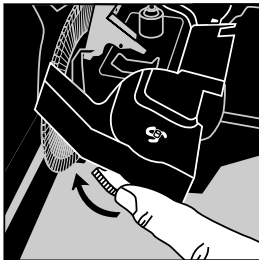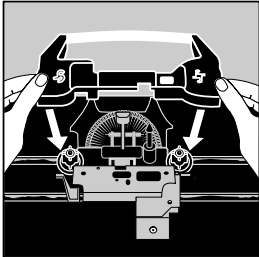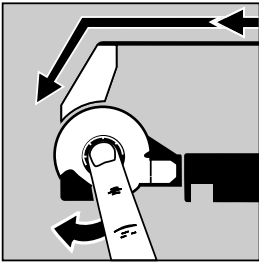

Inserting a New Correcting Cassette

1. Turn appropriate gear wheel on bottom of the correcting cassette in direction indicated by arrows to wind tightly.
2. Hold correcting cassette (using both hands as shown) with the Smith Corona name facing up.
3. Guide correcting tape between the printwheel and typing guide and position left gear wheel on left mount and right gear wheel on right mount.
4. Snap correcting cassette securely in place.

IMPORTANT: After the cassette is mounted, tighten slack in tape by moving red plastic lever toward platen. The lever is located under left side of cassette towards the platen. Repeat as many times as necessary.

5. Replace ribbon cassette. Be sure printwheel and print hammer are secure.
6. Return sound shield to its original position. Be sure it is closed securely.

Printwheels

Removing the Printwheel



1. Tilt sound shield toward you.
2. Remove the ribbon cassette and correcting cassette.
3. Locate the print hammer release lever (left of print hammer). Pull the lever forward until the print hammer mechanism springs away from the printwheel.
4. Lift the printwheel out.

Inserting a Printwheel

1. Drop printwheel between print hammer and typing guide with type style name facing you.
2. Push the print hammer release lever back until the print hammer mechanism snaps into place.
3. Replace the ribbon cassette and correcting cassette.
4. Return the sound shield to its original position. The unit should automatically reinitialize. If this does not occur, check to make sure the sound shield is closed securely and, if necessary, turn your unit off and then on again.



Cleaning

Do not attempt to disassemble the typewriter to clean it.

IMPORTANT: Always unplug the machine before using cleaning solutions on its surfaces.

Printwheel

To remove residue, dip the characters into a small container of ethyl or isopropyl alcohol (rubbing alcohol) and wipe with a clean dry cloth. Do not soak the printwheel.

Platen

Wipe surface with a clean cloth dampened with ethyl or isopropyl alcohol (rubbing alcohol).

Cover/Keyboard/Sound Shield

To clean the cover or keyboard, dampen a sponge with a mild ammonia or soap solution. DO NOT use household cleaners containing chlorinated compounds. DO NOT spray anything directly on the product.

WARNING: Keep all solvents and petroleum distillates (gasoline, kerosene, lighter fluids, etc.) away from plastic parts. Keep all cleaning solutions away from electrical components and moving parts.

Check Points

If your typewriter does not function properly, check the following:

- ✓ Is the typewriter plugged into a live socket?
- ✓ Is the typewriter switched on?
- ✓ Is the sound shield completely closed?
- ✓ Are the printwheel, ribbon cassette and the correcting cassette properly installed?
- ✓ Have the ribbon or correcting cassette been used up?
- ✓ Is the carrier completely disengaged?
- ✓ Are compatible ribbon and correcting cassettes installed?
- ✓ Is the print hammer in a locked position?
- ✓ Has a foreign object fallen into the typewriter?

If the typewriter still does not work properly after checking the above, contact your nearest Smith Corona Service Center.

Obtaining Service

If you are experiencing difficulty, before returning the unit for service, call Consumer Affairs, toll-free at **1-800-448-1018**, for assistance. Customer Service Representatives are available to assist you Monday through Friday, from 8:00 AM to 6:00 PM.

***NOTE:** If you need to send your unit for service, to qualify for Warranty, proof of purchase must accompany the unit. Your sales receipt is your proof of purchase.*






Shipping Instructions

IMPORTANT: When the machine is to be shipped for any reason, the carrier mechanism inside the typewriter must be stabilized to prevent movement. The typewriter as a whole must be properly protected from shipping and handling hazards. Use original packing material to pack the unit.

Stabilizing the Carrier Mechanism


1. Unplug the unit.
2. Tilt the sound shield toward you.
3. Select a rubber band to secure the print mechanism.
4. Place the rubber band around the tab on the right side of the carrier mechanism.
5. Stretch the rubber band over the top of the mechanism and around the tab on the left side.
6. Move the carrier to the right end of the machine until it locks into place. You will hear it click into place.
7. Wrap the cord around the cord wrap panel approximately three (3) times. Some excess cord will remain loose.
8. Secure the plug in the protection slot, and snap the cord into the cord restraint.
9. Tuck the excess cord up under the lip.
10. Return the sound shield to its original position and tape shut.
11. Place the keyboard cover on the typewriter. Your typewriter is ready for packing.

NOTE: If the carrier cannot be put into the correct position, ball up single sheets of newspaper and insert them on each side of the carrier until all open spaces are filled to capacity.

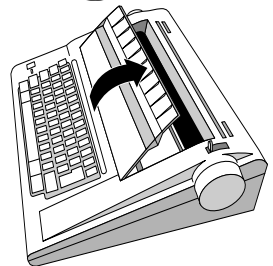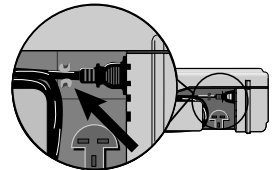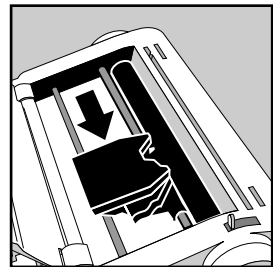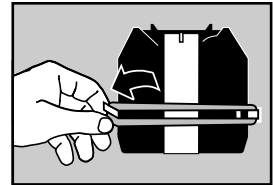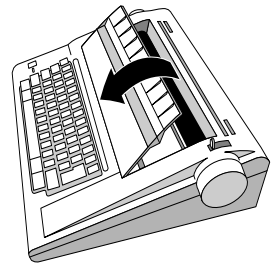


Packing the Typewriter

Pack the typewriter in the original materials, if possible:

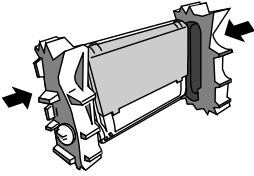

1. Place both foam end-caps on the unit.
2. Insert the unit into the box, and tape it shut.
3. In large letters, address the package for shipment to the nearest service location. Remember to include your return address, and retain your shipping receipt.

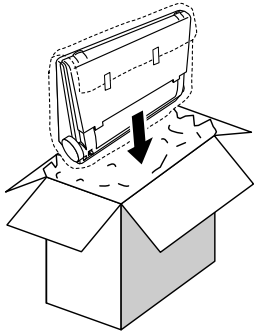

If you do not have the original packing materials:

1. Use box slightly larger than the typewriter.
2. Place the unit in a large plastic bag.
3. Place at least 2" of packing material in the bottom of the box for cushioning.
4. Place the typewriter inside the box and fill the sides and top with more packing material (2" of material on all sides).
5. Seal carton using either filament tape or wide plastic tape.
6. Address the package for shipment to the nearest service location. Remember to include your return address and retain your shipping receipt.

Supplies and Accessories

Smith Corona produces the following Supplies and Accessories.

WARNING: Use Smith Corona "H" Series supplies which have been designed specifically for this product. Use of non-Smith Corona supplies may render the unit inoperable.

Correctable Film Ribbon Cassettes

For UNMATCHED SHARPNESS AND CLARITY, use Smith Corona black Correctable Film Ribbon Cassettes and "lift off" errors with Smith Corona Lift-Off Correcting Cassettes.

Correctable Film Ribbon is transferred to the paper when typing and can be used only once.

Stock No.

Correctable Black Film Ribbon for clean correction and general purpose typing applications. Yields approximately 25% more characters per cassette than High Density Correctable Film Ribbon.

Correctable Film Ribbon (Dual Pack) 21000

Correctable Film Ribbon (6-Pack) 67108

High Density Correctable Black Film Ribbon for bolder, darker print. Especially for use on difficult to image papers (i.e., rough textured, slick surfaced papers.)

High Density Correctable Film (Dual Pack) 21010

Lift-Off Correcting Cassette

Single Pack 21060

3-Pack 67116

Multi-Strike Ribbon Cassettes

FOR HIGHER CHARACTER YIELD - Use Smith Corona Multi-Strike Ribbon Cassettes and "cover-up" errors with Smith Corona Cover-Up Correcting Cassettes.

Multi-Strike Black Ribbon 21025

Cover-Up Correcting Cassette 21065

Start-Rite®

Start-Rite 63503

- 3 Printwheels (Presidential 12, Tempo 10, Script 10/12)
- 4 Correctable Film Ribbon Cassettes
- 1 Lift-Off Correcting Cassette

Start-Rite II 67173

- 2 Printwheels (Script 10/12, Letter Gothic 10/12)
- 3 Correctable Film Ribbon Cassettes
- 1 Lift-Off Correcting Cassette

Start-Rite kit contents vary by country.

Changeable Printwheels

A variety of H Series printwheels with different type styles are available from your Smith Corona product merchandiser.

PICA TYPE STYLES:

- | | | |
|-------|-------------------------|----------------------------|
| 20700 | Regency 10 (Courier 10) | ABCDEFGHIJKLMNOPQRSTUVWXYZ |
| 20704 | Tempo 10 | ABCDEFGHIJKLMNOPQRSTUVWXYZ |
| 20714 | Orator 10 | ABCDEFGHIJKLMNOPQRSTUVWXYZ |

ELITE TYPE STYLES:

- | | | |
|-------|-------------------------------|----------------------------|
| 20702 | Regency 12 (Courier 12) | ABCDEFGHIJKLMNOPQRSTUVWXYZ |
| 20716 | Presidential 12 (Prestige 12) | ABCDEFGHIJKLMNOPQRSTUVWXYZ |
| 20706 | Tempo 12 | ABCDEFGHIJKLMNOPQRSTUVWXYZ |

PICA OR ELITE TYPE STYLES:

- | | | |
|-------|----------------------|-----------------------------------|
| 20708 | Script 10/12 | <i>ABCDEFGHIJKLMNOPQRSTUVWXYZ</i> |
| 20712 | Courier Italic 10/12 | <i>ABCDEFGHIJKLMNOPQRSTUVWXYZ</i> |
| 20710 | Letter Gothic 10/12 | ABCDEFGHIJKLMNOPQRSTUVWXYZ |

Other:

- | | | |
|-------|----------|----------------------------|
| 20718 | Micro 15 | ABCDEFGHIJKLMNOPQRSTUVWXYZ |
|-------|----------|----------------------------|

To protect printwheels, store them in their original holders.

Important Papers

Safe Operating Recommendations

To avoid unnecessary operator injury or damage to the machine, please review the following recommendations.

- **USE THE CORRECT VOLTAGE** to avoid electrical short circuiting, overheating or shocks.
If in doubt, check the electrical rating label affixed to the unit. Smith Corona does not recommend attaching your unit to any power source other than that which is indicated on the original electric rating label of the machine. Smith Corona does not recommend the use of a voltage converter.
- **THE UNIT SHOULD BE PLUGGED** into an outlet which is nearby and easily accessible.
- **ALWAYS HAVE THE UNIT SERVICED** by a qualified service technician. There are no user-serviceable parts inside.
- **TO AVOID ELECTRICAL SHOCK**, never insert metal objects such as screwdrivers, paper clips, nail files, etc. inside the unit. For safety's sake, never place any object inside the unit.
- **BEFORE REACHING INTO THE CARRIER PATH AREA**, always switch to Standby or Off, depending on the model.
- **KEEP FINGERS, HAIR, JEWELRY**, etc. away from the carrier area when in operation.
- **IF THE UNIT IS DROPPED**, the insulation system may be disturbed. Have the unit checked by a qualified service technician before using it again.
- **DO NOT** remove the housing from the unit.
- **AVOID PLACING THE UNIT** near an excessively warm or humid location.
- **IF LIQUIDS ARE SPILLED OR SPLASHED** on the unit, immediately unplug it. Have the unit checked by a qualified service technician.
- **BEFORE CLEANING** any part of your unit, make sure it is unplugged.
- **WHEN FINISHED TYPING**, switch to Standby or Off. Unplug unit if it is not to be used for an extended period. Unplug unit for a complete cut from the main electrical circuit.

WARNING: *To reduce the risk of fire or electric shock, do NOT expose unit to rain or moisture.*

Product Consumer Warranty

Limited Warranty

90 Day Warranty

Smith Corona warrants this typewriter against defects in material or workmanship for a period of 90 days from the date of original purchase for use, and agrees to repair or, at our option, replace any defective unit without charge for either parts or labor. Proof of Purchase will be required.

Limited Warranty

Following the first 90 days from the date of purchase and thereafter until 1 year from the date of purchase Smith Corona will replace any defective part at no charge. There will be a standard charge for labor and the cost of transportation.

IMPORTANT: *This warranty does not cover damage resulting from accident, misuse or abuse, any modification or alteration including attaching the unit to other than the recommended receptacle or voltage, nor does it cover ribbon replacement or cleaning of the unit.*

THIS WARRANTY IS VOID WHEN SERVICE OR REPAIRS ARE PERFORMED BY A NON-AUTHORIZED SERVICE LOCATION. This warranty does not cover shipping expenses to and from a service location.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. You may obtain warranty service through one of our service locations. To obtain the location of the nearest Service Center, call toll-free: 1-800-448-1018

The toll-free number operates Monday through Friday, from 8:00 a.m. to 6:00 p.m. Eastern Time. Simply take or ship the unit prepaid to the nearest service location. Damage occurring during transit is not covered by this warranty.

NOTE: *No other warranty, written or verbal, is authorized by Smith Corona. This warranty applies to units sold in the United States and Puerto Rico only.*

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion and limitations may not apply to you.

Smith Corona Corporation
839 Route 13 South
P.O. Box 2090
Cortland, New York 13045-0980

WARNING: *Use Smith Corona "H" Series supplies. Use of non-Smith Corona (brand or manufactured) supplies or accessories will not (except as noted below) void this warranty.*

THE WARRANTY WILL BE VOID if the typewriter is damaged or rendered wholly or partially inoperable as a result of using a non-Smith Corona supply or accessory item(s).

FCC

The following information is provided to you in accordance with the rules and regulations of the United States Federal Communications Commission. Questions concerning this information can be directed to Smith Corona Corporation by writing:

Smith Corona Corporation
839 Route 13 South
Box 2090
Cortland, NY 13045

***NOTE:** This typewriter generates and uses radio-frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B typewriter in accordance with the specifications in Sub-part J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this typewriter does cause interference to radio or television reception, which can be determined by turning the typewriter off and on, the user is encouraged to try to correct the interference with one or more of the following measures:*

Reorient the receiving antenna.

Relocate the typewriter with respect to the receiver.

Move the typewriter away from the receiver.

Plug the typewriter into a different outlet so that typewriter and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-00-00345-4

***NOTICE:** Any modification or alteration of a typewriter which allows electronic communication with a computer or attaching it to a receptacle or module interface which is not recommended will void Smith Corona's warranty on this product to the extent that any such modification may be related to a failure. Some typewriters are not designed as computer printers and when modified to perform this function may be in violation of the safety and emission rules and regulations.*

***NOTE:** This digital apparatus does not exceed the class B limits for radio emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.*

For your convenience and protection make a record of the model number and serial number. The serial number is located on the inside of the typewriter on the bottom right side. Use these numbers when ordering supplies and accessories and for identification in case of theft.

Model Name _____

Serial Number _____

Date of Purchase _____ © Smith Corona Corporation 1994



Quick Reference Guide

Function	Command
Abbreviation	Code + X
Auto Return	Code + Back Space
Bold	Code + B
Center	Code + Zero (0)
Caps Lock	Code + Lock
Character Swap	Code + Period (.)
Clear One or All Tabs	Code + Tab (Tab C)
Corrects Character(s), On-line	Correct
Corrects One Character, Off-line	Code + Correct
Corrects Word(s) On-line	WordEraser
Dictionary	Code + D
Double Line Spacing	Code + 5
End of Page Warning	Code + P (P. End)
Erase one line of text LineEraser	Code + WordEraser
Forward Correct	Code + Correct (twice)
Half Space	Code + Spacebar
Heavy Impression Control	Code + H
Indent	Code + K (Ind)
Keyboard II (^ ~ `)	Code + Desired Keyboard II character
Left Margin	Margin
Light Impression Control	Code + L
Medium Impression Control	Code + M
Moves Carrier to Tab Locations	Tab
Manual Underscore	Shift + —
1½ Line Spacing	Code + 4
Paper Insert	Code + Left Shift/Paper In
Paper Eject	Code + Right Shift/Paper Out
Relocate to previous typing position	Code + Return/Relocate
Right Margin	Code + Margin
Self-Demonstration	Code + Z
Set 10 Pitch (Pica)	Code + Tab S
Set 12 Pitch (Elite)	Code + 1
Set 15 Pitch (Micro)	Code + 2
Set Decimal Tab	Code + O (D. Tab)
Set Regular Tabs	Tab S
Single Line Spacing	Code + 3
Stop LineEraser	Code + S
Subscript	Code + 8
Superscript	Code + 9
Typing Position Up	Code + 6
Typing Position Down	Code + 7
WordFind	Code + F
Word Swap	Code + Comma (,)
Underscore All	Code + Equal (=)
Underscore Word	Code + Hyphen (-)
Volume Control	Code + V