

**POLHEMUS**  
INNOVATION IN MOTION™

**LIBERTY™**

**LATUS™**

**LIBERTY™ LATUS™**  
**USER MANUAL**

URM05PH184 REV. E  
NOVEMBER 2013

Copyright © 2003- 2013 by Alken, Inc., dba Polhemus  
Colchester, Vermont, U.S.A.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Polhemus. No patent liability is assumed with respect to the use of the information contained herein. While every precaution has been taken in the preparation of this manual, Polhemus assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from use of the information contained herein.

3SPACE®, LIBERTY™ and LIBERTY LATUS™ are trademarks of Polhemus.

Windows® is a registered trademark of Microsoft Corporation.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designated to provide reasonable protection against interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at the user's own expense.

### **Medical Device Use**

**Polhemus is a Good Manufacturing Practices (GMP) Contract Manufacturer under U.S. FDA Regulations. We are not a manufacturer of Medical Devices. Polhemus systems are not certified for medical or bio-medical use. Any references to medical or bio-medical use are examples of what medical companies have done with the Products after they have obtained all necessary or appropriate medical certifications. The end user/OEM/VAR/Distributor must comply with all pertinent FDA/CE regulations pertaining to the development and sale of medical devices and all other regulatory requirements.**

### **EC – Declaration of Incorporation**

**This Product Complies with the following European Community Directives:**

89/336/EEC as amended by 92/31/EEC  
73/23/EEC Low Voltage as amended by 93/68/EEC

**The following standards were used to verify compliance with the directives:**

**EMC:** IEC 61326-1:1997+A1:1998 / EN 61326-1:1997+A1:1998  
CCISPR 11:1990 / EN 55011:1991-Group 1 Class A  
IEC 6100-4-2:1995+A1:1998 / EN 61000-4-2:1995 (ESD 4kV CD, 8kV AD)  
IEC 6100-4-3:1995 / EN 61000-4-3:1995 (3V/m 80% AM)  
IEC 6100-4-4:1995 / EN 61000-4-4:1995 (0.5kV line-line, 1kV line-earth)  
IEC 6100-4-6:1995 / EN 61000-4-6:1995 (3V 80% AM, power line)  
Australia/New Zealand: AS/NZS 2064.1

**Safety:** IEC 61010-1:1990+A1:1992+A2:1995 / EN 61010-1:1993+A2:1995

## Safety Notices

This apparatus has been designed and tested in accordance with IEC Publication 1010, *Safety Requirements for Measuring Apparatus*, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective grounding). Before applying power, verify that the correct safety precautions are taken (see the following warnings).

### Warnings

- Before turning on the instrument, be aware that the mains plug shall only be inserted in a socket outlet provided with a protective ground contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.
- This instrument contains no user serviceable parts. Do not attempt to service the unit. Return it to Polhemus for repair.
- Do not perform any unauthorized modification to the instrument.
- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.
- Do not use the instrument in a manner not specified by the manufacturer.

### To Clean the Instrument

If the instrument requires cleaning:

(1) Remove power from the instrument.

(2) Clean the external surfaces of the instrument with a soft cloth dampened with a mixture of mild detergent and water.

Make sure that the instrument is completely dry before reconnecting it to a power source.

### **HANDLING RECOMMENDATIONS FOR LITHIUM ION OR LITHIUM POLYMER BATTERIES**

**In order to obtain optimum performance, please follow the warnings and safety instructions listed in the handling precautions below.**

- Keep Lithium ion/Lithium polymer batteries away from children. If a battery is swallowed promptly call your doctor.
- Do not allow any Lithium ion/Lithium polymer battery to come into contact with water or liquid of any kind. Do not leave the battery near flames, heaters, (microwave) ovens, stoves, fireplaces or other high-temperature locations. Excessive heat could cause the battery to deteriorate. Do not heat the battery or throw it into a fire. This can damage the safety vent and cause the electrolyte to catch fire.
- Do not leave the battery in a hot condition like strong direct sunlight, inside automobiles behind the windscreen, etc. This can overheat the cell and will reduce the battery's performance.
- Do not damage the battery in any way by nailing, hammering, crushing, etc. This can cause the cell to leak and/or to short circuit internally.
- Do not combine batteries of different capacities, types or brands.
- If a battery leaks or emits a strange odor during use or storage, stop using the cell immediately. Leaking electrolytes are flammable.
- If any fluid that has leaked from the battery comes into contact with skin or clothing, rinse with tap water or other clean water immediately. Contact with skin can cause irritation or burns.
- If fluid from a battery gets into a person's eye, rinse the eye immediately with clean water and seek medical attention promptly. Do not rub the eye.

# Table of Contents

<b>SAFETY NOTICES.....</b>	<b>I</b>
WARNINGS .....	I
TO CLEAN THE INSTRUMENT.....	I
<b>1 GETTING STARTED .....</b>	<b>1</b>
1.1 LIBERTY LATUS MODELS.....	1
1.2 SETTING UP LIBERTY LATUS.....	2
1.3 CHARGING AND USING LIBERTY LATUS MARKER BATTERIES.....	7
1.3.1 <i>Charging the Extended Marker Battery</i> .....	7
1.3.2 <i>Charging the Standard Marker Battery (discontinued)</i> .....	10
1.3.3 <i>Using Wireless Markers</i> .....	14
1.4 INSTALLING LIBERTY LATUS HOST SOFTWARE .....	15
1.4.1 <i>USB Driver Installation</i> .....	15
1.5 USING THE POLHEMUS PiMgr GUI.....	16
1.6 USING THE LIBERTY LATUS ASCII INTERFACE .....	22
1.7 EXPERIMENT WITH LIBERTY LATUS DATA .....	24
<b>2 COMPONENT DESCRIPTION.....</b>	<b>25</b>
2.1 SYSTEM ELECTRONICS UNIT (SEU).....	25
2.1.1 <i>Receptor Ports (4 / 8 / 12 / 16)</i> .....	25
2.1.2 <i>LED Indicator</i> .....	25
2.1.3 <i>External Sync I/O</i> .....	25
2.1.4 <i>RS-232 I/O</i> .....	26
2.1.5 <i>USB I/O</i> .....	26
2.1.6 <i>RS-422 I/O</i> .....	26
2.1.7 <i>Video Sync</i> .....	27
2.2 RECEPTOR.....	27
2.3 EXTENDED MARKER .....	27
2.4 STANDARD MARKER (DISCONTINUED) .....	29
2.5 LIBERTY LATUS STANDARD MARKER BATTERY CHARGER (DISCONTINUED).....	29
<b>3 SYSTEM OPERATION .....</b>	<b>31</b>
3.1 I/O CONSIDERATIONS.....	31
3.2 POWERING UP LIBERTY LATUS .....	31
3.3 RECEPTOR SETUP .....	32
3.3.1 <i>Receptor Positioning and Setup</i> .....	32
3.3.2 <i>Receptor Alignment</i> .....	33
3.3.2.1 <i>Automatic Receptor Alignment</i> .....	34
3.3.2.2 <i>Manual Receptor Alignment</i> .....	39
3.3.2.3 <i>Saving Receptor Alignments</i> .....	41
3.3.3 <i>Reference Frame Setup</i> .....	42
3.4 MARKER OPERATION .....	43
3.4.1 <i>Marker Launch and Unlaunch</i> .....	43
3.4.1.1 <i>Manual Marker Launch</i> .....	44
3.4.1.2 <i>Manual Marker Unlaunch</i> .....	45
3.4.1.3 <i>Automatic Marker Launch and Unlaunch</i> .....	46
3.4.2 <i>Marker Installation</i> .....	47
3.5 OPTIMIZATION AND UPDATE RATE .....	48
3.5.1 <i>Optimization Mode</i> .....	48
3.5.2 <i>Update Rate</i> .....	49
3.6 OUTPUT CONSIDERATIONS .....	50
3.6.1 <i>Adaptive Filters</i> .....	50
3.6.2 <i>Increment</i> .....	50
3.7 CONFIGURATION CHANGES .....	51
3.8 CHARGING MARKER BATTERIES.....	51
<b>4 LIBERTY LATUS SYSTEM COMMANDS.....</b>	<b>53</b>
4.1 OVERVIEW .....	53
4.2 COMMAND SYNTAX .....	53
4.2.1 <i>Notation</i> .....	53
4.2.2 <i>Command Format Notes</i> .....	54
Station Wildcard .....	54
Default Parameters.....	54

4.2.3	Response Format Notes.....	55
	ASCII.....	55
	Binary.....	55
	Error Responses.....	56
4.3	LIBERTY LATUS USER COMMAND SET SUMMARY.....	57
4.4	LIBERTY LATUS ERROR CODE SUMMARY.....	58
4.5	COMMAND REFERENCE.....	59
4.5.1	Configuration Commands.....	59
	‘B’ – Boresight.....	60
	‘F’ – Output Format.....	62
	‘G’ – Marker Reference Frame.....	63
	‘M’ – Installed Markers.....	65
	‘O’ – Output Data List.....	67
	‘R’ – Update Rate.....	69
	‘U’ – Set Units.....	70
	‘X’ – Position Filter Parameters.....	71
	‘Y’ – Attitude Filter Parameters.....	73
	‘Z’ – Set Sync Mode.....	75
	‘^E’ – Set Echo Mode.....	76
	‘^G’ – Set Autolaunch Criteria.....	77
	‘^N’ – Increment.....	79
	‘^O’ – RS-232 Port Configuration.....	80
	‘^R’ – Optimization Mode.....	82
	‘^S’ – Startup Receptor Alignment Configuration.....	84
	‘^U’ – Active Marker Map.....	85
	‘^X’ – Operational Configuration ID.....	87
	‘@A’ – Autolaunch Mode.....	89
	‘@B’ – USB Buffering Mode.....	90
	‘@N’ – AutoIncrement.....	92
4.5.2	Operational Commands.....	93
	‘A’ – Set Alignment Mode.....	94
	‘C’ – Continuous Print Output.....	96
	‘L’ – Launch Marker.....	97
	‘N’ – Launched Marker ID.....	98
	‘P’ – Single Data Record Output.....	99
	‘Q’ – Reset Counters.....	101
	‘^A’ – Receptor Alignments.....	102
	‘^B’ – Aligned Receptors Map.....	104
	‘^D’ – Alignment Criteria.....	105
	‘^F’ – Force Alignment.....	106
	‘^K’ – Save Operational Configuration.....	107
	‘^L’ – Unlaunch Marker.....	108
	‘^P’ – Phase Step.....	109
	‘^V’ – WhoAmI.....	110
	‘^W’ – Set Operational Configuration.....	112
	‘^Y’ – Initialize System.....	113
	‘^Z’ – Read Operational Configuration.....	114
	‘@S’ – Signal Strength.....	117
<b>APPENDIX A.</b>	<b>TERMS/ACRONYMS.....</b>	<b>A-1</b>
<b>APPENDIX B.</b>	<b>SYSTEM OUTPUT DATA RECORDS.....</b>	<b>B-9</b>
	ASCII FORMAT.....	B-9
	BINARY FORMAT.....	B-10
<b>APPENDIX C.</b>	<b>LIMITED WARRANTY AND LIMITATION OF LIABILITY.....</b>	<b>C-1</b>
<b>APPENDIX D.</b>	<b>SPECIFICATIONS.....</b>	<b>D-1</b>
<b>APPENDIX E.</b>	<b>CUSTOMER SERVICE.....</b>	<b>E-1</b>

## List of Figures

Figure 1-1: LIBERTY LATUS .....	1	Figure 1-33: Receptor Alignment Dialog .....	19
Figure 1-2: LIBERTY LATUS Rear Panel.....	3	Figure 1-34: Select Anchor Receptor .....	19
Figure 1-3: Receptor and Receptor Connector Cord.....	3	Figure 1-35: Start Auto Align .....	20
Figure 1-4: Receptor/Marker Test Setup.....	4	Figure 1-36: Auto Align Confirmation Dialog.....	20
Figure 1-5: Marker Number Label.....	4	Figure 1-37: Aligned Receptor List.....	21
Figure 1-6: Power Connector.....	4	Figure 1-38: Marker in PiMgr Status Pane.....	21
Figure 1-7: USB Cable Connection .....	5	Figure 1-39: PiMgr Data Record Display (using marker 4) .	22
Figure 1-8: RS-232 Cable Connection.....	6	Figure 2-1: External Sync.....	26
Figure 1-9 Extended Marker Battery .....	7	Figure 2-2: Receptor.....	27
Figure 1-10 Extended Marker Battery Charger.....	7	Figure 2-3: Extended Marker Dimensions (inches).....	28
Figure 1-11 Placing Extended Marker Batteries Into Charger	8	Figure 2-4: Extended Marker Battery Charger .....	28
Figure 1-12 Extended Marker Battery Tab Orientation .....	8	Figure 2-5: Standard Marker Dimensions (inches).....	29
Figure 1-13 Extended Marker Battery Insertion .....	9	Figure 2-6: Standard Marker Battery Charger, Front View..	30
Figure 1-14 Extended Marker: Successful Battery Installation	9	Figure 2-7: Standard Marker Battery Charger and Power	
.....	9	Pack, Rear View .....	30
Figure 1-15 Standard Marker Battery (Discontinued).....	10	Figure 3-1: Receptor ‘Serial’ Pattern (Top View).....	32
Figure 1-16: Standard Marker Battery Charging Components	10	Figure 3-2: Receptor ‘Cluster’ Pattern (Top View).....	33
.....	10	Figure 3-3: Example Staging Area .....	33
Figure 1-17: Standard Marker: Placing Batteries Into Charger	11	Figure 3-4: HELP button location on Receptor Alignment	
.....	11	dialog box .....	34
Figure 1-18: Standard Marker Battery Charger Power On ...	11	Figure 3-5: Select Anchor Receptor .....	35
Figure 1-19: Standard Marker Batteries Charging .....	11	Figure 3-6: +X Hemisphere direction of marker .....	35
Figure 1-20: Standard Marker: Preparing To Remove The	12	Figure 3-7: Select Hemisphere .....	36
Battery .....	12	Figure 3-8: Auto Align Criteria.....	37
Figure 1-21: Standard Marker: Lifting The Battery .....	12	Figure 3-9: Auto Align Marker Starting Orientation.....	37
Figure 1-22: Standard Marker: Spring Clip Improperly Seated	13	Figure 3-10: Auto Align Receptor List.....	38
.....	13	Figure 3-11: Aligning Receptor.....	38
Figure 1-23: Standard Marker: Proper Seating Of Spring Clip	13	Figure 3-12: List of aligned receptors .....	39
.....	13	Figure 3-13: Select Receptor for Manual Alignment .....	40
Figure 1-24: Standard Marker Battery Tab Orientation .....	13	Figure 3-14: Manually Align Receptor .....	41
Figure 1-25: Standard Marker Battery Insertion.....	14	Figure 3-15: Save or Erase Startup Alignment Data .....	42
Figure 1-26: Successful Standard Marker Battery Installation	14	Figure 3-16: Select Launch Receptor .....	45
.....	14	Figure 3-17: Marker Launch Orientation .....	45
Figure 1-27: Marker Power Switch and LED .....	15	Figure 3-18: Unlaunching a marker.....	46
Figure 1-28: PiMgr Screen Display, No Connection .....	16	Figure 3-19: Select marker to unlaunch .....	46
Figure 1-29: PiMgr Device Menu – Tracker Configuration..	17	Figure 3-20: Autolaunch .....	47
Figure 1-30: RS-232 Display .....	17	Figure 3-21: Optimization Mode dialog box.....	49
Figure 1-31: Receptors Not Aligned PiMgr Status Pane.....	18	Figure 3-22: Output Rate.....	49
Figure 1-32: PiMgr Device Menu – Receptor Alignment.....	18	Figure 4-1: Euler Angles .....	A-6

**DUE TO SOFTWARE AND HARDWARE MODIFICATIONS  
SCREEN OR PRODUCT EXAMPLES APPEARING IN THIS MANUAL  
MAY VARY SLIGHTLY FROM THE ACTUAL  
SCREENS OR PRODUCTS THE USER ACCESSES.**

## List of Tables

Table 1-1 System Status Indicators.....	5	Table 4-33 '^O' ASCII Response .....	81
Table 2-1 LED Indicators .....	25	Table 4-34 '^O' Binary Response .....	81
Table 2-2 External Sync Pin-Outs .....	26	Table 4-35 Binary RS-232 Codes.....	81
Table 2-3 RS-232 Pin-Outs.....	26	Table 4-36 '^R' ASCII Response.....	83
Table 3-1: Optimization Mode/Update Rate Summary.....	49	Table 4-37 '^R' Binary Response .....	83
Table 4-1 ASCII Response Format.....	55	Table 4-38 '^U[marker]' ASCII Response .....	86
Table 4-2 Binary Response Format .....	56	Table 4-39 '^U0' ASCII Response.....	86
Table 4-3 'B' ASCII Response.....	60	Table 4-40 '^U' Binary Output Format.....	86
Table 4-4 'B' Binary Response.....	60	Table 4-41 '^X' ASCII Response .....	87
Table 4-5 'F' ASCII Response .....	62	Table 4-42 '^X' Binary Response .....	87
Table 4-6 'F' Binary Response .....	62	Table 4-43 '@A' ASCII Response.....	89
Table 4-7 'G' ASCII Response.....	64	Table 4-44 '@A' Binary Response .....	89
Table 4-8 'G' Binary Response .....	64	Table 4-45 '@B' ASCII Response.....	91
Table 4-9 'M' ASCII Response Header.....	65	Table 4-46 '@B' Binary Response .....	91
Table 4-10 'M' ASCII Response .....	65	Table 4-47 '@N' ASCII Response.....	92
Table 4-11 'M' Binary Response.....	66	Table 4-48 '@N' Binary Response .....	92
Table 4-12 Output Data Types.....	67	Table 4-49 'N' ASCII Response .....	98
Table 4-13 'O' ASCII Response.....	68	Table 4-50 'N' Binary Response.....	98
Table 4-14 'O' Binary Response .....	68	Table 4-51 'P' ASCII Response .....	99
Table 4-15 'R' ASCII Response.....	69	Table 4-52 'P' Binary Response.....	99
Table 4-16 'R' Binary Response.....	69	Table 4-53 '^A' ASCII Response .....	103
Table 4-17 'U' ASCII Response.....	70	Table 4-54 '^A' Binary Output Format.....	103
Table 4-18 'U' Binary Response .....	70	Table 4-55 '^B' ASCII Response.....	104
Table 4-19 'X' ASCII Response.....	72	Table 4-56 '^B' Binary Output Format .....	104
Table 4-20 'X' Binary Response .....	72	Table 4-57 '^D' ASCII Response .....	105
Table 4-21 'Y' ASCII Response.....	74	Table 4-58 '^D' Binary Output Format.....	105
Table 4-22 'Y' Binary Response .....	74	Table 4-59 '^V' ASCII Response .....	110
Table 4-23 'Z' ASCII Response .....	75	Table 4-60 '^V' <> Binary Response.....	110
Table 4-24 'Z' Binary Response.....	75	Table 4-61 '^V[receptor]' ASCII Response.....	110
Table 4-25 '^E' ASCII Response .....	76	Table 4-62 '^V[receptor]' Binary Response.....	110
Table 4-26 '^E' Binary Response .....	76	Table 4-63 '^Z' ASCII Response Header.....	114
Table 4-27 '^G' ASCII Response .....	77	Table 4-64 '^Z' ASCII Response.....	115
Table 4-28 '^G' Binary Response.....	77	Table 4-65 '^Z' Binary Response .....	116
Table 4-29 '^N' ASCII Response .....	79	Table 4-66 '@S' ASCII Response .....	117
Table 4-30 '^N' Binary Response.....	79	Table 4-67 '@S' Binary Response.....	117
Table 4-31 ASCII Baud Rate Values.....	80		
Table 4-32 ASCII Parity Values .....	80		



## 1 Getting Started

Congratulations on your purchase of Polhemus' most innovative motion tracking system to date: The LIBERTY LATUS.

This section of the manual is provided to help get your tracking system up and running quickly. It covers the basics of understanding and setting up the system to demonstrate its principles. However, this is meant only as a starting point to show that the system is operating properly before delving into more detailed setup. The remaining sections of this manual serve as a complete reference resource for LIBERTY LATUS operation.

### 1.1 LIBERTY LATUS Models

The LIBERTY LATUS (Large Area Tracking Untethered System) is designed to track Position and Orientation (P&O) of mobile wireless **Markers** relative to a user-defined coordinate system referenced to a fixed array of special sensing units called **Receptors**. Receptors are cabled to the SEU (System Electronics Unit) and are arrayed over the motion tracking environment. They track the magnetic field signals emanating from the wireless battery-powered markers. The position and orientation of each marker is calculated and communicated from the SEU to a host computer via RS-232 or USB. Marker P&O is automatically aligned to a user-defined reference point relative to the receptor array.

This user manual covers all LIBERTY LATUS models and configurations:

- The LIBERTY LATUS base system supports four receptors and up to 12 wireless markers. This system is scalable to support up to 16 receptors to cover a larger physical area.

All LIBERTY LATUS models are expansions on the basic LIBERTY system and are managed and configured similarly. However, in the very few circumstances where LIBERTY LATUS commands or operations differ, those differences are clearly noted in this manual.



Figure 1-1: LIBERTY LATUS



## **1.2 Setting Up LIBERTY LATUS**

The basic system consists of a System Electronics Unit (SEU), which requires at least one receptor, at least one marker with rechargeable Lithium ion/Lithium polymer battery, and a charger for the battery.

Each processing board on the SEU can operate up to four receptors, and the SEU can be outfitted with up to four such boards for a total receptor capability of 16 receptors. Up to 12 unique markers can be operated simultaneously.

**NOTE:** For the purpose of Getting Started, the following assumptions are made:

- There is one receptor.
- There is one marker plus a spare marker battery.
- The marker batteries have been charged.  
See [Charging and Using LIBERTY LATUS Marker Batteries](#) on page 7.
- The host computer is running Windows XP or later, and has an available USB or COM port.
- The Polhemus PiMgr GUI should be installed on the host computer. See [Installing LIBERTY LATUS Host Software](#) on page 15 for instructions.

**1.2.1** Unpack the LIBERTY LATUS SEU, receptors(s), marker(s), USB and RS-232 cables, LIBERTY LATUS Host Software CD, power cord and cables, and marker battery charger and power module. See [Figure 1-1](#).

**1.2.2** Set up the LIBERTY LATUS close to your host computer but within reach of the receptor cable length to the test area.

**1.2.3** Examine the rear panel of the LIBERTY LATUS and review the locations of the receptor (sensor), power, RS-232, USB, and external sync ports. The layout of the rear panel is the same for all LIBERTY LATUS configurations. The only difference may be the number of receptor ports. See [Figure 1-2](#).

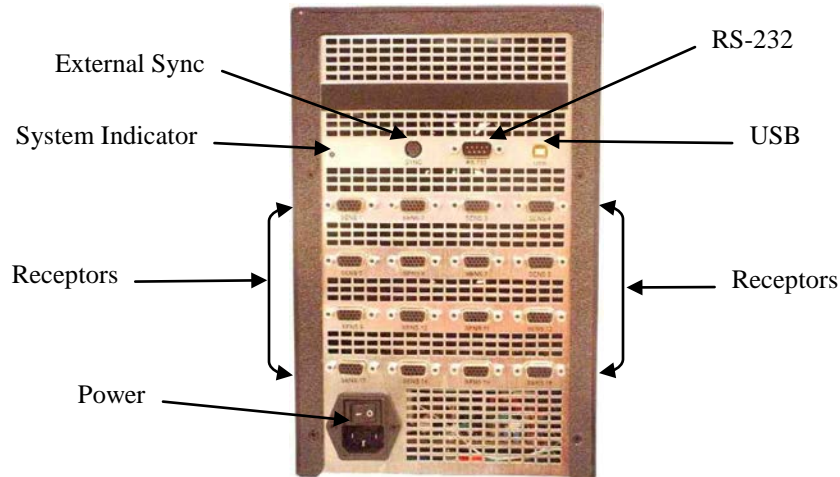


Figure 1-2: LIBERTY LATUS Rear Panel

**1.2.4** Connect the receptor. Uncoil a small length of the receptor cable and attach it to the “Sensor 1” connector on the SEU. Firmly engage and lock the receptor connector into place (See [Figure 1-3](#)). Tighten the two retaining screws to secure.



Figure 1-3: Receptor and Receptor Connector Cord

**1.2.5** Place the receptor head on a non-metallic surface. Dress the cable safely over to the SEU where it will not become entangled in a walkway. Place the *charged*\* marker on the surface, to the rear of the receptor and about 10-12 inches away from the receptor. Make sure that the marker is oriented so that the +X direction is *forward, toward the rear of the receptor*. Refer to [Figure 1-4](#).

\* **NOTE:** To charge a marker battery, refer to [Charging and Using LIBERTY LATUS Marker Batteries](#) on page 7.



Figure 1-4: Receptor/Marker Test Setup

Make note of the marker number in your test setup. The marker number label is located on the top of the marker as shown in [Figure 1-5](#).



Figure 1-5: Marker Number Label

**1.2.6** Identify the power entry module with the ON/OFF rocker switch on the rear panel. Ensure that this switch is in the OFF position (logic “0”, RIGHT) before inserting the AC power cord and applying 110/220 VAC. See [Figure 1-6](#).

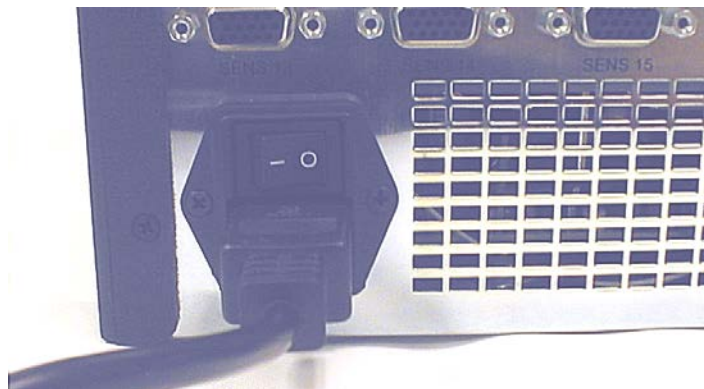


Figure 1-6: Power Connector

### USB or RS-232 Communications

- For USB, continue with step [1.2.7](#).

- For RS-232, skip to step [1.2.11](#).

**NOTE:** Only one I/O mode (USB or RS-232) can be active at a time. If at any time the USB is connected between the powered tracking system and the host computer, USB will become operational automatically and any RS-232 connection will be disabled. To re-enable the RS-232 connection, the SEU must be reset or powered down and up with the USB cable disconnected.

**For USB Communications:**

**1.2.7** Identify the USB cable and insert it into the receptacle as shown in [Figure 1-7](#). Connect the other end of the USB cable to the host computer.

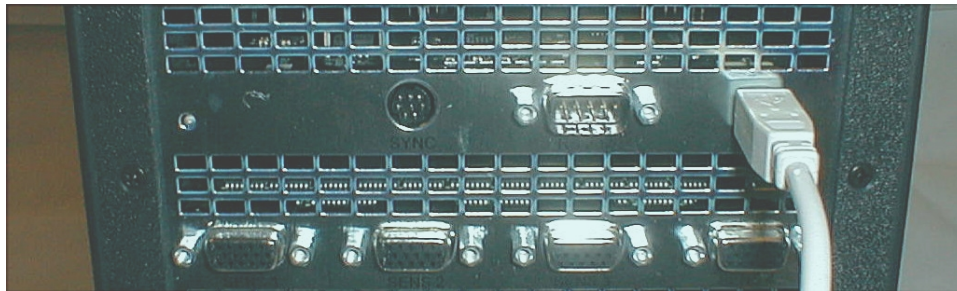


Figure 1-7: USB Cable Connection

**1.2.8** Turn on the LIBERTY LATUS using the power switch located on the back panel of the SEU. A system status indicator located on the front and rear panels of the electronics unit should flash red for 5 to 10 seconds indicating self-test and setup. When these routines are completed, the indicator will display system status as described in [Table 1-1](#).

Table 1-1 System Status Indicators

• Steady green	System operational	Detected receptor is ready for marker detection.
• Solid red	System operational	Detected receptor is not ready (needs alignment).
• Flashing red	Failed self-test and set-up.	

**1.2.9** The host should detect the USB connection and respond with a “Found New Hardware” message. For step-by-step instructions for installing the USB drivers from the Host Software CD, refer to [USB Driver Installation](#) on page [15](#).

**1.2.10** You are now ready to exercise the system. With the USB connection, you must use the Polhemus PiMgr GUI to do this. Continue to [Using the Polhemus PiMgr GUI](#) on page [16](#) to begin.

**For RS-232 Communications:**

**1.2.11** Locate the RS-232 cable and insert it into the receptacle as shown in [Figure 1-8](#).

Most PC hosts have a 9 pin, male “D” type connector for COM1. If you are using COM1, plug the remaining end of the cable into the COM1 port of the host PC, engage, and secure in place by tightening the two retaining screws.

If your host computer has a 25 pin “D” connector for the RS-232 port, you will need a 9 to 25 pin “D” connector adapter with the proper genders. **Note that this adapter must not compromise the NULL MODEM sense of your cable.**

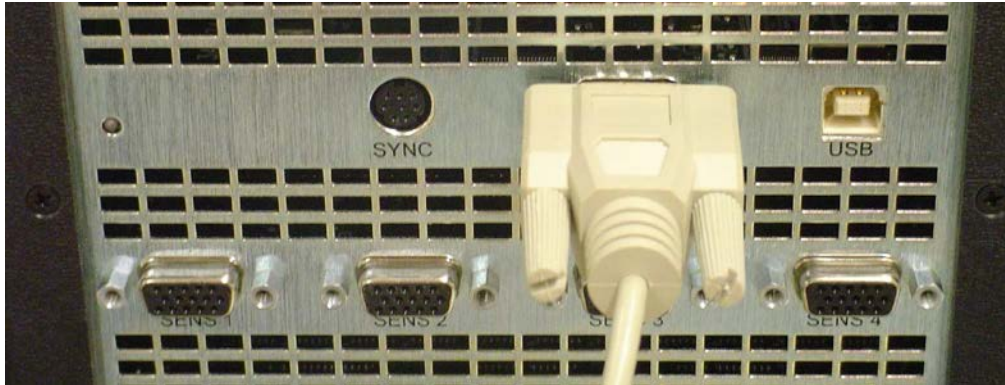


Figure 1-8: RS-232 Cable Connection

**1.2.12** You are now ready to exercise the system.

- To use the Polhemus PiMgr GUI, continue to [Using the Polhemus PiMgr GUI](#) on page [16](#).
- To use LIBERTY LATUS’ ASCII interface through the Windows HyperTerminal program, refer to [Using the LIBERTY LATUS ASCII Interface](#) on page [22](#).



### 1.3 Charging and Using LIBERTY LATUS Marker Batteries

#### 1.3.1 Charging the Extended Marker Battery



Figure 1-9 Extended Marker Battery

1.3.1.1 Locate the batteries and the charger of the extended marker; see [Figure 1-10](#).



Figure 1-10 Extended Marker Battery Charger

1.3.1.2 Slip the batteries into the receptacles atop the charger; See [Figure 1-11](#).



Figure 1-11 Placing Extended Marker Batteries Into Charger

**1.3.1.3** To install the battery into the marker, orient the battery so that the two slots of battery contact is toward the marker pins (see [Figure 1-12](#)).



Figure 1-12 Extended Marker Battery Tab Orientation

Tip the battery at an angle and insert tabs in marker slots (see [Figure 1-13](#)).





Figure 1-13 Extended Marker Battery Insertion



Figure 1-14 Extended Marker: Successful Battery Installation

### 1.3.2 Charging the Standard Marker Battery (discontinued)



Figure 1-15 Standard Marker Battery (Discontinued)

1.3.2.1 Locate the batteries, the charger, and the charger's power module and power cord; see [Figure 1-16](#).



Figure 1-16: Standard Marker Battery Charging Components

Slip the two batteries into any two of the receptacles atop the charger; see [Figure 1-17](#).



Figure 1-17: Standard Marker: Placing Batteries Into Charger

**1.3.2.2** Plug the power module into the rear of the charger and then into the power mains as depicted in [Figure 1-18](#).



Figure 1-18: Standard Marker Battery Charger Power On

**1.3.2.3** Turn on the power switch on the rear of the charger. The green power ON indicator will illuminate. The two red “charging” LED’s where the batteries are inserted will also illuminate (see [Figure 1-19](#)). The other two “charging” LED’s will flash on and off and can be disregarded.



Figure 1-19: Standard Marker Batteries Charging

**1.3.2.4** Total charging time of up to 2.5 hours may be required, depending on the initial charge status. Each *charging* LED will extinguish when the battery is fully charged.

**1.3.2.5** To remove the battery, place your middle finger on one side and thumb on the other of the battery charger (see [Figure 1-20](#)).



Figure 1-20: Standard Marker: Preparing To Remove The Battery

Then pull the retaining clip back using the nail of your index finger, and insert the charged battery into the marker (see [Figure 1-21](#)).



Figure 1-21: Standard Marker: Lifting The Battery

Be certain that the spring tab on the battery pack seats fully into the marker base. A slight push down and forward on the spring tab with your forefinger will ensure that good battery contact will result (see [Figure 1-22](#) and [Figure 1-23](#)). This same procedure should be employed when removing the battery from either a marker or the battery charger.



Figure 1-22: Standard Marker: Spring Clip Improperly Seated



Figure 1-23: Standard Marker: Proper Seating Of Spring Clip

**1.3.2.6** To install the battery into the marker, orient the battery so that the two tabs are toward the two corresponding slots in the marker (see [Figure 1-24](#)).



Figure 1-24: Standard Marker Battery Tab Orientation



Tip the battery at an angle and insert tabs in marker slots (see [Figure 1-25](#)).



Figure 1-25: Standard Marker Battery Insertion

Then push the battery down into position on the marker. Be sure the retaining clip “clicks” into place so that the battery will not disengage during use (see [Figure 1-26](#)). Again, this same procedure should be employed when installing the battery into either a marker or the battery charger.



Figure 1-26: Successful Standard Marker Battery Installation

### 1.3.3 Using Wireless Markers

1.3.3.1 Find the small power switch on one end of the marker ([Figure 1-27](#)). Slide it ON (away from the LED) and observe that the LED power indicator next to the switch illuminates *briefly*, indicating that the marker is live. The LED illuminates only briefly to conserve power. A fully charged standard battery should operate for up to 2 continuous hours. A fully charged extended marker battery should operate for 6 hours or more.

**Note: As will all batteries: capacity (run-time) will diminish over time due to battery age and charging cycles.**

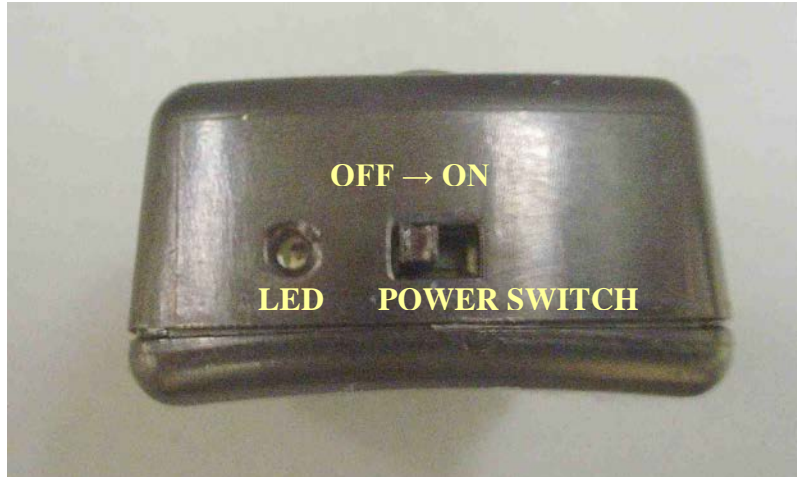


Figure 1-27: Marker Power Switch and LED

**1.3.3.2** When the battery is nearing complete discharge, the marker's LED power indicator will illuminate continuously; the battery should be replaced or recharged immediately.

## **1.4 Installing LIBERTY LATUS Host Software**

**NOTE:** LIBERTY LATUS Host Software is intended to be installed on a computer running Windows® XP or later.

1. Insert the LIBERTY LATUS Host Software CD-ROM into your computer's CD-ROM drive.
2. If the LIBERTY LATUS Host Software Installation Panel does not run automatically, then navigate to the CD-ROM drive using Windows Explorer. Run "Setup.exe". The Host Software Installation Panel will appear. Click on "Install Host Software". The installation wizard will walk you through the installation.
3. For simplicity, it is recommended that you use the default installation settings suggested by the installation wizard.

### **1.4.1 USB Driver Installation**



1. If you used the default installation settings when installing the Host Software (above), the LIBERTY USB Driver Package was installed.
2. On a Windows 7 or later host, when LIBERTY LATUS is connected via USB for the first time, the LIBERTY USB drivers will be loaded automatically.
3. On a Windows XP host, the first time LIBERTY LATUS is connected, the host will display a "Found New Hardware" message. The host will then launch the "Found New Hardware Wizard" to locate and install the USB drivers for LIBERTY LATUS.
4. When the "Found New Hardware Wizard" displays, select the "Install software automatically" option and click "Next."




5. The wizard will install the LIBERTY Loader. When it has completed, click “Finish”.
6. The same process will be launched again automatically to install the Polhemus LIBERTY USB runtime driver. Repeat the same selections and the process will be complete.


### 1.5 Using the Polhemus PiMgr GUI

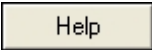

**NOTE:** If you have not yet installed the Host Software, follow the instructions in [Installing LIBERTY LATUS Host Software](#) on page 15 before proceeding.

By following the instructions in this section, you will use the Polhemus PiMgr Graphical User Interface connect to configure the LIBERTY LATUS in the test scenario created for Getting Started. Detailed instruction on the use of these and other PiMgr features can be found in PiMgr’s online help program, accessed through the PiMgr *Help* menu,  buttons, or the *What’s This* toolbar help  button.

If you selected the default settings when you installed the LIBERTY LATUS Host Software on your computer, you will find a shortcut to the PiMgr application on your Windows 2000 or XP desktop. The icon looks like this: 

Otherwise, navigate to the program through the windows Start menu:

**Start**⇒**All Programs**⇒**Polhemus**  **PiMgr**

**1.5.1** The initial PiMgr screen will appear as in [Figure 1-28](#). With no LIBERTY LATUS system connected, notice that the  icon appears in the lower right corner. Once connected, the icon will change to .

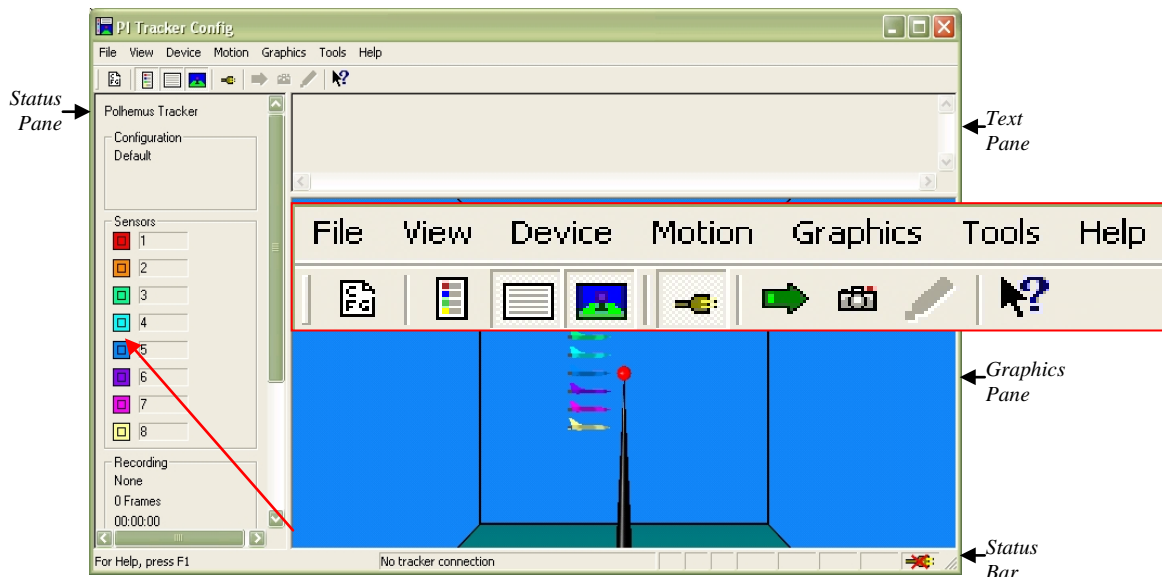


Figure 1-28: PiMgr Screen Display, No Connection

**1.5.2** If the LIBERTY LATUS is already connected to the computer, the PiMgr will discover the connection immediately upon startup. If PiMgr has a LIBERTY LATUS connection now, skip to Step [1.5.6](#) . If not, you will need to manually create the connection once you have powered up the LIBERTY LATUS. To do this, first you must select the type of connection you wish to create.

**1.5.3** If you want to create a USB connection, skip to Step [1.5.5](#) . PiMgr defaults to a USB connection.

**1.5.4** If you want to create an RS-232 connection, first configure the serial port settings by opening the *Tracker Configuration* dialog. Open this dialog via the *Device* menu: **Device**⇒**Tracker Configuration...**(see [Figure 1-29](#)), or use the **‘^Z’ – Read Operational Configuration** shortcut (see page [114](#)).

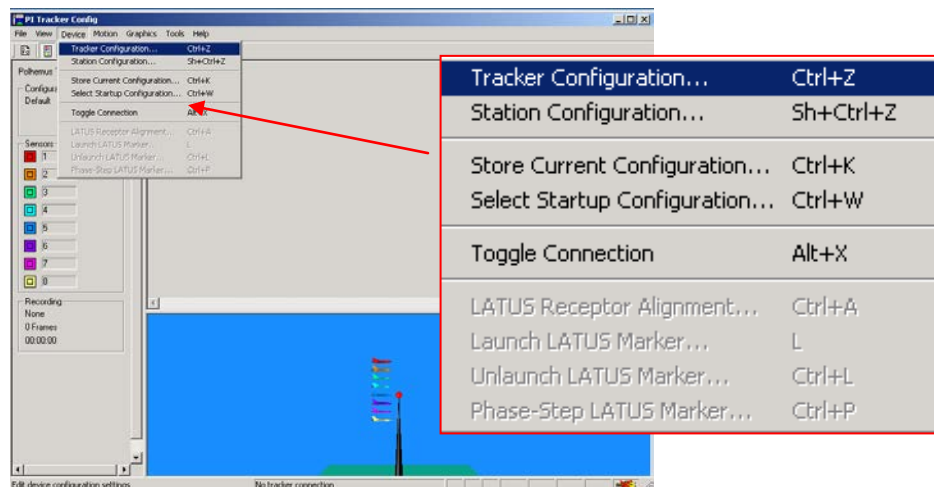


Figure 1-29: PiMgr Device Menu – Tracker Configuration

With the dialog displayed, select the *Connection* tab as shown in [Figure 1-29](#). Select the **RS-232** Connection Type on the left, and the appropriate **RS-232 Properties** on the right. Click **OK**.

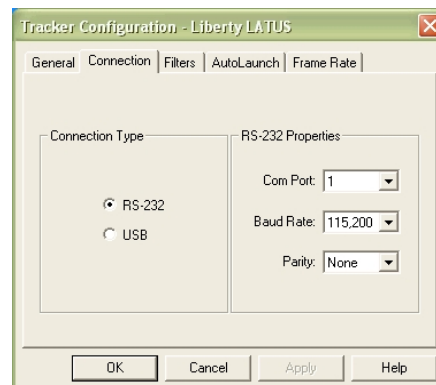




Figure 1-30: RS-232 Display

1.5.5 To create a connection, click the **Connect** button on the PiMgr toolbar:  (see [Figure 1-28](#)). When the connection has been established, the connection icon at the lower right will change to .

1.5.6 To track a wireless marker, LIBERTY LATUS receptors must be *aligned*. If receptors are not aligned, the PiMgr *Status Pane* will indicate this, as in [Figure 1-32](#).

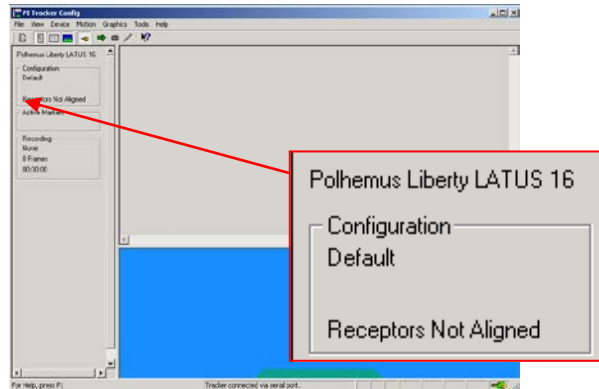


Figure 1-31: Receptors Not Aligned PiMgr Status Pane

To automatically align the sole “Getting Started” receptor, display the *LIBERTY LATUS Receptor Alignment* dialog (see [Figure 1-33](#)). Open this dialog via the **Device** menu: **Device** ⇒ **LATUS Receptor Alignment** (see [Figure 1-32](#)) or type the ‘**^A**’ – [Receptor Alignments](#) keyboard shortcut (page [102](#)) in the PiMgr window.

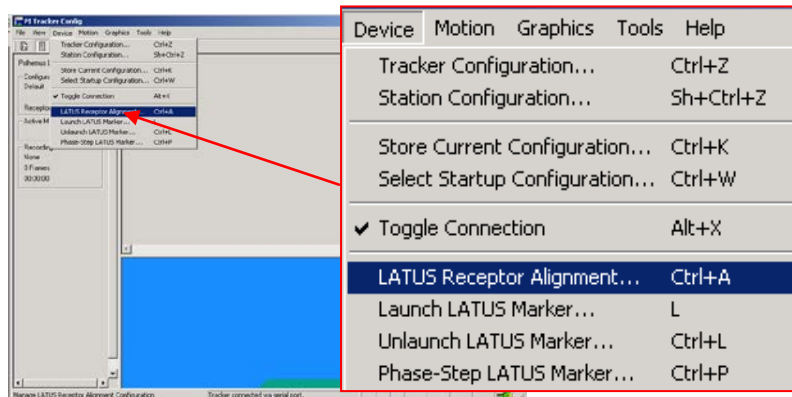


Figure 1-32: PiMgr Device Menu – Receptor Alignment

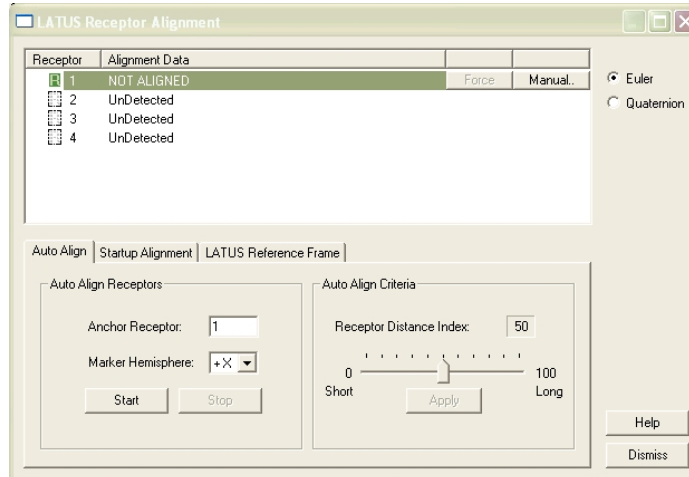


Figure 1-33: Receptor Alignment Dialog

**1.5.7** For this Getting Started procedure, Receptor 1 appears as detected and not aligned (R NOT ALIGNED). Click on this receptor entry as depicted in [Figure 1-34](#) to select it as the “anchor receptor”.

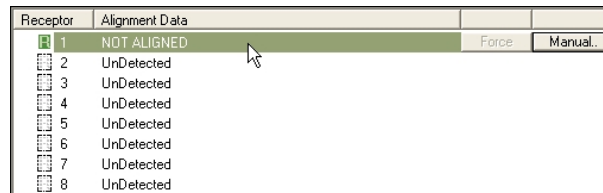


Figure 1-34: Select Anchor Receptor

**1.5.8** With the receptor and powered-on marker positioned in the test setup as described in Step 1.2.5 on page 3, begin the “Auto Align Receptors” process. Since there is only one receptor, that one receptor is designated as the *anchor receptor* and as such is automatically aligned as the origin and frame of reference for the LIBERTY LATUS. Click on **Start** in the *Auto Align Tab* as shown in [Figure 1-35](#).

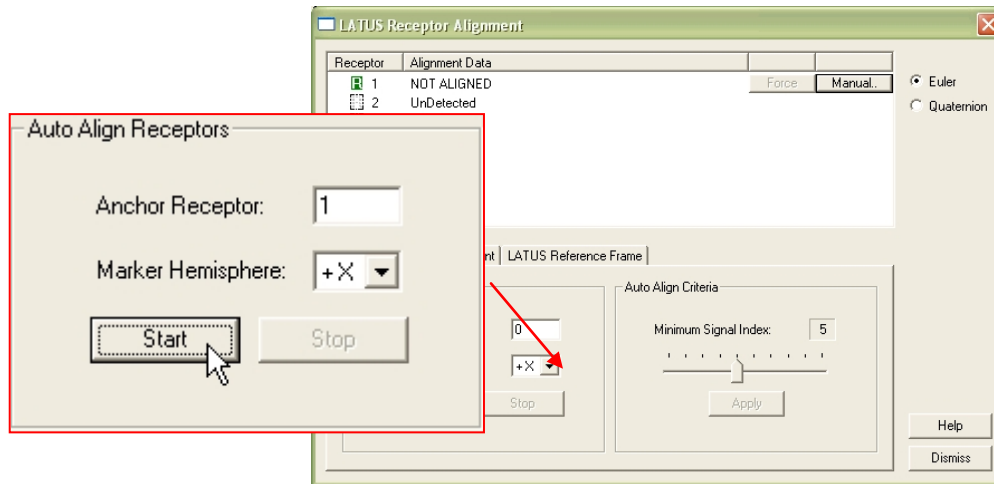


Figure 1-35: Start Auto Align

PiMgr will present a dialog box confirming your selection as shown in [Figure 1-36](#). Click on **OK** as shown.

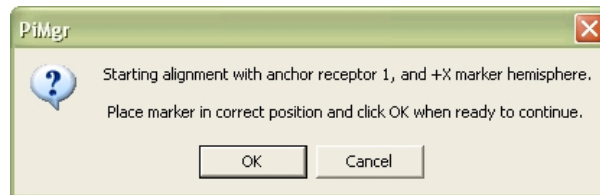


Figure 1-36: Auto Align Confirmation Dialog

**1.5.9** With the test environment set up as described in Step [1.2.5](#) on page [3](#), the **Auto Alignment** process will complete almost immediately. Once complete, the receptor list will now appear as shown in [Figure 1-37](#)

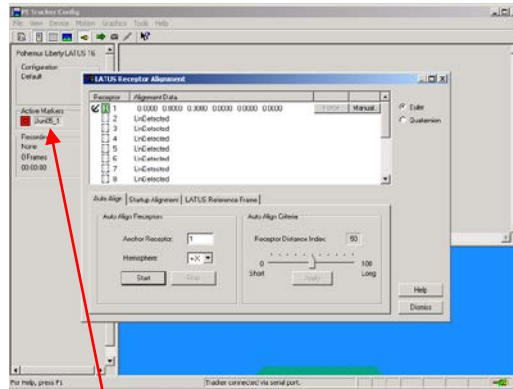





Figure 1-37: Aligned Receptor List

This alignment process automatically launched the marker in the test setup. The PiMgr Status Pane displays the marker and its ID as shown in [Figure 1-38](#).



Figure 1-38: Marker in PiMgr Status Pane

**1.5.10** LIBERTY LATUS is now ready to collect motion data from the marker. To collect a single frame of motion data from the LIBERTY LATUS, click the **Single** button  on the toolbar or type the **'P' – Single Data Record Output** keyboard shortcut (see page [99](#)). This will cause PiMgr to request a single data frame from the LIBERTY LATUS.

To collect continuous motion data, select the **Continuous** button  on the toolbar or type the **'C' – Continuous Print Output** keyboard shortcut (see page [96](#)). (To stop continuous data collection, un-select the  button or type 'C' or 'P'.)

The contents of the motion data frames will be displayed in the **Text Pane** at the top of the PiMgr display. The airplane image in the **Graphics Pane** of the screen will move to the retrieved position and orientation. See [Figure 1-39](#).

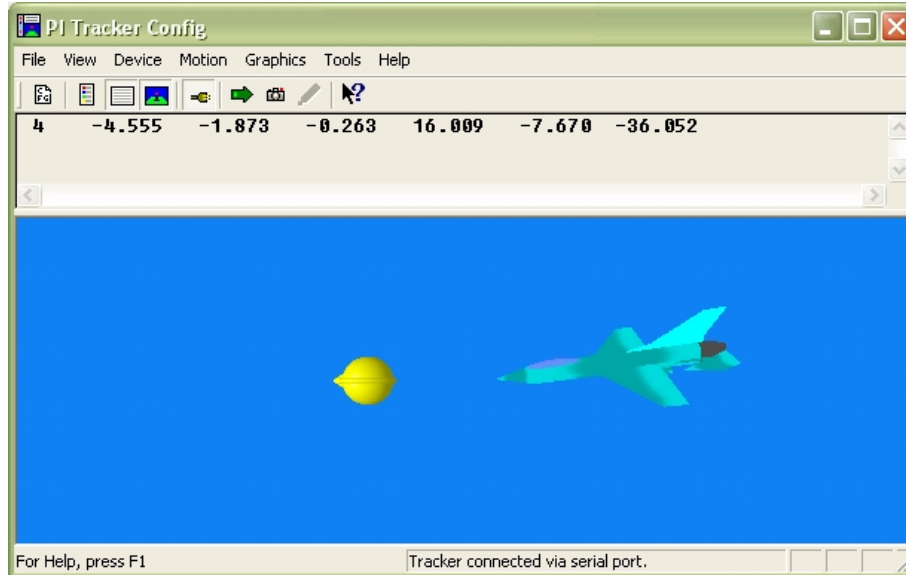


Figure 1-39: PiMgr Data Record Display (using marker 4)

The **Text Pane** will display the marker number and the retrieved XYZAER position and orientation.

Marker Number	Position in inches			Euler Orientation in degrees		
	X	Y	Z	Azimuth	Elevation	Roll
4	-4.555	-1.873	-0.263	16.009	-7.670	-36.052

## 1.6 Using the LIBERTY LATUS ASCII Interface

**1.6.1** Navigate to HyperTerminal from the Windows Start Menu. **Start**⇒**All Programs**⇒**Accessories**⇒**Communications**⇒**HyperTerminal**.

**1.6.2** Configure HyperTerminal and open a serial port:

- In HyperTerminal, enter a session name, choose an icon, and click OK
- In the “Connect using” field, select the desired COM port (COM1) and click OK.
- In the “Bits per second” field, select 115200.
- In the “Data bits” field, select 8 (default).
- In the “Parity” field, select None (default).
- In the “Stop bits” field, select 1 (default).
- In the “Flow control” field, select None and click OK.

**1.6.3** You should now have a serial connection opened to LIBERTY LATUS. Turn the system on. In 5 to 10 seconds, you will see the startup message in the HyperTerminal Screen:

**LIBERTY LATUS Ready!**

Refer also to [Table 1-1](#) on page [5](#).

**1.6.4** To track a wireless marker, LIBERTY LATUS receptors must be *aligned*. To automatically align the sole “Getting Started” receptor, use the [‘A’ – Set Alignment Mode](#)



command (see page [94](#)) in the HyperTerminal screen by typing the following (“<>” denotes the Enter key):

```
a1<>
```

With this [‘A’ – Set Alignment Mode](#) command (page [94](#)), the LIBERTY LATUS will start alignment mode using Receptor 1 as the *anchor receptor*. All marker P&O data will be referenced to the position and orientation of this receptor. In response to this command, the LIBERTY LATUS will present:

```
Entering the Alignment Mode...  
Anchor Receptor: 1
```

With the test environment set up as described in Step [1.2.5](#) of [Setting Up LIBERTY LATUS](#) (page [3](#)), the Alignment process will complete almost immediately and the LED should turn green:

```
Exiting Alignment Mode  
All Receptors have been successfully aligned
```

**1.6.5** The alignment process automatically launched the marker in the test setup. To verify this, use the [‘^U’ – Active Marker Map](#) command (see page [85](#)):

```
^u0<>
```

The LIBERTY LATUS will respond with a hexadecimal bitmap identifying the known markers. In our Getting Started example, marker 1 is being used, so the bitmap will have bit 1 set and the LIBERTY LATUS response will be:

```
00u 000000000001
```

If no markers were active, the bitmap would be all zeros. See the [‘^U’ – Active Marker Map](#) command reference on page [85](#) for a detailed explanation of this command.

**1.6.6** LIBERTY LATUS is now ready to collect motion data from the marker. Collect a single data record from LIBERTY LATUS by typing the [‘P’ – Single Data Record Output](#) command on page [99](#), noting that there is no ‘<>’ required with this command:

```
p
```

LIBERTY LATUS will respond with a single frame of position and orientation data for marker 1:

```
01 -4.608 -1.488 0.345 6.706 2.283 -24.355
```

This frame of data is comprised of the ASCII header (“01”) that echoes the marker number (“01”), followed by six floating-point numbers for the XYZAER position and orientation of the marker.

**NOTE:** The values displayed in the sample output above are not the actual values; they represent an arbitrary placement of the marker and anchor receptor.

- 1.6.7** Continue experimenting with the position and orientation data. See [Experiment with LIBERTY LATUS Data](#), below.

## **1.7 Experiment with LIBERTY LATUS Data**

- 1.7.1** With one or more launched markers in a stationary position, take some initial samples of data using the '[P](#)' – [Single Data Record Output](#) command (see page [99](#)) or the '[C](#)' – [Continuous Print Output](#) on page [96](#).
- 1.7.2** Move the launched marker six inches toward the reference point or anchor receptor and place it in a stationary position. The value of the X position data will decrease by approximately six inches. The Y and Z values will remain roughly the same as the original data. If you left the attitude of the marker approximately the same as it was when you started, then the attitude data also will be approximately the same.
- 1.7.3** Change the orientation of one or more of the launched markers without changing position. Try twisting it in azimuth (in the same plane as the floor) by approximately 45 degrees and fix it in place. Now collect another data frame. The first four columns will be approximately as they were in Step 1, but the Azimuth data in column 5 will have changed by approximately 45 degrees.
- 1.7.4** Continue to experiment with the system as described in Steps [1.7.2](#) and [1.7.3](#) to demonstrate that it measures the position and orientation (six-degrees-of-freedom) of the marker(s) with respect to the reference point (or anchor receptor).

## 2 Component Description

### 2.1 System Electronics Unit (SEU)

The SEU is a stand-alone unit that may be located anywhere that is convenient to the work area, AC power and the host computer. It contains the required input and output connectors and controls from 1 to 16 receptors, the USB port, the RS-232 port, and the external sync port. See [Figure 1-1](#) on page [1](#) for a picture of the SEU. The LIBERTY LATUS supports up to 12 wireless markers.

#### 2.1.1 Receptor Ports (4 / 8 / 12 / 16)

The receptor ports are 15-pin high density receptacle “D” type connectors located on the rear of the SEU as shown in [Figure 1-2](#) on page [3](#). The LIBERTY LATUS SEU can be configured to support up to 4, 8, 12 or 16 receptors.

#### 2.1.2 LED Indicator

An LED “power on” indicator is located on the front of the SEU. Upon power up, the indicator will blink red for 5-10 seconds while the system performs its initialization and self-test routines. When these routines are completed, the indicator changes from blink mode to steady-on mode, indicating that the system is ready for operation. At this point the LED color gives the status of the receptor alignment. If the LED continues to flash red, the self-test and startup has failed. The following table summarizes the LED condition.


Table 2-1 LED Indicators

• Steady green	System operational	Detected receptor is ready for marker detection.
• Solid red	System operational	Detected receptor is not ready (needs alignment).
• Flashing red	Failed self-test and set-up.	


#### 2.1.3 External Sync I/O

Since the LIBERTY LATUS is a free running system it can not be triggered to collect data at the user’s request. Two lines are provided, however, to synchronize the LIBERTY LATUS and the user’s equipment. A *sync\_in* pin when grounded will cause a mark in the output frame provided the feature is enabled (see [‘Z’ – Set Sync Mode](#) command on page [75](#)) and provided the output record is set up to display this mark (see [‘O’ – Output Data List](#) on page [67](#)). The *sync\_out* pin provides a 3.3 volt pulse that is 1–2 msec long which occurs at the beginning of a data collection cycle. This pulse will occur at a frequency of 188 Hz. or 94 Hz. depending on the number of markers supported by the LIBERTY LATUS and by the configuration setting for the LIBERTY LATUS update rate (see [‘R’ – Update Rate](#) command on page [69](#), and [‘^R’ – Optimization Mode](#) on page [82](#)).

An external sync cable can easily be fabricated using a mini-din 8 pin connector. Use a plug type connector to mate into the LIBERTY LATUS receptacle connector, as shown in [Figure 2-1](#) on page [26](#).

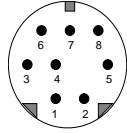

User connector: Mini-Din plug

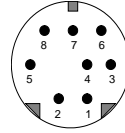

LIBERTY LATUS connector: Mini-Din Receptacle

Figure 2-1: External Sync

External sync pin-outs are described in [Table 2-2, below](#).

Table 2-2 External Sync Pin-Outs

Pin	Function	Notes
1	Sync Out	3.3 volt pulse, 1-2 msec 240 Hz or 120 Hz
2	Sync In	Ground input to trigger
3	5V	0.3 amp maximum
4	GND	
5	Do Not Use	<b>DO NOT</b> connect anything to this pin.
6	Do Not Use	<b>DO NOT</b> connect anything to this pin.
7	Not used	
8	Not used	

#### 2.1.4 RS-232 I/O

The RS-232 I/O serial connector is a standard 9 pin plug “D” type connector located on the rear panel of the SEU as shown in [Figure 1-2](#) on page 3. The pinout identification for this connector is shown in [Table 2-3, below](#).

Table 2-3 RS-232 Pin-Outs

Pin	LIBERTY LATUS	Host
1	Not used	Not used
2	RxD ←	TxD
3	TxD →	RxD
4	Not used	Not used
5	GND	GND
6	Not used	Not used
7	Not used	Not used
8	Not used	Not used
9	Not used	Not used

The LIBERTY LATUS is set to 115.2K baud as the default speed. This setting can be changed with the ‘^O’ – [RS-232](#) command on page [80](#).

#### 2.1.5 USB I/O

The USB connection is made with a standard Series A receptacle connector.

#### 2.1.6 RS-422 I/O

The LIBERTY LATUS does not come with an RS-422 option. If RS-422 is needed, standard conversion modules are available from several sources. Contact Polhemus [Customer Service](#) (see [4.5.2 Appendix E](#). ) if help is needed.

### 2.1.7 Video Sync

There is no dedicated video sync on the LIBERTY LATUS. A detection circuit can be constructed to generate a voltage pulse and the [External Sync I/O Port](#) (see page 25) can be used together with the '[Z](#)' – [Set Sync Mode](#) command (see page 75) to mark the frames where there could be questionable data. Contact Polhemus [Customer Service](#) (see [4.5.2 Appendix E.](#)) for assistance if help is needed with video interference.

## 2.2 Receptor

The receptor is a cabled device that tracks electro-magnetic fields produced by the wireless markers. Arrays of receptors usually are fixed to positions on non-metallic surfaces in the desired motion tracking environment. The standard receptor measures approximately 1.5 inches H x 1.5 inches W x 2.5 inches L and has a cable length of 60 feet. The dimensions for the standard receptor are shown in [Figure 2-2](#) including the position of the electrical center. The receptor package provides three mounting holes for the ¼ inch nylon screws supplied.

**NOTE:** Nylon hardware is provided to install the receptor. Lightweight fasteners such as wall mount adhesive or double-sided tape can be used to affix each receptor to its temporary location. Metallic hardware such as screws, nuts and bolts in moderate proximity to the receptor have little to no effect on the accuracy of the LIBERTY LATUS operation.

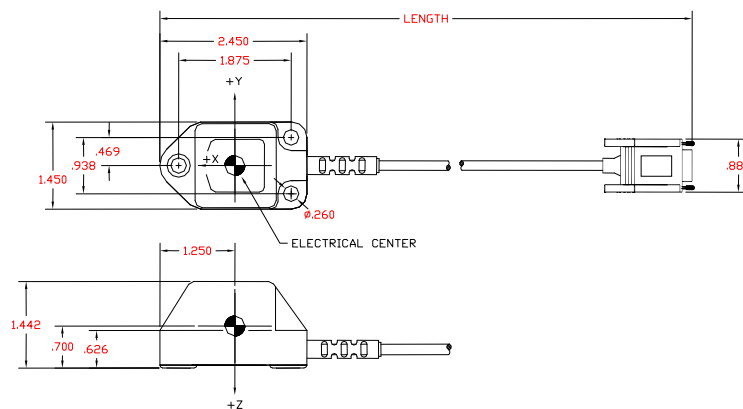


Figure 2-2: Receptor

## 2.3 Extended Marker

The extended marker uses quick-charging lithium-ion technology, ensuring maximum battery life and maximum power. The position and orientation of the marker is measured relative to a pre-defined coordinate reference frame in the motion tracking environment. By default, this reference frame is defined by one of the receptors, which is designated as the “anchor” Receptor.

The dimensions of the Extend Marker are shown in [Figure 2-3](#).

The marker incorporates a removable, rechargeable battery pack assembly, a power switch and an LED power indicator. Markers are available in 12 different frequencies, allowing for simultaneous operation in the motion tracking environment.

When the power switch is moved to the ON position, the LED will flash red for less than a second and then go off. The LED goes solid red when there is about 10 minutes life left in the battery. If the LED does not flash when the power switch is moved to the ON position, then the battery needs to be recharged. A fully charged extended marker battery should operate for 6 hours or more.

**NOTE: As with all batteries, capacity (run-time) will diminish over time due to battery age and charging cycles.**

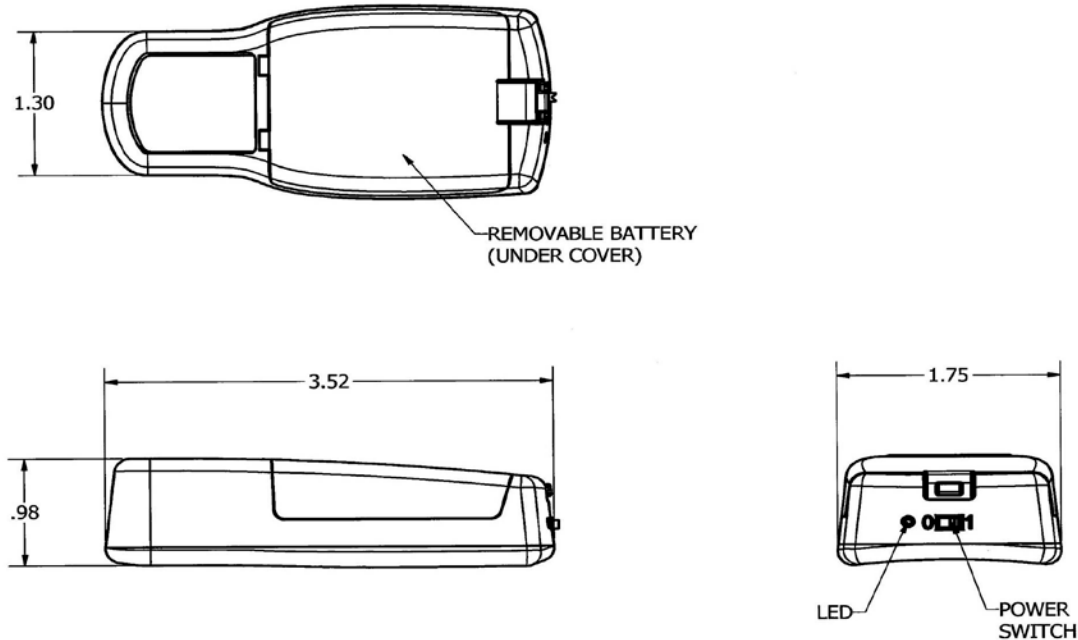


Figure 2-3: Extended Marker Dimensions (inches)

The extended marker battery can be recharged with a standard off-the-shelf plug-in battery charger such as the one pictured below in [Figure 2-4](#). This charger is included in a complete Liberty LATUS system.



Figure 2-4: Extended Marker Battery Charger

## 2.4 Standard Marker (Discontinued)

The standard wireless marker uses a lithium-ion/lithium polymer battery. The operation of the extended marker is the same as the extended marker. A fully charged standard battery should operate for up to 2 continuous hours.

**Note:** The standard marker has been discontinued. The Liberty LATUS now ships with the Extended Marker.

The dimensions of the standard marker are shown in [Figure 2-5](#).

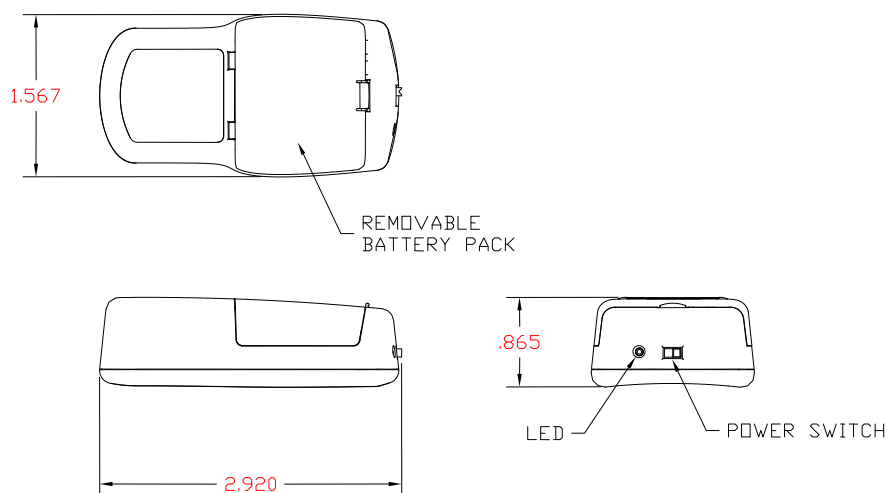


Figure 2-5: Standard Marker Dimensions (inches)

## 2.5 LIBERTY LATUS Standard Marker Battery Charger (Discontinued)

A charger is provided for maintaining the charge on up to four of the standard marker Lithium ion/Lithium polymer batteries at a single time. Recharging time to maximum capacity is approximately 2.5 hours regardless of the number of batteries being recharged.

The standard marker charger consists of three components: the charger chassis, a power cord, and an external power pack. [Figure 2-6](#) shows the charger. It has receptacles across its top that are identical in size and shape to the actual LIBERTY LATUS marker so that the battery pack is inserted and extracted in exactly the same fashion as in the marker. The easiest way to insert the battery is shown in [Figure 1-20](#). The most successful way to extract the battery is to use the grip and fingernail placement shown in [Figure 1-26](#).





Figure 2-6: Standard Marker Battery Charger, Front View


[Figure 2-7](#) shows the rear view of the charger, including the power module connected to it, the ON/OFF switch and the green Power ON indicator LED that is just over the top corner of the chassis between the DC receptacle and the switch.



Figure 2-7: Standard Marker Battery Charger and Power Pack, Rear View

### 3 SYSTEM OPERATION

**NOTE:** Several of the processes for system operation are described in this section using the Polhemus PiMgr GUI. For detailed instructions on getting started with PiMgr, see [Using the Polhemus PiMgr GUI](#) on page 16. Where applicable, steps in these procedures also include reference to the ASCII command or commands needed to perform them. Finally, if you are using the Polhemus SDK to program your own interface to the LIBERTY LATUS, the steps detailed here will be of interest, but for programming guidelines please refer to the **Polhemus SDK Online HELP** program. Navigate to this help program via the Windows **START** menu:

Start⇒All Programs⇒Polhemus⇒  PDI.

#### 3.1 I/O Considerations

There are two possible interface configuration options available on the LIBERTY LATUS: USB or RS-232. Each configuration supports either Binary or ASCII formats.

Upon power up or system initialization, if the USB cable is not plugged into the SEU, the LIBERTY LATUS will automatically send data to the RS-232 interface. The USB cable can be plugged in at any time and the LIBERTY LATUS will shift to USB operation. If the USB is unplugged, the LIBERTY LATUS' power must be recycled to shift back to RS-232 operation.

#### 3.2 Powering Up LIBERTY LATUS

To power-up the LIBERTY LATUS, first ensure that the power switch on the back panel is in the OFF (logic 0, RIGHT) position.

- Connect the power cord to the SEU and plug it into the AC wall outlet.
- Plug in the desired number of receptors and secure them with the connector screws.
- Plug in the desired I/O cable (USB or RS-232).
- Turn the power switch to the ON (logic 1, LEFT) position.

Upon power up, the front-panel LED indicator will blink red for 5 to 10 seconds to indicate the system is performing initialization and self test. During this time, system operation is not possible. At the completion of the power-up sequence, the LED will change from a flashing red state to a steady state. The LED will remain solid red if any connected receptors have not been aligned. This is not a system failure, but a warning that the receptors must be aligned prior to tracking markers. See [LED Indicator](#) on page 25 for a description of the LED status.

If connected via RS-232, it will send a “LIBERTY LATUS Ready!” text message to the RS-232 port when initialization is complete. This message will be seen if the port is connected to a host system and a terminal emulation program is running.

If connected via USB, no message appears after initialization. After the front panel light indicates initialization is complete, the host computer must initiate communication with the LIBERTY LATUS before any message will appear.

### 3.3 Receptor Setup

Before LIBERTY LATUS can generate position and orientation coordinates for wireless markers, the position and orientation of the receptors must be known and a common frame of reference must be defined for the coordinates of the tracked markers. The process of setting up the LIBERTY LATUS with this information is called *Receptor Alignment* and can be accomplished either manually or automatically using LIBERTY LATUS' "Auto Align" feature. Receptor alignment data can then be stored in LIBERTY LATUS non-volatile memory so that the process does not need to be repeated unless the receptor positions are changed.

#### 3.3.1 Receptor Positioning and Setup

When arranging receptors in the motion capture area, there are a few things to keep in mind:

- LIBERTY LATUS accuracy is best when markers are within approximately 2 to 2.5 feet (0.6-0.75m) of a receptor. Therefore, receptors should be arranged and mounted no more than 4 to 5 feet (1.2-1.5m) apart. Larger areas can be tracked by using more receptors and placing them strategically.
- To minimize magnetic distortion, secure receptors to non-metallic surfaces with nylon, fiberglass, or stainless steel 302 screws.
- Route the receptor cables to the SEU in a manner that avoids hazards in the traffic pattern.
- During automatic alignment one of the receptors in the array will be designated as the *Anchor Receptor*. By default, the position and orientation of the anchor receptor serves as the origin and frame of reference for the P&O of all the other receptors and for the wireless markers. That is, the anchor's position (x,y,z) will be (0,0,0) and its orientation (az, el, ro) will be (0,0,0), and the P&O of all the other receptors (and markers) will be relative to this.
- If the receptors are to be aligned automatically, it is best to cluster them around the anchor (see [Figure 3-1](#) and [Figure 3-2](#)), as errors in the measurement are algebraically additive: it is likely that errors will increase as more receptors are aligned sequentially away from the anchor receptor. For manual alignment, the physical receptor patterns has no bearing on LIBERTY LATUS performance.



Figure 3-1: Receptor 'Serial' Pattern (Top View)

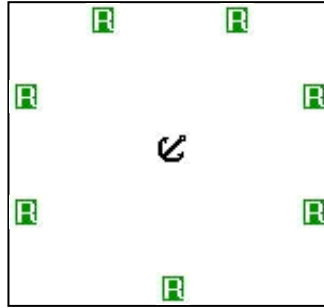


Figure 3-2: Receptor 'Cluster' Pattern (Top View)

- [Figure 3-1](#) and [Figure 3-2](#) depict patterns where receptors are arranged in one plane; however, the same idea applies to 3D arrangements: receptors should be mounted where they will be within 2 to 2.5 feet of the tracked markers.

[Figure 3-3](#) depicts an actual LIBERTY LATUS motion capture area with receptors mounted on wooden posts fastened to a raised stage.



Figure 3-3: Example Staging Area

### 3.3.2 Receptor Alignment

The decision to align receptors automatically or manually is a tradeoff between setup time and accuracy. The Auto Align feature helps you to get your tracking environment up and running relatively quickly and easily. It may be useful where quick setup is needed and/or movement to another staging area is to occur often. However, this method may produce inaccuracies in LIBERTY LATUS data in certain environments:

- High-distortion environments;
- Receptors arranged in a “serial” pattern covering a large, long area (see [Figure 3-1](#)), or
- Any arrangement where receptors are spaced far apart from each other and more than one or two “hops” away from the anchor.

The potential inaccuracies may be negligible in smaller areas where receptors are closely clustered. In general, the potential inaccuracy is cumulative in nature: the farther a tracked marker is from the *anchor receptor*, the less accurate its reported P&O may be.

Conversely, manual alignment requires that the position and orientation for each receptor (relative to a known reference point) be carefully measured mechanically and the resulting data be manually input to the LIBERTY LATUS. With accurately measured alignment data, the LIBERTY LATUS can operate with optimal precision. This may be worthwhile for an installation that is to remain unchanged for a long time period.

### 3.3.2.1 Automatic Receptor Alignment

In the Auto Align process, designate the *anchor receptor* and place the LIBERTY LATUS in Auto Align Mode. Starting with that anchor receptor, sweep a single marker past each receptor in the environment until each receptor has been approached and the LIBERTY LATUS has reported that each receptor is aligned.

To perform the Auto Align process, you will need:

- All receptors mounted and connected to LIBERTY LATUS;
- LIBERTY LATUS powered ON;
- ONE wireless marker charged and powered ON.

If you are using the Polhemus PiMgr GUI to perform the auto alignment:

- PiMgr should be running and have a connection to the LIBERTY LATUS established; and
- **LIBERTY LATUS Receptor Alignment** dialog must be open; refer to the **HELP** button on this dialog if needed.

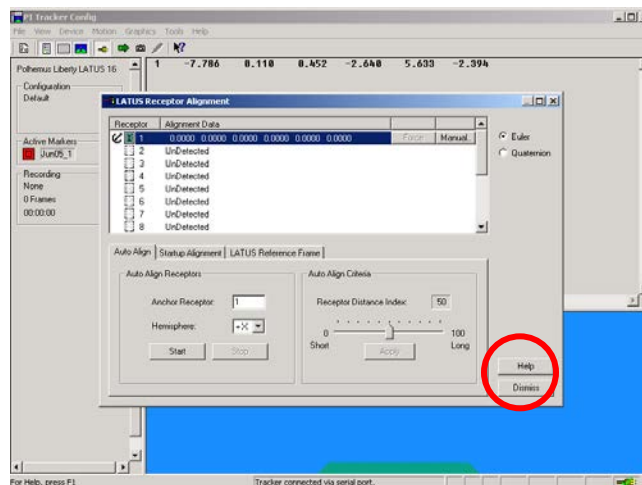


Figure 3-4: HELP button location on Receptor Alignment dialog box

## 1. Select Anchor Receptor

First, determine and specify the *anchor receptor*. The position and orientation of the *anchor receptor* will become the origin and frame of reference for all other receptors' P&O. By default, this receptor will be the *alignment reference location*. Click on the entry in the receptor list ([Figure 3-5](#)) at the top of the dialog or type the receptor number in the Anchor receptor field in the Auto Align tab ([Figure 3-7](#)) of the LIBERTY LATUS Receptor Alignment dialog. If no *anchor receptor* is selected, '0' appears in this field.

Receptor	Alignment Data		
1	NOT ALIGNED	Force	Manual..
2	UnDetected		
3	UnDetected		
4	UnDetected		
5	UnDetected		
6	UnDetected		
7	UnDetected		
8	UnDetected		

Figure 3-5: Select Anchor Receptor

## 2. Select Hemisphere

Next, determine and specify the positive direction of the X-axis for the marker. The positive X (+X) direction for the marker is identified on the marker label. When performing the Auto Align process, the marker will travel through the motion capture environment in the orientation specified here. By default, this is +X. That is, the marker will approach each receptor in the +X direction of the marker; see [Figure 3-6](#).

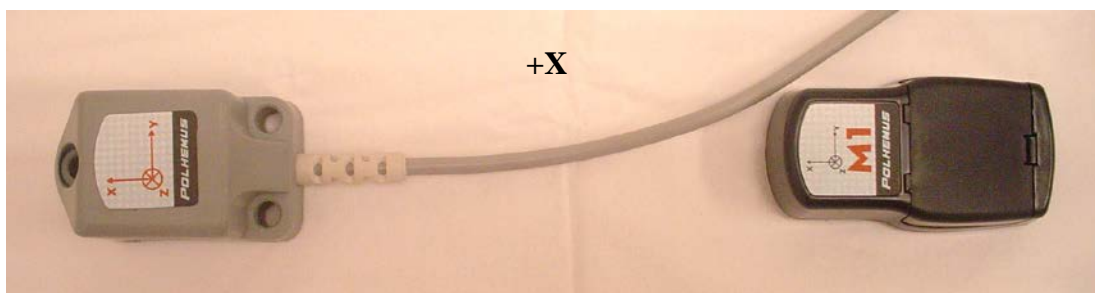


Figure 3-6: +X Hemisphere direction of marker

**For example**, if you were to specify '+Y' at this point, then the marker should approach each receptor in the positive Y (+Y) direction of the marker, in the direction of the +Y marking on the marker label.

The hemisphere setting will allow the LIBERTY LATUS to distinguish the receptor that is being approached as the marker travels through the environment.

To specify the hemisphere, make a selection from the Hemisphere selection in the Auto Align tab of the LIBERTY LATUS Receptor Alignment dialog; see [Figure 3-7](#).



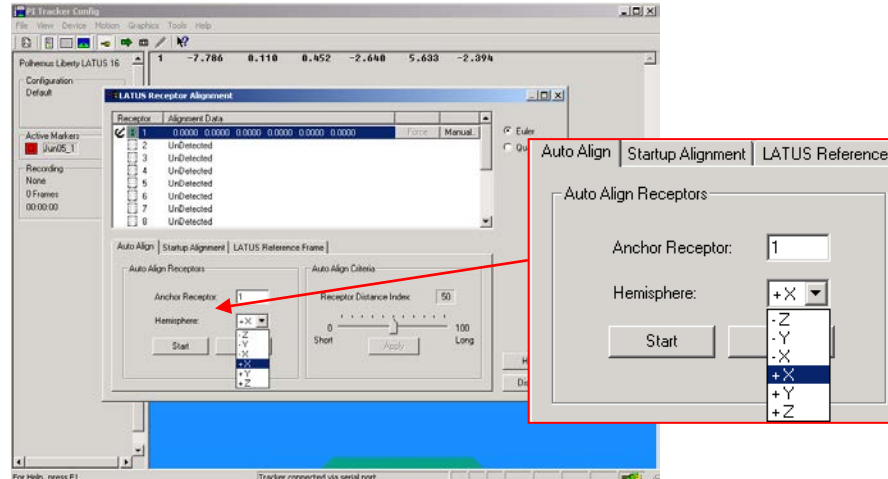


Figure 3-7: Select Hemisphere

### 3. Set Alignment Criteria If Necessary

During the Auto Align process, receptors detect the presence of the marker as it is swept through the receptor array. The Alignment Criteria is a “Receptor Distance Index”: a number from 1 to 100 that reflects how closely together the receptors are arranged. To the LIBERTY LATUS, this criteria specifies the marker signal level necessary for the marker to be detected by two receptors (an *aligned* one and an UNaligned one). The position of the unaligned receptor is computed, thus aligning the receptor. The default receptor distance index is 50. A lower value would mean that each receptor would become aligned at a higher detected signal level. This would allow the receptors to be closer together. A higher value would mean that a lower signal level could be detected by each receptor in order for it to be aligned. This would be used if the receptors are far apart, and thus the marker level threshold should be lower. The lower signal could result in a more inexact alignment result.

**NOTE:** The receptor distance index can be set or changed *at any time* during or before the auto alignment process. If you are unsure of the requirements of your environment, it is advised that you leave the criteria at the default level and return to it if necessary during the alignment process. The goal is to ensure that the receptor alignment occurs at the halfway point between an aligned and an unaligned receptor and that the alignment occurs with the marker oriented in the proper hemisphere relative to the receptor.

To set the Receptor Distance Index, move the slider control in the **Auto Align Criteria** box to the desired level and click the **Apply** button; see [Figure 3-8](#). Refer also to the ASCII Command ‘^D’ – [Alignment Criteria](#) on page [105](#).

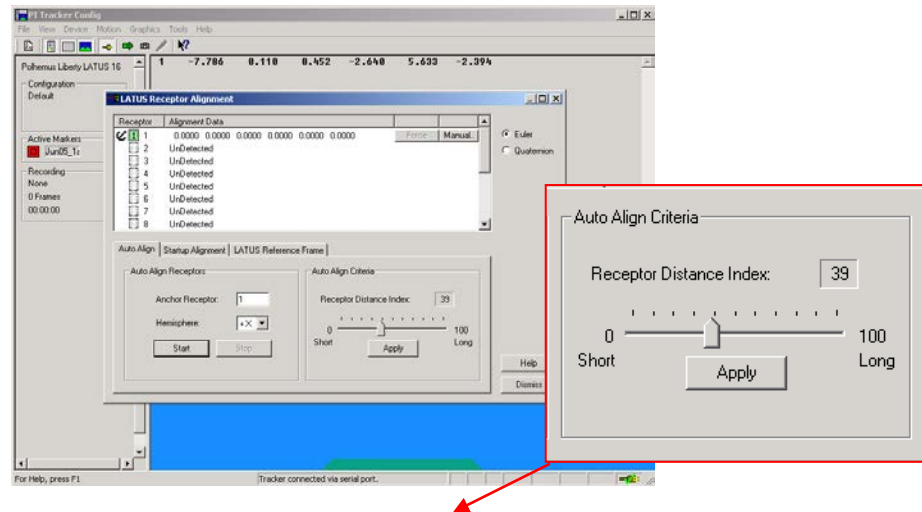


Figure 3-8: Auto Align Criteria

#### 4. Place Marker

Place the charged Auto Align marker in the motion capture environment, to the rear of and about 12 inches away from the *anchor receptor*. Make sure that the marker is oriented so that the specified hemisphere direction is *forward, toward the rear of the receptor*; see [Figure 3-9](#). Alignment must be started from this P&O regardless of the specified alignment hemisphere.

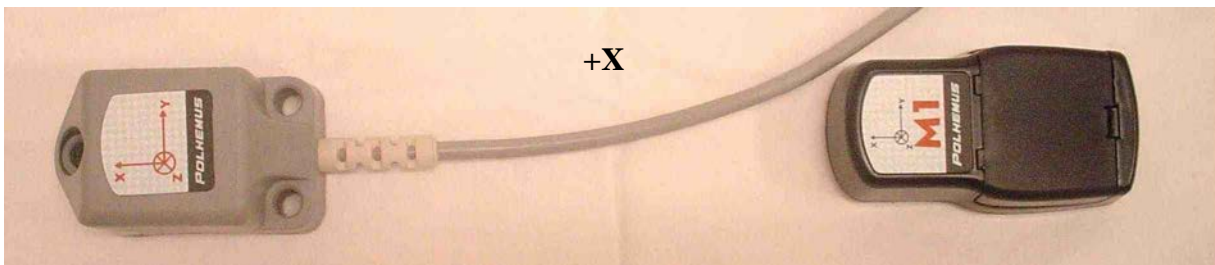


Figure 3-9: Auto Align Marker Starting Orientation

#### 5. Start Auto Align ([‘A’ – Set Alignment Mode](#))

Start the Auto Align process by clicking on the **Start** button. The dialog cursor will change to . Refer also to the ASCII command [‘A’ – Set Alignment Mode](#) on page 94. Specify the *anchor receptor* and hemisphere in this command syntax (see [Figure 3-8](#)).

#### 6. Sweep Marker by Receptors

The first receptor to become aligned will be the *anchor receptor* (that is directly in front of the marker). This will be indicated on the LIBERTY LATUS Receptor Alignment dialog with and in the receptor list (see [Figure 3-10](#)). The *alignment data* column associated with that receptor will also show the XYZAER origin coordinates.

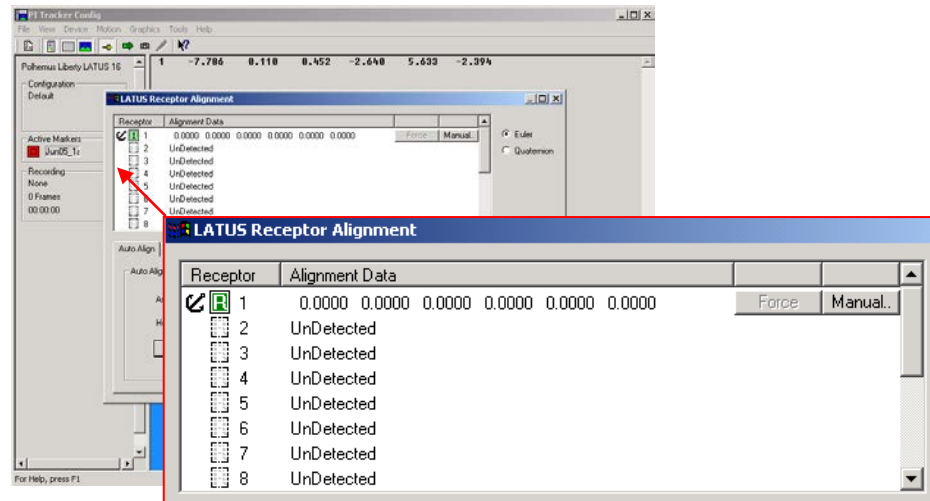


Figure 3-10: Auto Align Receptor List

To align the next receptor, sweep the marker toward any receptor adjacent to the *anchor receptor*. Be sure that the marker is oriented with the selected (Step 2) hemisphere *forward* as it approaches the receptor (see [Figure 3-11](#)). The direction at which you approach the receptor is not important: pay attention to the orientation of the marker as it approaches the receptor.

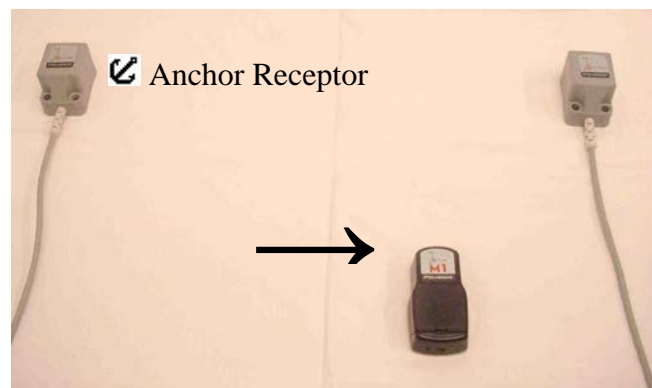
 
 


Figure 3-11: Aligning Receptor

As the marker approaches the receptor, it will be detected and the receptor will become aligned. The icon in the receptor list will change from  to  and the alignment data column will change from NOT ALIGNED to the XYZAER of the receptor; see [Figure 3-12](#).

Receptor	Alignment Data		
1	0.0000 0.0000 0.0000 0.0000 0.0000 0.0000	Force	Manual..
2	0.6170 12.5610 0.8600 0.0507 1.2036 -0.6298	Force	Manual..
3	NOT ALIGNED	Force	Manual..
4	NOT ALIGNED	Force	Manual..
5	UnDetected		
6	UnDetected		
7	UnDetected		
8	UnDetected		

Figure 3-12: List of aligned receptors

As each receptor becomes aligned, continue to sweep the marker toward the next adjacent receptor.

As the marker travels through the receptor array, each receptor should become aligned as it detects the marker's signal. The receptor sensitivity to the marker signal is adjustable and can be configured as is described above in Step 3 above, [Set Alignment Criteria If Necessary](#).

### 7. Force Alignment If Necessary

LIBERTY LATUS can be instructed to force a receptor to report its current position (and thus become aligned) whether or not any alignment criteria have been met. To do this, click on the  button next to the receptor listing. See also ASCII command ['^F' – Force Alignment](#) on page 106.

### 8. Auto Alignment Completion

When the LIBERTY LATUS has aligned all detected receptors, the Auto Align process will end automatically. The LIBERTY LATUS Receptor Alignment dialog cursor will return to . Also note that the LED indicator on the front of the SEU will change to solid green; see [LED Indicator](#) on page 25.

To cancel the Auto Align process before it is complete, click on the  button. See also ASCII command ['A' – Set Alignment Mode](#) on page 94.

**NOTE:** If you stop the Auto Align mode before it is complete, any receptors that have been aligned at that point will remain aligned.

#### 3.3.2.2 Manual Receptor Alignment

When configuring receptor alignments manually, you choose an *alignment reference location*. Then the position and orientation *relative to the reference location* is measured by hand for each receptor in the array. Each receptor's alignment P&O data is then input to the LIBERTY LATUS.

To perform the manual alignment process, you will need:

- All receptors mounted and connected to the LIBERTY LATUS;

- LIBERTY LATUS powered ON.

If you are using the Polhemus PiMgr GUI to perform the manual alignment:

- PiMgr should be running and have a connection to the LIBERTY LATUS established; and
- **LIBERTY LATUS Receptor Alignment** dialog should be open. Refer to the **Help** button on this dialog if needed; see [Figure 3-4](#).

### 1. Choose a Reference Location

First, determine a location from which you will measure the position and rotation of each of your receptors. This point may be inside or outside of your motion environment. It does not matter where it is, but it is important that the position and orientation of each receptor be measured from this location.

### 2. Measure Receptor Position and Orientation Relative to the Origin

Next, carefully measure the position and orientation of each receptor relative to the reference location. To specify a receptor's measured P&O, find the entry of the receptor in the receptor list at the top of the dialog and click on the  button next to that entry; see [Figure 3-13](#).


Receptor	Alignment Data		
 1	NOT ALIGNED	Force	Manual..
 2	NOT ALIGNED	Force	Manual..
 3	NOT ALIGNED	Force	Manual..
 4	NOT ALIGNED	Force	Manual..
 5	UnDetected		
 6	UnDetected		
 7	UnDetected		
 8	UnDetected		

Figure 3-13: Select Receptor for Manual Alignment

The **Set Receptor Alignment** dialog will appear. Enter the measured P&O into the fields in this dialog and click OK as shown in [Figure 3-14](#).

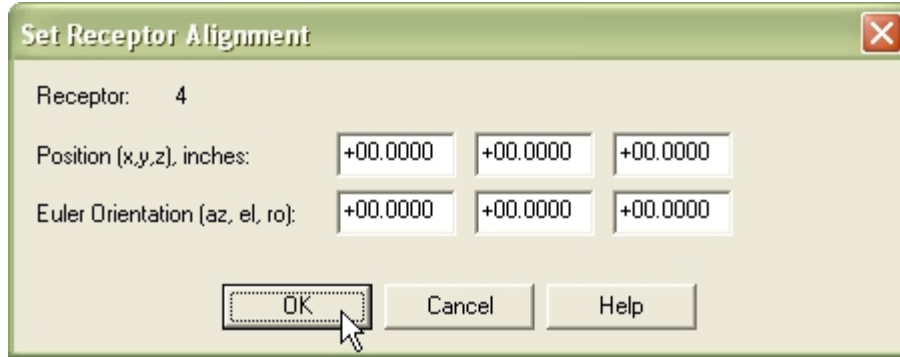


Figure 3-14: Manually Align Receptor

The receptor will now be indicated in the receptor list with a **R**. The *alignment data* column associated with that receptor will also show the XYZAER coordinates that you have measured.

Repeat this process for every receptor in the array. See also ASCII Command [‘^A’ – Receptor Alignments](#) on page [102](#).

**NOTE:** Receptor alignments may be manually reconfigured again at any time.

### 3.3.2.3 Saving Receptor Alignments

To avoid the need to realign the receptors each time the LIBERTY LATUS is restarted, the receptor alignments can be saved as the “Startup Alignment.” When a Startup Alignment has been saved, the LIBERTY LATUS receptors will already be aligned and ready to go each time the LIBERTY LATUS is restarted.

Regardless of the existence of a Startup Alignment in LIBERTY LATUS memory, the receptors **can** be aligned and realigned at any time.

To manage the saved Startup Alignment data, open the **LIBERTY LATUS Receptor Alignment** dialog in the PiMgr GUI and select the *Startup Alignment* tab.

From this control, you can:

- **Save the current receptor alignment data** as the Startup Alignment. The next time the LIBERTY LATUS is restarted, the receptors will be automatically aligned with the current alignment data.
- **Erase the saved startup alignment data.** The next time the LIBERTY LATUS is restarted, it will require receptor alignment before it can track markers. This should be done each time a setup is modified.



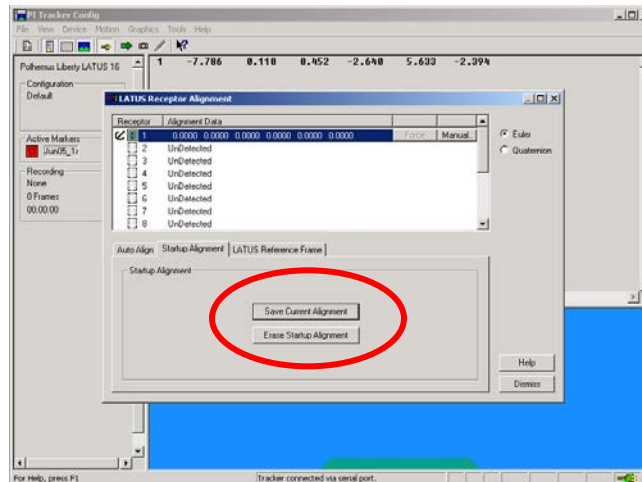


Figure 3-15: Save or Erase Startup Alignment Data

**NOTE:** This does not erase the *current* alignment data. It only erases the *startup* alignment data. If the LIBERTY LATUS is currently aligned, it will remain aligned until it is restarted.

See the PiMgr Online help for details.

**NOTE:** It is not necessary to erase the saved startup alignment before saving a new receptor alignment.

See also ASCII Command [‘^S’ – Startup Receptor Alignment Configuration](#) on page 84.

### 3.3.3 Reference Frame Setup

By default, all marker P&O is referenced to the alignment reference location used during alignment. (If the LIBERTY LATUS was automatically aligned, this is the *anchor receptor*. If manually aligned, this is the reference location from which receptor P&O was measured.) In some circumstances it may be necessary to select another frame of reference for position and/or orientation for the tracked markers.

For example, if the *anchor receptor* must be mounted upside down (rolled 180°) or in some other orientation, the frame of reference can be set so that marker orientations will also be rolled 180°.

The frame of reference could also be set in a more dynamic fashion (if the exact P&O of the desired frame of reference is not known), by placing a marker at the desired location and attitude and instructing the LIBERTY LATUS to use the marker’s current P&O as the reference frame instead of the anchor’s P&O. It is also possible to use only the marker’s orientation as a rotation reference, and leave the origin as it is.

To configure the LIBERTY LATUS frame of reference, open the **LIBERTY LATUS Receptor Alignment** dialog in the PiMgr GUI and select the **LIBERTY LATUS Reference Frame** tab.

From this control, you can:

- Reset the frame of reference to (0,0,0,0,0,0) and restore it to the alignment reference location: the anchor receptor or the reference location from which manual alignments were measured
- Set the frame of reference explicitly to XYZAER coordinates
- Set the frame of reference rotation to the current orientation of a marker
- Set the frame of reference translation *and* rotation to the current P&O of a marker

See the PiMgr Online help for details.

**NOTE:** When using a marker to set the frame of reference, the lowest-index marker that is currently active is used. The PiMgr control indicates which marker should be used. See also ASCII Command '[G](#)' – [Marker Reference Frame](#) on page [63](#).

### 3.4 Marker Operation

When LIBERTY LATUS is ready (already running and receptors are aligned), it is capable of tracking up to 12 wireless markers. Before this can happen, however, markers must be **installed** and **launched**.

Each physical marker has a unique ID and data set. Marker data records are stored (or *installed*) in LIBERTY LATUS memory. When a marker is *launched* or introduced into the tracking environment, the LIBERTY LATUS detects the frequency of the new marker signal. If marker data associated with that frequency has been installed, LIBERTY LATUS will begin tracking the marker.

#### Some Notes about Marker Frequency:

- Only one marker of a given frequency can be launched at any given time. There are 12 possible marker frequencies.
- If more than one marker data record for a frequency is installed, LIBERTY LATUS will try each data record for that frequency and select the record that produces the best result.
- If no records are found for a frequency, the marker will be tracked with default marker data values but the accuracy will be impaired.

Each newly shipped LIBERTY LATUS has marker data records pre-installed for any markers that are shipped with the LIBERTY LATUS. Markers shipped individually must be installed to the LIBERTY LATUS before they can be tracked effectively. A CD containing this data will be shipped with the new marker(s), ready to install on the system. See [Marker Installation](#) on page [47](#).

#### 3.4.1 Marker Launch and Unlaunch

Markers can be launched and unlaunched manually or automatically. To autolaunch a marker, two receptors must be installed and aligned; see 3.3.2 Receptor Alignment. Launching a marker manually takes more time; the marker must be deliberately placed and oriented before instructing the LIBERTY LATUS to detect it. Similarly, unlaunching a marker requires an explicit instruction to the LIBERTY LATUS.

When a marker is launched automatically, it can be introduced into the environment at any place or orientation and the LIBERTY LATUS will detect it and begin tracking it without any specific instruction to do so. In this mode, markers will also be automatically unlaunched when they leave the environment.

The tradeoff with automatic marker launch is that the LIBERTY LATUS cannot guarantee that it will report the orientation of the newly detected marker correctly. (Position will always be correct.) The reason for this is that the marker can enter the environment at any location and it can be at any orientation. If the orientation is unknown initially, the calculated orientation has only a one in four chance of being correct.

The orientation *can* be corrected with the [‘^P’ – Phase Step](#) command (see page [109](#)) after the marker has been launched automatically; however, the feasibility of this approach varies with the application.

### **3.4.1.1 Manual Marker Launch**

When launching markers manually, indicate the receptor at which the marker will be launched, place the marker near that receptor in a known position and orientation, and then instruct the LIBERTY LATUS to detect and launch the marker.


To perform the manual marker launch process, you will need:

- The LIBERTY LATUS powered ON;
- All receptors aligned (refer to [Receptor Alignment](#) on page [33](#));
- A powered ON wireless marker to launch.

If you are using the Polhemus PiMgr GUI to perform the manual marker launch:

- PiMgr should be running and have a connection to the LIBERTY LATUS established; and
- Launch **LIBERTY LATUS Marker** dialog is open. Refer to the **Help** button on this dialog if needed. Refer to PiMgr Online Help for instructions on opening this dialog.

#### **1. Select Launch Receptor**

First determine and specify at which receptor the marker will be launched. Click on the entry in the receptor list in the dialog. Be sure that the receptor you have selected is detected and aligned and identified with .

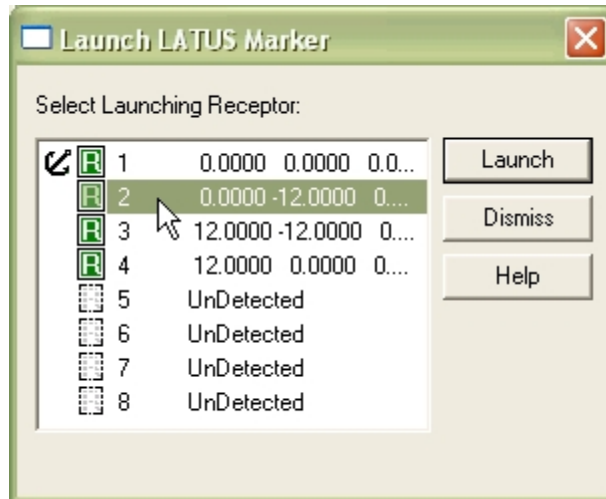


Figure 3-16: Select Launch Receptor

## 2. Place Marker

Place the marker to the rear of the selected launch receptor and about 6 inches away from it. Make sure that the marker is oriented so that the +X *forward* direction of the marker is toward the rear of the receptor. The receptor and marker should be aligned head to tail; see [Figure 3-17](#).



Figure 3-17: Marker Launch Orientation

## 3. Launch Marker

With the marker positioned, click on the  button.

To launch additional markers, repeat steps 1 through 3. Click on the  button to close the dialog. See also ASCII Command [‘L’ – Launch Marker](#) on page [97](#).

### 3.4.1.2 Manual Marker Unlaunch

Markers are manually unlaunched simply by sending the [‘^L’ – Unlaunch Marker](#) command on page [108](#).

To manually unlaunch a marker:

1. Open the **Unlaunch LIBERTY LATUS Marker** dialog in the PiMgr GUI.

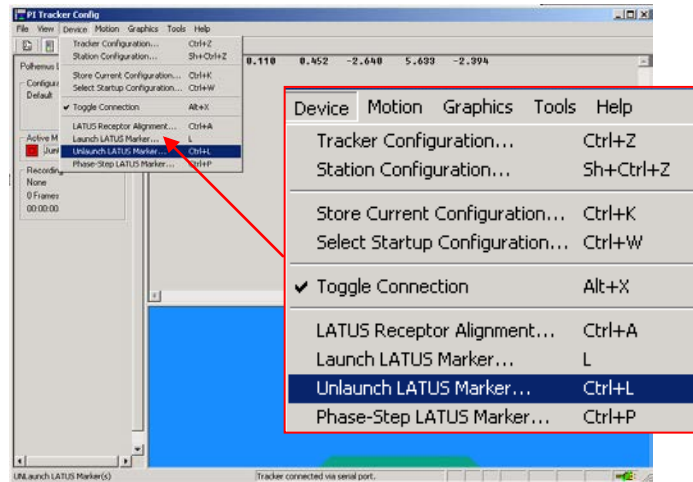



Figure 3-18: Unlaunching a marker

2. Select an individual launched marker from the list (identified by ) or select all markers by clicking on **Select All** (see ).

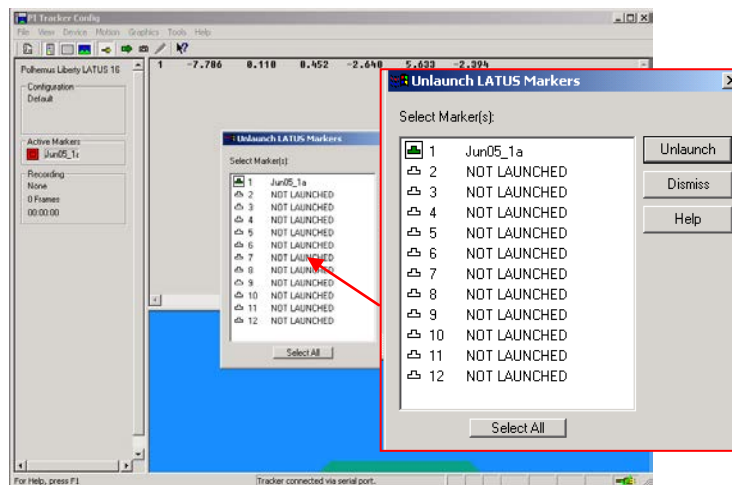


Figure 3-19: Select marker to unlaunch

3. Click on the **Unlaunch** button to unlaunch the selected marker(s).

Refer also to the ASCII Command [‘^L’ – Unlaunch Marker](#) on page [108](#).

### 3.4.1.3 Automatic Marker Launch and Unlaunch

To launch markers automatically, first verify that at least two receptors are installed and properly aligned (see 3.3.2 Receptor Alignment). A configuration setting is applied to LIBERTY LATUS to put it into AutoLaunch mode. (Refer to [‘@A’ – Autolaunch Mode](#) command on page [89](#) for a discussion on AutoLaunch orientation ambiguity.) This setting can be saved in the startup configuration so that LIBERTY LATUS will always be in this mode when it is started or reset (see [Configuration Changes](#) on page [51](#)). When in this mode, LIBERTY LATUS will detect

when a marker enters the motion tracking environment and will automatically launch the marker and begin tracking it. Similarly, LIBERTY LATUS will detect when the marker has left the environment and will automatically unlaunch it. The sensitivity of LIBERTY LATUS to marker signals entering and leaving the environment is configurable so that the feature can be “tuned” to the environment to prevent the AutoLaunch from triggering in error.

To enable the LIBERTY LATUS AutoLaunch mode:

1. Open the **Tracker Configuration** dialog in the PiMgr GUI;
2. Select the **AutoLaunch** tab;
3. Click on the **Enable AutoLaunch** checkbox;
4. To adjust the launch and unlaunch signal sensitivity, modify the **Launch** and/or **Unlaunch** range criteria.

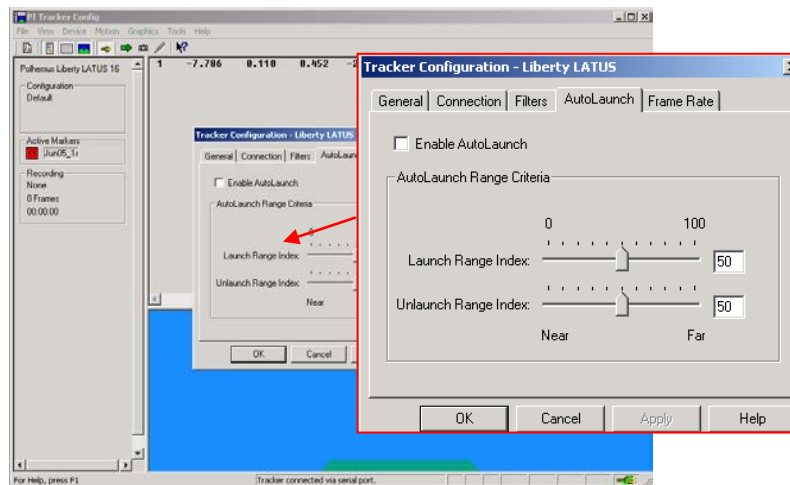


Figure 3-20: Autolaunch

**NOTE:** Higher values in these index criteria cause LIBERTY LATUS to be more sensitive to detected signal levels, and therefore allow new markers to be automatically launched or unlaunched when farther away from detecting receptors.

5. Click on the  button to apply the new LIBERTY LATUS settings.

Refer to ASCII Commands [‘@A’ – Autolaunch Mode](#) on page 89, and [‘^G’ – Set Autolaunch Criteria](#) on page 77.

### 3.4.2 Marker Installation

Each newly shipped LIBERTY LATUS has marker data records pre-installed for any markers that are shipped with the LIBERTY LATUS. A CD-ROM containing the records is also supplied as backup.



To view marker data records installed in the LIBERTY LATUS, open the **Manage LATUS Markers** dialog from the PiMgr GUI **Tools** menu. This dialog displays serial numbers of all marker records installed in the LIBERTY LATUS, sorted by frequency index. From this dialog, marker records can be manually installed and un-installed, although this utility should be required only in rare circumstances. The [‘M’ – Installed Markers](#) command (see page 65) may also be used to retrieve a list of installed markers from the LIBERTY LATUS directly.

Markers purchased individually must be installed to the LIBERTY LATUS before they can be tracked effectively. The marker records are supplied on a CD-ROM and the self-installing executable on the CD will automatically copy the marker records to the host computer and install them onto the LIBERTY LATUS through a guided step-by-step process. Once installed, the markers can be viewed in the **Manage LATUS Markers** dialog.

### 3.5 Optimization and Update Rate

#### 3.5.1 Optimization Mode

LIBERTY LATUS can operate in one of two optimization modes. The factory default mode is called “Volume Mode.” In this mode, LIBERTY LATUS is optimized to track up to the maximum number of 12 wireless markers at a default data update rate of 94Hz for each marker. Alternatively, the tracker can operate in “Throughput Mode” in which the default data update rate is 188Hz for each of up to 8 markers.

- In Throughput Mode, only markers M1 through M8 may be tracked. Do not attempt to launch and track markers M9-M12 while in this mode. The higher 188Hz rate in this mode only allows the system to search for signals from markers M1-M8. If a higher numbered marker is launched, it could be mistaken for one of the lower ones, or garble data captured from an existing lower numbered marker.
- In Throughput Mode, LIBERTY LATUS may exhibit slightly degraded noise performance because the data collection time is reduced by half. The higher update rate in this mode will also burden the host computer with twice the data, so that problems may arise if the host has a heavy computation load.

Use the [‘^R’ – Optimization Mode](#) command on page 82 to change LIBERTY LATUS Optimization Mode. In the PiMgr GUI, change the Optimization Mode in the **Tools** ⇒ **LATUS Optimization Mode** dialog (see [Figure 3-21](#)). Note that when the Optimization Mode is changed, LIBERTY LATUS must be restarted for the new mode to take effect.

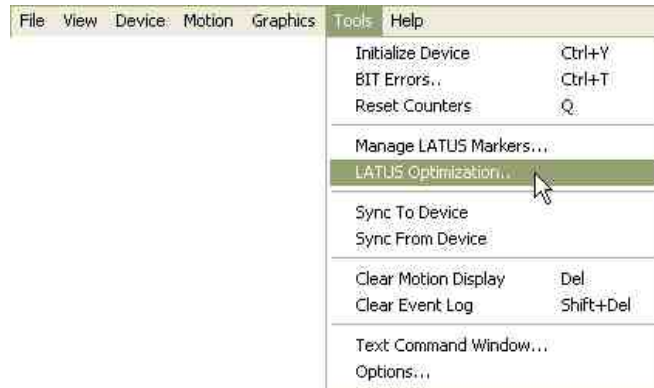


Figure 3-21: Optimization Mode dialog box

### 3.5.2 Update Rate

In either Volume Mode (94Hz) or Throughput Mode (188Hz), LIBERTY LATUS can also be configured at half the default or “Normal” rate for that mode by using the [‘R’ – Update Rate](#) command on page 69. The actual update rate produced by dropping back to half depends on the current Optimization Mode. Data Update Rates and tracker Optimization Modes are summarized below in [Table 3-1](#).

Table 3-1: Optimization Mode/Update Rate Summary

	<b>Volume Mode</b>	<b>Throughput Mode</b>
Normal Update Rate	94 Hz	188 Hz
Half Update Rate	47 Hz	94 Hz
Markers Supported	M1 through M12	M1 through M8

In the PiMgr GUI, change the update rate in the **Device ⇔ Tracker Configuration** dialog via the **Frame Rate** tab. Refer to the ASCII Command [‘R’ – Update Rate](#) on page 69.

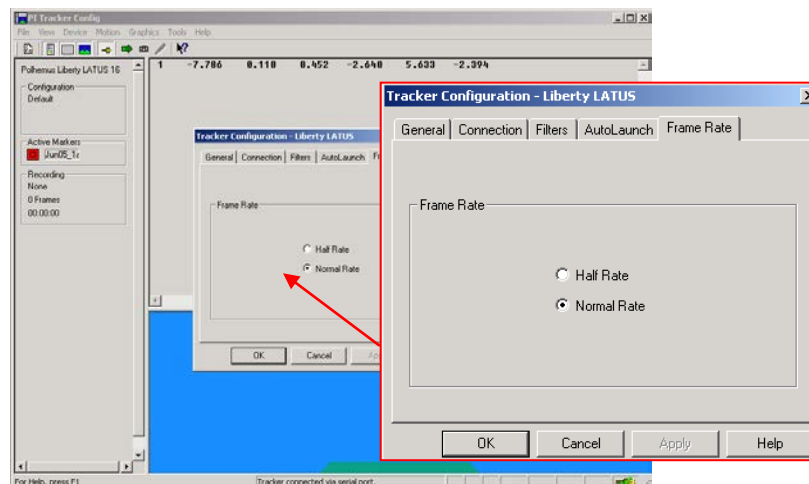


Figure 3-22: Output Rate

### 3.6 Output Considerations

Many applications of the LIBERTY LATUS involve using its data output to manipulate some type of computer graphics in real time. In this circumstance, it is important to allow the data to be processed as quickly as possible and to optimize LIBERTY LATUS configurations so as to diminish latency or lag.

Factors affecting latency are:

- Output Record Length
- Data Format (binary is more efficient than ASCII)
- Filtering (data are produced at normal times but will show effects of filter lag)
- USB Buffering Mode (should be disabled to minimize latency; see [‘@B’ – USB Buffering Mode](#) on page 90)

Factors affecting lag are:

- Competing processes running on the host computer
- Connection type: RS-232 vs. USB

In general the RS-232 will have the lowest lag but the port is too slow to get more than one marker’s worth of data without missing data frames (see **NOTE** below). The USB port can deliver the full 12 markers’ worth of data at 94Hz (or 8 markers at 188Hz) but due to the polled nature of USB I/O, may be more prone to latency, lag and/or data loss when the host is under load. Latency may be reduced in this case by disabling [‘@B’ – USB Buffering Mode](#).

**NOTE:** A standard XYZAER output frame from a single marker contains 320 bits in binary mode, or 520 bits in ASCII mode. At 188 Hz this means that the data is being delivered at 60,160 bps and 109,040 bps, respectively. Therefore, over a 115,200 bps connection, only the data from one marker can be captured without missing information. (Two markers would produce 120,320 bps and 218,080 bps, either of which would exceed the capacity of a 115K bps connection.)

#### 3.6.1 Adaptive Filters

The LIBERTY LATUS also contains an adaptive filter that is designed to control noise in the data output. The filter can be applied to position or orientation, or both. It should be noted that the effect that is seen in the data may have (or appear to have) a slower dynamic response with medium or heavy filtering selected. Although data transferred is at normal time, the filtering gives it the appearance of lag.

In the PiMgr GUI, change the adaptive filters in the **Tracker Configuration** dialog, *Filters* tab.

See the ASCII Commands [‘Y’ – Attitude Filter Parameters](#) on page 73 and [‘X’ – Position Filter Parameters](#) on page 71 for more information on setting the filters.

#### 3.6.2 Increment

LIBERTY LATUS can be configured to only change output data when the new P&O of markers has changed by a specified amount, or increment.

In the PiMgr GUI, set the increment in the **Device ⇒ Station Configuration** dialog, *Increment* tab.

See the ASCII Command [‘^N’ – Increment](#) on page 79.

### **3.7 Configuration Changes**

The LIBERTY LATUS will start up with a default configuration unless set to a different start-up configuration. Up to three user-defined configurations can be stored in the LIBERTY LATUS. Any one of these configurations can be set as the startup configuration.

In the PiMgr GUI, manage configurations in the **Device ⇒ Store Current Configuration** or the **Device ⇒ Select Startup Configuration** dialogs.

See also ASCII Commands [‘^K’ – Save Operational Configuration](#) on page 107 and [‘^W’ – Set Operational Configuration](#) on page 112 for instructions on how to set and store configurations.

### **3.8 Charging Marker Batteries**

Operation of the charger is accomplished as follows:

1. Assure that the power switch is in the OFF position.
2. Plug in the power pack circular 5 VDC cord at the receptacle near the power switch.
3. Plug the power pack into a power mains outlet (using any adapters, as appropriate, since it will operate under AC voltages of 100-240 volts and 47-63 Hz) prior to inserting any of the battery packs.
4. Actuate the power switch to the ON position and observe that the power indicator illuminates green.
5. Turn to the front of the unit to note the four red LED charge indicators. With no batteries inserted for charging, these indicators may (or may not) blink, for your enjoyment.

To charge one to four of the Lithium ion/Lithium polymer battery packs, perform the following:

1. The power switch can be in either the ON or OFF position when inserting batteries, but at the outset we recommend turning off the power or unplugging the power pack from the power mains.
2. Insert one or more battery packs into the receptacles. The charging circuits are independent of each other for each charging station so that the station chosen is totally arbitrary.
3. Move the power switch to ON (or plug in the power pack) and observe that the power indicator illuminates. Observe that the indicator corresponding to the battery being charged in the receptacle above it will illuminate steadily without flickering ON and OFF.
4. While a battery is charging, the red LED indicator remains solid ON, and when the battery is totally charged the indicator will automatically extinguish. Any combination of the four indicators could be occurring at a given time; random ON/OFF, solid ON or solid OFF depending on the state of usage and state of battery charge(s).
5. After the indicator is extinguished, the fully charged battery may be removed and is ready for use in a marker.
6. After all batteries have been charged, the charger should be turned OFF and/or its power pack unplugged from the power mains.
7. Do not keep batteries plugged in charger with charger power OFF. The batteries will very slowly discharge back through the charger.

***-CAUTION-***

The charger is specifically designed to charge the batteries contained in the Polhemus LIBERTY LATUS marker. Its voltage and charging current are adjusted for this particular Lithium ion/Lithium polymer battery. The charger should NOT be used to charge any other battery, Lithium ion/Lithium polymer or other type. Even among Lithium ion/Lithium polymer batteries, the characteristics vary such that charging is unique for any given design. To misuse the charger for charging any other battery, the user assumes all liability risks of damage to the battery, the charger, and to the operator or other equipment.

Please note that Lithium ion/Lithium polymer batteries have excellent self-discharge characteristics so that keeping extra batteries charged and waiting for use is the best strategy for quickly powering up a marker even after a month-long wait.

***HANDLING RECOMMENDATIONS  
FOR LITHIUM ION OR LITHIUM POLYMER BATTERIES***

**In order to obtain optimum performance, please follow the warnings and safety instructions listed in the handling precautions below.**

- Keep Lithium ion/Lithium polymer batteries away from children. If a battery is swallowed promptly call your doctor.
- Do not allow any Lithium ion/Lithium polymer battery to come into contact with water or liquid of any kind. Do not leave the battery near flames, heaters, (microwave) ovens, stoves, fireplaces or other high-temperature locations. Excessive heat could cause the battery to deteriorate. Do not heat the battery or throw it into a fire. This can damage the safety vent and cause the electrolyte to catch fire.
- Do not leave the battery in a hot condition like strong direct sunlight, inside automobiles behind the windscreen, etc. This can overheat the cell and will reduce the battery's performance.
- Do not damage the battery in any way by nailing, hammering, crushing, etc. This can cause the cell to leak and/or to short circuit internally.
- Do not combine batteries of different capacities, types or brands.
- If a battery leaks or emits a strange odor during use or storage, stop using the cell immediately. Leaking electrolytes are flammable.
- If any fluid that has leaked from the battery comes into contact with skin or clothing, rinse with tap water or other clean water immediately. Contact with skin can cause irritation or burns.
- If fluid from a battery gets into a person's eye, rinse the eye immediately with clean water and seek medical attention promptly. Do not rub the eye.

## 4 LIBERTY LATUS System Commands

### 4.1 Overview

This section of the document specifies the LIBERTY LATUS Command Interface. It provides the basis for Interface development. The Command Interface defines the structure and function of commands LIBERTY LATUS will respond to and the messages LIBERTY LATUS will provide to an external device or 'Host.'

The Command Interface is comprised of ASCII commands. The interface is designed to work in a 'dumb terminal' mode, thus keeping the communications protocol simple and easy to use. These commands provided the building blocks for the Polhemus LIBERTY LATUS SDK.

Additional information is provided in this document to give the reader some background in the terminology and general science behind the Polhemus tracking technology.

Key factors that influence the design of the interface are also discussed.

All commands are input on the RS-232 serial port or USB port. Additionally, format notations and conventions for commands and outputs are presented first.

### 4.2 Command Syntax

#### 4.2.1 Notation

The following notations are used in this manual to describe LIBERTY LATUS command syntax:

- [ ] Items shown inside square brackets are optional. To include optional items, type only the information inside the brackets. Do not type the brackets.
- <> Represents an ASCII carriage return or "enter" ('^M', 0x0d). Whenever shown this value must be present to terminate the command sequence.
- ... An ellipsis indicates that you can repeat an item.
- ,
- A comma represents a delimiter in a list of optional parameters. The comma must be present for those parameters which are omitted except for the case of trailing commas. For example:  
`Qs,p1,,,p4<>`  
is the proper command format when omitting parameters p2 and p3. Commas following the parameter p4 are not required if parameters p5 and p6 are omitted.
- | A vertical bar means either/or. Choose one of the separated items and type it as part of the command. For example, ON|OFF indicates that you should enter either ON or OFF, but not both. Do not enter the vertical bar.
- ^ A caret in front of a command letter indicates that the control key should be held down while typing the command letter. Control commands produce ASCII values between 0x00 and 0x1F.



- @ An “at” symbol in front of a command letter designates a unique 2-character command, independent of the plain command letter or a control-key (‘^’) sequence.

#### 4.2.2 Command Format Notes

- Commands and alphabetic parameters are NOT case sensitive.
- Commands that use optional parameters use current system retained values for parameters omitted from the command. See [Station Wildcard below](#).
- The term “*station*” in the command syntax descriptions is a generic term for marker(s) or receptor(s), whichever the command applies to.
- Unless otherwise noted, commands do not take any punctuation immediately following the command letter. However, if an optional first parameter is to be omitted, a comma is necessary between the command letter and the next argument.
- With the exception of the ‘P’ command and unless otherwise noted, all command strings are terminated with a ‘<>’ (carriage return).
- A numeric floating point value will be accepted by the machine if any of the following formats are used: for example, 3.0 may be specified as: 3, 3., 3.0 or 3.0E+00.

#### **Station Wildcard**

When using a command that requires a receptor or marker number as the parameter, the user may wish to apply the command to all receptors or markers of the LIBERTY LATUS. In such situations a ‘\*’ character may be used in place of the station (receptor or marker) number to apply the settings to every receptor or marker in the LIBERTY LATUS.

e.g. ^N\*,0.5,4.0 would change the P&O increments for every launched marker to 0.5 inches and 4.0 degrees.

e.g. ^N1,0.5,4.0 would change the P&O increments for marker 1 only.

#### **Default Parameters**

Commands that take multiple parameters can be used to change a subset of the parameters and leave the remaining parameter values unchanged.

For example:

- The command G2,*az,el,roll*<> changes the marker reference frame to (*az, el, roll*).
- The command G2,0,180,0<> changes the marker reference frame to (0,180,0).
- By omitting the *el* parameter from the command: G2,0,,180<> the marker reference frame would then change to (0,180,180). The *el* setting remains unchanged.
- Similarly, the *az* parameter can be defaulted by: G2,,*el,roll*<>.

- The *roll* parameter can be defaulted by  $G2,az,el<>$ . The trailing comma is not required when the last parameter(s) are omitted.

### 4.2.3 Response Format Notes

Depending on the '[F](#)' – [Output Format](#) configuration setting (see page [62](#)), frames received from LIBERTY LATUS in response to the commands detailed in this document will conform to one of the following format definitions.

#### ASCII

ASCII response frames are described in this document using the following notation:

- A..... Is an ASCII character
- B ..... Is a blank or space
- S ..... Is the sign character (+,- or a space for (+))
- x ..... Is a decimal digit (0-9)
- s..... Is an ASCII string
- X..... Is a hex digit (0-F)
- <> ..... Carriage return + line feed “CRLF” (i.e. ^M^J, 0x0d 0x0a)
- n() ..... Repeat contents of parentheses *n* times

Example: A format 3(Sx.xxxxB), would be output as: -1.1111 2.2222 -3.3333

Except where noted, ASCII mode response includes a standard 5-character response header. The default ASCII response frame format is as follows:

Table 4-1 ASCII Response Format

	Byte Index	Format	Description
HEADER	0	A	First Digit of Receptor or Marker Number
	1	A	Second Digit of Receptor or Marker Number
	2	A	Command Letter or '@' if a 2-character command
	3	A	Error Indicator
	4	B	ASCII Blank character
	5 thru n	A	Response Body
	n+1, n+2	<>	A P&O response frame may or may not contain a Carriage Return/Line Feed as specified by the user with the 'O' command

If the receptor or marker number is not applicable to the command, the first two fields will be ASCII zeros '0'.

Error codes presented in the Error Indicator field are detailed in [LIBERTY LATUS Error Code Summary](#) on page [58](#). “No Error” is represented by an ASCII blank character ' '.

#### Binary

Binary response frames are described in this document using the following notation:

- US .....unsigned short, 16 bits
- SH .....signed short, 16 bits
- UC .....unsigned char, 8 bits
- CH .....char, 8 bits

- I .....signed integer, 32 bits
- DW .....unsigned double word, 32 bits
- FL .....32-bit single-precision floating-point in IEEE format consisting of sign bit, 8-bit exponent, and 23-bit mantissa:  
SXXX XXXX XMMM MMMM MMMM MMMM MMMM MMMM
- [n] .....Array of size *n* of type preceding square brackets (e.g. FL[3])

Binary response frames are composed of an 8 byte frame header followed by a variable-length frame body as follows:

Table 4-2 Binary Response Format

	Byte Index	TYPE	Description
HEADER	0,1	US	Frame Tag, always 'LU' or 0x554C for LIBERTY LATUS
	2	UC	Receptor or Marker Number
	3	UC	Initiating command or '@' if a 2-character command
	4	UC	Error Indicator
	5	UC	Reserved
	6,7	SH	Response size; number of bytes in the response body
	8 - n		Binary Response body

Error codes presented in the Error Indicator field are detailed in [LIBERTY LATUS Error Code Summary](#) on page 58. "No Error" is represented by NULL (0x00).

**Error Responses**

When in binary mode, error responses are always prepended by the binary frame header, followed by the ASCII error string. In ASCII mode, error responses have no header. See [LIBERTY LATUS Error Code Summary](#) on page 58 for a complete listing of error responses.

### 4.3 LIBERTY LATUS User Command Set Summary

<u>Command</u>	<u>Description</u>	<u>Decimal</u>	<u>Hexadecimal</u>	<u>Notes</u>	<u>Page</u>
A	Set Alignment Mode	65	41		<a href="#">94</a>
B	Boresight	66	42	0.0=off, 1.0=on	<a href="#">60</a>
C	Continuous Print Output	67	43		<a href="#">96</a>
F	Output Format	70	46	0=asc 1=bin	<a href="#">62</a>
G	Marker Reference Frame	71	47		<a href="#">63</a>
L	Launch Marker	76	4C		<a href="#">97</a>
M	Installed Markers	77	4D		<a href="#">65</a>
N	Launched Marker ID	78	4E		<a href="#">98</a>
O	Output Data List	79	4F		<a href="#">67</a>
P	Single Data Record Output	80	50		<a href="#">99</a>
Q	Reset Counters	81	51	0=both;1=FC,2=TS	<a href="#">101</a>
R	Update Rate	82	52	3=half, 4=default	<a href="#">69</a>
U	Set Units	85	55	0=in, 1=cm	<a href="#">70</a>
X	Position Filter Parameters	88	58		<a href="#">70</a>
Y	Attitude Filter Parameters	89	59		<a href="#">73</a>
Z	Set Sync Mode	90	5A		<a href="#">75</a>
^A	Receptor Alignments	1	01		<a href="#">102</a>
^B	Aligned Receptors Map	2	02		<a href="#">104</a>
^D	Alignment Criteria	4	04		<a href="#">105</a>
^E	Set Echo Mode	5	05	0=off, 1=on	<a href="#">76</a>
^F	Force Alignment	6	06		<a href="#">106</a>
^G	Set Autolaunch Criteria	7	07		<a href="#">77</a>
^K	Save Operational Configuration	11	0B		<a href="#">107</a>
^L	Unlaunch Marker	12	0C		<a href="#">108</a>
^N	Increment	14	0E		<a href="#">79</a>
^O	RS-232 Port Configuration	15	0F		<a href="#">80</a>
^P	Phase Step	16	10		<a href="#">109</a>
^R	Optimization Mode	18	12		<a href="#">82</a>
^S	Startup Receptor Alignment Configuration	19	13		<a href="#">84</a>
^U	Active Marker Map	21	15		<a href="#">85</a>
^V	WhoAmI (Software versions)	22	16		<a href="#">110</a>
^W	Set Operational Configuration	23	17		<a href="#">112</a>
^X	Operational Configuration ID	24	18		<a href="#">87</a>
^Y	Initialize System	25	19		<a href="#">113</a>
^Z	Read Operational Configuration	26	1A		<a href="#">114</a>
@A	Autolaunch Mode	00 65	00 41	0=off, 1=on	<a href="#">89</a>
@B	USB Buffering Mode	00 66	00 42	0=off, 1=on	<a href="#">90</a>
@N	AutoIncrement	00 78	00 4E	0=off, 1=on	<a href="#">92</a>
@S	Signal Strength	00 83	00 53		<a href="#">117</a>

## **4.4 LIBERTY LATUS Error Code Summary**

*These error codes may appear as binary values in binary mode frame headers.*

*In ASCII mode, only the text/meaning appears.*

<b>Error</b>	<b>Hexadecimal</b>	<b>ASCII Text/Meaning</b>
0	0x00	No Error
1	0x01	Invalid Command
2	0x02	Invalid Station
3	0x03	Invalid Parameter
4	0x04	Too Few Parameters
5	0x05	Too Many Parameters
6	0x06	Parameter Below Limit
7	0x07	Parameter Above Limit
8	0x08	Communication Failure with Sensor Processor Board
9	0x09	Error Initiating Sensor Processor 1
10	0x0a	Error Initiating Sensor Processor 2
11	0x0b	Error Initiating Sensor Processor 3
12	0x0c	Error Initiating Sensor Processor 4
13	0x0d	No Sensor Processors Detected
15	0x0f	Memory Allocation Error
16	0x10	Excessive Command Characters Entered
20	0x14	Non-fatal text message
22	0x16	Error Synchronizing Sensors
26	0x1a	Indicated Receptor Not Present
27	0x1b	Error aligning Receptor
28	0x1c	No Markers recognized by System
29	0x1d	Launch Error – Launch Receptor is not aligned
30	0x1e	Wildcard is not supported by this command
31	0x1f	No markers of this frequency have been installed on the system
32	0x20	Not used
33	0x21	No marker of this frequency has been launched
34	0x22	Error Installing Marker
35	0x23	Marker Serial Number not found for this frequency

## 4.5 Command Reference

### 4.5.1 Configuration Commands

Configuration Commands are typically issued during system setup. They affect the overall operation of the LIBERTY LATUS. Once a configuration has been established, LIBERTY LATUS will operate in that configuration until power is removed, a reset is issued, or the configuration is changed again through a command. The current configuration may be saved and used at initialization time by commands discussed in this section.

Unless otherwise indicated, the default behavior of the configuration commands will be as follows:

- When no arguments (except marker or receptor number, where applicable) are supplied with the command, LIBERTY LATUS will respond with the current value of the setting in the response frame body.
- When arguments *are* supplied, the command modifies the setting, and the LIBERTY LATUS sends *no response* to the command. (If the [‘^E’ – Set Echo Mode](#) on page 76 is enabled, LIBERTY LATUS echoes back the command as verification that the command was received and executed.)
- Marker- and receptor-specific commands have an option to apply the setting to all markers or receptors. See [Station Wildcard](#) on page 54.



## ‘B’ – Boresight

---

### Description:

This command causes the marker to be electronically aligned in orientation with the user system coordinates, and establishes the boresight reference angles for the station. Azimuth, elevation and roll outputs will equal the boresight reference values at the current orientation. Any marker orientation can be designated as the zero orientation point.

A station may also be unboresighted with this command.

### Syntax:

*Bstation*, [*action*,*Azref*,*Elref*,*Rlref*]<>

Part	Description
<i>station</i>	1 to 12, which specifies the relevant marker
<i>action</i>	1 to Boresight, 0 to Unboresight
<i>Azref</i>	The azimuth reference angle
<i>Elref</i>	The elevation reference angle
<i>Rlref</i>	The roll reference angle

### Remarks:

The system default boresight reference values are: 0, 0, 0.

Issuing a command without the optional parameters will return whether a marker is boresighted or not. It will not return the boresight reference angles.

### Output Record:

Table 4-3 ‘B’ ASCII Response

Byte Index	Format	Description
0	A	First Digit of station number
1	A	Second Digit of station number
2	A	‘B’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	1.0 = On, 0.0 = Off
8	AA	Carriage Return/Line Feed

Table 4-4 ‘B’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	F1	1.0 = On, 0.0 = Off

**Examples:**

B1, 1,10,20,30.5<>

Boresights marker 1 to 10 degrees in azimuth, 20 degrees in elevation, and 30.5 degrees in roll.

B1,0<>

Unboresights marker 1

B5,1<>

Boresights marker 5 to the default values of 0,0,0.

B3<>

Returns 0.0 to indicate that marker 3 is not presently boresighted, or 1.0 to indicate that it is.

## ‘F’ – Output Format

### Description:

This command selects the Binary or ASCII output data format. ASCII format means that the data is generally human readable, while binary format is generally computer readable. Regardless of output data format selected, all input data (commands) to LIBERTY LATUS must be in ASCII format.

### Syntax:

F[*fmt*] <>

Part	Description
------	-------------

<i>fmt</i>	Defines the type of output from LIBERTY LATUS. The choices are: 0 .... ASCII output 1 .... Binary output
------------	--

### Remarks:

The default output data format is ASCII. The Polhemus SDK uses binary output exclusively. As with other configuration commands, if no *fmt* argument is provided, the current value of the setting is returned in the default response frame.

If a software application is written to receive binary data from LIBERTY LATUS and there is a requirement to take it off line temporarily to do visual checks, the user would enable the ASCII output data format in order to be able to easily read LIBERTY LATUS data on the PC monitor.

The user may wish to write a software application for LIBERTY LATUS where a fast update rate is crucial. In order to reduce data throughput size, LIBERTY LATUS could be set to output in binary instead of ASCII.

### Output Record:

Table 4-5 ‘F’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘F’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	‘0’
6-7	AA	Carriage Return/Line Feed

Table 4-6 ‘F’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	0x00000001

### Examples:

The command to enable binary output mode for the system is:

F1<>

## ‘G’ – Marker Reference Frame

---

### Description:

This command modifies the translation and/or rotation reference frame coordinates for all launched markers’ P&O measurements. The reference frame may be configured from a launched marker’s current P&O or from user-provided XYZAER values. The reference frame is not a marker-specific setting.

### Syntax:

*Gcommand*[ *X,Y,Z,A,E,R* ]<>

Part	Description
<i>command</i>	0.....Set reference frame to rotation and translation of lowest launched marker
	1.....Set reference frame to rotation of lowest launched marker
	2.....Set reference frame rotation and translation to XYZAER values given
	3.....Reset reference frame rotation and translation to zero

The following parts apply only to *command* value 2:

<i>X</i>	X reference frame translation
<i>Y</i>	Y reference frame translation
<i>Z</i>	Z reference frame translation
<i>A</i>	Azimuth reference frame angle of rotation
<i>E</i>	Elevation reference frame angle of rotation
<i>R</i>	Roll reference frame angle of rotation

### Remarks:

The default marker reference frame is 0,0,0,0,0,0.

Issuing a G<> will read the current marker reference frame.

**Output Record:**

Table 4-7 ‘G’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘G’
3	A	Error Indicator
4	B	ASCII Blank character
5-13	Sxxx.xxxB	X Reference Frame Translation
14-22	Sxxx.xxxB	Y Reference Frame Translation
23-31	Sxxx.xxxB	Z Reference Frame Translation
32-40	Sxxx.xxxB	Azimuth Reference Frame Rotation
41-49	Sxxx.xxxB	Elevation Reference Frame Rotation
50-58	Sxxx.xxxB	Roll Reference Frame Rotation
59-60	AA	Carriage Return/Line Feed

Table 4-8 ‘G’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	FL	X Reference Frame Translation
12	FL	Y Reference Frame Translation
16	FL	Z Reference Frame Translation
20	FL	Azimuth Reference Frame Rotation
24	FL	Elevation Reference Frame Rotation
28	FL	Roll Reference Frame Rotation

**Examples:**

**Scenario 1:**

If there were a requirement to mount the anchor receptor upside down (e.g., it is more mechanically feasible this way), then the following command would be used to set the reference frame manually with the orientation rolled 180°:

G2,0,0,0,0,0,180<>

The P&O measurements for all markers will now look as if the anchor had *not* been mounted upside down.

**Scenario 2:**

Without knowing the exact P&O of the desired frame of reference, the lowest-index marker (e.g. marker 1) could be used to set the frame of reference. Marker 1 would be positioned at the desired origin and pointing along the desired X-axis. Then that marker’s P&O would become the new reference frame for all markers by using the *G0<>* command. Or, if only the orientation of that marker were needed for the reference, then the *G1<>* command would be used.

## ‘M’ – Installed Markers

### Description:

This command returns a list of markers that have been “installed” to LIBERTY LATUS. Markers are installed using the LIBERTY LATUS marker Installation utility in the PiMgr GUI. The list returned by this command reports markers in the order in which they were installed.

### Syntax:

M<>

### Remarks:

Note that the output record reports markers in the order that they were installed, not in the order of marker Frequency.

### Output Record:

Table 4-9 ‘M’ ASCII Response Header

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘M’
3	A	Error Indicator
4	B	ASCII Blank character

The body of the response will be a variable length block of text described in Table 4-10 [below](#). The data in italics is defined in the right column.

The binary response frame is described in Table 4-11.

Table 4-10 ‘M’ ASCII Response

Format	Description
00M <i>x</i> Marker(s) Installed<>	3-char ASCII Header + number of markers installed
<i>The following text data will be repeated for each installed marker:</i>	
Freq <i>x</i>	Marker Frequency index
<i>BBB</i>	3 blanks
<i>S/N</i>	
<i>BB</i>	2 blanks
<i>s</i> <>	Marker Serial Number/ID string + CRLF

Table 4-11 ‘M’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	FL	Installed Marker Count
<i>The following 20 bytes are repeated for each installed marker.</i>		
12	FL	Frequency index
16	CH[16]	Marker ID

**Examples:**

On a LIBERTY LATUS with 7 markers installed, issue the M<> command to produce the following ASCII report of all installed markers:

```
00m 7 Marker(s) Installed
Freq 6 S/N 302A50005
Freq 8 S/N 304A50006
Freq 10 S/N 306A50008
Freq 2 S/N 298A50002
Freq 3 S/N 299A50001
Freq 7 S/N 303A50003
Freq 9 S/N 305A50002
```



## ‘O’ – Output Data List

### Description:

This command allows the user to define the list of variables to be output to the host computer for the specified marker. Any combination of items that produces a P&O response frame of less than or equal to 1000 bytes is permissible.

**NOTE:** Due to the high output rate of LIBERTY LATUS, caution should be used when defining large output records to prevent overwhelming the host communications’ channel.

The output list refers to the subset of data items to be included in a data record.

### Syntax:

O[marker],[p1],[p2],...,[pn]<>

Part	Description
<i>marker</i>	1 to 12, which specifies the relevant marker
<i>p1-pn</i>	Parameters that define the list of variables output to the host. The possible parameters are listed below:

Table 4-12 Output Data Types

ID	Description	ASCII Data Format	Binary Data
0	ASCII space character	A1	A1
1	ASCII carriage return, linefeed	A2	A2
2	X, Y, Z Cartesian coordinates of position	3(Sxxx.xxxB)	Float
3	X, Y, Z Cartesian coordinates, extended precision	3(Sx.xxxxxxESxxxB)	Float
4	Az, El, Ro Euler orientation angles	3(Sxxx.xxxB)	Float
5	Az, El, Ro Euler angles, extended precision	3(Sx.xxxxxxESxxxB)	Float
6	Direction Cosine Matrix	3(3(Sx.xxxxB)CRLF)	3(Float)
7	Orientation Quaternion	4(Sx.xxxxB)	4(Float)
8	Timestamp	A1 ~ A10	DWORD
9	Frame Count	A1 ~ A10	DWORD
10	Stylus Flag (‘0’ or ‘1’)	A1	I
11	Distortion Level (N/A for LIBERTY LATUS)	A1	I
12	External Sync Detected (‘0’ or ‘1’)	A1	I

### Remarks:

If the wildcard (\*) is specified instead of *marker*, all active marker output lists will be set to the programmed value. If output list parameters (*p1-pn*) are omitted from the argument list, the current defined output list is returned.

Default is 0\*,2,4,1: P&O <cr><lf> for all markers.

**Output Record:**

Table 4-13 'O' ASCII Response

Byte Index	Format	Description
0	A	First Digit of Marker Number
1	A	Second Digit of Marker Number
2	A	'O'
3	A	Error Indicator
4	B	ASCII Blank character
5	x	Data Item #1
6	B	
7-	xB..	Remaining data items separated by blanks

Table 4-14 'O' Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	Data Item 1
12	I	Data Item 2
16	I	Data Item 3
...		
84	I	Data Item #20

**NOTE:** In the binary output format, the list of valid data items will be terminated with a -1 (0xFFFFFFFF).

**Examples:**

The user may decide to use X, Y, Z direction cosines instead of the default output format. In order to do so, the following command should be sent:

O1,6,1<

The output data for marker 1 will now be displayed as X, Y, Z direction cosines, plus carriage return / line feed.

O\*,2<

The output for all markers will be position only.

## ‘R’ – Update Rate

### Description:

This command sets the data output update of the LIBERTY LATUS.

### Syntax:

R[rate]<>

Part	Description
<i>rate</i>	3.....Half Rate. 4.....Normal Rate

### Remarks:

The normal rate is 94Hz for systems in “Volume Mode” supporting from 1 to 12 wireless markers, and 188Hz in “Throughput Mode” supporting 1-8 markers. If ‘rate’ is omitted from the command parameter list, the current setting is returned in the default response frame. Only markers M1 through M8 may be used when operating at 188Hz. Refer to [Update Rate](#) on page 49 for details on Volume Mode and Throughput Mode. See the [‘^R’ – Optimization Mode](#) command on page 82 to change modes.

### Output Record:

Table 4-15 ‘R’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘R’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	3 = Default, 4 = Double
6-7	AA	Carriage Return/Line Feed

Table 4-16 ‘R’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	0x03 = Default, 0x04 = Double

### Examples:

R3<>

R4<>

Default is 94Hz for 1-12 markers; 188Hz can be set for 1-8 markers.

## ‘U’ – Set Units

---

### Description:

This command sets the distance unit to either metric (centimeters) or English (inches). Subsequent input and output lengths will be interpreted as centimeters or inches respectively.

### Syntax:

U[units]<>

Part	Description
<i>units</i>	Defines the type of input and output Units. The choices are: 0.....English (Inches) 1.....Metric (Centimeters)

### Remarks:

The system default unit format is inches.

As with all other configuration commands, if the units parameter is not stated in this command, the current units setting will be returned in the default response body.

### Output Record:

Table 4-17 ‘U’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘U’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	0 for inches, 1 for centimeters
6-7	AA	Carriage Return/Line Feed

Table 4-18 ‘U’ Binary Response

Byte Index	Format	Description
1-8		Binary Header
9-12	I	0x00 for inches, 0x01 for centimeters

### Examples:

Assuming the system units had already been changed to centimeters, the following command could be sent to change back to inches:

U0<>

The system will now output data in inches and interpret input data in inches.

If the operator wanted the system to output its measurements in centimeters, the following command should be sent:

U1<>

The system will now output data in centimeters.

## ‘X’ – Position Filter Parameters

---

### Description:

This command establishes the sensitivity, boundary, and transition control parameters for the adaptive filter that operates on the position outputs of the LIBERTY LATUS. The user can adjust the parameters of this command to fine-tune the overall dynamic response of the system.

The filter is a single-pole low-pass type with an adaptive pole location (i.e., a floating filter “parameter/variable”). The pole location is constrained within the boundary values *F<sub>Low</sub>* and *F<sub>High</sub>* but is continuously self-adaptive between these limits as a function of the sensitivity parameter *F* and the sensed (ambient noise plus rotational rate) input conditions. For input “rate” conditions that fall within the adaptive range, the adaptive feature varies the pole location between the *F<sub>Low</sub>* and *F<sub>High</sub>* limits so as to maximize the output resolution for static inputs while minimizing the output lag for dynamic inputs. Whenever the input conditions cause the filter to make a transition to a narrower bandwidth (i.e., increased filtering), the transition rate of the pole location is constrained to a maximum allowable rate by the parameter *Factor*. If all of the optional parameters are omitted the current value of each parameter is returned to the user as an output record of type “X”.

### Syntax:

X[[*F*],[*F<sub>Low</sub>*],[*F<sub>High</sub>*],[*Factor*]]<>

Part	Description
<i>F</i>	<p>A scalar value that establishes the sensitivity of the filter to dynamic input conditions by specifying the proportion of new input data to recent average data that is to be used in updating the floating filter parameter/variable.</p> <p>Allowable range of values: <math>0 &lt; F &lt; 1</math></p>
<i>F<sub>Low</sub></i>	<p>A scalar value that specifies the maximum allowable filtering to be applied to the outputs during periods of relatively static input conditions. Setting this value to 1.0 disables the filter completely.</p> <p>Allowable range of values: <math>0 &lt; F_{Low} &lt; F_{High}</math> or 1.0 to disable filter</p>
<i>F<sub>High</sub></i>	<p>A scalar value that specifies the minimum allowable filtering to be applied to the outputs during periods of highly dynamic input conditions.</p> <p>Allowable range of values: <math>F_{Low} &lt; F_{High} &lt; 1</math></p>
<i>Factor</i>	<p>A scalar value that specifies the maximum allowable transition rate from minimum filtering (for highly dynamic input conditions) to maximum filtering (for relatively static input conditions) by</p>

proportionately limiting the decay to the low filter limit whenever the input conditions effect a transition to a narrower bandwidth.

Allowable range of values:  $0 < Factor < 1$

When the form of the command is X0,1,0,0<> the position filter is disabled.

**Remarks:**

The default mode for all filter parameters is shown below. Although these parameters are a function of the user’s particular environment, the following settings may be used as a starting point for determining optimum filtering in your particular environment.

<i>F</i>	Set to 0.2
<i>FLow</i>	Set to 0.2
<i>FHigh</i>	Set to 0.8
<i>Factor</i>	Set to 0.95

**Output Record:**

Table 4-19 ‘X’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘X’
3	A	Error Indicator
4	B	ASCII Blank character
5-11	Sx.xxxB	Filter Sensitivity
12-18	Sx.xxxB	Filter Low Value
19-25	Sx.xxxB	Filter High Value
26-32	Sx.xxxB	Transition Rate Maximum Value
33-34	AA	Carriage Return/Line Feed

Table 4-20 ‘X’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	FL	Filter Sensitivity
12	FL	Filter High Value
16	FL	Filter Low Value
20	FL	Transition Rate Maximum Value

**Examples:**

To select the above filtering, send the following command to the system:

X .2,.2,.8,.95<>

All active stations will now have filtering applied to the position measurements.

To turn off position filters:

X0,1,0,0<>

## ‘Y’ – Attitude Filter Parameters

---

### Description:

This command establishes the sensitivity, boundary, and transition control parameters for the adaptive filter that operates on the attitude outputs of the LIBERTY LATUS. The user can adjust the parameters of this command to fine-tune the overall dynamic response of the system.

The filter is a single-pole low-pass type with an adaptive pole location (i.e., a floating filter “parameter/variable”). The pole location is constrained within the boundary values *F<sub>Low</sub>* and *F<sub>High</sub>* but is continuously self-adaptive between these limits as a function of the sensitivity parameter *F* and the sensed (ambient noise plus rotational rate) input conditions. For input “rate” conditions that fall within the adaptive range, the adaptive feature varies the pole location between the *F<sub>Low</sub>* and *F<sub>High</sub>* limits so as to maximize the output resolution for static inputs while minimizing the output lag for dynamic inputs. Whenever the input conditions cause the filter to make a transition to a narrower bandwidth (i.e., increased filtering), the transition rate of the pole location is constrained to a maximum allowable rate by the parameter *Factor*. If all of the optional parameters are omitted, the current value of each parameter is returned to the user as an output record of type “Y”.

### Syntax:

Y[[*F*],[*F<sub>Low</sub>*],[*F<sub>High</sub>*],[*Factor*]]<>

Part	Description
<i>F</i>	<p>A scalar value that establishes the sensitivity of the filter to dynamic input conditions by specifying the proportion of new input data to recent average data that is to be used in updating the floating filter parameter/variable.</p> <p>Allowable range of values: <math>0 &lt; F &lt; 1</math></p>
<i>F<sub>Low</sub></i>	<p>A scalar value that specifies the maximum allowable filtering to be applied to the outputs during periods of relatively static input conditions; setting this value to 1.0 disables the filter completely.</p> <p>Allowable range of values: <math>0 &lt; F_{Low} &lt; F_{High}</math> or 1.0 to disable filter</p>
<i>F<sub>High</sub></i>	<p>A scalar value that specifies the minimum allowable filtering to be applied to the outputs during periods of highly dynamic input conditions.</p> <p>Allowable range of values: <math>F_{Low} &lt; F_{High} &lt; 1</math></p>
<i>Factor</i>	<p>A scalar value that specifies the maximum allowable transition rate from minimum filtering (for highly dynamic input conditions) to maximum filtering (for relatively static input conditions) by</p>



proportionately limiting the decay to the low filter limit whenever the input conditions effect a transition to a narrower bandwidth.

Allowable range of values:  $0 < Factor < 1$

When the form of the command is Y0,1,0,0<> the attitude filter is disabled.

**Remarks:**

The default mode for all filter parameters is shown below. Although these parameters are a function of the user’s particular environment, the following settings may be used as a starting point for determining optimum filtering in your particular environment.

<i>F</i>	Set to 0.2
<i>FLow</i>	Set to 0.2
<i>FHigh</i>	Set to 0.8
<i>Factor</i>	Set to 0.95

**Output Record:**

Table 4-21 ‘Y’ ASCII Response

Byte Index	Format	Description
1	A	‘0’
2	A	‘0’
3	A	‘Y’
4	A	Error Indicator
5	B	ASCII Blank character
6-12	Sx.xxxB	Filter Sensitivity
13-19	Sx.xxxB	Filter Low Value
20-26	Sx.xxxB	Filter High Value
27-33	Sx.xxxB	Transition Rate Maximum Value
34-35	AA	Carriage Return/Line Feed

Table 4-22 ‘Y’ Binary Response

Byte Index	Format	Description
1-8		Binary Header
9-12	FL	Filter Sensitivity Value
13-16	FL	Filter Low Value
17-20	FL	Filter High Value
21-24	FL	Transition Rate Maximum Value

**Examples:**

To select the above filtering, send the following command to the system:

Y.2,.2,.8,.95<>

All active stations will now have filtering applied to the attitude measurements.

To turn off attitude filters:

Y0,1,0,0<>

## ‘Z’ – Set Sync Mode

### Description:

This command sets the LIBERTY LATUS response to an active signal on the external event hardware input. This input is a physical input connection on the LIBERTY LATUS chassis. See [External Sync I/O](#) on page 25.

**NOTE:** LIBERTY LATUS has no CRT sync mode. The user can detect a CRT pulse by connecting the CRT to the external sync jack and monitoring the external sync flag in the output record.

### Syntax:

Z[mode]<>

Part	Description
<i>mode</i>	Defines the mode of operation during the reception of an external event marker. The choices are: 0 .... OFF 1 .... ON

### Remarks:

The system default for the sync mode is OFF.

When *mode* is ON, an event marker is placed in output frame data when an incoming sync is received, and a sync pulse is output for each frame.

**NOTE:** Output of the event marker must be enabled through the [‘O’ – Output Data List](#) command on page 67.

As with other configuration commands, if *mode* is omitted from the command parameter list, the current setting is returned in the default response frame.

### Output Record:

Table 4-23 ‘Z’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘Z’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	0 Off, 1 On
6-7	AA	Carriage Return/Line Feed

Table 4-24 ‘Z’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	0x00 = OFF, 0x01 = ON

## ‘^E’ – Set Echo Mode

### Description:

This command enables and disables the communications “echo” mode. In echo mode, LIBERTY LATUS responds to configuration-modifying commands by “echoing” back the command that was received. (Recall that without echo mode, configuration-modifying commands generate no response message from the LIBERTY LATUS. See [Configuration Commands](#) on page 59.) This allows feedback to the user when modifying configuration settings. In binary mode, the echo is prefixed by the standard 8-byte binary header.

### Syntax:

^E[*echo*]⟨⟩

Part	Description
<i>echo</i>	0.....No echo mode 1.....Echo mode

### Remarks:

The system default for echo mode is OFF.

### Output Record:

Table 4-25 ‘^E’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘e’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	1 = on, 0 = off
6-7	AA	Carriage Return/Line Feed

Table 4-26 ‘^E’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	1 = on, 0 = off

### Examples:

^E1⟨⟩

^E0⟨⟩

Default is off.

## ‘^G’ – Set Autolaunch Criteria

---

### Description:

In Autolaunch mode, LIBERTY LATUS detects and automatically launches or unlaunches wireless markers as they enter and leave the motion tracking environment. Thresholds for marker detection may be set and read with this command.

### Syntax:

`^G[launch range, unlaunch range]<>`

Part	Description
<i>Launch range</i>	Range index from 0 to 100. Lower index corresponds to shorter range.
<i>Unlaunch range</i>	Range index from 0 to 100. Lower index corresponds to shorter range.

### Remarks:

In the LIBERTY LATUS, the launch and unlaunch range indices are translated into minimum detected signal levels at which the LIBERTY LATUS will automatically launch and unlaunch markers. A lower launch range index means that a marker must be closer to a receptor and thus produce a higher detected signal level to cause it to be automatically launched. Similarly, a higher unlaunch range index means that the marker may travel farther away and thus produce a lower detected signal level in a receptor before it will be automatically unlaunched. See also [‘^P’ – Phase Step](#) on page [109](#).

The default launch range index criterion is 50.

The default unlaunch range index criterion is 50.

### Output Record:

Table 4-27 ‘^G’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘g’
3	A	Error Indicator
4	B	ASCII Blank character
5-8	xxxB	Launch range index
9-12	xxxB	Unlaunch range index
13,14	AA	Carriage Return/Line Feed

Table 4-28 ‘^G’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	DW	Launch range index
12	DW	Unlaunch range index

**Examples:**

To increase the distance from a receptor at which a marker will be autolaunched, increase the launch range index.

To increase the distance from a receptor at which a launched marker may travel before it is automatically unlaunched, increase the unlaunch range index.

To instruct LIBERTY LATUS to automatically launch a marker when a signal level corresponding to an index of 60 or more is detected and to unlaunch when a signal level corresponding to an index of 40 or less is detected, use the following command:

`^G60,40<>`

## ‘^N’ – Increment

### Description:

This command sets position and orientation thresholds for new data. When these thresholds are set, the position and orientation reported in the continuous data stream does not change until the threshold has been passed. Position data for each axis changes only when the position threshold has been exceeded on that axis; and only that axis’ position changes. Orientation changes when the total rotation vector changes by the attitude threshold. Thresholds are measured from the P&O of the marker when this command is issued. Continuous data *does* continue to flow with the unchanged P&O information. See also [‘@N’ – AutoIncrement](#) on page 92.

### Syntax:

`^N[marker][,position increment, attitude increment]<>`

Part	Description
<i>marker</i>	1-12, frequency index of marker.
<i>position increment</i>	Position delta threshold in inches or centimeters (0-18).
<i>attitude increment</i>	Attitude delta threshold in degrees (0-45).

### Remarks:

The position increment argument is specified in either inches or centimeters, depending on the units specified by the [‘U’ – Set Units](#) command, page 70.

### Output Record:

Table 4-29 ‘^N’ ASCII Response

Byte Index	Format	Description
0	A	First digit of marker number
1	A	Second digit of marker number
2	A	‘n’
3	A	Error Indicator
4	B	ASCII Blank character
5-11	Sxx.xxxB	Position increment
12-18	Sxx.xxxB	Angle increment
19-20	A	Carriage Return/Line Feed

Table 4-30 ‘^N’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	FL	Position increment
12	FL	Attitude increment

### Examples:

To set the P&O increments for launched marker one to 1 inch and 15 degrees:

`^N1,1.0,15.0<>`

## ‘^O’ – RS-232 Port Configuration

---

### Description:

This command sets the RS-232 port configuration. The system output port settings include RS-232 BAUD rate and parity only.

### Syntax:

^O[rate],[parity]<>

Part	Description
------	-------------

<i>rate</i>	bits per second. Valid arguments include:
-------------	---

Table 4-31 ASCII Baud Rate Values

<i>Rate</i>	<i>Baud Rate</i>
24	2,400
48	4,800
96	9,600
192	19,200
384	38,400
576	57,600
1152	115,200

*parity*

Table 4-32 ASCII Parity Values

<i>Parity</i>	<i>Meaning</i>
“0”	None
“1”	Odd
“2”	Even

### Remarks:

See [RS-232 I/O](#) on page [26](#) for reference on the use of RS-232 for communicating with LIBERTY LATUS.

The default RS-232 communications parameters are 115,200 baud, no parity.

In addition:

- The number of data bits is always eight (8).
- The number of stop bits is always one (1).
- Hardware Handshake is always disabled.



**Output Record:**

Table 4-33 ‘^O’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘o’
3	A	Error Indicator
4	B	ASCII Blank character
5-10	A	Baud Rate (see Table 4-31 on page 80)
11	B	Blank
12	A	Parity (see Table 4-32 on page 80)
13-14	A	Carriage Return/Line Feed

Table 4-34 ‘^O’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	Baud Rate (see Table 4-35, below)
12	I	Parity (see Table 4-35, below)

**Examples:**

Suppose there is a requirement to change the baud rate (in software) to 19,200 baud after startup. It can be accomplished with the following command, without turning off and restarting the system.

^O192,1,8,0<>

The system serial communication parameters will now be 19200-baud, no parity, 8 data bits, and 1 stop bit.

**NOTE:** The host communication software may have to be re-set to the new baud rate (19,200) in order for communication with LIBERTY LATUS to continue.

Table 4-35 Binary RS-232 Codes

Code	Baud Rate	Code	Parity
1	2400	0	None
2	4800	1	Odd
3	9600	2	Even
4	19200		
5	38400		
6	57600		
7	115200		

## ‘^R’ – Optimization Mode

---

### Description:

The LIBERTY LATUS can operate in one of two optimization modes. It can be optimized for greater data volume (i.e., more markers) or for greater data throughput (i.e., fewer markers at double the update rate). This command selects the LIBERTY LATUS’ optimization mode:

In *Volume Mode*, the LIBERTY LATUS is optimized for the number of individual markers it can track: 1 to 12 wireless markers can be tracked simultaneously at a maximum frame update rate of 94 Hz.

In *Throughput Mode*, the LIBERTY LATUS is optimized for speed: 1 to 8 wireless markers can be tracked simultaneously at a doubled maximum frame update rate of 188Hz. The markers used must be M1-M8.

Refer to [Optimization Mode](#) on page 48 for further details on Volume Mode and Throughput Mode.

### CAUTION

Because a system initialization is caused by this command, the user may first wish to save recently set system configuration parameters to avoid reverting back to defaults or the previously set system configuration.

### Syntax:

`^R[mode]<>`

Part	Description
<i>mode</i>	0 ... Volume Mode (94 Hz)
	1 ... Throughput Mode (188 Hz)

### Remarks:

To complete the switch between these modes, the ^R command causes the LIBERTY LATUS to reinitialize itself as in the [‘^Y’ – Initialize System](#) command (see page 113).

This will erase any changes made unless they have been previously saved using the [‘^K’ – Save Operational Configuration](#) command on page 107 and/or [‘^S’ – Startup Receptor Alignment Configuration](#) command on page 84.

After the ^R command sets the optimization mode, the LIBERTY LATUS will start up and operate in this mode until it is changed again.

The factory default optimization mode is *Volume Mode*.

In either mode, the update rate can be changed with the [‘R’ – Update Rate](#) command (page [69](#)).

**Output Record:**

Table 4-36 ‘^R’ ASCII Response

Byte Index	Format	Description
0	A	First digit of marker number
1	A	Second digit of marker number
2	A	‘r’
3	A	Error Indicator
4	B	ASCII Blank character
5	x	Current Optimization Mode
6-7	A	Carriage Return/Line Feed

Table 4-37 ‘^R’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	DW	Current Optimization Mode

**Examples:**

To put the LIBERTY LATUS in *Throughput Mode*:

^R1<>

This will cause the LIBERTY LATUS to reinitialize itself. When initialization is complete, and after every initialization or startup thereafter, the LIBERTY LATUS will remain in *Throughput Mode*.

**CAUTION**

Because a system initialization is caused by this command, the user may first wish to save recently set system configuration parameters to avoid reverting back to defaults or the previously set system configuration.

## ‘^S’ – Startup Receptor Alignment Configuration

---

### Description:

This command stores or erases the Receptor Alignments. If “store” is selected, the current receptor alignment data is saved. When this data is saved to flash, the receptor alignment process does not need to be repeated when LIBERTY LATUS is started or restarted. If the data is not saved, alignment must be repeated after each startup or restart.

### Syntax:

*^Scommand*<>

<b>Part</b>	<b>Description</b>
<i>command</i>	0.....Erase 1.....Store

### Remarks:

None.

### Output Record:

None.

### Examples:

To store the current receptor alignment data, type:

*^S1*<>

## ‘^U’ – Active Marker Map

---

### Description:

The purpose of this command is to allow the host to turn a launched marker “on” or “off” in software.

A marker is enabled by launching, but it can then be disabled (or enabled again) by using this command. When a marker is launched and enabled, data records for that marker will be transmitted. If the marker is disabled, no data records from that marker will be transmitted.

### Syntax:

`^U[marker][,state]<>`

or

`^U0[,bitmap]<>`

Part	Description
<i>marker</i>	1-12 ....Frequency index of launched marker to enable/disable. 0.....Causes active station bitmap to be retrieved or set.
<i>state</i>	0.....Disabled 1.....Enabled n/a if <i>marker</i> = 0
<i>bitmap</i>	16-bit bitmap reflecting state of each marker, represented as a hexadecimal number

### Remarks:

If *marker* is supplied **without** a *state*, then the current states of all launched markers are returned. See [‘O’ – Output Data List](#) on page 67. The default condition depends on the number of markers that are currently launched. The default condition of a launched marker is “1” or “enabled”. The default condition of an unlaunched marker frequency is “0” or “disabled.”

If zero “0” is supplied as the marker number, this command will take a hexadecimal bitmap to identify ALL the enabled markers:

e.g.: `^U0,3fff<>` enables all markers.

**NOTE:** Do not place ‘0x’ in front of the input hex bitmap!

If no bitmap is supplied, the current active marker bitmap will be returned in the default response body. This bitmap will indicate the launched markers in the upper 16 bits, and the active markers in the lower 16 bits. A marker must be launched ***and*** enabled to be active.

Enabling or disabling a marker number that does not exist (e.g. marker 13 or any unlaunched marker frequency) has no effect.

**Output Record:**

Table 4-38 ‘^U[marker]’ ASCII Response

Byte Index	Format	Description
0	A	First Digit of Marker Number
1	A	Second Digit of Marker Number
2	A	‘u’
3	A	Error Indicator
4	B	ASCII Blank character
5	X	Marker Freq #1 state (1=Active, 0=Inactive)
6	X	Marker Freq #2 state (1=Active, 0=Inactive)
7-18	X	Marker Freq 3-12 state (1=Active, 0=Inactive)
19,20	AA	Carriage Return/Line Feed

Table 4-39 ‘^U0’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘u’
3	A	Error Indicator
4	B	ASCII Blank character
5-8	XXXX	Hex bitmap of launched markers
9-12	XXXX	Hex bitmap for active markers
13,14	AA	Carriage Return/Line Feed

Table 4-40 ‘^U’ Binary Output Format

Byte Index	Format	Description
0-7		Binary Header
8-11	I	Launched and Active Marker bitmap

Binary output is the same for both ^U[marker]<> and ^U0<>

**Examples:**

A user could launch four markers and then collect a data point from two markers at a time, after disabling the other two. To do so, the following commands would be sent:

1. Send the command ^U3,0<> to turn marker 3 off.
2. Send the command ^U4,0<> to turn marker 4 off.
3. Press P to collect a data point from marker 1 and 2.
4. Send the command ^U3,1<> to turn marker 3 on.
5. Send the command ^U4,1<> to turn marker 4 on.
6. Send the command ^U1,0<> to turn marker 1 off.
7. Send the command ^U2,0<> to turn marker 2 off.
8. Press P to collect a data point from markers 3 and 4.
9. Repeat steps 1 through 8 as necessary.

To turn on markers 1, 3, and 5 while turning off markers 2, 4, 6, 7, 8 send:

^U0,15<>

where 15 corresponds to:

0x15 = 00010101

Bits corresponding to markers 1, 3, and 5 are set and those corresponding to 2, 4, 6, 7, and 8 are cleared. See *bitmap* syntax part description for this command.

## ‘^X’ – Operational Configuration ID

### Description:

This command allows a 16 character “ID” to be assigned to the current operational system configuration. This command also allows the user to view the IDs of all valid stored configurations within LIBERTY LATUS non-volatile configuration memory.

### Syntax:

^Xstring<>

Part	Description
<i>string</i>	A 15 character ASCII <i>string</i> ID that describes the current configuration.

### Remarks:

A valid configuration ID is up to 15 characters plus a null terminator.

If no *string* argument is supplied with this command, LIBERTY LATUS will respond with a list of the currently saved configuration IDs.

A string of 15 asterisks followed by the null character indicates an undefined configuration. (“\*\*\*\*\*\0”)

### Output Record:

Table 4-41 ‘^X’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘x’
3	A	Error Indicator
4	B	ASCII Blank character
5-21	16(A)B	Current Configuration Record ID
22-37	16(A)B	Configuration Record ID #1
38-53	16(A)B	Configuration Record ID #2
54-69	16(A)B	Configuration Record ID #3
70-71	AA	Carriage Return/Line Feed

Table 4-42 ‘^X’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	CH[16]	Current Config ID
24	CH[16]	Default Config ID
40	CH[16]	Config slot 1 ID
56	CH[16]	Config slot 2 ID
72	CH[16]	Config slot 3 ID
88	CH[16]	Startup Config ID



**Examples:**

To determine what configurations are available in the LIBERTY LATUS, issue the following command:

`^X<>`

The returned record could display the following:

Current:	Configuration 1
0	Default
1	Configuration 1
2	Configuration 2
3	*****
Startup	Configuration 1

In this case two unique configurations are stored in LIBERTY LATUS configuration memory. The third configuration is not defined.

To set an ID for the third configuration, do the following:

`^XConfiguration#3<>`

`^K3<>`

To make this configuration the startup configuration:

`^W3<>`

## ‘@A’ – Autolaunch Mode

### Description:

This two-character command sets and reads LIBERTY LATUS’ current autolaunch mode status.

### Syntax:

@A[mode] <>

Part	Description
------	-------------

<i>mode</i>	0.....Autolaunch disabled (Default mode)
	1.....Autolaunch enabled

### Remarks:

Autolaunch mode enables the LIBERTY LATUS system to automatically launch and unlaunch markers by user-defined signal level criteria. This criteria is set with the ‘[^G](#)’ – [Set Autolaunch Criteria](#) command on page 77. When a marker’s signal level above the launch criteria is detected, that marker is automatically launched. When the signal level falls below the unlaunch criteria, the marker is unlaunched.

Since the marker is being launched from an unknown position and orientation, the LIBERTY LATUS is unable to guarantee that the orientation is correct. For an automatic launch there are four possibilities for orientation:

1. The correct orientation
2. 180 degree error in azimuth
3. 180 degree error in roll
4. 180 degree error in azimuth and roll (same as 180 in elevation)

If while using the Autolaunch feature orientation accuracy is of concern, the ‘[^P](#)’ – [Phase Step](#) command on page 109 should be used to set the proper phase.

### Output Record:

Table 4-43 ‘@A’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘@’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	Autolaunch Mode: ‘0’ disabled, ‘1’ enabled
6,7	AA	Carriage Return/Line Feed

Table 4-44 ‘@A’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	Autolaunch Mode: 0 disabled, 1 enabled

### Examples:

To enable Autolaunch, issue the following command:

@A1<>

## ‘@B’ – USB Buffering Mode

---

### Description:

This command enables or disables USB output buffering before USB transmission to the host. When USB buffering is disabled, LIBERTY LATUS operates in a ‘real time’ mode in which only the most current frame of motion data is transmitted. When enabled, buffering mode allows host delays in requests for data without frame loss, but with possible latency introduced.

### Syntax:

@B[*mode*] <>

Part	Description
<i>mode</i>	Defines the status of USB Buffering Mode. The choices are:  0 ... Disabled  1 ... Enabled (default)

### Remarks:

By default, USB buffering mode is enabled.

As with other configuration commands, if no *mode* argument is provided, the current value of the setting is returned in the default response frame.

Buffering Mode applies to USB data I/O only. RS-232 data buffering is controlled by the host computer.

With USB buffering enabled, a First-In-First-Out (FIFO) buffer collects motion data in scenarios where the host computer is not able to capture it at the rate that it is generated. This does not guarantee that data is not lost, but it helps in transient conditions where the host computer does not have continuously available CPU and memory resources to capture every frame over USB. LIBERTY LATUS can buffer up to 2,300 bytes of data.

A consequence of enabling USB buffering mode is that the FIFO operation may result in data latency. When the buffer is *full*, P&O frames delivered to the host computer are not real-time. As such, they may not reflect the P&O of the stations at that instant in time. The P&O reported may be several frames behind real time, depending on the frame rate, frame size, and buffer size.

With USB buffering mode disabled, the FIFO buffer does not fill up with motion data. Each time the host computer requests a new frame, the frame delivered is guaranteed to be as close to real-time as possible, thus avoiding data latency.

**Output Record:**

Table 4-45 '@B' ASCII Response

Byte Index	Format	Description
0	A	'0'
1	A	'0'
2	A	'@'
3	A	Error Indicator
4	B	ASCII Blank character
5	A	'0' Disabled, '1' Enabled
6-7	AA	Carriage Return/Line Feed

Table 4-46 '@B' Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	0x00 Disabled, 0x01 Enabled.

**Examples:**

The command to disable USB buffering mode is:

@B0<>

## ‘@N’ – AutoIncrement

---

### Description:

This command turns on or off the AutoIncrement mode. The system default is to have AutoIncrement on. When the LIBERTY LATUS is in the AutoIncrement mode, new position and orientation data will only be reported when changes in the position and/or orientation have satisfied pre-defined criteria. Note that the data stream will continue if in continuous mode, but the data will not change until the criteria has been satisfied. These pre-defined criteria will change depending on the signal strength and noise values. This will effectively create an automatically adjusting filter. See the [‘^N’ – Increment](#) command (page 79) for descriptions of the position and orientation criteria.

### Syntax:

@N[autoIncrement]<>

Part	Description
------	-------------

<i>autoIncrement</i>	1 to turn on AutoIncrement, 0 to turn it off.
----------------------	---

### Remarks:

See the [‘^N’ – Increment](#) command.

### Output Record:

Table 4-47 ‘@N’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘@’
3	A	Error Indicator
4	B	ASCII Blank character
5	A	1 = On, 0 = Off
6	AA	Carriage Return/Line Feed

Table 4-48 ‘@N’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	1 = On, 0 = Off

### Examples:

@N1<> Turns on AutoIncrement mode

@N0<> Turns off AutoIncrement mode

#### **4.5.2 Operational Commands**

Operational commands are typically executed during normal system operation. They do not affect the configuration of the LIBERTY LATUS.

## ‘A’ – Set Alignment Mode

---

### Description:

The alignment mode is a “learn” mode in which the LIBERTY LATUS determines the position and orientation of each of the receptors automatically. The alignment mode command controls the LIBERTY LATUS receptor alignment process.

### Syntax:

*Acommand* [, [*anchor*], [*hemisphere*], [*verbosity*] ] <>

Part	Description
<i>command</i>	0.....Cancel Alignment Mode 1.....Start Alignment Mode 2.....Set Alignment Parameters

The remaining parts apply only to Start and Set *command*:

<i>anchor</i>	Anchor Receptor number 1-16
<i>hemisphere</i>	The positive direction of the X-axis of the anchor receptor: 1.....+X (default) 2.....+Y 3.....+Z -1 .....-X -2 .....-Y -3 .....-Z
<i>verbosity</i>	0.....Silent mode. 1.....Verbose mode (default). LIBERTY LATUS generates asynchronous ASCII update text messages as receptors are aligned.

### Remarks:

This alignment process should only be performed in a distortion-free environment with the receptors in relatively close proximity. When greater accuracy is required, it is better to manually measure the receptors’ alignments. The criteria for the alignment detection can be set with the [‘^D’ – Alignment Criteria](#) command on page [105](#).



**Output Record:**

ASCII output is only produced for the *start* command in verbose mode. In this mode, ASCII update messages are produced continuously until the alignment is complete.

Typical ASCII output during alignment:

```
Entering the Alignment Mode...
Anchor Receptor: 1
Receptor 2 successfully aligned.
  (...Continues for each receptor)
Exiting Alignment Mode
All receptors have been successfully aligned
```

There is no binary output for this command.

## ‘C’ – Continuous Print Output

---

### **Description:**

This command enables the continuous print output mode. When the system is in continuous mode, the data points from all enabled and launched markers are requested automatically and are streamed to the host continuously. If more than one marker is enabled, then the data from each marker will be sent in numerical order (marker 1 first, marker 2 second, etc.).

Output mode refers to whether the system automatically transmits data records to the host (continuous mode), or the host must request data records by polling the system each time (non-continuous mode).

### **Syntax:**

C<>

### **Remarks:**

The system default disables Continuous print output mode.

If the system is being used in an application where a fast update rate is critical, then the continuous print output configuration should be enabled.

Issuing a [‘P’ – Single Data Record Output](#) command (see page 99) disables continuous print output mode. See also Step 1.5.10 of [Getting Started](#) on page 21 for details on collecting motion data from a marker.

### **Output Record:**

Continuous print output frame data. See also [‘P’ – Single Data Record Output](#) on page 99.

### **Examples:**

To enable continuous output mode, send the command as follows:

C<>

Data from LIBERTY LATUS will now flow continuously to the host computer.

## ‘L’ – Launch Marker

---

### **Description:**

This command instructs LIBERTY LATUS to detect a new marker near the specified receptor.

### **Syntax:**

*Lreceptor*<>

<b>Part</b>	<b>Description</b>
<i>receptor</i>	1 to 16, which specifies the receptor at which the new marker will be launched.

### **Remarks:**

To provide the correct position and orientation, a marker must be started (launched) from a known position and orientation. Launching a marker from behind a receptor with the front of the marker positioned in line with the tail of the receptor allows the system to phase lock onto the marker, providing accurate position and orientation.

### **Output Record:**

None.

## ‘N’ – Launched Marker ID

---

### Description:

The command sets or reads the marker ID of a specified launched marker. The launched marker is specified in this command by its Frequency Index.

### Syntax:

*Nmarker*[,*string* ]<>

Part	Description
<i>marker</i>	1 to 12, Frequency index of launched marker
<i>string</i>	16 character marker ID string.

### Remarks:

When a marker is launched, LIBERTY LATUS associates the launched marker with an installed marker record.

This command may be used to confirm that the launched marker matches the retrieved data from non-volatile memory or to change the marker data being used. This command will seldom be used.

### Output Record:

Table 4-49 ‘N’ ASCII Response

Byte Index	Format	Description
0	A	First Digit of Marker Frequency Index
1	A	Second Digit of Marker Frequency Index
2	A	‘N’
3	A	Error Indicator
4	B	ASCII Blank character
5-21	16(A)B	Marker ID string

Table 4-50 ‘N’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	CH[16]	Marker ID string

### Examples:

The N2<> command may produce the ASCII response below, indicating that the launched marker with frequency index 2 has the serial number/ID “298A50002.”

```
02N 298A50002
```

## ‘P’ – Single Data Record Output

---

### Description:

In non-continuous output mode, this command polls LIBERTY LATUS for a single data record. If more than one marker is launched and enabled, then data from each active marker will be sent in numerical order (marker 1 first, marker 2 second, etc.; that is, a complete cycle of active markers will be output).

Output mode refers to whether the system automatically transmits data records to the host (continuous output mode), or the host must request data records by polling the system each time (non-continuous mode).

### Syntax:

P      **NOTE:** This is the *only* LIBERTY LATUS command that does *NOT* require a <>.

### Remarks:

The system default enables single data record output mode.

### Output Record:

Table 4-51 ‘P’ ASCII Response

Byte Index	Format	Description
0	A	First Digit of Marker Number
1	A	Second Digit of Marker Number
2	A	Error Indicator
3	B	Blank
4-m	See <a href="#">Table 4-12</a> , page <a href="#">67</a>	Data Item #1
M+1 – n	See <a href="#">Table 4-12</a> , page <a href="#">67</a>	
..	See <a href="#">Table 4-12</a> , page <a href="#">67</a>	Data Item #n

Table 4-52 ‘P’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8-n	See <a href="#">Table 4-12</a> , page <a href="#">67</a>	Data Output Item #1, configured by ' <a href="#">O</a> ' – <a href="#">Output Data List</a> command; see page <a href="#">67</a>
N+1 – m	See <a href="#">Table 4-12</a> , page <a href="#">67</a>	Data Output Item #2
..	See <a href="#">Table 4-12</a> , page <a href="#">67</a>	Data Output Item #n

**Examples:**

If the system is being used in an application where data is only needed a certain number of times, or on command, then the single data record output should be used. To poll the system for a single data record, send the command as follows:

P

One data record from LIBERTY LATUS will be sent to the host computer.

## ‘Q’ – Reset Counters

---

### Description:

This command allows the user to zero the frame counting and the frame timestamp feature. The frame counting feature is always enabled; however, it is only output when specified through the [‘O’ – Output Data List](#) command on page [67](#). The framecount is a positive integer value indicating the relative frame number since system start or the last reset. Rollover occurs after  $2^{32}$  frames.

The timestamp feature is always enabled; however, the timestamp is only output if it has been specified in the [‘O’ – Output Data List](#) command on page [67](#). The timestamp is a positive integer value indicating the number of milliseconds since the last reset operation or system start. Rollover occurs after  $2^{32}$  milliseconds.

### Syntax:

*Qcounter*<>

Part	Description
<i>counter</i>	0     Reset both framecount and timestamp
	1     Reset framecount only
	2     Reset timestamp only

### Remarks:

None.

### Output Record:

None.

### Examples:

To zero the framecount, execute the following:

Q1<>



## ‘^A’ – Receptor Alignments

---

### Description:

This command manually sets or reads the alignment P&O data for a specified receptor. Receptor P&O may be configured using either Euler angles or quaternions (see “Orientation Angles,” [Figure 4-1](#)). The alignment P&O is the actual P&O of the receptor in the LIBERTY LATUS alignment frame.

### Syntax:

*^Areceptor,[X,Y,Z,Az,El,Ro]<>*

or

*^Areceptor,[X,Y,Z,Q1,Q2,Q3,Q4]<>*

Part	Description
<i>receptor</i>	1-16 Specifies which receptor to read or set alignment; *Wildcard may be used to read all receptor arguments.
<i>X</i>	X coordinate of receptor position
<i>Y</i>	Y coordinate of receptor position
<i>Z</i>	Z coordinate of receptor position
<i>Az</i>	Azimuth coordinate of receptor Euler orientation
<i>El</i>	Elevation coordinate of receptor Euler orientation
<i>Ro</i>	Roll coordinate of receptor Euler orientation
<i>Q1</i>	Parameter 1 of receptor orientation quaternion
<i>Q2</i>	Parameter 2 of receptor orientation quaternion
<i>Q3</i>	Parameter 3 of receptor orientation quaternion
<i>Q4</i>	Parameter 4 of receptor orientation quaternion

### Remarks:

Although the alignment orientation may be set using either Euler angles or quaternions, when reading the receptor alignment the orientation is always expressed as Euler angles.

**Output Record:**

Table 4-53 '^A' ASCII Response

Byte Index	Format	Description
0	A	First digit of receptor number
1	A	Second digit of receptor number
2	A	'a'
3	A	Error Indicator
4	B	ASCII Blank character
5	3(Sxxx.xxxB)	Receptor alignment position
17	4(Sx.xxxxxB)	Receptor alignment Euler orientation
29,30	AA	Carriage Return/Line Feed

Table 4-54 '^A' Binary Output Format

Byte Index	Format	Description
0-7		Binary Header
8	FL	X
12	FL	Y
16	FL	Z
20	FL	Azimuth
24	FL	Elevation
28	FL	Roll

**Examples:**

The ^A1<> command may produce the ASCII response below, indicating that receptor 1 has an alignment position of (0.0, 0.0, 0.0) and orientation of (0.0, 0.0, 0.0).

These alignment values indicate that receptor 1 is the anchor receptor.

```
01a 0.0000 0.0000 0.0000 0.0000 0.0000 0.0000
```

## ‘^B’ – Aligned Receptors Map

---

### Description:

This command returns bitmap reflecting detected receptors and aligned receptors. This is a read-only command.

### Syntax:

^B<>

### Remarks:

The returned value of this command is a 16-bit hexadecimal bitmap. This bitmap indicates detected receptors are indicated in the upper 16 bits, and aligned receptors are indicated in the lower 16 bits.

### Output Record:

Table 4-55 ‘^B’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘b’
3	A	Error Indicator
4	B	ASCII Blank character
5-8	XXXX	Hex bitmap of detected receptors
9-12	XXXX	Hex bitmap of aligned receptors
13,14	AA	Carriage Return/Line Feed

Table 4-56 ‘^B’ Binary Output Format

Byte Index	Format	Description
0-7		Binary Header
8-11	I	Detected and Aligned Receptor bitmap

### Examples:

The ^B<> command may produce the ASCII response below, indicating that receptors 1-4 are detected, and only receptor 1 is aligned.

```
00b  000f0001
```

## ‘^D’ – Alignment Criteria

---

### Description:

This command allows the user to adjust the sensitivity of the alignment process *while in alignment mode*.

### Syntax:

^D*index*<>

Part	Description
------	-------------

<i>index</i>	0-100, Receptor Distance index. Default value is 50.
--------------	--

### Remarks:

Increasing the *index* argument indicates that receptors are placed farther apart; decreasing the value indicates that they are placed closer together. For alignment to occur during alignment mode, closely positioned receptors should require a higher minimum signal level to be detected. A higher distance *index* indicates that the receptors are farther apart and may be aligned with a weaker detected signal. A higher *index* may result in a more inexact alignment result.

### Output Record:

Table 4-57 ‘^D’ ASCII Response

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘d’
3	A	Error Indicator
4	B	ASCII Blank character
5-8	xxx	Receptor distance index
9,10	AA	Carriage Return/Line Feed

Table 4-58 ‘^D’ Binary Output Format

Byte Index	Format	Description
0-7		Binary Header
8-11	DW	Receptor distance index

## ‘^F’ – Force Alignment

---

**Description:**

This command allows the user to force the system to align a receptor *while in alignment mode*.

**Syntax:**

`^Freceptor<>`

<b>Part</b>	<b>Description</b>
-------------	--------------------

---

<i>receptor</i>	1-16, Specifies which receptor to force alignment.
-----------------	--

**Remarks:**

Sometimes during the alignment process it may be desirable to force the LIBERTY LATUS to align a receptor. If two receptors are too far apart then the alignment criteria will not be met. This command forces the system to align the receptor with the data it has.

Use of this command should be avoided as it can lead to inexact alignments.

**Output Record:**

None.

## ‘^K’ – Save Operational Configuration

---

### Description:

This command allows the user to save an operational configuration to one of three configuration records stored in LIBERTY LATUS non-volatile configuration memory. The configuration saved is the configuration currently defined.

### Syntax:

*^Kslotnum*<>

Part	Description
<i>slotnum</i>	1 – 3: One of three user-definable operational configurations that are stored within LIBERTY LATUS

### Remarks:

Configuration slot number 0 is reserved for the factory default configuration.

A 15 character null-terminated ID string should be assigned to the user-defined configuration before a ‘^K’ is issued. See the [‘^X’ – Operational Configuration ID](#) command on page 87, and the [‘^W’ – Set Operational Configuration](#) on page 112.

### Output Record:

None.

### Examples:

Assume a user wants to save the current custom operational configuration for use later. The user also wants to make this configuration the default ‘power up’ configuration for the user’s LIBERTY LATUS. The following commands should be issued:

<i>^XNewIDstring</i> <>	Assigns an ID string to current configuration
<i>^K1</i>	Saves current configuration to first config slot
<i>^W1</i>	Sets Config Slot 1 to startup config

## ‘^L’ – Unlaunch Marker

---

### **Description:**

This command instructs LIBERTY LATUS to remove the specified marker from the launched marker list. After unlaunch, LIBERTY LATUS no longer collects data for the marker.

### **Syntax:**

*^Lmarker*<>

<b>Part</b>	<b>Description</b>
<i>marker</i>	1 to 12, Frequency index of launched marker.

### **Remarks:**

A marker should be unlaunched whenever it is turned off, the battery needs to be recharged, or it is removed from the motion capture area. If this is not done, the LIBERTY LATUS will continue to report a P&O solution from the ambient noise.

### **Output Record:**

None.



## ‘^P’ – Phase Step

---

### Description:

The phase step command is used in conjunction with the autolaunch mode to set the correct orientation for the markers.

### Syntax:

`^Pmarker<>`

Part	Description
<i>marker</i>	1 to 12, Frequency index of launched marker.

### Remarks:

When in autolaunch mode the orientation has four possibilities:

1. The correct orientation
2. 180 degree error in azimuth
3. 180 degree error in roll
4. 180 degree error in azimuth and roll (same as 180 in elevation)

Each time the phase step command is applied, LIBERTY LATUS steps to the next of these phases. When the marker's reported orientation data is correct, the correct phase has been reached and the ^P command should not be applied again. See also [‘^G’ – Set Autolaunch Criteria](#) on page [77](#).

### Output Record:

None.

## ‘^V’ – WhoAmI

### Description:

This command returns the basic identification and firmware version of the LIBERTY LATUS.

### Syntax:

^V[receptor]<>

Part	Description
<i>receptor</i>	1-16 Specifies which receptor to read version information

### Output Record:

Table 4-59 ‘^V’ ASCII Response

Format	Description
00vAB<>	5-char ASCII header string
Polhemus LIBERTY LATUS	
4/8/12/16 Receptors<>	Number of receptors supported
<>	
Boot Loader Version: <i>version string</i> <>	Boot Loader Version
System Controller Version: <i>version string</i> <>	System Controller Version
Source Controller Version: wireless<>	
Sensor Processor Version 1: <i>version string</i> <>	Sensor Processor Volume Mode Version
Sensor Processor Version 2: <i>version string</i> <>	Sensor Processor Throughput Mode Version
I/O Processor Version: <i>version string</i> <>	I/O Processor Version
<>	
Firmware Packet Load: <i>string</i> <>	Firmware Package Part Number

Table 4-60 ‘^V’<> Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	UC	Receptor count
9	UC	LIBERTY LATUS Type 2 = LIBERTY LATUS
10	UC	Reserved
11-end	CH[]	Same as ASCII response minus ASCII header

Table 4-61 ‘^V[receptor]’ ASCII Response

Format	Description
<i>mvAB</i>	5-char ASCII header string
Receptor <i>n</i> ID: <i>id string</i> <>	Receptor num + product ID
Receptor <i>n</i> Serial Number: <i>sernum string</i> <>	Receptor num + serial number

Table 4-62 ‘^V[receptor]’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	I	ID
12	CH[]	Serial Number

**Examples:**

To determine the firmware version of the System Controller module in LIBERTY LATUS issue the following command:

`^V<`

The record returned will contain the version number of the System Controller, Sensor Processor, I/O Processor, and Boot Loader, as well as the firmware package part number.

## ‘^W’ – Set Operational Configuration

---

### Description:

This command sets the system non-volatile operational configuration to one of four values. This new ‘default’ configuration will be used upon subsequent system initializations. *This command does not change the current configuration of the device until the device is restarted.*

### Syntax:

^Wslotnum<>

Part	Description
slotnum	0.....Default Factory configuration 1-3 .....Custom user-defined configurations

### Remarks:

When using the ‘^W’ command, the [‘^Y’ – Initialize System](#) on page 113 or system power cycle must be applied to make LIBERTY LATUS use the operational configuration.

### Output Record:

None.

### Examples:

If the LIBERTY LATUS’ configuration had been altered (by sending various other commands and saving the result to the configuration non-volatile memory) and the user wanted to return the system to its original factory default settings, then the following commands should be sent:

```
^W0  
^Y
```

After initialization, the system non-volatile configuration memory will be set with all of the factory default parameters. This exercise is especially useful when the system has been modified to the point where the user is not sure how to get back to factory defaults.

**NOTE:** Care should be taken because *all* non-saved custom settings will be lost as a result of the reset.

## ‘^Y’ – Initialize System

---

### **Description:**

This command reinitializes the entire system to an advanced power up state. The user should allow sufficient time for the system to run through its self test and initialization (as signified by completion of LED flashing explained in Step [1.2.8](#) of [Getting Started](#) on page [5](#)) before attempting to send the system additional commands.

### **Syntax:**

^Y<>

### **Remarks:**

This command should be used in conjunction with the command [‘^K’ – Save Operational Configuration](#) on page [107](#), command [‘^W’ – Set Operational Configuration](#) on page [112](#), and/or the command [‘^X’ – Operational Configuration ID](#) on page [87](#).

### **Output Record:**

None.

### **Examples:**

If the user wanted to set the system configuration back to its original, factory default condition, the following commands should be sent:

^W0<>

^Y<>

The system will now be in its original factory default condition. The ^Y simulates turning the system power off, then back on again.

## ‘^Z’ – Read Operational Configuration

---

### Description:

This command allows the user to view the operational configuration settings for the current, factory default and saved custom configurations.

### Syntax:

*^Z[slotnum]<>*

Part	Description
<i>slotnum</i>	0 .....Factory default configuration 1-3 .....One of three user-definable operational configurations that are stored within LIBERTY LATUS

### Remarks:

If no *slotnum* is supplied, the current operational configuration will be returned.

### Output Record:

The ASCII response to ‘^Z’ will be prepended by only the first 3 characters of the normal 5-byte ASCII header:

Table 4-63 ‘^Z’ ASCII Response Header

Byte Index	Format	Description
0	A	‘0’
1	A	‘0’
2	A	‘z’

The body of the response will be a variable length block of text in the format below. Data in italics will vary according to the configuration settings being reported. Table 4-64 on page [115](#) describes the text block line-by-line.

The binary response frame is described by Table 4-65 on page [116](#).

Table 4-64 ‘^Z’ ASCII Response

<b>Format</b>	<b>Description</b>
00z Configuration name<>	3-char ASCII Header Config ID string
<>	
Binary: Yes/No<>	
Metric: Yes/No<>	
Sync Mode: 0/1<>	0 = Off, 1 = On
Frame Rate: 3/4<>	3 = Half, 4 = Default
Echo Mode: On/Off<>	
<>	
Buffering: On/Off<>	
Autolaunch Mode: On/Off<>	
Autolaunch Criteria: Sx.xxxx Sx.xxxx<>	
RS-232 Baud Rate: baudrate<>	See <a href="#">Table 4-38</a> on page <a href="#">86</a>
RS-232 Parity: parity<>	See <a href="#">Table 4-39</a> on page <a href="#">86</a>
<>	
Position Filter Sensitivity: Sx.xxx<>	
Position Filter Low Value: Sx.xxx<>	
Position Filter High Value: Sx.xxx<>	
Position Transition Rate Maximum Value: Sx.xxx<>	
<>	
Attitude Filter Sensitivity: Sx.xxx<>	
Attitude Filter Low Value: Sx.xxx<>	
Attitude Filter High Value: Sx.xxx<>	
Attitude Transition Rate Maximum Value: Sx.xxx<>	
<>	
<b><i>The following text data will be repeated 12 times, for each possible marker on LIBERTY LATUS:</i></b>	
<b>Format</b>	<b>Description</b>
Marker x<>	Marker number
Position Increment: Sx.xxx<>	
Attitude Increment: Sx.xxx<>	
Output List: (xB)..<>	List of Output Data Items (See <a href="#">Table 4-21</a> on page <a href="#">74</a> )

Table 4-65 ‘^Z’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	A	Config ID
24	I	<b>Bits</b>
		0-2
		3-4
		4-31
28	I	<b>Meaning</b>
		Baud rate ( <a href="#">Table 4-38</a> on page 86)
		Parity ( <a href="#">Table 4-39</a> on page 86)
		Reserved
		<b>Bits</b>
		0
		1
		2
		3-4
		5-7
		8-9
10-25		
26		
27		
28-31		
32	FL	Attitude Filter: Sensitivity
36	FL	Attitude Filter: FLow
40	FL	Attitude Filter: FHigh
44	FL	Attitude Filter: FACTOR
48	FL	Position Filter: Sensitivity
52	FL	Position Filter: FLow
56	FL	Position Filter: FHigh
60	FL	Position Filter: FACTOR
64	I	Frame Rate (3=Half, 4=Default)
68	I	Autolaunch mode (0=Enabled/1=Disabled)
72	FL[2]	Autolaunch Criteria
80	FL[12]	Position Increment, 12 possible active Markers
128	FL[12]	Attitude Increment, 12 possible active Markers
<i>The following 80 bytes will be repeated 12 times for each possible active LIBERTY LATUS marker:</i>		
Byte Index	Format	Description
176 + (64 * (station count-1))	I[20]	Output Data List (See <a href="#">Table 4-21</a> on page 74)

**Examples:**

To view the configuration settings for the *current* configuration issue the following command:

^Z<>

To view the configuration settings for the *factory default* configuration issue the following command:

^Z0<>



## ‘@S’ – Signal Strength

### Description

This command is a diagnostic command that allows a user to see the relative signal strengths of the different marker frequencies that the LIBERTY LATUS is receiving. To sample the environment for interfering frequencies, this command would be executed with no markers activated. Values with exponents in the -05 range are reasonable. When this command is issued to the tracker, a signal strength value for each of the twelve marker frequencies is output. This allows a user to determine if interference exists for one or more markers in the tracking environment.

### Syntax:

@S<>

### Remarks:

This is a read-only command.

### Output Record

Table 4-66 ‘@S’ ASCII Response

Byte Index	Format	Description
0	A28	‘CRLFMarker Signal Strengths:CRLF’
28	A2	‘01’
30	A2	‘ASCII Blank characters’
32	A10	x.xxEsxxCRLF
42	A2	‘02’
44	A2	‘ASCII Blank characters’
46	A10	x.xxEsxxCRLF
...		...
182	A2	‘12’
184	A2	‘ASCII Blank characters’
186	A10	x.xxEsxxCRLF

Table 4-67 ‘@S’ Binary Response

Byte Index	Format	Description
0-7		Binary Header
8	FL	Signal Strength 1
12		Binary Header
20	FL	Signal Strength 2
...		...
132		Binary Header
140	FL	Signal Strength 12

## Appendices

### Appendix A. Terms/Acronyms

**6DOF** The **6 Degrees Of Freedom** (XYZAER) needed to define the position and orientation of an object in 3D space.

**Anchor Receptor** The receptor in a LIBERTY LATUS motion tracking environment to which the system references all marker P&O data.

**API** **Application Programming Interface**. Programming library used to develop custom host software for driving the instrument. Sometimes used interchangeably with “SDK.”

**ASCII** **American national Standard Code for Information Interchange** defines a certain 8-bit code for display and control characters.

**Attitude Matrix** A three-by-three matrix containing the direction cosines of the sensor’s X axis in column one, the direction cosines of the sensor’s Y axis in column two, and the direction cosines of the sensor’s Z axis in column three. The order of the Euler angle rotation sequence is azimuth, elevation, and roll.

X Direction Cosines	Y Direction Cosines	Z Direction Cosines
CA*CE	CA*SE*SR - SA*CR	CA*SE*CR + SA*SR
SA*CE	CA*CR + SA*SE*SR	SA*SE*CR - CA*SR
-SE	CE*SR	CE*CR

where:

CA = Cos (azimuth)  
 CE = Cos (elevation)  
 CR = Cos (roll)  
 SA = Sin (azimuth)  
 SE = Sin (elevation)  
 SR = Sin (roll)

**Azimuth** The coordinate of orientation tracking in the horizontal plane where an increase in the angle is clockwise when viewed from above. Azimuth is a rotation around the “Z” or vertical axis. The term “yaw” is often substituted for azimuth, especially in the context of flight.

<b>Baud Rate</b>	The signaling rate on a serial line. For example, to convey an 8-bit byte normally requires at least two additional bit times, a start bit and a stop bit so that synchronization is possible without a separate clocking line. For example, such an arrangement implies for a 9600 baud rate conveyance of data at a $9600 * 8/10 = 7680$ bit rate.
<b>Benign Environment</b>	A tracking environment free of the need for special calibration or compensation brought on by the unique features of a particular installation and its environment (e.g. high light levels for optical tracking, high sound levels for sonic tracking, or high metallic distortion for magnetic tracking). If not otherwise noted, all measurements and statements pertaining to LIBERTY LATUS performance shall be regarded as occurring in such a benign environment.
<b>Binary</b>	Mathematical system based on two digits: 0 and 1.
<b>BIT</b>	<b>Built-In Test</b> features monitoring the status and health of the LIBERTY LATUS, as well as flagging certain preset conditions monitored by the LIBERTY LATUS software. Not to be confused with “bit”, a contraction of binary digit.
<b>bps</b>	Bits per second. Not to be confused with the signaling, or baud rate, which is always equal to or higher than the bit rate. (See baud rate.)
<b>Direction Cosines</b>	The cosines of the angles between the sensor’s x, y, z axes and the X, Y, Z axes of the measurement reference (alignment) frame.
<b>Elevation</b>	Coordinate of orientation tracking in the vertical plane where an increase in the angle is upward from the horizontal. A term often substituted for elevation, especially as it concerns flight, is pitch.
<b>External Event Hardware Input</b>	A flag that can be set into the data stream by the user sending a pulse into the SEU.
<b>Factory Defaults</b>	The values assigned to certain system variables by the factory. Stored in non-volatile memory, they are used to reinitialize the variables if configuration information is lost.
<b>Firmware</b>	Term used to describe the software programmed into LIBERTY LATUS non-volatile memory.

<b>Format</b>	The interchange coding used to present data. LIBERTY LATUS outputs either ASCII or BINARY data, but accepts only ASCII inputs from the host.
<b>Hemisphere</b>	<i>Each receptor can be thought of as existing within a magnetic field or sphere of space, with the positive hemisphere above and the negative hemisphere below. Only half of the total spatial sphere surrounding a receptor can be utilized at any one time, and the launching of a marker into the tracking environment must be performed in the prescribed orientation for unambiguous position measurement.</i> Because of the inversion symmetry of the magnetic fields generated by the markers, there are two possible mathematical solutions for the X, Y, Z position coordinates for each set of marker data processed, and LIBERTY LATUS is unable to determine which solution is the correct one if the marker has not been launched properly.
<b>Host</b>	Any device capable of supporting an RS-232C interface or the high speed USB interface and capable of bi-directional data transmission. Devices may range from a dumb terminal to a mainframe computer.
<b>Installed Marker</b>	An installed marker is one whose data records have been downloaded to the LIBERTY LATUS. A LIBERTY LATUS may have multiple wireless marker data sets installed in non-volatile memory. When a new marker is launched and activated, the new marker is identified and its data is located in the list of installed known wireless markers.
<b>I/O Latency</b>	The interval of time needed by the host computer to transfer data from the LIBERTY LATUS into the host application.
<b>Lag</b>	The interval of time between requesting a LIBERTY LATUS data point and receiving it into the host computer.
<b>Latency</b>	The interval of time between when measurement data were collected and when the P&O result is formatted ready for transfer to the host computer. In some systems, namely active LIBERTY LATUS, there is a time interval between when the data is collected and when the P&O computation can be done. Hence, this definition is intended to correspond to the center point of data collection time so that latency is straightforward and understandable as stated. Other tracking systems (e.g., inertial) may produce raw data continuously or nearly continuously. LIBERTY LATUS latency in this case reduces to the computation time for producing the answer ready for transfer to the host computer.

**LIBERTY LATUS** **L**arge **A**rea **T**racking **U**ntethered **S**ystem. A new generation of wireless and expandable motion tracking tools. LIBERTY LATUS can be configured with 1 to 16 receptors in 4-receptor per circuit board modules. LIBERTY LATUS provides 6DOF tracking parameters on 1 to 12 wireless markers.

**Launched Marker** An activated LIBERTY LATUS wireless marker. The process of activating a marker is known as *launching* the marker. A marker is activated by default when launched into the system. It can subsequently be deactivated but is still considered as launched. A LIBERTY LATUS wireless marker from which data results are expected must be both launched and activated.

**LIBERTY** A generation of flexible and expandable motion tracking tools. The LIBERTY 240/8 allows up to 8 sensors, while the LIBERTY 240/16 allows up to 16 sensors. LIBERTY LATUS is offered only in the 16-port chassis.

**Line of Sight (LOS)** Not obscured or blocked from view, such as a clear line of sight for optical uses.

**LSB** **L**east **S**ignificant **B**it.

**LSD** **L**east **S**ignificant **D**igit.

**Marker** A wireless rechargeable-battery powered module that creates a unique set of orthogonal signals that the tracking environment receptors use to gather data for computing marker position and orientation. Markers are referenced by their Frequency Index. Up to 12 marker frequencies, and thus 12 active markers, can be tracked by LIBERTY LATUS.

**Marker Frequency Index** Index by which markers are referenced. Up to 12 marker frequencies can be tracked by LIBERTY LATUS, one marker per frequency. Multiple markers of the same frequency may be *installed* in LIBERTY LATUS' non-volatile memory, but only one may be active (or 'launched') at one time. Once launched, markers are referenced by their index 1-12; also called "Marker Index" or "Marker Number." This number is reflected on the marker as M1, M2, etc.

**MSB** **M**ost **S**ignificant **B**it.

**Motion Tracking Environment** The volume in which motion tracking is specified to perform as prescribed. Receptors are placed in a contiguous pattern to define this environment where markers can be tracked.

**Orientation Angles** The azimuth, elevation, and roll angles that define the current orientation of the marker coordinate frame with respect to the designated reference frame.

The Euler angle coordinates that are output by LIBERTY LATUS as one measure of marker orientation are graphically defined in [Figure 4-1](#). The Euler angles, azimuth, elevation and roll, are designated  $\psi$ ,  $\theta$ , and  $\phi$ . These angles represent an azimuth-primary sequence of frame rotations that define the current orientation of the marker with respect to the zero-orientation state of the reference receptor or a user-defined reference orientation. The defining rotation sequence is an azimuth rotation followed by an elevation rotation followed by a roll rotation.

The azimuth angle  $\psi$  is defined as a rotation of the X and Y reference axes about the Z reference axis. Note that the transition axes labeled X' and Y' represent the orientation of the X and Y axes after the azimuth rotation.

The elevation angle  $\theta$  is defined as a rotation of the Z reference axis and the X' transition axis about the Y' transition axis. Note that the transition axis labeled Z' represents the orientation of the Z reference axis after the elevation rotation. Note also that the current x-axis of the current sensor frame represents the orientation of the X' transition axis after the elevation rotation.

Lastly, the roll angle  $\phi$  is defined as a rotation of the Y' and Z' transition axes about the x-axis of the marker frame. Note that the y and z-axes of the current sensor frame represent the orientation of the Y' and Z' transition axes after the roll rotation.

Note also that in the example of [Figure 4-1](#), the azimuth, elevation and roll rotations are positive, negative and positive respectively.

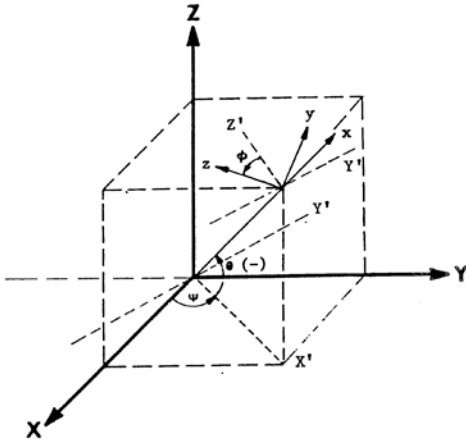


Figure 4-1: Euler Angles

X, Y, Z = Anchor Receptor Reference Frame

x, y, z = Rotated Marker Coordinate Frame

$\Psi$  = Azimuth

$\theta$  = Elevation

$\phi$  = Roll

**Output List**

A list of the data items included in a data record.

**P&O**

**P**osition and **O**rientation, the six pieces of data needed to fully describe tracking of an object in 3D space. Some tracking devices, by virtue of their principle of operation, can produce only position or only orientation whereas others can produce both P&O (although the user usually can opt for only those parameters desired).

**Pitch**

Same as elevation.

**Quaternion**

A four-parameter quantity representing a vector and a scalar. The quaternion  $q = q_0 + i q_1 + j q_2 + k q_3$  can be used to represent the sensor's orientation without the need for trigonometric functions. The attitude matrix output from LIBERTY LATUS can be equivalently represented by the following matrix using quaternions:

X Directional Cosines	Y Directional Cosines	Z Directional Cosines
$q_0^2 + q_1^2 - q_2^2 - q_3^2$	$2(q_1q_2 - q_0q_3)$	$2(q_1q_3 + q_0q_2)$
$2(q_3q_0 + q_1q_2)$	$q_0^2 - q_1^2 + q_2^2 - q_3^2$	$2(q_2q_3 - q_0q_1)$
$2(q_1q_3 - q_0q_2)$	$2(q_1q_0 + q_3q_2)$	$q_0^2 - q_1^2 - q_2^2 + q_3^2$

**Receptor**

A special sensor connected to the LIBERTY LATUS SEU for monitoring marker signals needed to compute marker P&O.

<b>Reference Location</b>	An arbitrary point (P&O) near the motion tracking environment that can be defined to LIBERTY LATUS for basing all reported marker P&O measurements. If an “Anchor Receptor” is in use, the Reference Location is the P&O of the Anchor.
<b>Response</b>	The interval of time between a request to the LIBERTY LATUS to collect a data point and when that data is available for input from the LIBERTY LATUS.
<b>Roll</b>	Coordinate of orientation tracking about the azimuth-elevation axis where an increase of the angle is clockwise as viewed from behind or in the same direction as the object is facing.
<b>SDK</b>	<u>S</u> oftware <u>D</u> eveloper’s <u>K</u> it. Software development toolset available for Polhemus LIBERTY-based LATUS; consists of programming libraries, help files, and sample code. Sometimes referred to as “API,” although API refers specifically to the programming libraries used to interface with the instrument.
<b>Sync</b>	Synchronization. For example, sync signal.
<b>System Electronics Unit (SEU)</b>	LIBERTY LATUS chassis.
<b>Units</b>	The unit of assumed distance. LIBERTY LATUS allows measurement in either inches or centimeters.
<b>Update Rate</b>	The rate at which motion-tracking data can be made available from the LIBERTY LATUS.
<b>Useful Range</b>	The maximum distance at which the resolution and noise performance of the LIBERTY LATUS can be realized.
<b>User Defaults</b>	The values assigned to certain system variables by the user. Stored in non-volatile memory, the system receives these variable values at power-up.
<b>XYZ or X, Y, Z</b>	The Cartesian coordinates of position tracking where normally +X is in the forward direction; +Y is in the right hand direction; and +Z is downward.



**XYZAER**            The output string of data reporting the position, (XYZ) and orientation (AER: Azimuth, Elevation and Roll) of the tracking marker.

**Yaw**                Same as azimuth.

<>                    Used in text to indicate the “Enter” key.

^                      Used in text to indicate the “Ctrl” key.

## Appendix B. System Output Data Records

### ASCII FORMAT

INITIATING COMMANDS ... P or C (continuous mode)

	Byte Index	Format	Description
HEADER	0	A	First Digit of Marker Number
	1	A	Second Digit of Marker Number
	2	A	Command Letter
	3	A	Error Indicator
	4	B	ASCII Blank character
	5 thru n	A	See Possible Formats below
	n+1, n+2	<>	A P&O response frame may not contain a Carriage Return/Line Feed as specified by the user with the 'O' command

Original Precision:

?* ..	x,y,z position Cartesian Coordinates	3(Sxxx.xxx)
?* ..	az,el,roll Euler orientation angles	3(Sxxx.xxx)
?* ..	direction cosines of the sensor's x,y,z axis	3(Sx.xxxxx)
?* ..	Orientation Quaternion (Q0-Q3)	4(Sx.xxxxx)
?* ..	Stylus Switch x where: x = 0 or 1	

Extended precision:

?* ..	x,y,z position Cartesian coordinates	3(Sx.xxxxxESxxb)
?* ..	az,el,roll Euler orientation angles	3(Sx.xxxxxESxxb)


?\* The system data record contents are specified by the user using the "O" command and may vary from configuration to configuration. Therefore, the specific location of a data item in the output record is not determined until the record contents are defined.

**NOTE:** Original precision is retained for compatibility with previous Polhemus 3SPACE systems. Also, note that some item values are repeated as extended precision items, although no output difference is made (i.e., space, <cr lf>). Original and extended precision may be freely mixed in an output record, but it is recommended that extended precision be used if compatibility is not required, as the original precision may be deleted in future systems.


**BINARY FORMAT**


INITIATING COMMANDS ... P or C (continuous mode)

	Byte Index	TYPE	Description
HEADER	0,1	US	Frame Tag, always 'LU' or 0x4C55 for LIBERTY LATUS
	2	UC	Marker Number
	3	UC	Initiating command
	4	UC	Error Indicator
	5	UC	Reserved
	6,7	SH	Response size; number of bytes in the response body
	8 - n		Binary Response body

- ?\* ... x,y,z position Cartesian coordinates FL[3] 
- ?\* ... az,el,roll Euler orientation angles FL[3]
- ?\* ... direction cosines of the sensor's x,y,z axes. FL[3]

?\* The system data record contents are specified by the user using the "O" command and may vary from configuration to configuration. Therefore, the specific location of a data item in the output record is not determined until the record contents are defined.

 The notation FL[3] refers to the ANSI/IEEE Standard for Binary Floating-Point Arithmetic 754-1985 format of data. This is defined in the standard as:

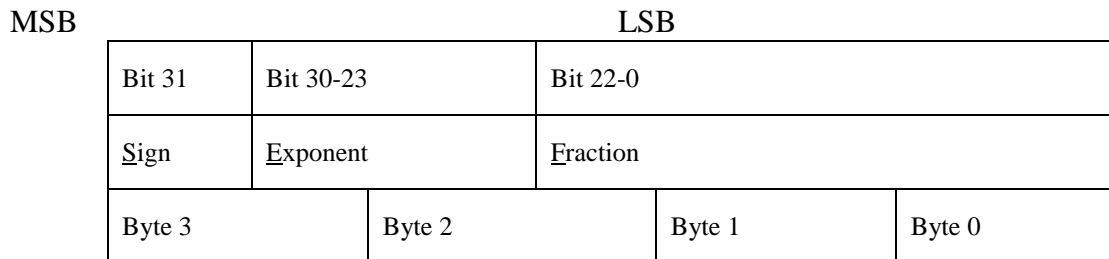

The IEEE floating-point format uses sign magnitude notation for the mantissa, and an exponent offset by 127. In a 32-bit word representing a floating-point number, the first bit is the sign bit. The next 8 bits are the exponent, offset by 127 (i.e., the actual exponent is e - 127). The last 23 bits are the absolute value of the mantissa with the most significant 1 implied. The decimal point is after the implied 1, or in other words, the mantissa is actually expressed in 24 bits. In the normal case an IEEE value is expressed as:

$$(-1)^S * (2^{(e-127)}) * (01.f) \text{ If } 0 < e < 255$$

## Appendix C. Limited Warranty and Limitation of Liability

Polhemus warrants that the Product shall be free from defects in material and workmanship for a period of two years from the date of Polhemus's delivery to the Buyer, or two years and 30 days from the date ownership of Product passed to the Buyer, whichever occurs first, with the exception of FastSCAN, Marker, and mechanical failure of a battery assembly which have a warranty period of only one year. Batteries have a 90 day warranty period. Polhemus shall, upon notification within the warranty period, correct such defects by repair or replacement with a like serviceable item at Polhemus's option. This warranty shall be considered void if the Product is operated other than in accordance with the instructions in Polhemus's User Manual or is damaged by accident or mishandling. Parts or material which are disposable or expendable or subject to normal wear beyond usefulness within the warranty period such as lamps, fuses, etc., are not covered by this warranty.

In the event any Product or portion thereof is defective, Buyer shall promptly, and within the warranty period, notify Polhemus in writing of the nature of the defect and return the defective parts to Polhemus at the direction of Polhemus's Customer Service representative. Upon determination by Polhemus that the parts or Products are defective and covered by the warranty set forth above, Polhemus, at its option shall repair or replace the same without cost to Buyer. Buyer shall be responsible for any import/export duties/tariffs and pay all charges for transportation and delivery costs to Polhemus's factory for defective parts where directed to be sent to Polhemus, and Polhemus shall pay for transportation costs to Buyer's facility only for warranty replacement parts and Products. Removed parts covered by claims under this warranty shall become the property of Polhemus.

In the event that allegedly defective parts are found not to be defective, or not covered by warranty, Buyer agrees that Polhemus may invoice Buyer for all reasonable expenses incurred in inspecting, testing, repairing and returning the Products and that Buyer will pay such costs on being invoiced therefor. Buyer shall bear the risk of loss or damage during transit in all cases.

Any repaired or replaced part or Product shall be warranted for the remaining period of the original warranty or thirty (30) days, whichever is longer.

Warranties shall not apply to any Products which have been:

- repaired or altered other than by Polhemus, except when so authorized in writing by Polhemus; or
- used in an unauthorized or improper manner, or without following normal operating procedures; or
- improperly maintained and where such activities in Polhemus's sole judgment, have adversely affected the Products. Neither shall warranties apply in the case of damage through accidents or acts of nature such as flood, earthquake, lightning, tornado, typhoon, power surge(s) or failure(s), environmental extremes or other external causes. Warranties shall not apply to any Products if the Products are defective because of normal wear and tear; or
- used for any purpose without obtaining any applicable regulatory approvals.

POLHEMUS DOES NOT WARRANT AND SPECIFICALLY DISCLAIMS THE WARRANTY OF MERCHANTABILITY OF THE PRODUCTS OR THE WARRANTY OF FITNESS OF THE PRODUCTS FOR ANY PARTICULAR PURPOSE. POLHEMUS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, EXCEPT OF TITLE AND AGAINST PATENT INFRINGEMENT, OTHER THAN THOSE SPECIFICALLY SET FORTH HEREIN.

IN NO EVENT SHALL POLHEMUS BE LIABLE UNDER ANY CIRCUMSTANCES FOR SPECIAL INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUE. WITHOUT LIMITING THE FOREGOING POLHEMUS'S MAXIMUM LIABILITY FOR DAMAGES FOR ANY CAUSE WHATSOEVER, EXCLUSIVE OF CLAIMS FOR PATENT INFRINGEMENT AND REGARDLESS OF THE FORM OF THE ACTION (INCLUDING BUT NOT LIMITED TO CONTRACT NEGLIGENCE OR STRICT LIABILITY) SHALL BE LIMITED TO BUYER'S ACTUAL DIRECT DAMAGES, NOT TO EXCEED THE PRICE OF THE GOODS UPON WHICH SUCH LIABILITY IS BASED.

The Products are not certified for medical or bio-medical use. Any references to medical or bio-medical use are examples of what medical companies have done with the Products after obtaining all necessary or appropriate medical certifications. The end user/OEM/VAR must comply with all pertinent FDA/CE and all other regulatory requirements.

## Appendix D. Specifications

### Update Rate

1-8 wireless markers: 188Hz per marker, simultaneous samples.  
9-12 wireless markers: 94Hz per marker, simultaneous samples.

### Latency

5 milliseconds

### Number of Receptors

1 to 16

### Number of Wireless Markers

1 to 12

### I/O Ports

USB; RS-232 to 115,200 Baud, both are standard

### Static Accuracy

0.5 degree and 0.1 inch (0.254cm) using 1 marker and 1 receptor at 30 inches (76.2cm). Accuracy is installation dependent, typical accuracy may normally result in 1 to 3 degrees and 1 to 3 inches (2.54cm to 7.62cm)

### Resolution

0.002 in. (0.05 mm) at 12 in. (30 cm) range; 0.005° orientation

### Range

Individual receptors have a range of 4 foot radius (8 foot diameter); depending on receptor arrangement range may increase somewhat

### Multiple Systems

May be concatenated to extend range

### Angular Coverage

All-attitude

### Data Format

Operator selectable ASCII or IEEE 754 binary; English/Metric Units

### External Event Hardware Input

Reportable in output data

### Output Sync Pulse

TTL frame sync output

### Physical Characteristics

#### ***SEU w/power supply:***

12.2 in. (31 cm) L x 7 in. (17.8 cm) W x 11 in. (28 cm) H

Weight between 10-11.5 lbs. (4.5-5.25 kg), depending on number of receptor processor boards installed

#### ***Extended Wireless Marker:***

3.00 in. (7.62cm) L x 1.66 in. (4.22cm) W x 0.97 in (2.46cm) H; weight 2.8 oz. (79.4 gm)

#### ***Standard Wireless Marker (discontinued):***

2.92 in. (7.4cm) L x 1.56 in. (3.96cm) W x 0.85 in. (2.16cm) H; weight 2 oz. (56.7 gm)

#### ***Receptor:***

2.5 in. (6.35cm) L x 1.4 in. (3.56cm) W x 1.4 in. (3.56cm) H; weight 3.2 oz. (90.7 gm)

Cable length: 60 ft. (18.3m)

### Power Requirements

100-240VAC, 50/60 Hz. Nominal (85-264 VAC, 47 – 440 Hz. max rating), single phase 50 W



## Appendix E. Customer Service

If problems are encountered with the LIBERTY LATUS or if you are having difficulty understanding how the commands work, help is just a telephone call away.

Call Polhemus at the numbers listed below and select “2” for Customer Service and then “1” for Technical Support. Polhemus is open Monday through Friday, 8:00 AM to 5:00 PM, Eastern Standard Time. For the most part, our customer service representatives are usually able to solve problems over the telephone and get you back into the fast lane right away.

Help is also available on our web page at [www.polhemus.com](http://www.polhemus.com). Simply double-click Technical Support, and then click [techsupport@polhemus.com](mailto:techsupport@polhemus.com) to send us an email describing the problem or question.

If a problem requires repair of your system, the customer service representative will issue a Return Merchandise Authorization (RMA) number and you may then return the system to the factory. ***Do not return any equipment without first obtaining an RMA number.*** Please retain and use the original shipping container, if possible, to avoid transportation damages (for which you or your shipper would be liable). If your system is still under warranty, Polhemus will repair it free of charge according to the provisions of the warranty as stated in [Appendix C](#) of this document. The proper return address is:

**Polhemus  
40 Hercules Drive  
Colchester, VT 05446  
Attention RMA # \_\_\_\_\_**

**From within the U.S. and Canada: (800) 357-4777**

**From outside the U.S. or Canada: (802) 655-3159**

**Fax #:(802) 655-1439**



## Index

, (Delimiter) .....	54	battery charging risks.....	53
... (Repeat) .....	54	battery handling.....	i, 53
@ (Unique 2-character command).....	55	Baud Rate .....	A-1
^@A' - Autolaunch Mode .....	90	Benign Environment.....	A-2
[ ] (Optional).....	54	Binary .....	56, A-2
^ (Ctrl or Control Key) .....	54	Binary Format.....	B-10
^ (Ctrl) .....	A-8	BIT.....	A-2
^A' - Receptor Alignments.....	103	bits per second .....	A-2
^B' - Aligned Receptors Map.....	105	bps .....	A-2
^D' - Alignment Criteria.....	106	Buffering Mode .....	91
^E' - Set Echo Mode.....	77	'C' - Continuous Print Output.....	97
^F' - Force Alignment .....	107	CAUTION - battery charging risks .....	53
^G' - Set Autolaunch Criteria.....	78	Charging and Using Marker Batteries .....	7
^K' - Save Operational Configuration.....	108	Charging Marker Batteries .....	52
^L' - Unlaunch Marker .....	109	Choose a Reference Location .....	41
^N' - Increment.....	51, 80	Cleaning the instrument.....	i
^O' - RS-232.....	81	Command Format Notes.....	55
^P' - Phase Step.....	110	Command Reference .....	60
^R' - Optimization Mode.....	83	Command Syntax .....	54
^S' - Startup Receptor Alignment Configuration .....	85	Component Description .....	26
^U' - Active Marker Map .....	86	Configuration Changes .....	52
^V' - WhoAmI.....	111	Configuration Commands.....	60
^W' - Set Operational Configuration.....	113	Contact information.....	E-1
^X' - Operational Configuration ID .....	88	Continuous Print Output.....	97
^Y' - Initialize System.....	114	Counters (Reset) .....	102
^Z' - Read Operational Configuration .....	115	Customer Service.....	E-1
(Either/Or).....	54	<b>Data Format</b> .....	D-1
'@B' USB Buffering Mode.....	91	Default Parameters .....	55
'@N' - AutoIncrement.....	93	Direction Cosines .....	A-2
'@S' - Signal Strength.....	118	Elevation.....	A-2
'B' - 'Boresight.....	61	E-mail contacts .....	E-1
<> (Enter) .....	54, A-8	Error Code Summary.....	59
6 Degrees of Freedom.....	A-1	Error Responses.....	57
6DOF .....	A-1	Euler Angles .....	A-5
'A' - Set Alignment Mode .....	95	Experiment with LIBERTY LATUS Data .....	25
Active Marker Map.....	86	External Event Hardware Input .....	A-2, D-1
Adaptive Filters .....	51	External Sync I/O .....	26
Aligned Receptors Map .....	105	F 72, 74	
Aligning Receptor.....	39	'F' - Output Format.....	63
Alignment Criteria .....	106	FACTOR .....	72, 74
Anchor Receptor.....	A-1	Factory Defaults .....	A-2
<b>Angular Coverage</b> .....	D-1	FHigh.....	72, 74
API.....	A-1	Figure	
ASCII.....	56, A-1	+X Hemisphere direction of marker .....	36
ASCII Format .....	B-9	Aligned Receptor List .....	22
Attitude Filter Parameters .....	74	Auto Align Confirmation Dialog .....	21
Attitude Matrix .....	A-1	<a href="#">Auto Align Criteria</a> .....	37, 38
Auto Alignment Completion .....	40	Auto Align Receptor List.....	39
Autolaunch Mode .....	90	Auto-Align Marker Starting Orientation.....	38
Automatic Marker Launch and Unlaunch.....	47	Autolaunch.....	48
Automatic Receptor Alignment .....	35	Batteries Charging.....	11
Azimuth .....	A-1	Battery Charger and Power Pack, rear view .....	31

Battery Charger Power ON ..... 11  
 Battery Charger, front view ..... 31  
 Battery Charging Components ..... 10  
 Battery insertion ..... 14  
 Battery tab orientation ..... 13  
 Euler Angles ..... A-6  
[Example Staging Area](#) ..... 34  
 External Sync ..... 27  
 HELP button location on Receptor Alignment dialog box ..... 35  
 LIBERTY LATUS ..... 1  
 LIBERTY LATUS Rear Panel ..... 3  
 Lifting the battery ..... 12  
 List of aligned receptors ..... 40  
 Manually Align Receptor ..... 42  
 Marker ..... 30  
 Marker in PiMgr Status Pane ..... 22  
 Marker Launch Orientation ..... 46  
 Marker Number Label ..... 4  
 Marker Power Switch and LED ..... 15  
 Optimization mode dialog box ..... 50  
 Output Rate ..... 50  
 PiMgr Data Record Display ..... 23  
 PiMgr Device Menu – Receptor Alignment ..... 19  
 PiMgr Device Menu – Tracker Configuration ..... 18  
 PiMgr Screen Display, No Connection ..... 17  
 Placing Batteries into Charger ..... 11  
 Power Connector ..... 4  
 Preparing to remove the battery ..... 12, 30  
 Proper seating of spring clip ..... 13  
 Receptor ..... 28  
 Receptor Alignment Dialog ..... 20  
 Receptor and Receptor Connector Cord ..... 3  
 Receptor 'Cluster' Pattern (Top View) ..... 34  
 Receptor 'Serial' Pattern (Top View) ..... 33  
 Receptor/Marker Test Setup ..... 4  
 Receptors Not Aligned PiMgr Status Pane ..... 19  
 RS-232 Cable Connection ..... 6  
 RS-232 Display ..... 18  
 Save or Erase Startup Alignment Data ..... 43  
 Select Anchor Receptor ..... 20, 36  
 Select Hemisphere ..... 36, 37  
 Select Launch Receptor ..... 46  
 Select marker to unlaunch ..... 47  
 Select Receptor for Manual Alignment ..... 41  
 Spring clip improperly seated ..... 13  
 Start Auto Align ..... 21  
 Successful battery installation ..... 14  
 Unlaunching a marker ..... 47  
 USB Cable Connection ..... 5  
 Firmware ..... A-2  
 FL[3] ..... B-10  
 FLow ..... 72, 74  
 Force Alignment ..... 107  
 Force Alignment If Necessary ..... 40  
 Format ..... A-3

Frequency Index ..... A-4  
 'G' - Marker Reference Frame ..... 64  
 Getting Started ..... 1  
 Hemisphere ..... A-3  
 Host ..... A-3  
 I/O Considerations ..... 32  
 I/O Latency ..... A-3  
**I/O Ports** ..... D-1  
 Increment ..... 51, 80  
 Initialize System ..... 114  
 Installed Marker ..... A-3  
 Installed Markers ..... 66  
 Installing LIBERTY LATUS Host Software ..... 15  
 'L' - Launch Marker ..... 98  
 Lag ..... A-3  
 Latency ..... A-3, D-1  
 Launch Marker ..... 46, 98  
 Launched Marker ..... A-4  
 Launched Marker ID ..... 99  
 least significant bit (LSB) ..... A-4  
 least significant digit (LSD) ..... A-4  
 LED Indicator ..... 26  
 LIBERTY ..... A-4  
 LIBERTY LATUS ..... A-4  
 LIBERTY LATUS Models ..... 1  
 Limited Warranty and Limitation of Liability ..... C-1  
 Line of Sight (LOS) ..... A-4  
 Lithium Lithium ion/Lithium polymer Batteries Handling Recommendations ..... i, 53  
 LOS (Line of Sight) ..... A-4  
 LSB (least significant bit) ..... A-4  
 LSD (least significant digit) ..... A-4  
 'M' - Installed Markers ..... 66  
 Manual Marker Launch ..... 45  
 Manual Marker Unlaunch ..... 46  
 Manual Receptor Alignment ..... 40  
 Marker ..... 1, 30, A-4  
 Marker Battery Charger ..... 30  
 marker frequency ..... 44  
 Marker Frequency Index ..... A-4  
 Marker Installation ..... 48  
 Marker Launch and Unlaunch ..... 44  
 Marker Operation ..... 44  
 Marker Reference Frame ..... 64  
**Markers (Number of Wireless)** ..... D-1  
 Measure Receptor P&O Relative to the Origin ..... 41  
 most significant bit (MSB) ..... A-4  
 Motion Tracking Environment ..... A-5  
 MSB (most significant bit) ..... A-4  
**Multiple Systems** ..... D-1  
 'N' - Launched Marker ID ..... 99  
 Notation ..... 54  
 'O' - Output Data List ..... 68  
 Operational Configuration ID ..... 88  
 Optimization and Update Rate ..... 49  
 Optimization Mode ..... 83

Orientation Angles .....	A-5	Set Echo Mode .....	77
Output Considerations .....	51	Set Operational Configuration .....	113
Output Data List .....	68	Set Sync Mode .....	76
Output Format .....	63	Set Units .....	71
Output List .....	A-6	Setting Up LIBERTY LATUS .....	2
<b>Output Sync Pulse</b> .....	D-1	SEU (System Electronics Unit) .....	1, 26, A-7
Overview .....	54	SEU w/power supply .....	D-1
'P' - Single Data Record Output .....	100	Single Data Record Output .....	100
P&O (Position & Orientation) .....	A-6	Software Developer's Kit (SDK) .....	A-7
P&O (Position and Orientation) .....	1	Specifications .....	D-1
Phase Step .....	110	Start Auto-Align .....	38
<b>Physical Characteristics</b> .....	D-1	Startup Receptor Alignment Configuration .....	85
PiMgr GUI .....	5, 6, 16, 32	<b>Static Accuracy</b> .....	D-1
PiMgrGUI .....	6	Station Wildcard .....	55
Pitch .....	A-6	Sweep Marker by Receptors .....	38
Place Marker .....	38, 46	Sync .....	A-7
Position & Orientation (P&O) .....	1, A-6	System Electronics Unit (SEU) .....	1, 26, A-7
Position Filter Parameters .....	72	System Operation .....	32
<b>Power Requirements</b> .....	D-1	System Output Data Records .....	B-9
Powering Up .....	32	Table	
'Q' - Reset Counters .....	102	'@A' ASCII Response .....	90
Quaternion .....	A-6	'@A' Binary Response .....	90
'R' - Update Rate .....	70	'@N' ASCII Response .....	93
<b>Range</b> .....	D-1	'@N' Binary Response .....	93
Read Operational Configuration .....	115	'@S' ASCII Response .....	118
Receptor .....	1, 28, A-6, D-1	'@S' Binary Response .....	118
Receptor Alignment .....	34	^A' ASCII Response .....	104
Receptor Alignments .....	103	^A' Binary Output Format .....	104
Receptor Ports .....	26	^B' ASCII Response .....	105
Receptor Positioning and Setup .....	33	^B' Binary Output Format .....	105
Receptor Setup .....	33	^D' ASCII Response .....	106
<b>Receptors (number of)</b> .....	D-1	^D' Binary Output Format .....	106
Reference Frame Setup .....	43	^E' ASCII Response .....	77
Reference Location .....	A-7	^E' Binary Response .....	77
Reset Counters .....	102	^G' ASCII Response .....	78
<b>Resolution</b> .....	D-1	^G' Binary Response .....	78
Response .....	A-7	^N' ASCII Response .....	80
Response Format Notes .....	56	^N' Binary Response .....	80
Return Merchandise Authorization (RMA) .....	E-1	^O' ASCII Response .....	82
RMA (Return Merchandise Authorization) .....	E-1	^O' Binary Response .....	82
Roll .....	A-7	^R' ASCII Response .....	84
RS-232 .....	1, 27, 81	^R' Binary Response .....	84
RS-232 Communications .....	4, 5	^U' Binary Output Format .....	87
RS-232 I/O .....	27	^U[marker]' ASCII Response .....	87, 116, 117
RS-422 .....	27	^U0' ASCII Response .....	87, 116, 117
RS-422 I/O .....	27	^V' <> Binary Response .....	111
Safety Notices .....	i	^V' ASCII Response .....	111
Save Operational Configuration .....	108	^V[receptor]' ASCII Response .....	111
Saving Receptor Alignments .....	42	^V[receptor]' Binary Response .....	111
SDK (Software Developer's Kit) .....	A-7	^X' Binary Response .....	88
Select Anchor .....	36	^Z' ASCII Response .....	115, 116
Select Hemisphere .....	36	^Z' ASCII Response Header .....	115
Select Launch Receptor .....	45	^Z' Binary Response .....	115, 117
Set Alignment Criteria If Necessary .....	37, 40	'Y' Binary Response .....	75
Set Alignment Mode .....	95	ASCII Baud Rate Values .....	81, 82
Set Autolaunch Criteria .....	78	ASCII Parity Values .....	81, 82

ASCII Response Format.....	56	'Z' Binary Response.....	76
'B' ASCII Response.....	61	throughput mode.....	49, 50, 70, 83
'B' Binary Response.....	61	'U' - Set Units.....	71
Binary Response Format.....	57	Units.....	A-7
Binary RS-232 Codes.....	82	unlaunch.....	78
External Sync Pin-Outs.....	27	Unlaunch Marker.....	109
'F' ASCII Response.....	63	Update Rate.....	70, A-7, D-1
'F' Binary Response.....	63	USB.....	1, 27
'G' ASCII Response.....	65	USB Buffering Mode.....	91
'G' Binary Response.....	65	USB Communications.....	4, 5
LED Indicators.....	26	USB Driver Installation.....	5, 15
'M' ASCII Response.....	66	USB I/O.....	27
'M' ASCII Response Header.....	66	Useful Range.....	A-7
'M' Binary Response.....	66, 67	User Command Set Summary.....	58
'N' ASCII Response.....	99	User Defaults.....	A-7
'N' Binary Response.....	99	Using the ASCII Interface.....	23
'O' ASCII Response.....	69	Using the Polhemus PiMgr GUI.....	5, 6, 16, 32
'O' Binary Response.....	69	Video Sync.....	28
Optimization Mode/Update Rate Summary.....	50	volume mode.....	49, 50, 70, 83
Output Data Types.....	68, 100, 101	Warnings.....	i
'P' ASCII Response.....	100	WhoAmI.....	111
'P' Binary Response.....	100	Wildcard.....	55
'R' ASCII Response.....	70	Wireless Marker.....	D-1
'R' Binary Response.....	70	<b>Wireless Markers (Number of)</b> .....	D-1
RS-232 Pin-Outs.....	27	'X' - Position Filter Parameters.....	72
System Status Indicators.....	5, 23	X, Y, Z.....	A-7
'U' ASCII Response.....	71	XYZ.....	A-7
'U' Binary Response.....	71	XYZAER.....	A-8
'X' ASCII Response.....	73, 88	'Y' - Attitude Filter Parameters.....	74
'X' Binary Response.....	73	Yaw.....	A-8
'Y' ASCII Response.....	75, 116, 117	'Z' - Set Sync Mode.....	76
'Z' ASCII Response.....	76		