


ContourHD
Wearable Camcorder

User's Guide

About the Camera

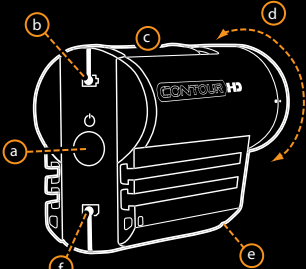

- a Power Button
- b Battery Status
- c Record Button
- d Rotating Lens
- e Record Status
- f Memory Status



- a HD/SD Switch
- b USB
- c Charge Indicator
- d Battery Latch
- e Battery Slot
- f MicroSD Card


Getting Ready

- Open the back door.
- Insert battery with (+) aligned and close orange latch.
- Align back door slightly above camera and slide down until it locks in.



Power Up


- Push and hold power button (1 second) to turn on.
- Camera beeps and lights turn off.
- You are ready to record

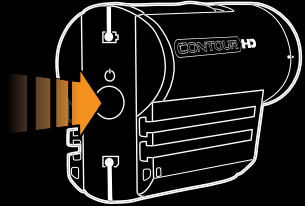

Note: Power up with record switch forward to enable silent mode.

Record

- Start recording: slide switch forward.
- Stop recording: slide switch back.
- Congrats, your first video!




Share

- Turn camera on and connect to computer with USB cable.
- Install VholdR Desktop directly from MicroSD card provided or download at: www.vholdr.com/support/software.
- Import, clip and share your videos...

Note: HD is beautiful but some computers cannot play smooth HD video. Visit www.vholdr.com/support for the latest information on computer requirements.


Flat Surface Mount

- Unhook leash on base and loop through camera.
- Slide camera onto rails until it clicks.
- Adhere mount to flat surface (top or side of helmet recommended).
- Hold base, pull camera away, rotate to align, and press into mount to reattach.

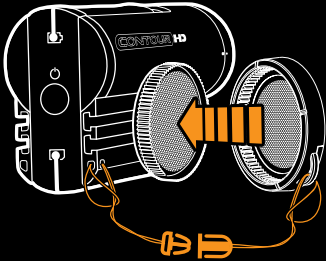


Goggle Mount

- Slide camera on rails until it clicks.
- Press thumb on large tab (top of mount) and pull camera away.
- Slide goggle strap into base.
- Align vertical angle of camera.
- Snap rails back into mount over strap.

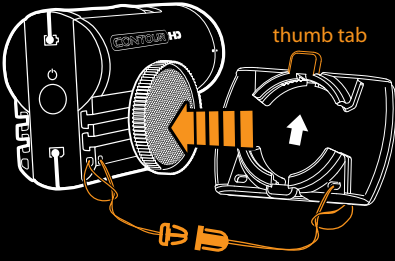

Align

- Press power button to activate lasers.
- Aim at your hand, a wall, or other object.
- Rotate lens to align lasers horizontally.
- Remove and reorient mount rails to adjust mount angle. Aim a little high for the best shot.

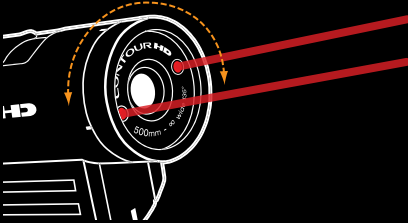

Resolution Settings

- Use switch under back door to select video resolution.
HD: Amazing Clarity
1280 x 720 at 30fps
30 min avg record time/GB
135 deg. field of view

SD: Fast Action
848 x 480 at 60fps
60 min avg record time/GB
90 deg. field of view
- 2GB microSD card included. Accepts up to 16GB microSD (SDHC Compatible)

Note: Always power off before ejecting card.

Power

Recharge

- Connect to computer with USB cable.
- Red light indicates charging.
- Charge complete when camera beeps and red light turns off. (about 3 hrs)

Power Off

- Press and hold power button 3 seconds.
- Hear a double beep and lights turn off.
- Camera automatically turns off after 15 min of inactivity.

Status

Press power button to check status.

- Memory / Battery Available
Green > 80% | Yellow 20-80% | Red <20%
- Record Status
Green = ready | Red = recording
Flashing = memory full or corrupt

Error Conditions

- Memory full: (3) beeps, recording stops.
- Memory corrupt: (3) beeps, shuts off.
- Battery dead: lights flash, beeps, shuts off.
- No beeps: camera in silent mode.

We are here to help

Keeping Shoot and Share simple is what we are all about. We would love to help you have a great ContourHD experience so please contact us with any quesitons you have.

Hours: Monday - Friday (9am to 6pm PST)
Toll Free: 866.397.6920 (USA)
International: 206.792.5226
Email: support@vholdr.com
Web: www.vholdr.com/support