

Movie-Spot User's Manual

2008

Copyright © TEC International Corporation.
North America Distributor—TekiStore LLC www.tekistore.com

Portable
Multimedia
Player

Thank You for Purchasing.....	3
Safety Information.....	4
Electrical Safety.....	4
Operation Safety.....	4
Warnings.....	5
Warranty.....	5
Product Specifications.....	6
Measurements.....	6
Weight.....	6
What is Included in the Package.....	6
Setting Up for the First Time.....	7
TV Connection: Video.....	7
A/V (Composite).....	7
S-video.....	8
Component Video (Optional).....	8
TV Connection: Audio.....	8
Power Adapter Connection.....	9
Plugging in Storage Devices.....	10, 11
Remote.....	13
Playback Options.....	14
Special Function.....	14
Menus.....	15
Settings Menu.....	16
Updating the Firmware.....	17
File Formats Supported.....	18
Troubleshoot.....	19
Support.....	20

Thank You for Purchasing

Congratulations in buying your Movie-Spot Portable Media Device.



Movie-Spot is a Portable Digital Multimedia Player that you can connect to any storage device (storage card, flash drive, hard drive) via USB 2.0 (plug & play) in order to play your favorite media (music, movies, and/or pictures). Once you have connected it with your storage device, you can connect Movie-Spot to any TV set to enjoy your movies, music, and photos. You can watch your favorite films in HDTV quality video and Surround quality audio.

This document will provide you with full and comprehensive instructions on how to use your Movie-Spot and benefit from its unique features.

In order to maintain your Movie-Spot device in safe operating conditions and to guarantee life extension, please read the “Safety Information” section.

Safety Information

Electrical Safety

- To prevent electrical shock, disconnect the power cord from the electrical outlet before relocating the system.
- Do not place the device near wet surfaces.
- Seek professional assistance before using an adapter or extension cord.
- If an electrical cord is worn through, do not attempt to repair it.
- Do not attempt to try and open the device.
- To avoid short circuits, keep paper clips, screws, staples and other electrical conducting materials away from connectors, slots, sockets, and circuitry.

Operation Safety

- Before using the device, carefully read all the manuals that come with the package.
- Before plugging in the device, make sure all cables are correctly connected and the power cords are not damaged.
- Please avoid dust, humidity, and temperature extremes.
- Place the product on a stable and flat surface.
- If you encounter technical problems with the product, contact a qualified service technician or the service agent of your dealer.

Warnings

Movie-Spot is not designed or intended to, and may not be used to violate any copyrights or other IP (Intellectual Property) rights. Each user of Movie-Spot may only use it in connection with materials legally owned by or licensed to the user and only extend such ownership or license rights that will permit such usage.

All rights reserved. Movie-Spot is a registered trademark of TEC International Corporation. All rights reserved.

All other trademarks and registered trademarks are property of their respective owners. All rights reserved.

Warranty

A one-year Warranty is provided for TEC Movie-Spot ("Product"). This warranty is subject to the conditions and limitations set forth herein.

TEC International Corporation, ("TEC") warrants and tests the Product to be free from defects in material and workmanship and to conform to published specifications. During the warranty period, should the Product fail under normal use in the recommended environment due to improper workmanship or materials, TEC will repair the Product or replace it with a comparable one.

This warranty is for a specific period from the date of purchase. Proof of date of purchase is required. TEC will inspect the Product and make the decision regarding repair or replacement. TEC reserves the right to provide a functionally equivalent refurbished replacement Product.

This warranty does not apply to Product failure due to accident, abuse, mishandling, improper installation, and alteration, acts of nature, improper usage, or problems with electrical power. The Product must be used with devices that conform to the recommended industry standards. TEC will not be liable for damages resulting from a third party device that causes the Product to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. TEC is also not responsible for damage or failure of any third party equipment, even if TEC has been advised of the possibility. This limitation does not apply to the extent that it is illegal or unenforceable under applicable law.

The limited warranty is exclusive, with no other warranties, implied or statutory, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by TEC providing technical support or advice.

Product Specifications

Measurements

5.1" x 4.7" x 0.8" (13cm x 11.5cm x 3cm)

Net Weight

0.45lb (200g)

What is Included in the Package

- 1x Movie-Spot
- 1x Power Adapter
- 1x Remote Control with Battery
- 1x Video Cable (Composite Video/S-Video)
- 1x Audio Cable (Stereo Audio/Coaxial cable)
- 1x User Manual

Setting Up for the First Time

TV Connection: Video

The following sections describe how to install the video cables from your Movie-Spot to your TV. It is recommended that you connect Movie-Spot to the highest quality video port possible on your TV to have the best Movie-Spot experience.



A/V (Composite)



You must locate the Video cable supplied with your Movie-Spot. On one end of the Video cable are a thick black plug and a yellow plug. On the other end of the Video cable is a skinny black plug. Connect the skinny black plug of the Video cable into the Video port on your

Movie-Spot and the yellow plug into your TV.

S-video



You must locate the Video cable supplied with your Movie-Spot. On one end of the Video cable are a thick black plug and a yellow plug. On the other end of the Video cable is a skinny black plug. Connect the skinny black plug of the Video

cable into the Video port on your Movie-Spot and the fat black plug into your TV.

Component Video (Optional)



The Component Video cable can be purchased to obtain the highest quality video. On one end of the Component Video cable are three plugs, colored red, green, and blue. On the other end of the Component Video cable is a single skinny black plug.

Connect the skinny black plug of the Component Video cable into the Y/Pb/Pr port your Movie-Spot and the three colored plugs into your TV.

TV Connection: Audio

The following sections describe how to install the audio cables from your Movie-Spot to your TV. There are several audio setups available, and this guide will deal with the most common ones.

Mono

On one end of the Audio cable are three plugs colored red, white, and orange. On the other end of the Audio cable is a single skinny black plug. First connect the skinny black plug of the Audio cable into your Movie-Spot. Then connect either the red or the white plug into your TV.

Stereo

On one end of the Audio cable are three plugs colored red, white, and orange. On the other end of the Audio cable is a single skinny black plug. Connect the skinny black plug of the Audio cable into your Movie-Spot and both the red and white plugs into your TV.

Surround (Coaxial)

On one end of the Audio cable are three plugs colored red, white, and orange. On the other end of the Audio cable is a single skinny black plug. Connect the skinny black plug of the Audio cable into your Movie-Spot and the orange plug into your TV.



Power Adapter Connection


When you insert the power adapter, Movie Spot will be started automatically and will not use the remote controller to be turned on again.

Plugging in Storage Devices

On the front of the Movie-Spot are three ports: USB 2.0 ports and a mini-USB port (note: the mini USB port is only used by manufacturer for maintenance purpose). You can plug a variety of storage devices into the standard USB ports, including flash drives, memory cards, memory card readers, hard drives, digital cameras, etc. Simply plug the USB end of your storage device into Movie-Spot and you are ready to start enjoying your movies, music, and pictures on TV.

When you replace the storage device, please return to main menu, and make sure your device correct to connect on Movie-Spot.

As the higher power consumption needed, it is possible the portable hard drive used may not be recognized by Movie-Spot, you can replace the storage device's USB cable with a specialized (Y type) USB cable that has an additional USB plug on one end. Please connect both USB plugs into both Movie-Spot's standard USB ports.

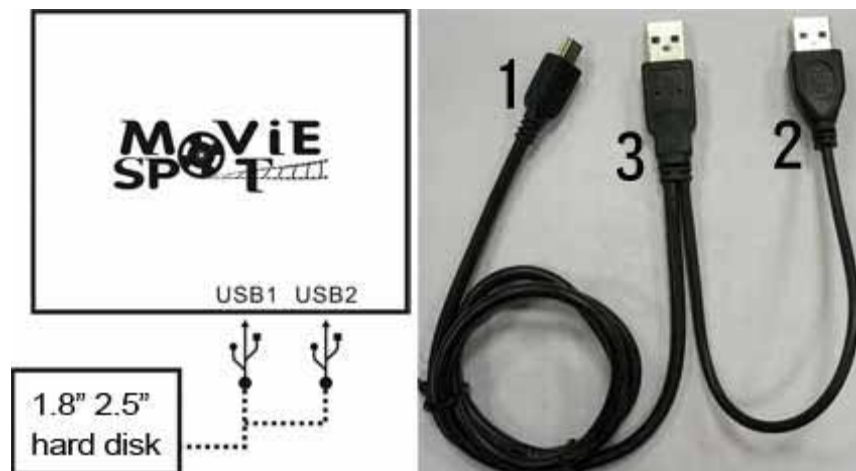

By doing these steps as below, Movie-Spot will provide more power to the device.

Please follow the steps to connect your portable hard drive on Movie Spot:

First step, connect to 1.8"/2.5" portable hard drive with the end of mini USB cable




Second step, connect the additional USB cable to USB1 port on Movie Spot



Final step, wait for 3 seconds, then connect the other USB cable to USB2 port on Movie Spot.



If you use a memory card in card reader can't be detected by Movie-Spot. You can choose to do one of two options:

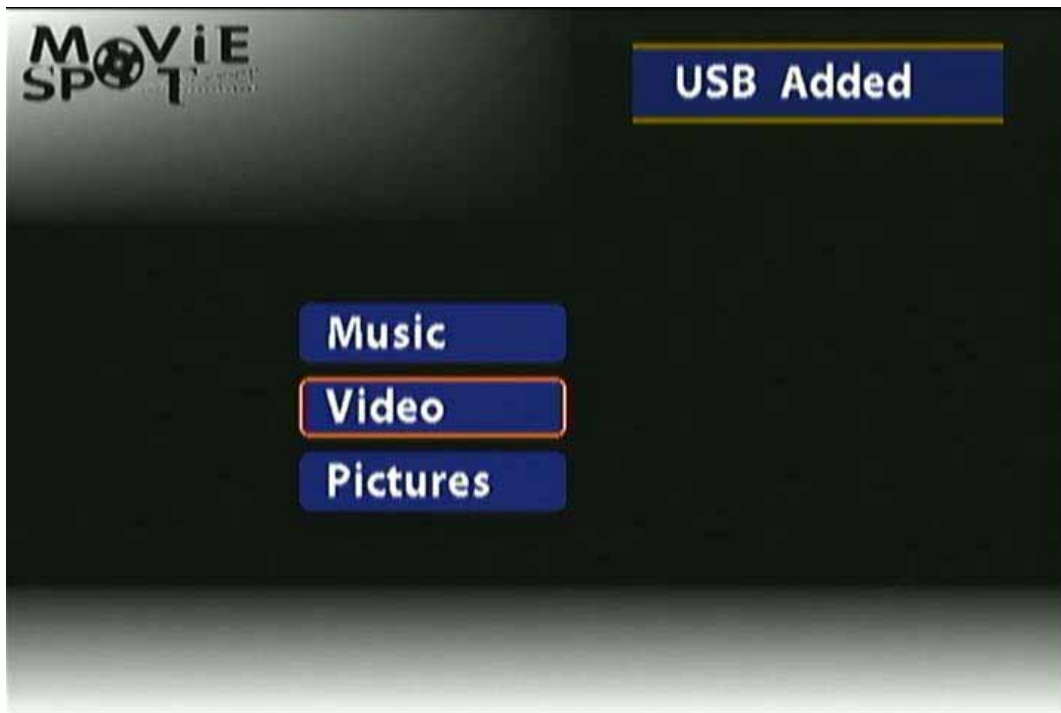


 

1. Re-Plug the device into the USB1 port.
2. Move the power to load onto except that again.


When you connect the storage on Movie Spot, the screen will show “USB Added”. When you remove the storage on Movie Spot, the screen will show “USB Removed”.

(Notice: Please return to main menu when plug or remove USB device to ensure the cache memory is cleared. If the cache memory is crashed, please move the power to load again to reset Movie Spot)

Remote

Playback Options

 - 1 . **POWER** : Turns unit off.
- 2 . **MENU** : DVD main menu.
- 3 . **0-9** : Enter Digits.
- 4 .  Move down, up, left, right.
- 5 . **PLAY/ENTER**
Play a single file
Select an option.
- 6 . **BACK**
Back to last menu
- 7 . **SKIP FWD/REV**
Next chapter
Previous chapter
- 8 . **PLAY ALL**
Play all files/Play DVD
- 9 .  8x/16x/32x forward
8x/16x/32x rewind.
- 10 .  Pause.
- 11 . **HOME**
Go to top Main Menu.
- 12 . **VOL+/VOL-**
Increase volume.
Decrease volume.
- 13 . **SETUP** : Settings Menu.
- 14 . **VIDEO OUTPUT**
Change video resolution. (SVideo, YPbPr, RGB, 480p, 720p, 1080i)
- 15 . **SEARCH** : Search Menu

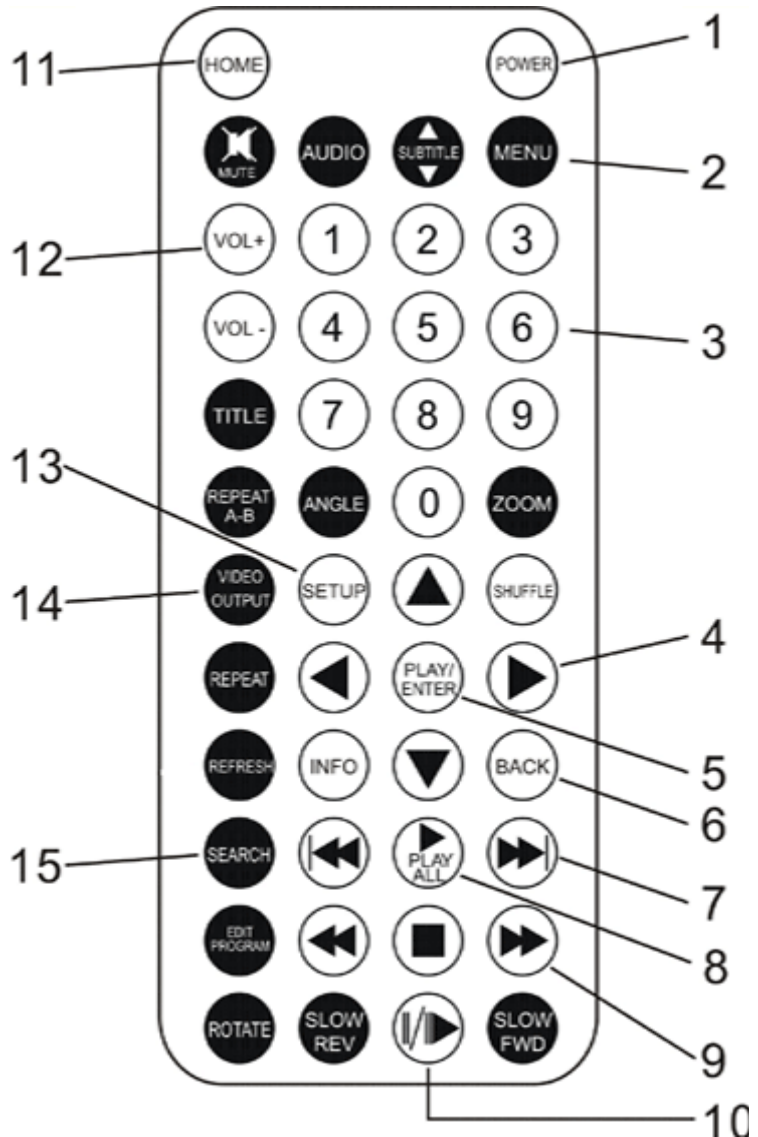










If it will not show Movie-Spot main menu correctly, it could be probably caused by resolution issue. Please press “VIDEO OUTPUT” to switch resolution.

Notice : 480p, 720p, 1080i resolutions are functional only when component cable is connected.


- 15 . **SEARCH** : Search Menu

Special Function

	Switch over subtitles.
	Repeat the file, repeat single track, repeat alltracks.
	Repeat A to B of time bar in the file, only available when you watch DVD films.
	Mute.
	Switch over language, only available when you watch DVD films.
	Switch over DVD title.
	Slow forward. Slow rewind.
	Check the info of movie and current play time.
	SHUFFLE


Menu

 You have a choice of three tabs in the Main Menu that you can access with the navigation keys and by pressing the PLAY/ENTER key on your remote:

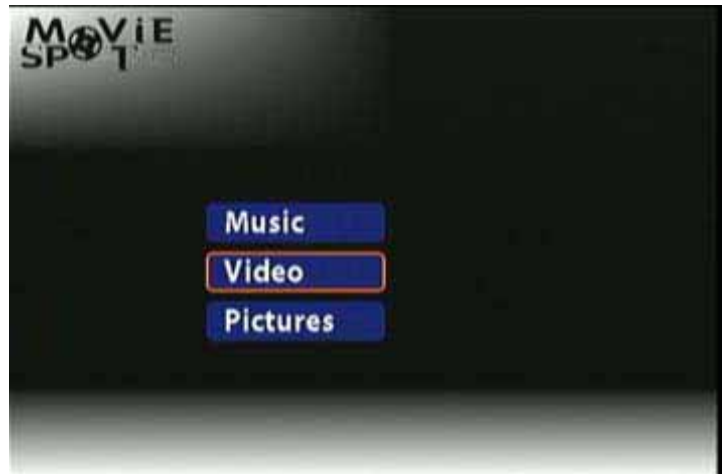


Music Video Pictures

 Selecting any of these tabs brings you to a submenu. All of the submenus are identical, differing only in the files they display (i.e. video files will not appear in the Music submenu).

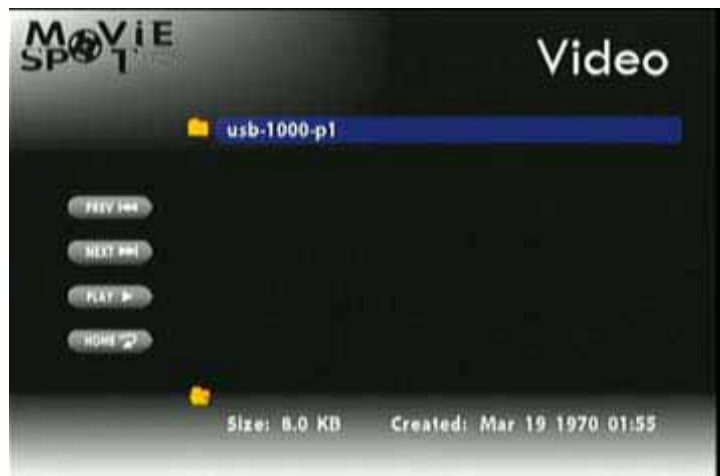

On the left of the submenu are the submenu options. On the right is the directory list which displays the files and folders found on the storage device you plugged in. By using the navigation keys and the PLAY/ENTER key on your remote, you can select the file you want to open and play. To return to the Main Menu, press the HOME key on your remote or RETURN in the submenu options list.

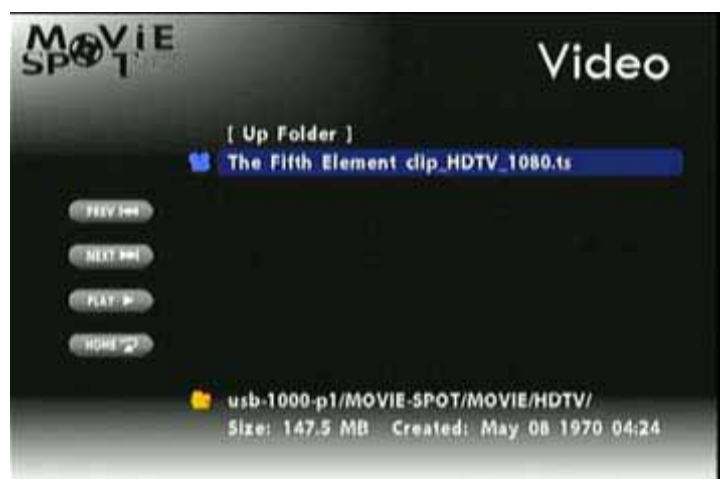

Settings Menu

The Settings Menu allows you to adjust the different video and audio settings on your Movie-Spot. To enter the Settings Menu, press the SETUP key on your remote. Use the navigation keys and the PLAY/ENTER key on your remote to adjust the video and audio settings. To exit the Settings Menu, press the SETUP key again on your remote.

AUDIO SETTING

1. SPDIF Out
 - Analog / DPCM
 - Encoded Digital



2. Speakers Out
 - 2 Channels
 - 5.1 Channels



INITIAL SETTING –

TV TYPE :

- 4:3 Letterbox
- 4:3 Pan-scan
- 16:9



INITIAL SETTING

SETUP VIDEO SETTING HD YPbPr 60HZ :

- 480p, 720p or 1080i



Updating the Firmware

To update:

1. Download the newest version of firmware from the TekiStore or TECIC website.
2. Download the file into USB storage (i.e. your portable hard drive), then connect it to your Movie-Spot.
3. Turn on your Movie-Spot, select and press the "SETUP" button on your remote. In the "INITIAL SETTING" function, you will find "Firmware Update", then press "OK" on it.
4. **Don't removed the USB when Movie Spot is updating**, it will take 10~15 minutes to update the firmware.

And you're done!

File Formats Supported

Media Type	Format	File Type	Notes
Video	MPEG-1	*.mpg, *.avi	
	MPEG-2	*.mpg, *.vob, *.ts, *.tp, *.m2t	Video_ts folder in DVD can be played.
	MPEG-4	*.mp4, *.avi	
	DivX	*.avi	
	XviD	*.mp4, *.avi	
	WMV9	*.wmv, *.asf	
Music	WAV	*.wav	
	MP3	*.mp3	
	AAC	*.aac	
	WMA	*.wma	
	AC3	*.ac3	
Pictures	JPEG	*.jpg	
	BMP	*.bmp	

Troubleshoot

Unit is not turned on:

- Make sure the power cord is secured plugged into a functional wall socket.
- Press the POWER button on your remote.
- Movie Spot is in initial-on when you plug the power.

Nothing shown up on the TV:

- Check if the cables are connected to the correct ports on the Movie-Spot device.
- Check whether the cables are connected to the correct ports on the TV.
- The TV must be on the correct channel (Video1, Video2, Channel 3, etc.)
- Press the VIDEO-OUTPUT button on your remote a few times to change the video resolution. (the TV might not support the resolution provided by Movie-Spot, then the TV resolution has to be changed)

The files will not be played:

- The file format may not be supported by Movie-Spot. Please check page for the information of supported file formats.
- Restart the system.

The files can not be found:

- The file format may not be supported by Movie-Spot. Please check page for the information of supported file formats.
- Make sure you're in the right submenu. (Music, Video or Pictures)
- Check whether the storage device is on and running. If it isn't, replace the USB cable of storage device with a specialized cable that has an additional USB plug on one end, and connect both USB plugs into the two Movie-Spot's USB ports.
- Restart the system.

Support

For North America customers, please visit our distributor's website at www.tekistore.com for further questions and support.

TEC International Corp.