


GSM remote camera

User manual

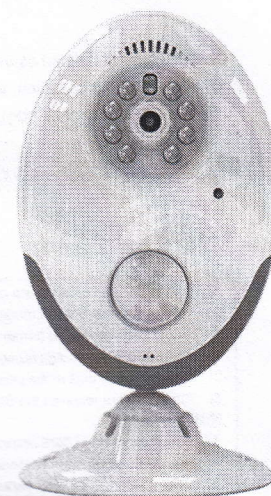


- !**
1. The GSM SIM card for GSM camera should be PIN code de-activated, and it needs to activate caller ID presentation & MMS functions.
 2. Be sure to remember and keep the product's password, SIM card number secret. Don't disclose them to others to ensure your privacy safety.

Chapter 1 Product Feature

1. This product needs to use GSM SIM card. It can send MMS images to MMS enabled mobile phone with a color display or to an e-mail address.
2. Integrated PIR detector to provide precise and timely alarm.
3. Built-in CMOS camera and infrared LED. Even in dark environment, camera can get clear images.
4. SMS remote control: User can control the camera by SMS command or calling.
5. Listen in the monitoring area: Call the device number to listen in monitoring area.
6. Build in speaker: User's voice can be broadcasted via build-in speaker to scare the invited visitor.
7. Multimode alarm: Camera can send alarm messages by SMS, MMS, E-mail or standard phone-call.
8. Schedule monitor: User can set the camera working as the preset schedule.
9. Built-in Lithium battery: Rechargeable battery ensures operation in case of external power failure.
10. Easy installation: Wireless connection. The product can be installed at any place you want.

Chapter 2 Host Instruction

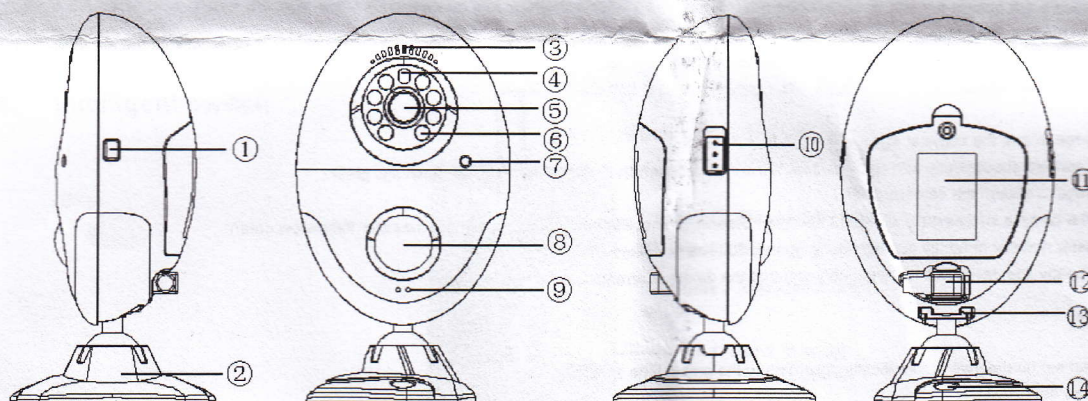

- 1.Reset key 2.Base board 3.Speaker 4.Light sensor 5.Camera 6.Infrared lights(8 pcs) 7. Indicator light 8. PIR sensor 9. Microphone
10. Power switch 11. Battery cover 12. Power Interface (Mini USB) 13.Base board connecting slot 14.Base board installing hole

Tip: Keep the camera lens clean to insure best imaging quality.

Indicator Status Instruction

Indicator Status Instruction as follower:

Color	Action	Status
Red	Flash slowly	Searching the network.
	Flash quickly	Infrared body detect alarm
	Constant Light	Not installed SIM card, or the remote camera damaged.
Green	Constant Light	Defense status. Activating the auto-alarm function.
	Flash slowly	Cancel defense status. Canceling the auto-alarm function.
	Flash quickly	Processing data.
	Light two seconds	Successfully resume to factory setting. Note: Swith on the camera, after the indicator light flash red, press the RESET button until the indicator light turns to green, and then release the RESET button. The device is resumed to default setting.

Note:

1. Slow flash is defined as indicator flash 1 time per second, quick flash is defined as 2 times per second.
2. Under normal condition, press the RESET button of camera for more than 10 seconds to close or open the host indicator. This can also be done by sms command from mobile.

Chapter3 Quick Start

About the SMS Command:

- 1) All the SMS commands are composed with symbol # and Arabic numerals.
 - 2) Master & family SMS command format: #code#content#.
 - 3) Guest SMS command format: #code#password#content#.
 - 4) Password is a four-digit number. The default is 1234.
 - 5) The maximum digit of the phone number is 16.
 - 6) When camera receives the SMS command, it will automatically reply.
- Note:**
1. The symbol "#" in SMS command can not be ignored. No space character can be included within the commands.
 2. Two SMS commands or more can be sent in one SMS at the same time. Different SMS commands must be apart with semicolon in English.
 3. The max length of SMS parameters is 50 characters or digits.

1. Start the camera

The device should be bind with Master phone mobile for the first use or after resuming to factory settings. After binding with master mobile phone, the device can automatically sends alarm SMS to master once alarm triggered.

Edit and send the following SMS to camera: #00#

After setting, the device will send the following SMS to your mobile: "Welcome! Password: 1234".

2. Network parameter setting

The user sends following SMS message in order to:

Set MMS center: #124#MMScenter#

- The MMScenter should be the MMS center address of GSM provider. For example: #124#http://mmsc.monternet.com#

Set APN parameters: #125#GatewayIP#WAPGatewayPort# HTTPGatewayPort#APN#APNusername#APNpassword#

For example: #125#10.0.0.172#9201#80# cmwap#wap#wap#

Successful SMS reply : Para:*****

Set sending MMS message via WAP: #148#0#

Sending MMS message via HTTP: #148#1#

3. Switch the camera defense status

Arm the camera is to activate the alarm function of remote camera. In this status, the infrared body detector is in work status. Disarm the camera is to deactivate the alarm function of the device. The connected PIR detector will not work. The device will not automatically alarm.

There are three methods to switch the defense status.

Method 1:

Edit and send following text message to arm the camera: #01#

The device will reply you that arm the camera successfully with SMS content "Armed successfully!" the device indicator flash still green.

Edit and send following text message to disarm the camera: #02#

Device will reply you that disarm the camera successfully with SMS content "Disarmed successfully!" and the camera indicator flash slow green.

Method 2: Call the device through master number or family number. Hang up in 5-20 to arm / disarm the device .

Note: If you reset the defense state repeatedly, the device will reply to notify you that the device is armed or disarmed already.

4. Timing arm the camera

Timing arm the camera: The camera can set on defense automatically according to the preset time schedule.

To set timing arm the camera, you can do as following:

Set on timing arm the camera: #128#1#. You will get reply SMS "Arming scheduler activated"

Set off timing arm the camera: #128#0#. You will get reply SMS "Arming scheduler deactivated"

5. Capture image

Method 1: Master number or family number call the device and hand up within 5 seconds after hearing the ringing tone. The device will reply SMS "Your request has been received.

The device is sending image(s) now." And the caller can receive the MMS image later.

Method 2: Send following SMS command to camera:

For master number and families number: #03# image quantity #

For guest number: #03#password# image quantity #

The camera will reply "Image capturing request received. The camera is busy sending the MMS image." And the caller will receive the MMS image later.

Note: When the image size is set as 160×128 or 320×240, the device can only send max 8 images one time. So the image quantity number should be in the range of 1-8. When the image size is set as 640×480, the device can send up to 2 images and the image quantity number should be 1 or 2.

6. Alarm setting

If the built-in PIR detector is triggered, the camera will alarm by sending SMS notify, MMS image and making a call. If you set sending SMS, MMS and calling as the default alarm way at the same time, once alarm triggered, the camera will send SMS, MMS, and then calling. Each alarm way will be carried once each time. For calling alarm way, the device will dial the master number and family number. If there is no answer, it will quit the dialing mode after repeated calling three times.

7. Listen in live voice

Master or family numbers call the device. It will answer the call automatically. Then you can listen in live voice of monitoring area.


8. Check status

If the user wants to know the present setting and work status of the device, just needs to send one of following SMS to camera and the camera will reply a MMS image including all settings (Not including the password.).

For master user and family user : #07#

For guest: #07#password#

9. Audible Visual Alarms

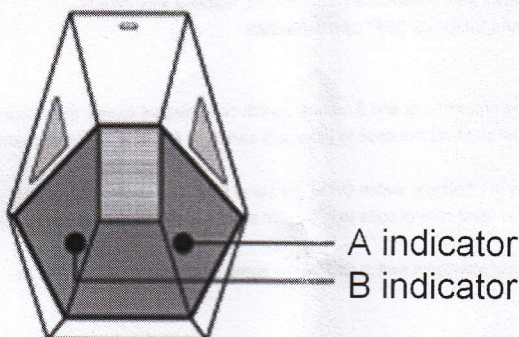

9.1 Bind wireless Audible Visual Alarms to host


- 1) ON the Audible Visual Alarms: Disconnect the power supply of wireless Audible Visual Alarms first, then push the switch to PANEL, 2 seconds later and then connect the power supply
- 2) Press the REMOTE button, which is on the bottom of the wireless Audible Visual Alarms, A indicator light flash fast, it means the Audible Visual Alarms is in the Learning status.
- 3) At the send time, sending an SMS or phone to switch host arm / disarm status (see 3, Quick Start 2, deployed 3, disarm), after the success of the host status switch, the Audible Visual alarm will have a "tick" sound, then switch the host status again, the audible visual alarm have a "tick" sound, this means the audible visual alarms have binded to the host a successfully.
- 4) Press the REMOTE button to save the received code and exit the learning status.

9.2 Disbind wireless Audible Visual Alarms to host

To disband the Audible Visual Alarms to host, MUST reset the the audible Visual Alarm to restore the factory settings, the operation is as follows:

- 1) Off the Audible Visual Alarms;
- 2) Press SENSOR or REMOTE button, then turn the audible visual alarm. After 3 seconds, the audible visual alarm light RED light, it means the audible visual alarms has been restored factory settings, then release button;
- 3) At the same time, switch the host arm / disarm alarm status, there are no any actions of the audible visual alarm, it means the disbinding of audible visual alarm to host is success.

10. Intelligent switch

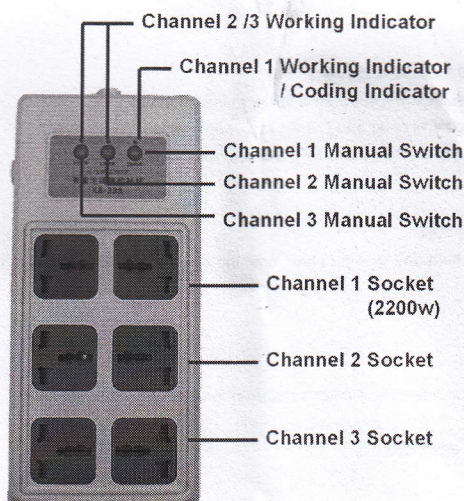

This GSM remote camera supports control up to 3 general 315M Wireless Intelligent switch, sockets, etc. Now we have intelligent switch HLD-002 show above for instructions.

10.1 Learning of intelligent switch always ON

- 1) The following instruction of how to let the intelligent switch always ON the learning status. For example, the HLD-002 intelligent switch, when channel 1 working indicator OFF and channel 2/3 working indicator ON, Press and hold channel 1 manual switch, and red light of the channel 1 is on, till the coding indicator (red light) flash twice, then release the channel 1 switch button, and the intelligent switch is on the learning status.
- 2) Use master's mobile phone send SMS to the host, set ALWAYS ON control code on the intelligent switch.
190 # Switch Name # 1 #
"switch name" refers to the intelligent switch named by master, cab be letters (case sensitive) or numbers, such as # 190 # TV # 1 #
- 3) After received control code, the coding indicator of intelligent switch flash one time, it means, learning successfully.
- 4) The host can save 3 Intelligent switch name only

10.2 Learning of intelligent switch always OFF

- 1) The following instruction of how to let the intelligent switch ALWAYS OFF the learning status. For example, the HLD-002 intelligent switch, when channel 1 working indicator ON and channel 2/3 working indicator OFF, Press and hold channel 1 manual switch, and light of the channel 1 is OFF, till the coding indicator (red light) flash one time , then release the channel 1 switch button, and the intelligent switch is in ALWAYS OFF learning status.
- 2) Use master's mobile phone send SMS to the host, set ALWAYS OFF control code on the intelligent switch..
190 # switch name # 0 #
"Switch name" refers to the intelligent switch named by master, cab be letters (case sensitive) or numbers, such as # 190 # TV # 0 #
- 3) After received control code, the coding indicator of intelligent switch flash one time, it means, learning successfully.
- 4) The switch name must be same on the "ALWAYS ON " and "ALWAYS OFF" command SMS

10.3 Real-time control of Intelligent Switch

- 1) After ALWAYS ON / OFF learning finished , shut down the channel 1 ,2 and 3 manual switch on intelligent switch, then Channel 1,2 and 3 working indicator light OFF ;
- 2) Use master's mobile phone send SMS to the host, let host send control code to intelligent switch, in this way, user can control the power of intelligent switch ON
190 # Switch Name # 1 #
After received control code, all channel working indicators of intelligent switch ON at the same time, (the socket outlets ON).
- 3) Use master's mobile phone send SMS to the host, let host send control code to intelligent switch, in this way, user can control the power of intelligent switch OFF
190 # switch name # 0 #
After received control code, all channel working indicators of intelligent switch OFF at the same time, (the socket outlets OFF).

10.4 Intelligent switch ON / OFF timing

- 1) Use master's mobile phone send SMS to the host, Active the Timing function of host to send Timing control code to ON the intelligent switch..
191 # switch name # 1
- 2) Use master's mobile phone send SMS to the host, Active the Timing function of host to send Timing control code to OFF the intelligent switch.
191 # switch name # 0

10.5 Intelligent switch timer parameter settings:

- 1) Use master's mobile phone send SMS to the host, set host's time of send "ON/OFF control code of intelligent switch"
192 # Switch Name # working days # ALWAYS ON #ALWAYS OFF #
Note: The setting must be a working day; ALWAYS ON time should be after the ALWAYS OFF time and timing should be at the same day.
The value of working day , ALWAYS ON/OFF time as following
Working days: (on digit, from 0 to 8)
0 for daily;
8 for Mon-Fri
1 for Monday
2 for Tuesday
3 for Wednesday
4 for Thursday
5 for Friday;
6 for Saturday
7 for Sun;
ALWAYS ON / OFF time: (4 digit, 24-hour, for example: 0000 for 0:00, 2359 for 23:59)
Once timing parameters setting of intelligent switch is successful, it will send SMS to the master number
- 2) When the setting ALWAYS ON time comes, the host sends control code and ON the intelligent switch
- 3) When the setting ALWAYS OFF time comes, the host sends control code and OFF the intelligent switch

10.6 Disbind intelligent switch to host

The following operation is to disbind the the intelligent switch to host:

- 1) Clear coding of intelligent switch : In any status, press and hold any switch button, until the coding indicator light (red) flashes 3 times, then release the button, and intelligent switch clear code successfully
- 2) Also, use master's mobile phone send SMS to the host
193# switch name#
Host removes the intelligent switch successfully
- 3) If user want to delete all information of the intelligent switch on host, use master's mobile phone send SMS to the host
193
- 4) From then on, the host can not operate the intelligent switch any more.

11. Reset camera

Method 1: With on the camera, after the indicator light flash red, press the RESET button until the indicator light turns to green, and then release the RESET button. The device is resumed to default setting.

Method 2: Master sends SMS to camera: #08#password#

The reply SMS you get "Factory settings have been restored successfully"

12. Getting help

If forget the SMS command, user can send SMS to get help. The device will send the command list or user guide to user's cell phone by SMS or MMS.

Get normal command help:

User sends following SMS command to the device:

For master user and family user: #09#

For guest: #09#password#

Chapter 4 Maintenance

1. Store and use the device in suitable temperature. Too high or too low temperature will likely to damage the device.
2. Try to keep the host and all its accessories dry. Do not store and use it in the bathroom, or other place with high humidity. Do not allow pour water or other liquids into the device, otherwise, it might cause malfunctions.
3. Do not store and use the device in dusty.
4. Do not use alcohol, acetone and other similar solvents to clean it. Wipe it with soft-wet cloth.
5. Do not attempt to open it except as instructed. If the device does not work normally, try to resolve it as the guide of the "general troubleshooting". For the problem can not be solved, contact with the dealer immediately.
6. To prolong the life-span of the battery, connect the device to the power supply to charge the built-in Lithium battery for 4 hours every 3 months if the camera does not use for long time. Charge the battery at least 12 hours at the first time use to achieve the full performance of the battery.

Chapter 5 General Troubleshooting

No.	General Trouble	Possible Reason	Solution
1	Indicator light does not work	The indicator light is closed	Press the RESET button for 10 seconds or send text message to open the indicator light.
2	Can't start device (Indicator works normally)	Already binded master user for the camera.	Recover to factory default setting.
3	All functions disable (Indicator works normally)	Caller ID presentation or MMS functions of the SIM card are not activated, insufficient fee of the SIM card.	Contact network provider to active SIM card function. Pay for the card.
4	Indicator light is still green	Can't find or identify the SIM card.	SIM card was not installed properly: Power off the camera and check it again.
5	The device doesn't respond to any operation.	Device work abnormally.	Switch off the power, check SIM card, or reset factory setting.
6	After starting the device, indicator flashes in red color and can not turn to green.	Network signal is weak or network is busy.	Place the camera at other place with strong signal and try again.
		SIM card PIN code is activated.	Close the PIN code.
		SIM card invalid.	Contact with local network operator to check of it.
		Do not bind a master user to the device	Bind a master user to the device
7	Can't start the device after long time supply with the battery.	Battery runs out of power.	Connect the camera to external AC power and charge for at least one hour, then restart device.

Note: If the problem can't be solved with above guidelines, contact to your local distributor or the factory.

Appendix: SMS command list

Only guest user needs add password 1234 in the SMS command, after changing the password, please change the command accordingly.

User	Function	SMS Command
Master	Start the device	#00# Refer to Chapter 3. Quick start, 1.Start the camera.
Master and family	Arm the device	#01# Refer to Chapter 3. Quick start, 3. Switch the camera defense status.
	Disarm the device	#02# Refer to Chapter 3. Quick start, 3. Switch the camera defense status.
Master/family / guest	Capture MMS Image	#03#password#image quantity# Refer to Chapter 3, Quick start, 5.Capture images.
Master	Change the password	#04#old password#new password#
Master	Add family number	#06#family number# You are allowed to add up to 10 different family numbers.
Master/family/ guest	Check the statues	#07# #07#password# Refer to Chapter 3, Quick start, 8 Check statues
Master	Resume to default setting	#08#password# The password is 4 digits
Master/family / guest	Get Usual command list	#09#password# #09#password#1# Refer to Chapter 3 Quick start, 12 Getting help
Master/family	Disable SMS notification when alarm	#11#0#
	Send SMS notification when alarm (default)	#11#1#
Master/family	Disable MMS image when alarm	#12#0#
	Send MMS image notification when alarm (default)	#12#1#
Master/family	Disable calling when alarm (Default)	#13#0#
	Set Calling when alarm	#13#1#
Master	Change master number	#14#new master number# The number should be less than 16 digits
Master/family/ guest	Send MMS image to appointed mobile phone	#30#password#mobile number#image quantity#
Master/family	Deactivate infrared detector	#31#0#
	Activate infrared detector	#31#1#

User	Function	SMS Command
Master/family	Change auto alarm image size	#32#value# Value 1: 160×128 2: 320×240 (QVGA default) 3: 640×480 (VGA) For example: #32#1# means auto alarm image size is 160×128.
Master/family	Change auto alarm image quantity	#33#quantity# The quantity range: 2-8, default is 5. If image size is 640×480, the quantity is 1 or 2.
Master/family	Set image brightness	#34#value# The value should be: 1,2,3,4,5 (1 is darkest, 5 is brightest), default value is 4.
Master/family	Set Image direction	#35#value# The value 1 means up down, 2: left, right; 3: normal.
Master/family	Set Image contrast	#38#value# The value should be 1,2,3,4,5, default value is 4.
Master/family	Set interval of auto capturing image	#103#time# Interval time should be 3-10, unit is 0.1 second, default value is 5.
Master/family	Add or modify E-mail address.	# 108#Email address# You can only set one email.
Master/family	Delete E-mail	#109#Email address#
Master/family	Disable sending MMS image to E-mail when alarm (Default)	#110#0#
Master/family	Send MMS image to E-mail when alarm	#110#1#
Master/family	Delete family user	#113#family user# Note: Specify the family user you want to delete, for #113# means delete all the family users.
Master/family	Set timing send MMS image	#115#1#
Master/family	Disable timing send MMS image	#115#0#
Master/family	Set time period of auto send MMS image	#116#work day#period1 start time#period1 end time#period1 interval#period2 start time#period2 end time#period2 interval#period3 start time#period3 end time#period3 interval#. For example, #116#1#0800#1200#1430#1630#30# means during 8 AM to 12 AM and 2:30 PM to 4:30 PM of every Monday, the device will auto send out a MMS image in every 30 minutes. Work day: (one digit, 0-8) 0 for everyday; 8 means from Monday to Friday; 1 for Monday; 2 for Tuesday; 3 for Wednesday; 4 for Thursday; 5 for Friday; 6 for Saturday; 7 for Sunday. Start time-end time: (4 digits, 24 hours, such as 0000 means 00:00AM, 2359 means 11:59 PM)). Interval time: (1-3 digits, 1-480, means sending MMS image interval) 1-480 minutes interval.
Master	Lock camera and SIM card	#117#value 1#value 2#value 3# Value 1 can be choose from 0 and 1, 0 means not lock sim card, 1 means lock sim card. Value 2 can be choose from 0 and 1, 0 means not lock camera, 1 means lock camera. Value 3 can be choose from 0 and 1, 0 means not lock operator
Master/family	Activate infrared body detector	#118#1#
Master/family	Deactivate infrared body detector	#118#0#
Master/family	Set MMS center	#124#MMS center#
Master/family	Set APN parameter	#125#gateway IP#wap port#http port#APN#APN user name#APN password# Note: Don't omit the symbol # even when the APN user and APN password are blank.
Master/family	Change language	#127#value# 0 means Chinese, 1 means English
Master/family	Timing arm the device	#128#value# Refer to Chapter 3, Quick start, 3.Timing arm the camera.
Master/family	Set timing arm the device schedule	#129#work day#period 1 arm time#period 1 disarm time#period 2 arm time#period 2 disarm time#period 3 arm time#period 3 disarm time# Please find instruction of work day, arm time and disarm time in "Set time period of auto send MMS"
Master/family	Close/ Open indicator	#143#value# The value can be 0 or 1, 0 means close the indicator, 1 means open the indicator, default setting is 1.
Master/family	Disable SMS notification when the power changed	#144#0#
Master/family	Send SMS notification when the power changed	#144#1#
Master/ family	Set MMS sending way	#148#value# Value 1 means MMS sent by Http way; Value 0 means MMS sent by WAP way.
Master/ family	PIR activate delay time (seconds)	#150#value# Value is number from 0-10 (seconds)
Master/ family	Regulate device time	#152#number# Number is the device SIM number. This command is used to regulate device time.
Master/ family	Close/open the speaker	#164#value# Value 0 means close, value 1 means open.
Master/ family	Alarm sound On / Off	#166#value# Value 0 means off, value 1 means on, default is 0
Master	Sending control code of intelligent switch	#190#switch name#value# value 0 means always off, value 1 means on
Master	Sending control code of intelligent switch (timing)	#191#switch name#value# value 0 means OFF, value 1 means ON
Master	Sending intelligent switch control switch timing period	#192#switch name#working day#Always ON time#Always OFF time#
Master	Delete intelligent switch	#193#switch name#