juicedLink

User's Manual

DN101 – Accessory for CX Family of Low-Noise Preamps



Contents

Contents	2
Read This First	3
Warnings - General	3
Checking Supplied Items	3
General	
Features	4
Panel Descriptions	
Setting up DN101 with the CX Preamp	
Bolting the DN101 to the CX Preamp	
Battery Tray Modification	
Operation	
Powering	
Input / Output Connection	
Normal Operation	
AGC Disable Operation	
Notes on Specific Cameras	
Canon 5D MarkII, 7D, 1D Mark IV	
Panasonic Lumix GH1	
Nikon D300s, D3s	
Appendix	
Subscribe to the juicedLink Blog	
Care and Maintenance	
Warranty, Service, and Returns	
Compliance	
VVIIIVIIAIICE	I U

Read This First

Before operating the unit, please read this manual thoroughly.

Any future revisions will be posted on the website and available for download.

Notes regarding documentation in this manual are as follows:

- References to markings/labels on the unit are denoted in underline/bold. For example: HPF.
- Warnings will be preceded with WARNING.

Warnings - General

WARNING: Failure to read and observe notes and warnings may result in personal injury, and/or possible damage to this device and your other equipment.

WARNING - LOSS OF HEARING: This device, as well as any device with a headphone amplifier, is capable of driving the signal at levels that can be damaging to hearing. Always operate the headphone volume at the lowest practical level. Do not wear the headphones over your ears in any of the following circumstances:

- While plugging the headphones into the headphone driving device.
- While plugging the mixer into the headphone driving device.
- While turning on or off the mixer.
- While turning on or off the phantom power.
- While plugging a device into the input of the mixer.

WARNING - RISK OF ELECTRICAL SHOCK: This device, its enclosure, and the connections to cable shields that plug into this device are conductive. Avoid electrocution and observe caution with cable runs near areas where high-voltages and/or currents may exist.

Checking Supplied Items

Your package should include the following items:

- DN101 Accessory for CX Family of Low-Noise Preamps
- Stereo 3.5mm mini plug cable
- Flat head Phillips machine screw 4-40 thread, 3/16" length, undercut head
- Welcome Card:
 - Read this User Manual
 - Save your receipt in the event you require warranty service.


General

Features

- Accessory for CX Family of Low-Noise Preamps
 - Mounts directly to CX Preamp (requires minor modification to battery tray)
 - Utilizes the battery of the CX Preamp
 - Small size
 - Aluminum chassis (black anodized) for EMI protection and rugged use
- · Adds audio features that are missing from many DSLR cameras
 - Headphone Amplifier
 - o Level Meter
 - Camera Automatic Gain Control (AGC) disabling for improved signal-to-noise performance
- "Normal" and "AGC Disable" operation settings
 - Automatic meter recalibration and headphone gain adjustment for the different modes of operation
 - "AGC Disable" uses a safe, stable, robust, and reliable method (not a tone) of forcing the AGC amps in your camera down for improved signal-to-noise performance.
- Inputs
 - o 3.5mm stereo minijack
 - o Connects to output of the CX Family Preamp
- Output
 - o 3.5mm stereo minijack output connects to camera input

Panel Descriptions

LEFT SIDE

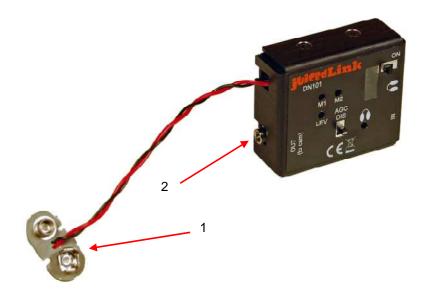

- 1) 9V Battery Terminal
- OUT Output jack (to camera)


Page 4 www.juicedLink.com

RIGHT SIDE



- 1) IN Input jack (from CX Preamp output
- 2) Headphone output jack

FRONT PANEL

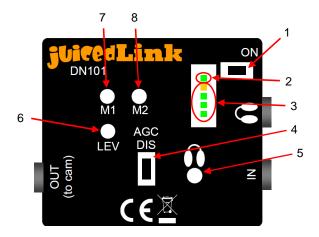

- 1) ON Power Switch
- 2) Power LED
- 3) Level Meter
- 4) AGC DIS "AGC Disable" / "Normal Operation" Switch
- 5) Headphone amplifier gain adjustment
- 6) LEV AGC Disable signal level adjustment
- 7) M1 Meter Level Adjustment for "Normal" operation
- 8) **M2** Meter Level Adjustment for "AGC Disable" operation

Setting up DN101 with the CX Preamp


Note: The DN101 must use/share the 9V battery with the CX preamp, and it must be placed in the CX battery tray (per the instructions below). The DN101 will not operate properly if these instructions are not followed.

Bolting the DN101 to the CX Preamp

Turn over the CX preamp, and remove this screw:




Align the holes of the DN101 with the threaded hole left by the removed screw, and the threaded hole of the bottom of the circuit board post:

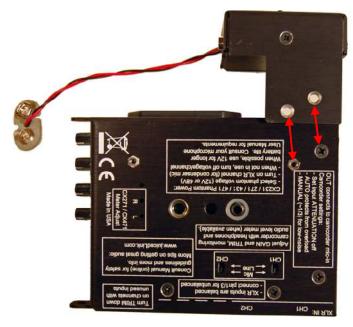


Page 6 www.juicedLink.com

Replace the screw that was just removed back into the same position:

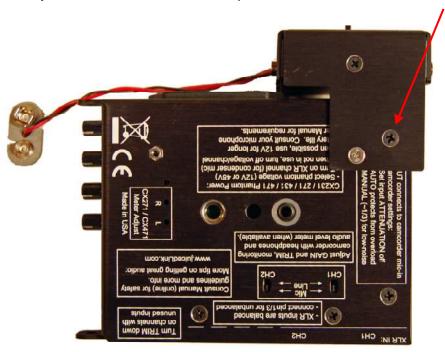

Use the additional screw provided with the DN101 to secure this position:

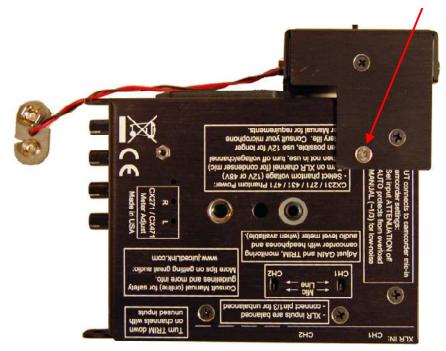

Battery Tray Modification

Note: The DN101 must use/share the 9V battery with the CX preamp, and it must be placed in the CX battery tray (per the instructions below). The DN101 will not operate properly if these instructions are not followed.

1. Remove the battery tray from the CX Pramp:




2. Remove the spring in the back of the battery try:




Make sure that you save the spring, in case you want to replace it later.

Page 8 www.juicedLink.com

3. Take a pair of cutters, and cut off this tongue:

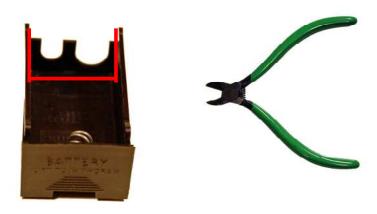

4. Use the cutters to cut a notch in the front of the battery tray for a place for the DN101 wires to escape:

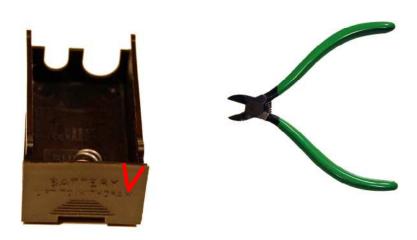

5. The battery tray now looks like this



6. Attach the battery leads to the 9V alkaline battery. Place the battery and leads into the battery tray with the correct orientation (+ to +, - to -):



Page 10 www.juicedLink.com

7. Insert the battery tray into the CX preamp. It will take some more force to insert it all of the way to get the latch to engage. It will also take some more force to de-latch. This is normal.



Operation

This DN101 User Manual does not go into the detailed operation of the CX Family XLR Adapter / Preamp. For details regarding the operation of the preamp, please refer to the preamp User Manual.

The DN101 will **NOT** operate without the use, and being connected to, one of the CX Family of XLR Adapter / Preamps, where they share the same 9V battery placed in the CX battery tray.

Powering

- 1. Switch the DN101 power switch to the **ON** position. The power indicator LED should light up.
- 2. You must also power the CX Family Preamp, by selecting the <u>ON</u> position for its power switch. The preamp <u>PWR</u> LED should light up. If not, then check that the battery has been placed into the battery tray with the correct orientation, and that you are using a fresh 9V alkaline battery.

Input / Output Connection

- 1. Use the stereo minijack cable to connect the CX Preamp **OUT** to the DN101 **IN**.
- 2. Use the CX Preamp stereo minijack cable to connect the DN101 **OUT** to the camera's microphone input.


Normal Operation

- 1. Select the down position for the **AGC DIS** switch. This places the DN101 in the normal operating mode.
- 2. In the normal operating mode, the DN101 is simply providing headphone monitoring and metering.
- 3. The meter has been calibrated for levels assuming that the camera's AGC is free running. The peaks of your audio should hit the 3rd LED (green), but remain below the 4th LED (yellow).
- 4. Adjustment to the level meter in the normal mode can be made with a small screwdriver with the <u>M1</u> potentiometer.
- 5. Adjustment to the headphone amplifier gain can be made with a small screwdriver with the trim potentiometer next to the "headphone" symbol. The headphone monitoring in mono, meaning that both the right and left inputs are present in each of the headphone ear cups.
- 6. In this operating mode, the headphone amp requires significantly more gain. Therefore, the signal is fairly noisy. Of course, this noise is not present in the recorded audio.
- 7. WARNING: Since this mode requires more gain from the headphone amp, you must be careful if you are wearing your headphones and switching back and forth between the two operating modes. The signal in the headphone in the normal mode will be very *LOUD*.


Page 12 www.juicedLink.com

AGC Disable Operation


- 1. Select the up position for the AGC DIS switch. This places the DN101 in the AGC disable operating mode.
- The meter has been calibrated for levels assuming that the camera's AGC amplifiers are being forced to turn down their gain. The peaks of your audio should hit the 3rd LED (green), but remain below the 4th LED (yellow).
- Adjustment to the level meter in the AGC disable mode can be made with a small screwdriver with the <u>M2</u> potentiometer.
- 4. Adjustment to the headphone amplifier gain can be made with a small screwdriver with the trim potentiometer next to the "headphone" symbol.
- 5. In the AGC disable mode, the DN101 is injecting an uncorrelated broadband noise signal into the camera's right channel. The right channel is not available for recording audio.

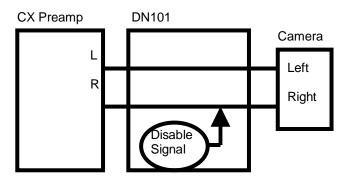

- 6. A broadband noise signal is the most reliable and repeatable, and safest, method of spoofing the camera AGC. Tones are coherent signals, and can be picked up by the human ear and brain, even at very low levels. Using a tone means that you are depending on unspecified aspects of the camera to prevent the tone from corrupting your audio (Nyquist anti-aliasing filter effectiveness, frequency stability, crosstalk, etc). The most evil part of using a tone is that these problems could be happening in your camera, and you would have no way of knowing, because you can't monitor with headphones inside the camera. Using an uncorrelated broadband noise source, if your camera does have any of these issues, then the signal simply tucks itself away with the rest of the electronic noise in your system. There is no coherent tone artifacts for your ear and brain to pick out.
- 7. Each of your XLR inputs on the CX preamp that you wish to record need to be panned left in the preamp. For example, if you were using the CX431 with 4 mics, you would pan all 4 mics to the left channel.

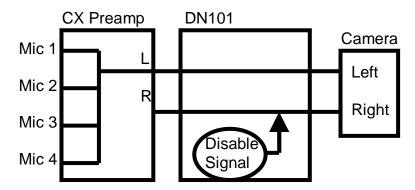

 8. When you pull your clip into your editor, your right track will be a noise signal, and your clean audio will remain on the left track:



- 9. In your editor, you will select the left track to be used for your final mix (deleting the right track). This is easily done in your editor. Here are some tips on how to do this using some popular video editors:
 - a. Sony Vegas
 - i. Right click on the audio track
 - ii. Select Channels
 - iii. Select Left Only for the final mix
 - b. Final Cut Express
 - i. Delete the right track
 - 1. Modify > Link to unlink the audio from video
 - 2. Modify > Stereo Pair to unlink the right and left audio tracks
 - 3. Use mouse and select the right track
 - 4. Delete the right track
 - ii. Copy the left track to the right track position
 - Make sure the "Auto Toggle" icon (the icon to the right of the "lock audio track" icon) for the right track is the only "Auto Toggle" icon activated
 - 2. Use mouse to select the left track
 - 3. Copy
 - 4. Paste. Since the right track is the only track with the "Auto Toggle" icon activated, it will paste into this track
 - 5. You may need to select the right edge of the pasted audio track and expand (stretch) the track to fill the rest of the timeline
- 10. You will notice that the audio level of the clean track will be a little lower than a separate clip where you did not use the AGC disable technique and let the AGC amps run free. This is normal. The meter for the AGC disable mode has been calibrated intentionally for this level to provide adequate headroom inside the camera (since the signal no longer has the AGC operation at its disposal to further throttle back its gain for high signal levels).

Page 14 www.juicedLink.com

Notes on Specific Cameras

Canon 5D MarkII, 7D, 1D Mark IV

- The microphone input on the camera does not get activated until the camera begins to RECORD for the first time.
- Until you hit RECORD and activate the microphone input, you will hear noise in the DN101 headphones.
 Once you hit RECORD, the noise in the headphones goes away, and doesn't return until the camera power gets cycled.
- 3. After the camera power gets cycled, you will need to hit RECORD again to eliminate the noise in the headphones.

Panasonic Lumix GH1

 The microphone input is a 2.5mm stereo minijack. The cables provided in the CX preamps and DN101 are 3.5mm stereo minijack. There are inexpensive adapters that can be purchased. A 8" 3.5mm to 2.5mm cable can be purchased (part number CMC-T1772022) from Bay Electronics, 731 Airport Road, Panama City, FL 32405.

Nikon D300s, D3s

- These cameras have different level settings for the AGC (Low, Med, High). Using the Low setting with one
 of the CX preamps will yield great audio. However, the DN101 is still useful for headphone monitoring and
 metering.
- 2. You will want to use the DN101 in the Normal operating mode, but you will need to re-calibrate the meter M1 for the camera's Low setting. Matching the Normal operating mode meter level to the AGC Disable mode can work well. Here is a simple procedure for doing this:
 - a. In the DN101 AGC Disable mode, set the CX gain/trim such that speaking at a constant level yields peaking at the 3rd meter LED
 - b. Switch over to the Normal mode and turn back <u>M1</u> (using a small screwdriver) so it yields peaking at the 3rd meter LED (matching the AGC Disable mode)

Appendix

Subscribe to the juicedLink Blog

Get notified on new revisions of this User Manual, product updates, new product releases, and tutorial videos. Subscribe to the blog: www.juicedlink.com/blog/index.html

Care and Maintenance

There is no specific maintenance regimen recommended.

Warranty, Service, and Returns

The design of the juicedLink family of ultra portable mixers is uncompromising in quality and performance, and utilizes top grade professional components. We are proud of our product, and are committed to servicing you to make your customer experience positive.

The *Policies* page on the juicedLink.com website describes the details of the conditions for returns, limited one year warranty, and instructions for obtaining service for your product.

Compliance

This device falls under the classification of FCC part 15, subpart B, section 15.103. Please refer to the FCC part 15 manual for details on conditions of operation.

This device has also been tested to meet CE certification standards.

Page 16 www.juicedLink.com