

User's manual



# Easy Scan 250 - II



## Table of content

1.	Safety instructions	. 3
	Introduction	
3.	Technical data	4
4.	Power Up	4
5.	Channel	4



#### 1. Safety instructions

#### FOR SAFE AND EFFICIENT OPERATION

Be careful with heat and extreme temperatureAvoid exposing it to direct rays of the sun or near a heating appliance.

Not put it in a temperature bellow 41°F /5°C, or exceeding 95°F /35°C.

Keep away from humidity, water and dust

Do not place the set in a location with high humidity or lots of dust.

Containers with water should not be placed on the set.

Keep away from sources of hum and noise Such as transformer motor, tuner, TV set and amplifier.

To avoid placing on un-stable location

Select a level and stable location to avoid vibration.

Do not use chemicals or volatile liquids for cleaning
Use a clean dry cloth to wipe off the dust, or a wet soft cloth for stubborn dirt.

If out of work, contact sales agency immediately

Any troubles arose, remove the power plug soon, and contact with an engineer for repairing,
do not open the cabinet by yourself, it might result a

danger of electric shock.

Take care with the power cable

Never pull the power cable to remove the plug from the receptacle, be sure
to hold the plug. When not using the player for an extended period of time
be sure to disconnect the plug from the receptacle.



#### 2. Introduction

Thank you for purchasing the easyscan 250 II.

Before you can start, you should read this manual carefully.

#### 3. Technical data

DMX:	512
Voltage:	220V – 250V
Lamp:	Halogen lamp w. Socket 250W 24V
Color temperature	3250K
Socket:	GX 5,3
Motors:	3 Stepper motors
Usitt DMX:	512
channels:	5 DMX channels
noise:	70db
Weight:	12kg

### 4. Power Up

When you power up the item it will set up itself to be in the self test mode. To control the Easy Scan 250 II by DMX you have to set up a DMX address by using the binary system.

#### 5. Channel

chanel	Function	Value DMX
1	Pan	0 – 255
2	Tilt	0 – 255
3	Color	
		0-22 White
		23-40 Red
		41-62 Lightblue
		63-85 Green
		86-104 Yellow
		105-126 Orange
		127-145 Pink
		146-166 Cyan
		167-255 Rotation
4	Gobo	0-14 Closed
		15 – 31 Open
		32 – 46 Fantasy
		47 – 65 Stars sm.
		66 – 79 Sun
		80 – 96 Strip
		97 – 109 Triangle
		110 – 126   Windmill
		127 – 144 Star
		145 – 161 Circle
		162 – 175 Flower
		176 – 191 Window
		192 – 255   rotation
5	Goboshake	0 - 255



## Importeur:

B & K Braun GmbH Industriestraße 1
D-76307 Karlsbad

www.bkbraun.com info@bkbraun.com





