

SPECIFICATION

Model No.: CP1717

Main supply	230V~ 50Hz
Rated power input	1200W

Model No.: CP1818

Main supply	230V~ 50Hz
Rated power input	1200W+1200W

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

This product complies with the requirements of the directives

EMC-Directive: 2004 / 108 / EC

Low Voltage Directive: 2006 / 95 / EC

declare that models Z33 / Z44

are in compliance with the following norms:

EN 55014-1:2006+A1:2009

EN 55014-2 :1997+A1:2001+A2:2008

EN 61000-3-2:2006+A2 :2009

EN 61000-3-3 :2008

EN 60335-2-9 :2003+A1+A2+A12+A13

EN 60335-1:2002+A11+A1+A12 +A2+A13+A14

EN 62233 :2008

EXCLUSIVE IMPORTER IN GREECE:

Amiridis – Savvidis S.A.

33, Vas. Olgas avenue

P.O. 54641, Thessaloniki, Greece

Tel: +30 2310 850107, +30 2310 850108, Fax: +30 2310 867835

45, Posidonos street

P.O. 18344, Moschato, Athens, Greece

Tel: +30 210 9402064, Fax: +30 210 9402137

www.united-electronics.gr

UNITED®

By AMIRIDIS – SAVVIDIS S.A.

Instruction Manual

Ceramic hob



Model No.: CP1717



Model No.: CP1818

Read the manual carefully and keep it for future use.

HOT PLATE USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

- Read the manual carefully before use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Under no circumstances must the appliance be placed immersed in water or other liquid, or come into contact with such. Do not use the appliance with wet or moist hands.
- Before connecting of the appliance check that voltage indicated on the rating label corresponds the mains voltage in your home.
- It's advised no continuous operation more than 1 hour each time for longer product life.
- Do not use the appliance outdoors.
- Use the appliance only for the intended purpose.
- Always remove the plug from the power supply whenever the appliance is not in use, before cleaning the appliance or whenever a disturbance occurs. Switch off the appliance beforehand. Pull on the plug, not on the cord.
- In order to protect children from the dangers of electrical appliance shock, never leave them unsupervised with the appliance. When selecting the location for your appliance, do so in such a way that children do not have access to the appliance. Take care to ensure the cord does not hang down.
- Test the appliance and the cord regularly for damage. If there is damage of any kind, the appliance should not be used.
- Keep the appliance and the cord away from heat and moisture.
- Never leave the appliance unsupervised. Switch off the appliance whenever you are not using it, even if this is only for a moment.
- Should If the appliance become moist or wet, remove the mains plug from the power supply immediately.

SAVE THIS INSTRUCTION

HOW TO USE

- Place the appliance on a flat, dry and heat-resistant surface.
- Turn the temperature knob to “OFF” position.
- Put the plug into the power supply.
- Switch on the appliance by turning the switch knob to “MIN” position and the temperature knob to the desired setting. The appliance cycle on and off to maintain the setting temperature. The pilot light goes on when the appliance is working.
- The appliance will be very hot. DO NOT touch the surface while in use or it has not cooled down completely.
- Unplug the appliance when not in use and let it cool down.

CAUTIONS

- DO NOT use unstable pan. Use pan with flat bottom to insure full contact with the hot plate for maximum heat efficiency.
- Avoid dropping any liquid on the plate for long-life performance.

CLEANING AND MAINTENANCE

- Always unplug from wall socket before cleaning.
- Never immerse the appliance, cord or plug in water or other liquids.
- Clean the outside with a damp cloth. Use washing-up liquid in case of hard stains.
- Do not use scratching cleaning agent.