



packedgedevice&software inc.

WAP-03G

Enterprise-Class, Ultra High Power
Outdoor Wireless Access Point &
Client Bridge



QUICK START

Version 1.2


A. WAP-03G Default Settings

1. Wireless Access Point mode
2. IP Address 192.168.1.250
3. Username/Password- **packedge / packedgea**
4. SSID- Packedge1
5. Power Output- High
6. Security- Disabled

B. Hardware Installation

1. Place the unit in an appropriate place using the mounting kit.
2. Run an Ethernet cable to the device and plug one end of the Ethernet cable into the Wireless Access Point.
3. Plug the other end of the Ethernet cable into a PoE injector or PoE Switch.

The diagram below depicts the configuration using a PoE Injector:

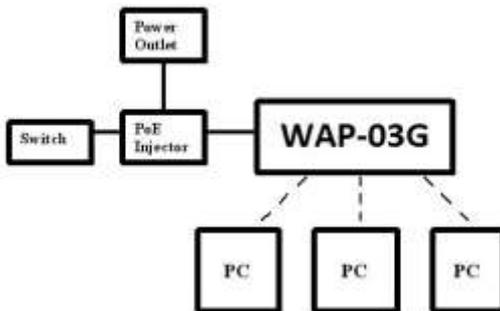



The Wireless Access Point should now be up and running with its default out-of-the-box setting. The best way to confirm that the unit is working properly is to log in to the device. To access the WAP-O3G GUI screen, you will need an Ethernet adapter and a web browser such as Internet Explorer.


LED Description: Wireless, Ethernet and Power

C. IP Address Configuration

The default IP address of the Wireless Access Point is **192.168.1.250**. In order to log into this WAP, you must first configure the TCP/IP settings of your PC/Notebook.

For Windows:

1. In the Windows Control Panel, go into **Network and Internet**, click **Network Connections** and double-click the connection of your Network Interface Card (NIC). The Local Area Connection Properties dialog will appear.

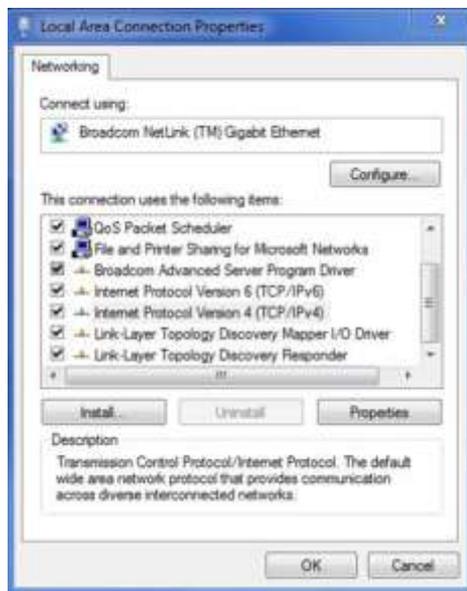




2. Select **Internet Protocol (TCP/IP)** and then click on the **Properties** button. This will allow you to configure the TCP/IP settings of your PC/Notebook.
3. Select **Use the following IP Address** radio button and then enter the IP address and subnet mask. Ensure that the IP address and subnet mask are on the same subnet as the device. For example: Wireless Access Point IP address: **192.168.1.250**, PC IP address: **192.168.1.10**, and PC subnet mask: **255.255.255.0**



4. Click on the **OK** button to close this window, and once again to close LAN properties window.

D. Login/Configure the Hardware

- a. To access the WAP-O3G's configuration screen, enter **http://192.168.1.250** into your web browser.

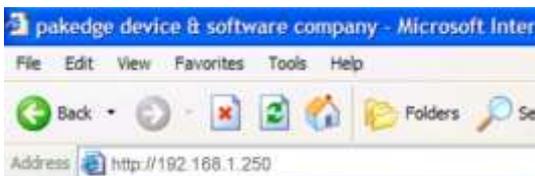

- b. The website of the Wireless Access Point should appear.



For further information and details beyond the Quick Start Guide, please refer to the User Manual on our website- <http://www.pakedge.com/userguides.php>

E. Technical Support

Please visit our website for up-to-date support information:

Website: www.pakedge.com

Email: support@pakedge.com

CONTACT INFORMATION:

Pakedge Device & Software Inc.
1163 Triton Drive
Foster City, CA 94404

© Pakedge Device & Software Inc. 2012 – All Rights Reserved