 


FRONT PANEL:

- 1. INPUT:** Plug your guitar in here. We recommend that you always use a high-quality shielded guitar cable to prevent any background noise interference or unwanted feedback.
- 2. GAIN:** This control determines the distortion intensity of the amplifier's overdrive setting. Adding GAIN will make your guitar sound more distorted.
- 3. OVERDRIVE:** This switch activates the amplifier's built-in overdrive function, which adds distortion to the signal.
- 4. VOLUME:** This control determines the output volume of the amplifier.
- 5. TREBLE:** This control determines the level of high frequencies in the output signal. Adding TREBLE will make your guitar sound brighter and sharper.
- 6. MID:** This PARAMETRIC control determines the level of middle frequencies in the output signal. Adding MID will make your guitar sound rounder and fuller.
- 7. BASS:** This control determines the level of low frequencies in the output signal. Adding BASS will make your guitar sound warmer and heavier.
- 8. HEADPHONES:** This is a 1/8" (Ø 3.5 mm) mini-jack (10 GA model) or a 1/4" (Ø 6.3 mm) standard jack (10 GA P model) output to connect the headphones. When headphones are connected, no sound is produced from the speaker.
- 9. CD/MP3 INPUT:** For 10 GA model only, this is a line level 1/8" (Ø 3,5 mm) stereo mini jack into which an MP3/CD/Tape player may be connected.
- 10. POWER LED:** When this red LED is lit, the amplifier is ready to work. When it is off, it means the amplifier is powered off.
- 11. POWER:** This switch turns the amplifier on or off.

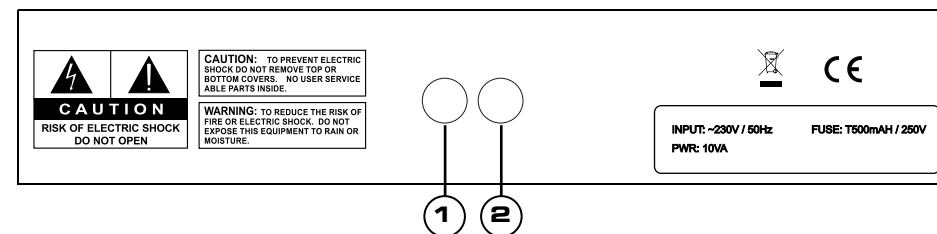

BACK PANEL:

WARNING: This amplifier must be earthed. Please check that the supply voltage details given on the rating label (located on the rear panel) are in accordance with your electricity supply.

- ① MAINS CABLE:** This amplifier features a power cable with a moulded-on plug. If the socket outlets in the home are not suitable for the plug supplied with this amplifier, use an appropriate plug adapter that can handle the power required for this amplifier.
In case the power cable or plug is damaged, unplug it in a safe way from the mains outlet and go to a suitable service centre for replacement.
- ② POWER FUSE:** In case the power fuse has to be replaced, first unplug the power cable from the mains outlet. Then remove the fuse cover and replace the power fuse with one of the same type and value. Never plug the power cable back into the mains outlet without the fuse cover. When powering on the amplifier, if the power fuse blows up again, go to a suitable service centre for repair.

| TECHNICAL SPECIFICATIONS | |
|---------------------------------------|---|
| Max. Rated Power / Loudspeaker | 10 Watts RMS @ 8 Ohms load / 6.5" Speaker |
| Frequency Response | 70 Hz to 10 kHz |
| Total Harmonic Distortion | 0.8% (Clean Mode) |
| Signal to Noise Ratio | - 60 dB @ max Rated Power |
| Input Impedance | 470k Ohms |
| Power Consumption | 20 Watts max |
| Maximum Input Level | 40 mV (RMS) |
| Maximum Gain | 44 dB (@ 1kHz) |
| Dimensions (H x W x D) | 29 x 28 x 18 cm / 11.4 x 11 x 7.1 in |
| Weight | 4.3 kg / 9.5 lb |

Features and Specifications are subject to change without notice.

 
INSTRUCTIONS FOR USE:

Plug the mains lead into a suitable power socket and connect your instrument to the input socket of the amplifier with a suitable guitar lead (this lead is not supplied with the amplifier, but is normally supplied with the electric guitar). Finally, press the Power Switch to the ON position, the power LED will glow and your amplifier is ready for use.

IMPORTANT SAFETY INSTRUCTIONS:

READ AND KEEP THESE INSTRUCTIONS HEED ALL WARNING.

- If, after you have followed the instructions outlined above, your amplifier fails to function, please contact your dealer. Under no circumstances should the amplifier be opened. Leave all servicing to qualified personnel.
- Electrical appliances must never be used in conditions of high humidity or heat. To prevent any risk of fire or electric shock, never spill or splash liquids on the amplifier. Should this happen, unplug the power cable from the mains outlet immediately.
- We would like to draw your attention to the instructions printed on the notice attached to the back of the amplifier.

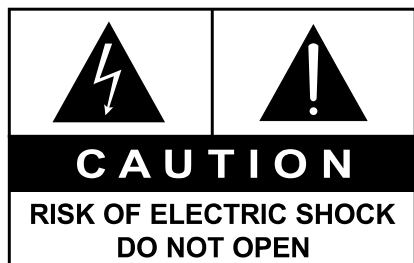

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT REMOVE TOP OR BOTTOM COVERS. NO USER SERVICEABLE PARTS INSIDE.

 
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

- Exposure to extremely high noise levels may cause permanent hearing damage (especially when using headphones). Please use this amplifier responsibly for you and your neighbourhood.

MARKING & CONFORMITY:

1. The CE mark on this product means it conforms to the EMC Directive (89/69/EEC), CE marking Directive (93/68/EEC) and Low Voltage Directive (72/23/EEC).
2. The «Crossed-out Wheeled Bin» is to draw your attention to the WEEE (Waste Electric & Electronic Equipment) Directive (2002/96/EC). It means this apparatus must be collected separately for recycling.
3. «RoHS compliant» means this device conforms to the Directive (2002/95EC) on the restriction of the use of certain hazardous substances in electrical and electronic equipments, such as: Mercury, Lead, Cadmium, Hexavalent Chromium, Polybrominated Buphenyl (PBB) and Polybrominated Diphenyl Esters (PBDE).

DISTRIBUTOR/DEALER

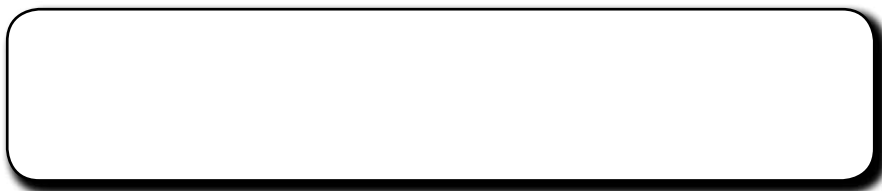

**RoHS
compliant**

EMD Music 01-2008-UK



USER'S MANUAL



GUITAR AMPLIFIER

10 GA & 10 GA P