

Remote Control User Manual

Version: 1.1

Content

	Page
1. Key panel description.....	1
2. Specifications.....	2
3. Remarks function	2
4. Program.....	3
4.1 Date & time.....	4
4.2 SERVICE button.....	5
4.3 Card.....	7
4.4 Change password.....	9
4.5 Unlock time.....	9
4.6 Ring type.....	10
4.7 Ring volume.....	10
4.8 Buttons configure.....	11

1.Key panel description

Key	Function
TIME	Report time or program /time & date/.
RING	Choose ring type or program ring volume.
UNLOCK	Program /Unlock time/.
0~9	Digits
SERVICE	Program /SERVICE function/.
EXTRA	Program cards together with /REG-/ and /DEL+/ buttons
CLEAR	Cancel the wrong number.
EXIT	Back to the top menu or out of program.
REG -	Register cards or reduce ring volume.
DEL+	Cancel cards or increase ring volume.
ENTER	Confirm button
FN	Function button

- 1 -

2.Specifications

Battery: 3V (2pcs), 1.5V AAA
 Available distance: ≤3 meters
 Angle: ≤30°

3.Remarks function

- The door station will sound accordingly if you press any button on the remote control. In case there is no any response, please check if the batteries are workable or if the ring volume is at lowest level.
- Press [FN] button the [DOOR OPEN] LED will flash. In 7s you have to enter the correct password, otherwise the system will return to the stand-by status. On program status if you keep doing nothing in 120s, the system will return to the stand-by status automatically.
- The buttons on the door station are not workable while programming.
- If keep pressing [EXIT] button, the system will page up until out of program.
- If enter wrong number, please press [CLEAR] button to cancel the wrong one.

- 2 -

4.Program

Get in the system

- 1.Press [FN] +password(4 bits) +[ENTER]
- 2.The door station will sound a long beep and the [DOOROPEN] LED will flash slowly.
3. If enter a wrong number, the door station will say "sorry, wrong number. Please try again".Please repeat the step1.

[Note: the original password is /1234/. It can be changed.]

- 3 -

⚠ All programs are available only after get in the system.

4.1 Date & time

- 1.Press [TIME] +[yy-mm-dd hh/mm] + [ENTER] or Press [TIME] +[hh/mm] + [ENTER] or Press [TIME] +[hh/mm/ss] + [ENTER]
- 2.The door station will sound a long beep and the [DOOR OPEN] LED will flash slowly.
- 3.If the door station says "sorry, wrong number, please try again".Then please repeat the step1.

[Note: 1.The system adopts 24 hours model.

2.Once finish the program you may push [TIME]+[ENTER] button to check the result.]

e.g.:if the time is 18:15 in Oct. 25,2008,please press [TIME] button then enter /0810251815/ and confirm by [ENTER] button. If the date is correct, you just need to enter /1815/.

- 4 -

4.2 SERVICE button

 
■ ON/OFF

- 1.Press [SERVICE] + [ENTER]
- 2.If the door station says "ON", the function is open.
- 3.If it says "OFF", the function is close. To switch between on and OFF, please just push [ENTER] button.

■ Service time

- 1.Press [SERVICE] + /hh:mm/ + /hh:mm/ + [ENTER]
- 2.The door station will sound a long beep, and the [DOOROPEN] LED will flash slowly.
- 3.If the door station says "Sorry, wrong number. Please try again", it means the program failed. Then please repeat the step1.

e.g. 1: For allowing the service people to enter between 7:30 to 9:30, please push [SERVICE] button, then /07300930/ keys and [ENTER] button continuously.




- 5 -

e.g. 2: For allowing the service people to enter in 07:30 sharp, please press [SERVICE] button, /0730/ keys and then [ENTER] button.



 e.g. 3: For allowing the service people to enter any time except 7:30 to 9:30, please push [SERVICE] button, /09300730/ keys, then [ENTER] button.



- 6 -

4.3 Card

■ Register single card

1. Press [REG-] + card number(8 bits)+[ENTER] or Press [REG-]+swipe the card+[ENTER]
2. The door station will sound a long beep. But the [DOOROPEN] LED will still flashing quickly. So you can register another card by entering the card number+[ENTER] or swiping the card. You can also push [EXIT] button to quit the program.
3. If the door station says "Sorry, wrong number. Please try again", that means the program failed, then please repeat the step 1.

■ Register continuous cards

1. Press [REG-]+[EXTRA]+1st card number(8bits) + card quantity + [ENTER] or Press [REG-] + swipe the card +card quantity + [ENTER]
2. The door station will sound a long beep. And the [DOOROPEN] LED will start to flash slowly.
3. If the door station says "Sorry, wrong number. Please try again", that means the program failed, then please repeat the step 1.

-7-

■ Delete single cards

1. Press [DEL+] +card number(8 bits)+ [ENTER] or Press [DEL+] + swipe the card+[ENTER]
2. The door station will sound a long beep. But the [DOOR OPEN] LED will still flashing quickly. So you can delete another card by entering the card number+[ENTER] or swiping the card. You can also press [EXIT] button to quit the program.
3. If the door station says "Sorry, wrong number. Please try again", that means the program failed, then please repeat the step 1.

■ Delete all cards

1. Press [DEL+][EXTRA]+system password+[ENTER]
2. The door station will sound a long beep. And the [DOOR OPEN] LED will start to flash slowly.
3. In case you entered a wrong password, the LED will keep flashing quickly. At this moment, you may enter the right password and push [ENTER] button.

-8-

4.4 Chang password

1. Press [FN] + new password (4 bits) + repeat new password + [ENTER]
2. The door station will sound a long beep. And the [DOOR OPEN] LED will start to flash slowly.
3. If the door station says "Sorry, wrong number. Please try again". That means you repeat different number and need to repeat the step 1.

4.5 Unlock time

1. Press [UNLOCK] + Number (1~10) + [ENTER]
2. The door station will sound a long beep. And the [DOOR OPEN] LED will start to flash slowly.
3. If the door station says "Sorry, wrong number. Please try again". That means you entered an exceeded number and need to repeat the step 1.

-9-

4.6 Ring type

1. Press [RING] + Number (1~4) + [ENTER]
2. The door station will sound a long beep. And the [DOOR OPEN] LED will start to flash slowly.
3. If the number is exceed, the door station will say "sorry, wrong number. Please try again". That means the program fail and you need to input the right number again.

[Notes] There are 4 optional rings. You may increase or decrease ring volume yourself with [DEL+] and [REG-] buttons.

4.7 Ring volume

1. Press [RING]+[REG -] / [DEL+] + [ENTER]
2. The door station will sound a long beep. And the [DOOROPEN] LED will start to flash slowly.

[Note] there are 4 volume levels as options.

1=mute.

-10-

 
4.8 Buttons configure(Specially for direct-call door station)

1. Press [FN]+[REG-], [DOOROPEN] LED will flash quickly.
2. Press [CALL] button on the door station, system will sound a short beep.
3. Input "Distributor(3 bits)" + "Port number(1 bits)" +[ENTER]
4. If the door station sounds a long beep, that means the program is successful. While the [DOOROPEN] LED will still flashing quickly. The program for another buttons is available by repeating step 2 and step 3.
5. If the door station says "sorry, wrong number, please try again", that means the program failed, then please repeat the step 2 and step 3.

⚠ G9 door station [call] buttons are not fixed to distributors' ports. So program to match call buttons is required.

-11-

Example: 2313D-C 1x2 door station, Distributor 001

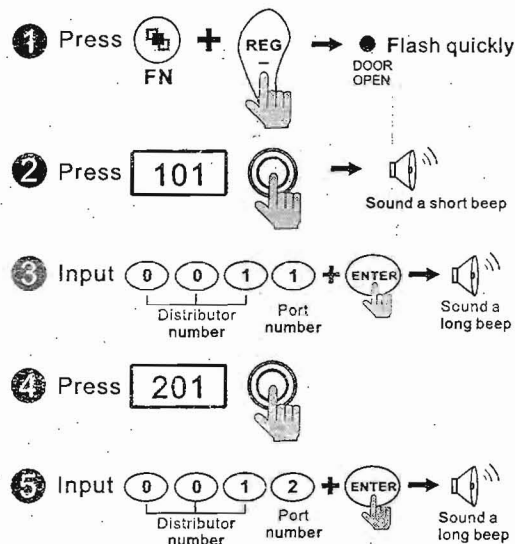

-12-