

# *SE Digital Video Recorder*





## Table of Contents

<b><u>General</u></b>	
Safety Precautions	4
About This Manual	5
Front Panel Layout	7
Rear Panel Layout	8
Main Screen Layout	9
Mouse Control	10
Operation using Front Panel Buttons/IR Remote Control	11
<b><u>Settings and Configurations</u></b>	
1-Camera Settings	12
2-Record Settings	13
3-Alarm Detection Settings	14
4-Motion Detection Settings	15
5-Screen Settings	16
6-Audio Settings	17
7-Security Protection Settings	17
8-Time Setup	18
9-Dwell Time Setup	18
10-Network Settings	19
11-DNS/DDNS Setup	20
12-RS-485 Setup	24
13-PTZ Camera Setup	25
14-Video Search and Playback	26
15-Video Backup	28
16-Remote Client Software	30
Specifications	36



## Safety Precautions

	<b>CAUTION</b> RISK OF ELECTRICAL SHOCK. DO NOT OPEN!
CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user that insulated dangerous Voltage is contained within the product's enclosure. This may be of sufficient magnitude to constitute risk of electrical shock to persons opening the enclosure.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE UNITS TO RAIN OR MOISTURE.**



Attention: installation should be performed by qualified service Personnel only, in accordance with the National Electrical Code or applicable local codes.



Power Disconnect. Units with or without ON-OFF switches have power supplied to the unit whenever the power cord is inserted into the power source; however, the unit is operational only when the ON-OFF switch is the ON position. The power cord is the main power disconnect for all unites.

Warranty and Service

There are no serviceable parts for this unit, call for your agent for details.

## About this Manual

Before installing this embedded DVR, be sure to thoroughly review and follow the instructions in this User Manual. Pay particular attention to the parts that are marked **NOTICE**.

Also, when connecting with external devices, first turn the power OFF and follow the instruction manual for appropriate installation.

## Before Installing the DVR

1. This document is intended for both the administrator and users of the SE DVR.
2. This manual contains information for configuring, managing and using the SE DVR.
3. To prevent fire or electrical shock, do not expose the product to heat or moisture
4. Be sure to read this manual before using the SE DVR.
5. For questions and technical assistance of this product, contact your local dealer.

► It is strongly recommended on installation of the DVR unit, that::

1. Check that electrical power is stable and meets our power requirements at the DVR installation site. Unstable electricity can cause malfunction of the unit or even critically damage the unit.
2. Several chips on the main board of the DVR unit and hard disk drive inside the unit generate heat which must be properly exhausted. Do not block the exhaust port (fan) on the left side of the unit and do not block the fresh air in-take on the right side of the unit..
3. Locate the DVR in a well-ventilated place and do not put any heat-generating objects on the unit. If it is installed in a 19 inch mounting rack together with other devices, please check that the built-in ventilation fan of the rack is running properly.

**FCC Statement:**

**WARNING**

This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received including interference that may cause undesired operation."

**\* Federal Communications Commission (FCC) Statement**


**WARNING**

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

\* You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.


**FRONT PANEL**

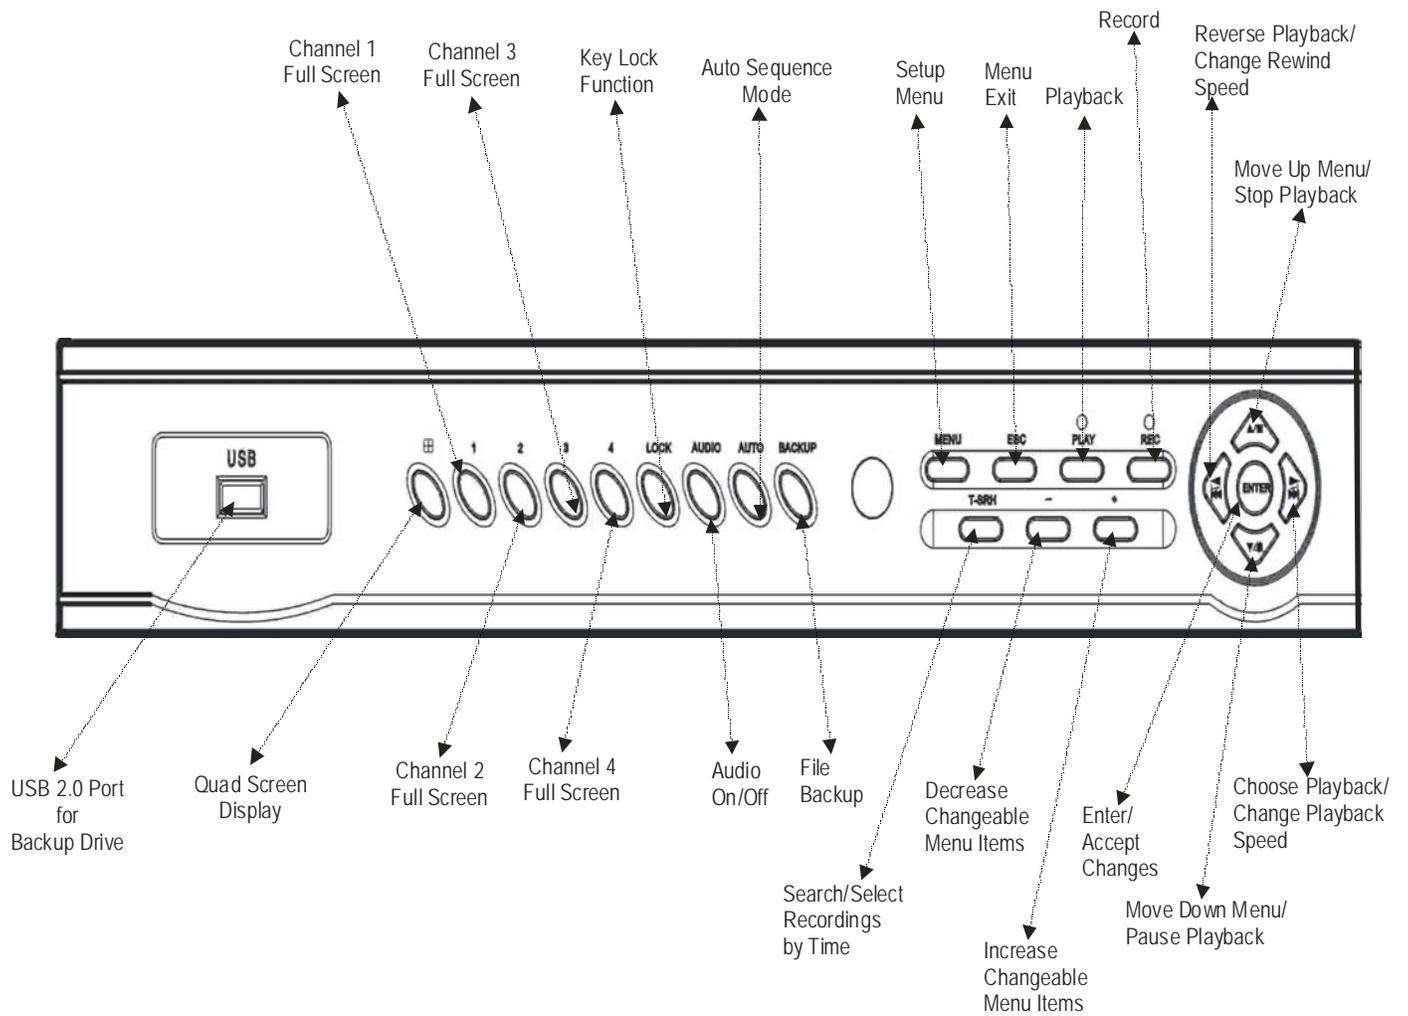

## REAR PANEL

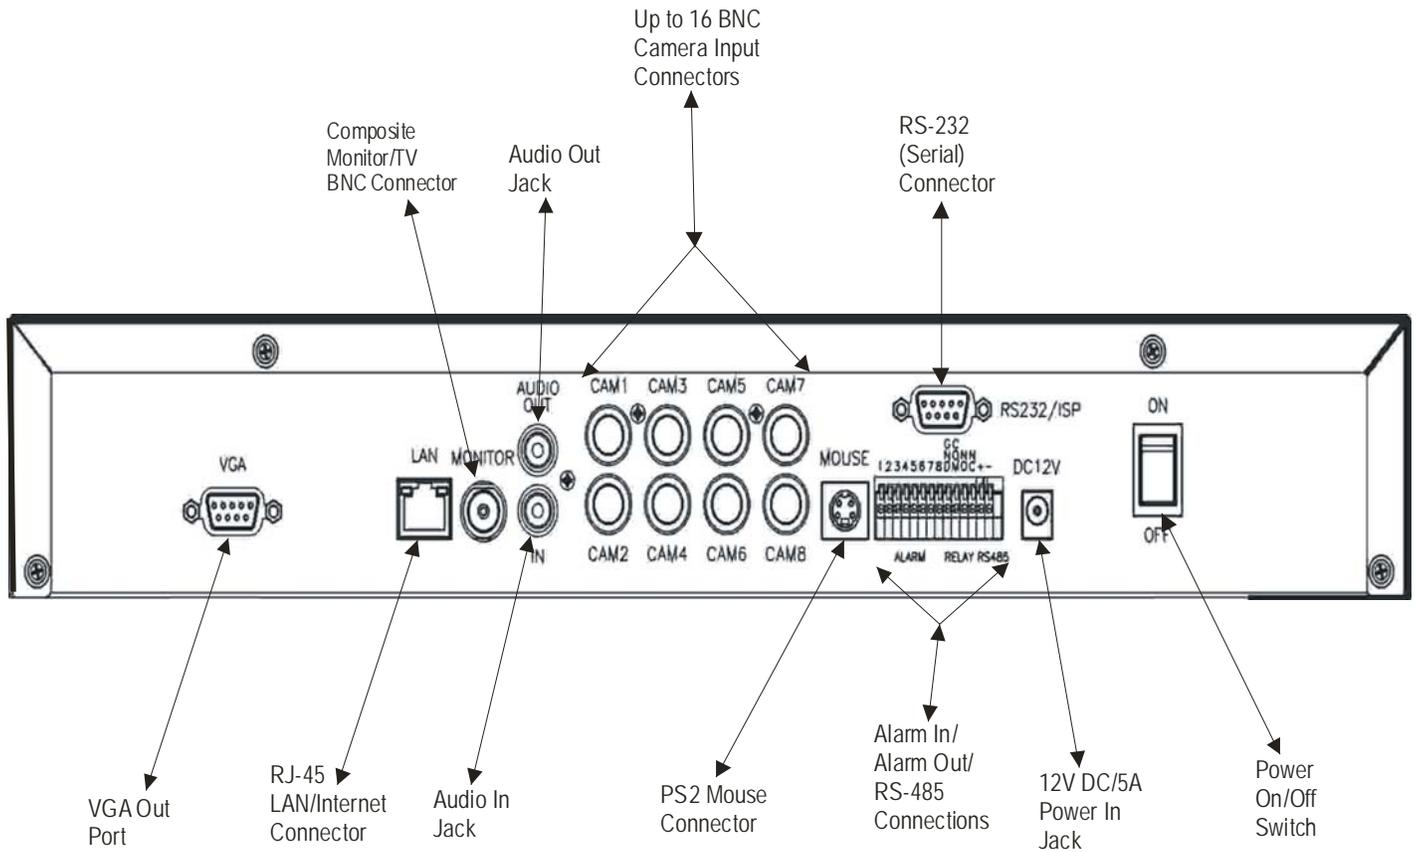

## Main Screen Layout

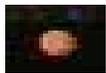

Recording icon



Event (Motion / Alarm)




Overwrite



Video loss



Motion

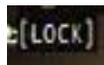

Keypad lock \*111111 is the default password



Alarm

**Mouse Control**

• Screen display	<ol style="list-style-type: none"><li>1. With the mouse pointer on the desired camera in a multi-camera screen, double-click the left mouse button to full screen that particular camera</li><li>2. Double-click the left button on a full screen camera to return to multi-camera screen</li></ol>
• Menu display	<ol style="list-style-type: none"><li>1. Single-click the right button to go to the menu OSD</li><li>2. Right-click in Menu to go to last OSD page displayed (OSD = On Screen Display)</li></ol>
• To Select	<ol style="list-style-type: none"><li>1. Left-click on a specific menu item</li><li>2. Left-click on the value of item</li><li>3. Left-click on Exit to quit and save menu</li><li>4. Drag mouse from upper right corner to lower left corner of a specific area on each camera to set the motion detect area.</li></ol>

### **Operation With Front Panel Buttons:**

- MENU BUTTON** : Press the MENU button to enter menu setup or to exit
- ESC BUTTON** : Press the ESC button to exit menu
- ENTER BUTTON** : Press the Enter button to confirm set or change a value
- DIRECTION BUTTON** : Select MENU items by using the Up and Down buttons
- + BUTTON** : Use this button to increase item values
- BUTTON** : Use this button to decrease item values in menus
- BACKUP** : Use this button to enter backup mode in menus

### **Operation with Remote Controller: (Optional)**

The keys on the remote controller have the same functions as those on the DVR front.



Channel (camera) select

- PIP** : Toggles Audio On/Off
- UP / STOP** : Move UP button in menus / Playback stop button
- REW** : Reverse playback button
- DOWN / PAUSE** : Move DOWN button in menus / Playback pause
- FF** : Fast Forward playback button
- ENTER** : Enter button to confirm set or change a value
  
- MENU BUTTON** : Press this button to display the setup menu
- BKUP** : File backup button
- ESC** : Exit menu
- T-SRH** : Search recordings by time
- PLAY** : Playback selected videos
- REC BUTTON** : Press this button to start recording video
- + BUTTON** : Use this button to increase item values in menus
- BUTTON** : Use this button to decrease item values in menus


## 1-Camera Settings




Select Camera Set from the Main Menu. Select the appropriate Channel (camera) and adjust the properties to provide the best video picture.

### Main MENU – Camera Set – Title

The camera title setup function allows up to 5 characters to be entered to identify each video channel.

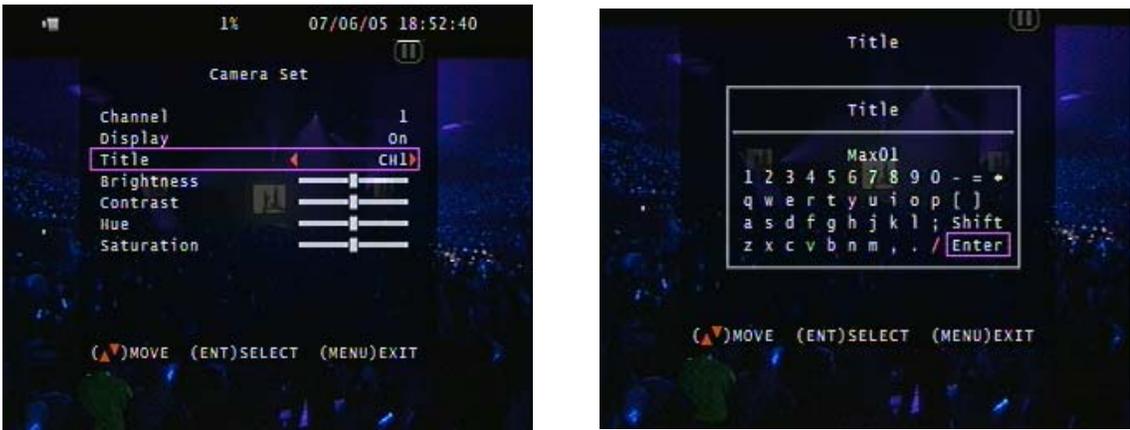

Enter the desired camera title and then select Enter to confirm the camera title.

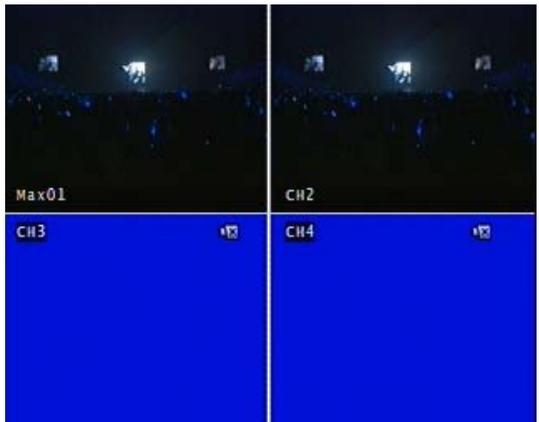


## 2-Record Settings

### Main Menu – Record Set



### Record Set – \*Schedule Record Frame rate

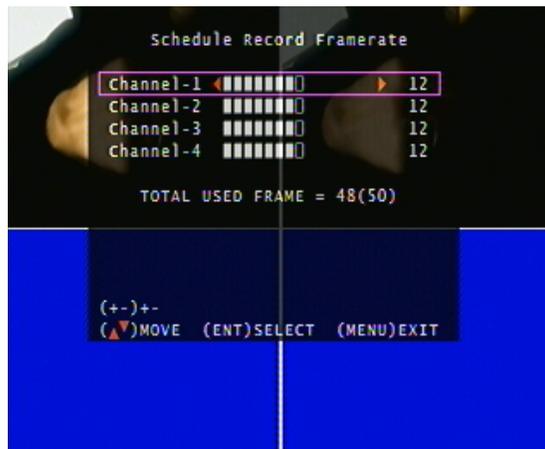

### Record Set – \*Motion Record Frame rate



### Record Set – \*Alarm Record Frame rate



\*Each channel has its own frame rate adjustment for each recording mode.

**Record Set – Record Quality:** Choose from High / Normal / Low

**Record Set – Event Rec Duration:** Choose from 5 / 10 / 15 / 20 / 25 / 30 secs

**Record Set – Auto Record:** After 1 ~ 8 minutes (select) of no recording, auto recording will start.

**Record Set - Data Retention Set:** 1 ~ 15 days (select)

**Record Set – Schedule Record**



Within a 24 hour period, the user can adjust each channel's frame rate by record mode such as schedule, motion detection, and alarm record. Press the  button to select different record modes or click the left mouse button.

**3-Alarm Detection Settings**



**Alarm Duration** – Select off, # of seconds or continuous.

**Alarm POP UP Setup** – Set to off, # of seconds or continuous. When an alarm is triggered, the alarm symbols is displayed on the corresponding video channel and goes full screen or to quad screen if more than two alarms are triggered at the same time.

**Alarm Detection** – Each Alarm input can be defined as NO (Normally Open) or NC (Normally Closed). Main Menu –

## 4-Motion Detection Settings



**Channel** – Select Channel (Camera)


**Sensitivity** – Select motion detection sensitivity – off, 1, 2 or 3

**Motion Duration** – Select length of time for motion duration to record/alarm – off, # seconds or continuous

### Motion area selection

To set using the mouse: Select the start point (upper right corner) and drag to end point (lower left corner) of desired motion detection area. One-click of the left mouse button will cancel the detection area

Using the front panel: Use the direction buttons to select the desired motion detection area. Pressing the ENTER button will cancel the detection area.

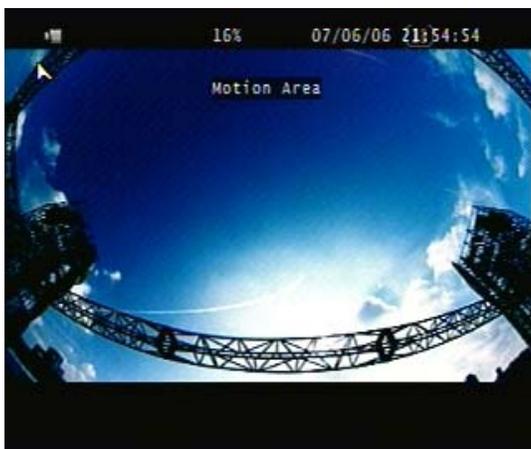

## **5-Screen Settings**

**Border** – Toggles the white border between camera displays on and off (see picture).



**Video Adjustment** – Adjust the video display screen position movement

Using the arrow keys on the front of DVR, adjust the overall screen image (up, down or sideways) as required.

### **VGA Frequency and VGA**

Choose between either 60 or 75Hz VGA frequency and VGA screen resolution of 640x480 or higher. After adjustments have been made, press ENTER to save changes or press ESC to cancel. If the user does not make any changes, the settings will revert back to the previous settings after 15 seconds. **\*Note:** The DVR will need to be rebooted if 1280x1024 resolution is selected.

## 6-Audio Settings



**Audio Record** – turn on or off as required with left mouse click or Enter button

**Mute** – must be off to record or playback audio

**Input Volume** – adjust slide switch with mouse or Enter button to adjust volume of audio being recorded

**Output Volume** – adjust slide switch with mouse or Enter button to adjust volume of audio being played back

## 7-Security Protection Settings (Main Menu – System Setup – Security Protection)

**The default password is 111111.** To change the password:


- 1 - Select "Security Protection" from the "System Setup" menu and then select "Password Change"
- 2 - Enter the current password followed by "Enter"
- 3 - Enter the new password followed by "Enter"
- 4 - Confirm (re-enter) the new password followed by "Enter"

**Menu Protection** - Set to "On" to only allow menus to be accessible by first entering the system password.

This is an excellent way to prevent unauthorized people from changing or deleting recordings

**Auto Key Lock** - Set to "Off" or for a length of time from 1 to 60 seconds. When a time is set, the system is locked to all commands and choices within the time set, after selection or booting and can only be unlocked by entering the password using the keys on the front of the system. It is advisable to leave this command set to "Off" until the user is very familiar with the system controls.

## 8-Time Setup (Main Menu – System Setup – Time Setup)

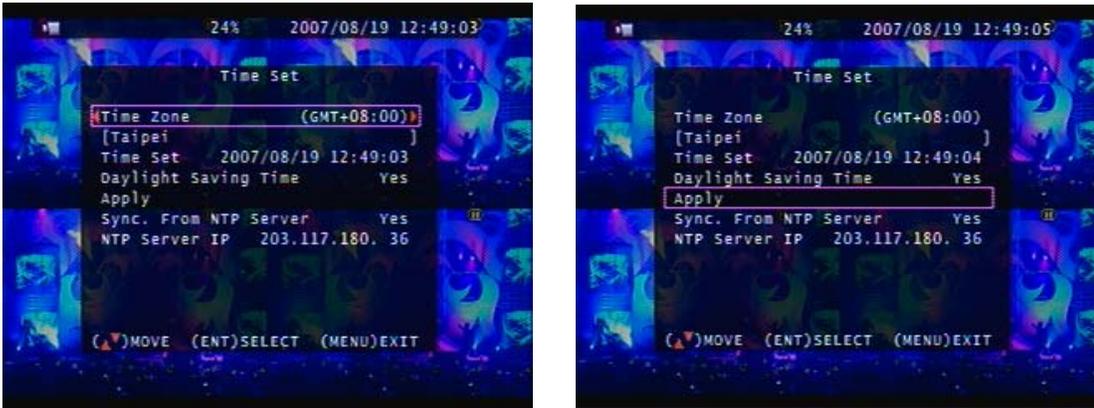

**Time Zone** – Select time zone by left clicking on the displayed time zone until the correct one is displayed.

**Time Setup** – Select Year/Month/Day and Hour/Min/Sec. by left-clicking with the mouse on each number displayed and then clicking the up/down arrows that appear under each digit, until the correct digits are selected.

**Daylight Saving Time** – Select Yes or No

**Sync. From NTP Server** – Select “Yes” if time is to be synchronization with an NTP server. A Network connection is required to use NTP server. NTP server does not work under network DHCP mode.

**NTP Server IP** – Enter NTP server’s IP Address

## 9-Dwell Time Setup (Main Menu – System Set – Dwell Time Setup)



Dwell time is the number of seconds each camera image remains on the screen before switching to the next when the DVR is in single camera mode and Dwell Time is enabled.

**Enable** – set to Yes or No


**Dwell Time Setting** – Set to a number of seconds

## 10-Network Settings (Main Menu – System Setup – Network Settings)



**Enable:** Set to “Yes” to enable LAN or Internet access

**Local IP:** click to select

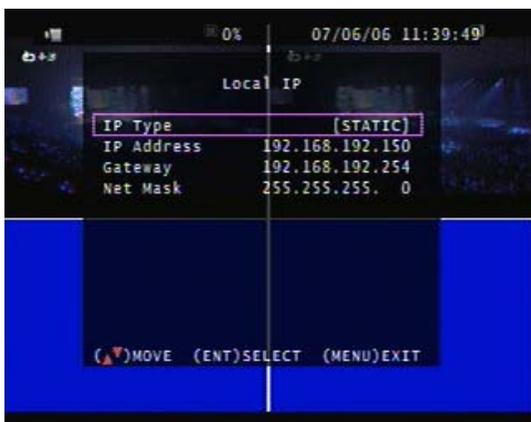

**IP Type: Static (IP is manually assigned)**

Select Static if you have a Static IP Address

Enter values for IP Address, Gateway and Net Mask as supplied by your Internet Service Provider (ISP)

**IP Type: DHCP (IP is assigned by DHCP)**

IP Address, Gateway and Net Mask will be auto-detected

**IP Type: PPPOE (When SE is connected directly to the DSL modem)**

PPPOE ID and PPPOE Password: Enter values provided by ISP


**\*Note:** When using PPPOE, input PPPoE ID (account) and password and then save & exit menu. Re-enter Network Settings again, and if the IP address appears, then all firewall and authority management is correct.

## 11-DNS/DDNS Setup (Main Menu – System Setup – Network Settings – DNS/DDNS Setup)




Using the DynDNS service ([www.dyndns.com](http://www.dyndns.com)), the SE Series DVR can be connected over the internet using a dynamic IP address. Start by creating an account with DynDNS by visiting [www.dyndns.com](http://www.dyndns.com) and obtaining a free account and host name as described below:


### 1) Click Create Account

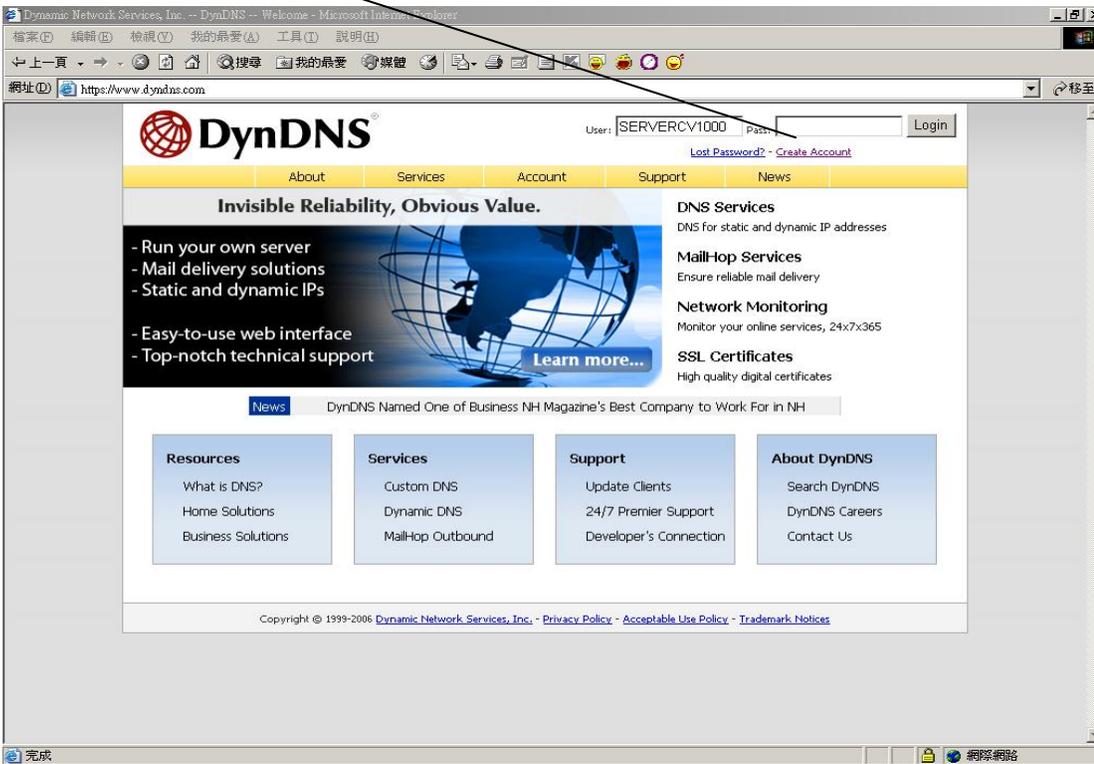


2) Fill in all the personal information, password and email information. Go to your email account to receive your new account info. Return to the DynDNS website; click Account and login.

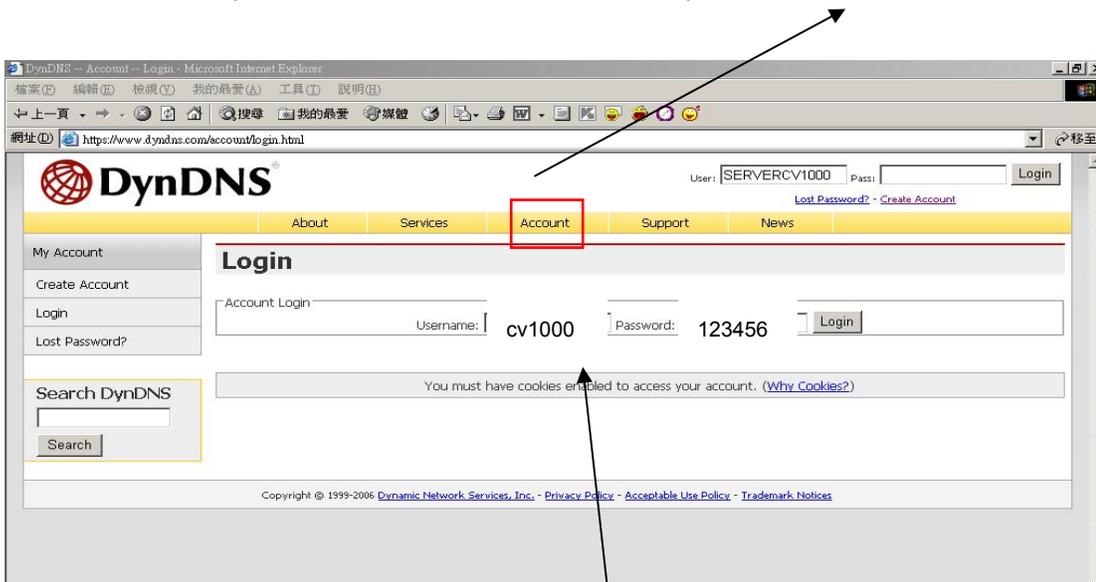

3) Type your supplied Username and Password

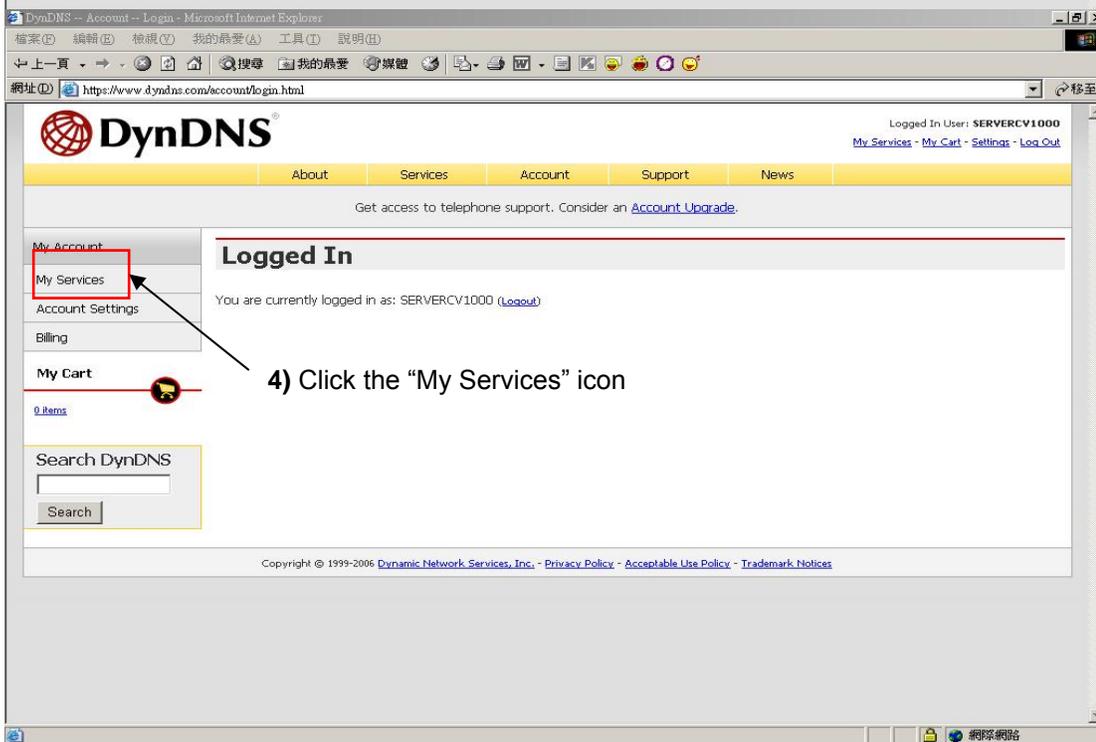


4) Click the "My Services" icon

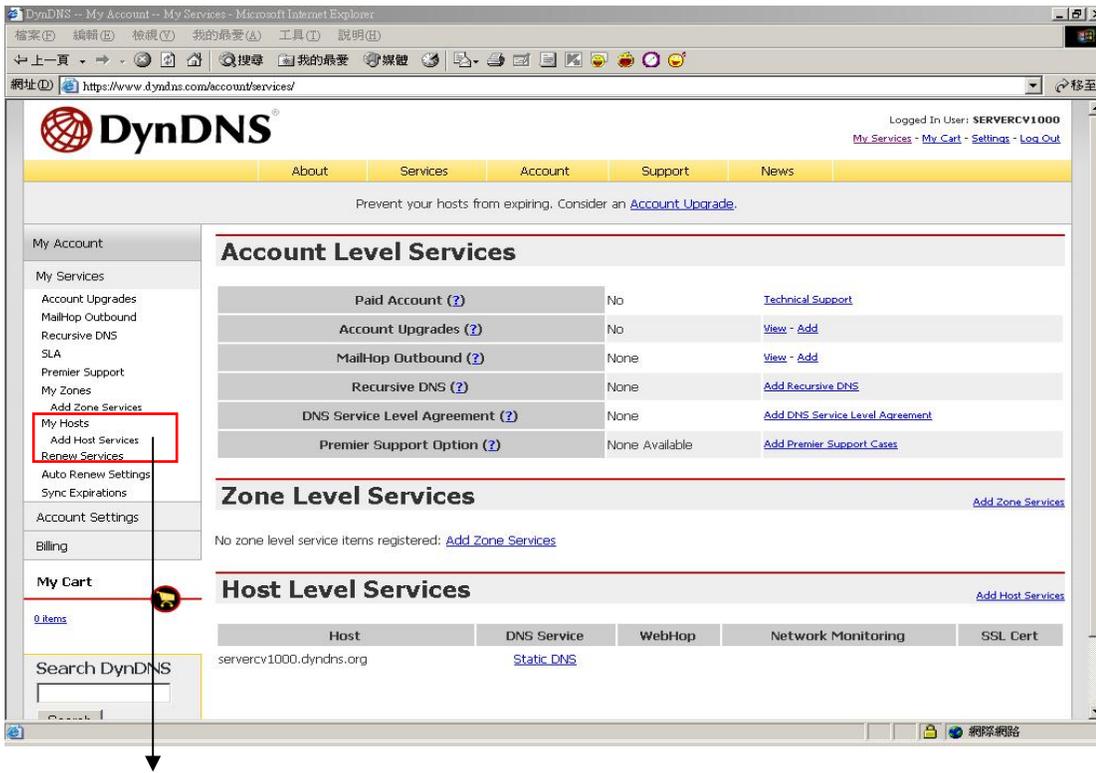


5) Click "Add Host Service"


6) Select "Add Dynamic DNS Host"

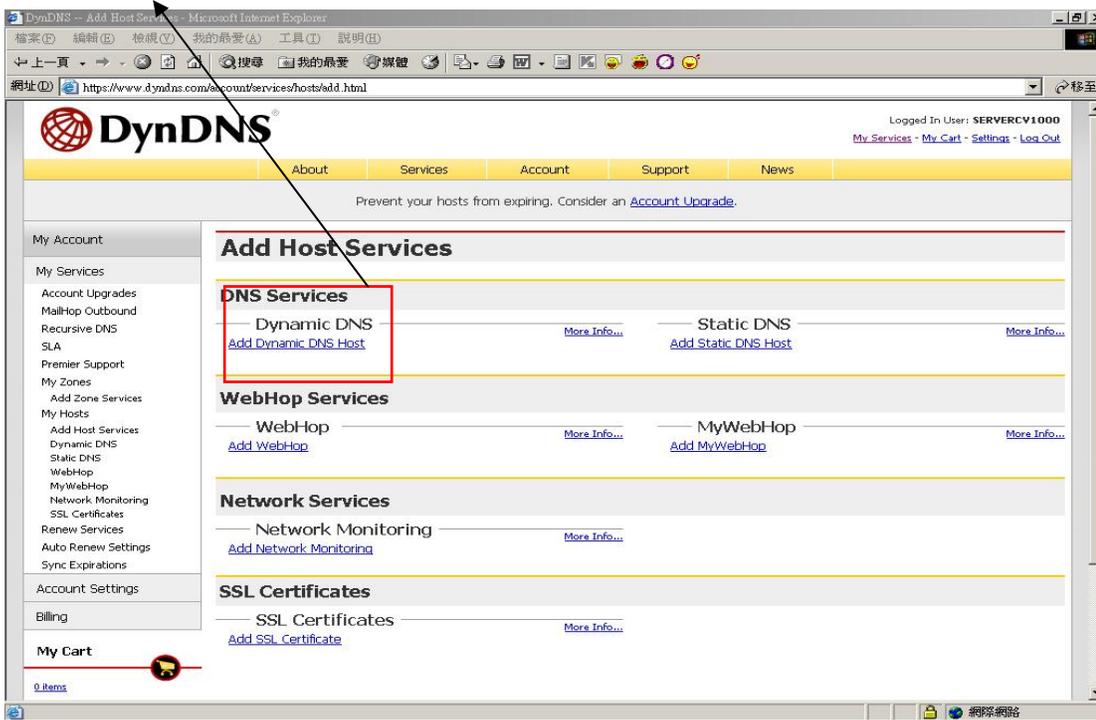

7) Enter a hostname of your choice and click "Add Host".

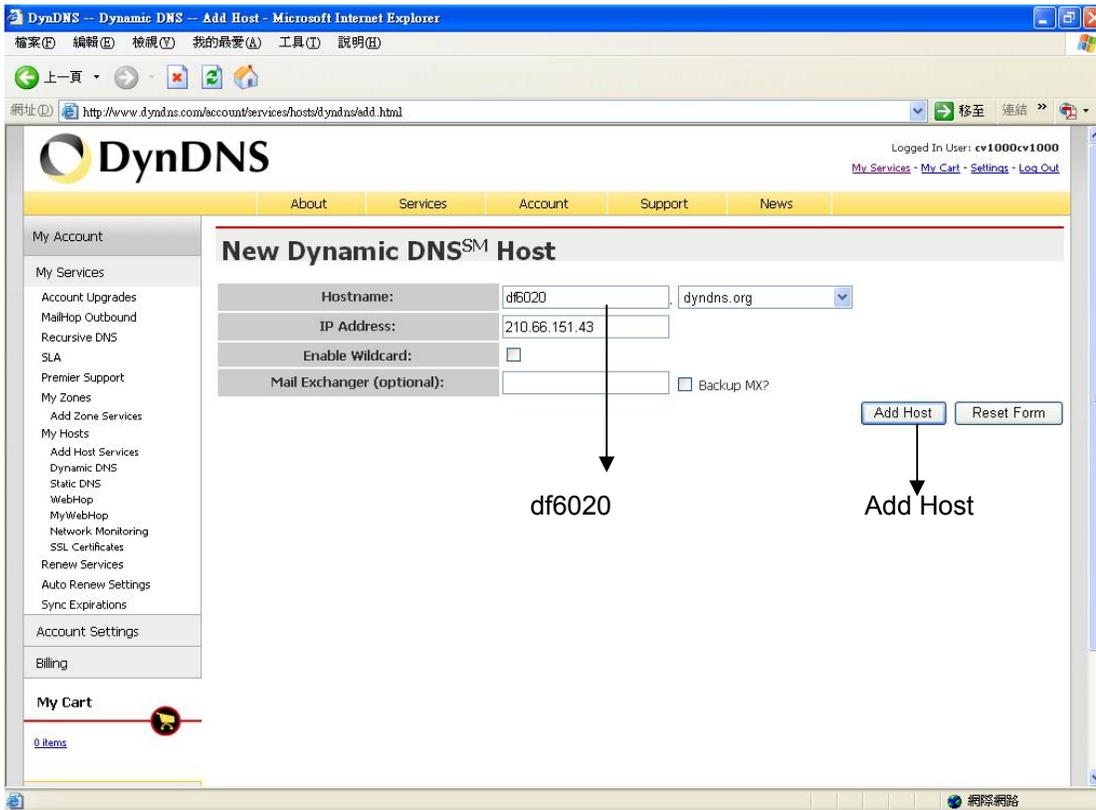

For Example: We've created df6020 as a new host name. After a new host name is added, the DynDNS page will show a confirming message page (see below).

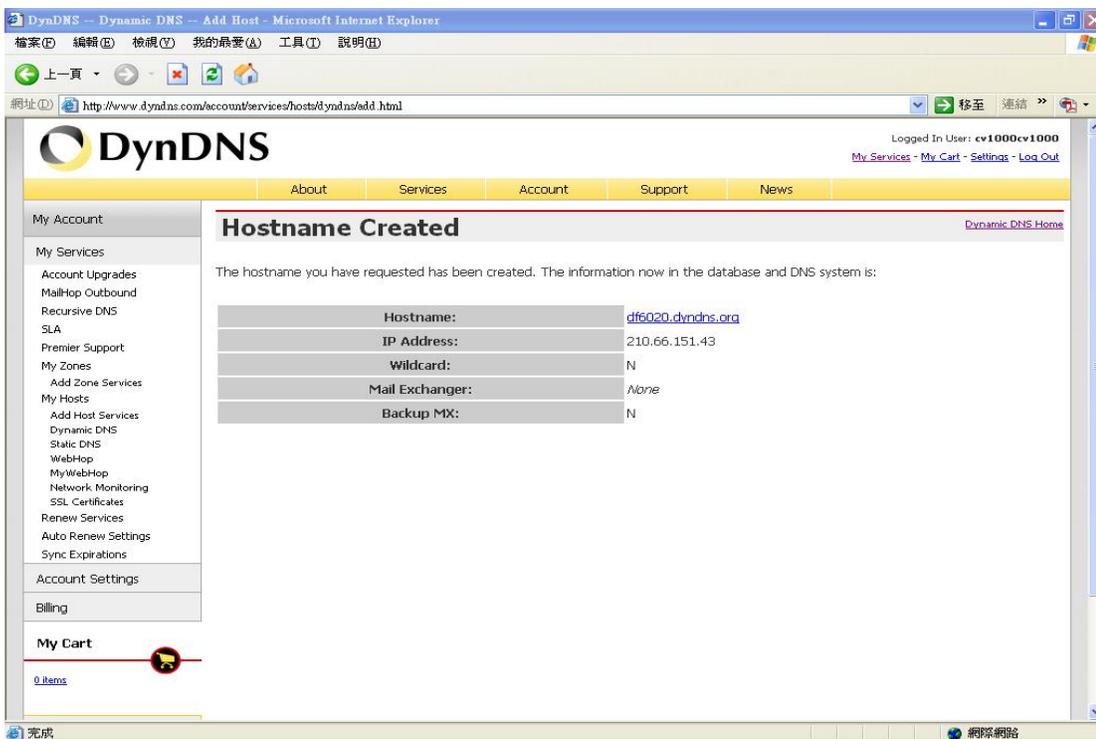

8) When the Host Name, username and password have been setup on the DDNS server, enter this information into the DNS/DDNS Setup screen:



Enable: YES  
DNS Server: [Obtain from your ISP]  
DDNS Server: DynDNS.  
HOST Name: Insert host name  
User Name: Insert DynDNS username  
Password: Insert DynDNS password

From a PC connected to the Internet, open a browser and enter the hostname (for example: <http://df6020.dyndns.org>) to access the DVR remotely.

## 12-RS-485 Setup (Main Menu – System Setup – RS-485)

This screen sets the RS-485 parameters used to control Pan, Tilt and Zoom (PTZ) cameras. From this screen, you can set the baud rate, number of data bits, odd or even parity and the stop bit according to the information provided with your PTZ camera.



## **13-PTZ Camera Setup** (Main Menu – System Setup – Pan/Tilt Device)



From the Pan/Tilt Device setup screen, the channel, ID and Model of PTZ can be setup. PTZ cameras can be controlled using a combination of the front buttons and the mouse:

- Press ESC to enter PTZ mode
- Press the AUTO button and then left-click the mouse to control PTZ movement
- Press the quad button + numbers 1 ~ 4 to set presets
- Press the AUTO button + 1 ~ 4 to call presets
- Press AUTO to start the preset tour
- Press AUTO again to cancel

## 14-Video Search and Playback

From the Main Menu, select Search. The Search function is used to search, find and play recordings by Time or Event. Select Time List, Event List or Time Search and follow the corresponding instructions below.



**Time List:** Selecting Time List displays a list of continuous or scheduled recordings separated in one hour segments. Select a recording using the mouse or arrow keys and click/press enter to playback the corresponding recording.



**Event List:** Selecting Event List displays a list of recordings by both time segment and type of event – Motion, Alarm or Manual. Select a recording using the mouse or arrow keys and click/press enter to playback the corresponding recording.

**Time Search:** Selecting Time Search allows the Start and End times of a recording to be defined by date and time, and the resulting recordings played back. Follow the instructions below to perform a Time Search:

Press ENTER/Click to select date and time. Use the left and right buttons to select an item, press the ENTER button and use the + / - buttons to change the corresponding value.



After the required date and time have been entered, move the selection to the Search button (bottom left of the screen) and then press ENTER/Click to start playback.



Forward play speed can be increased: x 2 / x 3 / x 4 using the right arrow button  
Reverse play speed can be increased: x 8 / x 16 / x 32 using the left arrow button

## 15-Video Backup

Video can be backed up to a USB thumb drive or via the Internet/LAN using the supplied client software. The instructions below describe the process of backing video up to a USB thumb drive. In general, from any of the playback options, pressing the backup button on the front of the DVR will initiate the backup process.


### Backup From Live Display

1) Press the backup button on the front of the DVR.



Total hard disk data time range

Select start and end time of backup

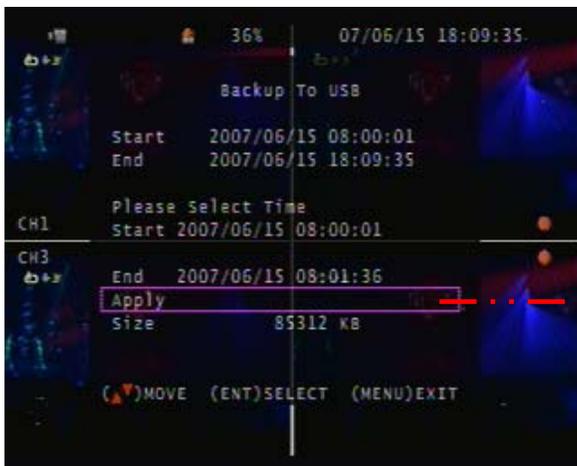

2) After selecting the backup time range, select Apply and press the Enter button to calculate the file size. When the file size appears, press the backup button again.



3) After the “Reading USB Disk” message disappears, the backup information will be displayed on screen and the user now can press the Backup button to start the file backup process. When the backup is complete, press the menu button to exit the USB backup screen and return to live video mode.



**Backup From Playback Screen**

- 1) Press the play button to start playback. The playback beginning time will be the last full hour recorded. Press the + and – buttons to toggle the Start and End backup times.
- 2) Press the backup button
- 3) After the “Reading USB Disk” message disappears, the backup information will be displayed on screen and the user now can press the Backup button to start the file backup process. When the backup is complete, press the menu button to exit the USB backup screen and return to live video mode.

## 16-Remote Client Software

The Net Viewer (Client) Software can be used to connect to the SE DVR remotely. It is a powerful tool and easy-to-use tool that can be used to modify setup and configuration settings, view live vide and playback and download video recordings.



### Viewer function:

1. Backup file player
2. Network viewer
3. Connection

### DVR control via Viewer:

4. DVR screen display: Quad, Camera 1 ~ 4 full screen / Key lock / Channel auto sequence.
5. DVR function: MENU / ESC / Play / REC / T-SRH / - values change / + values change
6. DVR direction button: Up (Item select, Play Stop) / Down (Item select, Play Pause)  
Left (Item select, Play Reverse) / Right (Item select, Play Forward)  
SEL (ENTER): Item confirm/select, values change)
7. DVR menu display
8. Audio volume (PC site)

**Viewer configuration:**



Right-click with the mouse to bring up the main NetViewer menu (shown above)

**Player--** Switch to backup file play mode

**Net View--** Switch to DVR network viewer

**Disconnect--** Network log out and connect canceled

**DVR Control--** DVR function control

**Audio--** Audio volume adjust (PC site)

**Local Recording--** Viewing image record

**Always On Top--** Player or viewer always on top even if other data folders are open

**Full Screen--** Viewer change to full screen

**Maximize--** Full screen display

**Aspect Ratio--** Resolution 640 x 448 / 640 x 544 adjust

**Options--** Viewer function setup

- Always on Top: Player or viewer always on top even if other data folders are open
- Auto Reconnection: Reconnection if accidental network disconnect occurs.
- Path for local recording: Please select a path of your PC.


**About Viewer--** Viewer version

**Exit--** Close viewer

**File Player (Remote):**



Click here to open the desired video file

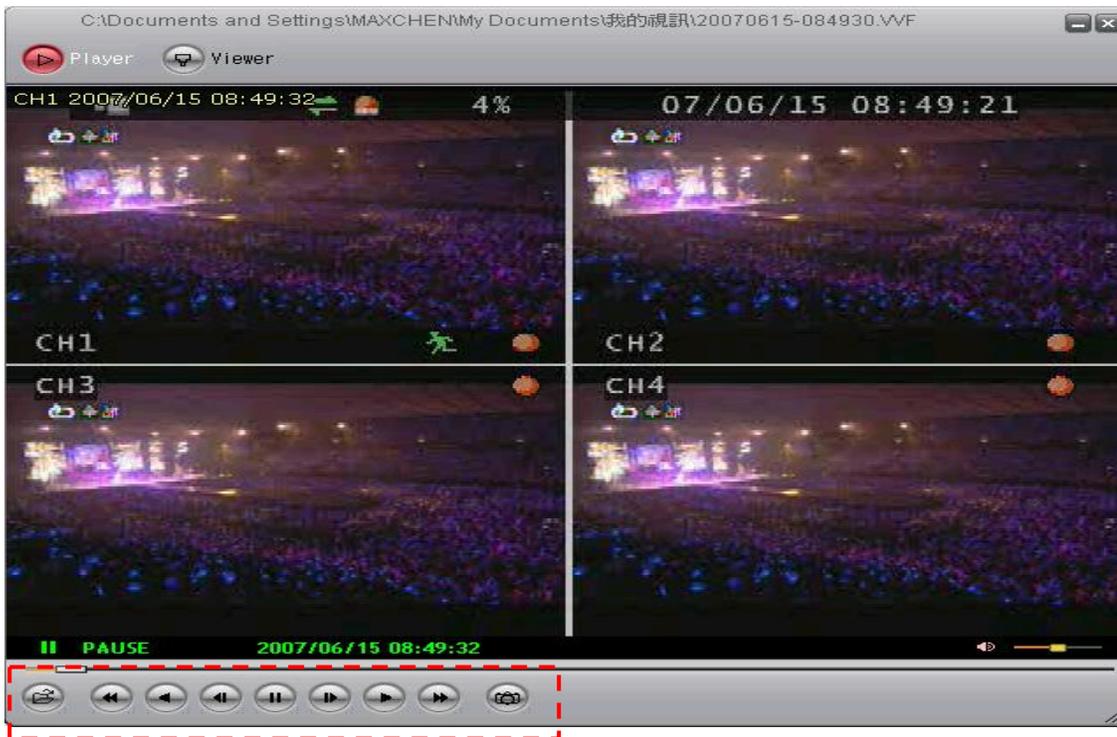

**Player buttons**

Open \ Fast Backward \ Play Reverse \ Previous Frame \ Pause \ Next Frame \ Play \ Fast Forward \ Still Capture

**Player Configuration:**



Right-click with the mouse to bring up the main NetViewer menu (shown above)

**Player**--Switch to backup file play mode

**Netviewer**-- Switch to DVR network viewer

**Open File**-- Open the backup file which saved in any path

**Export**-- Backup file to AVI file format (Video + Audio). See AVI page below

**Close**-- Player Button control disable

**Show time**-- Show the backup beginning time

**Always on Top**-- Player always on top even if other data folders opened

**Playback**-- Play back mode and speed select. Same as Player button

**Audio**-- Audio volume adjust (PC site)

**Full screen**-- Player screen to full size

**Maximize**-- Player to full screen


**Aspect Ratio**-- Player resolution adjust

**Options**-- See Next page

**About viewer**-- Version of viewer


**Exit**-- Player and viewer exit

**Options**

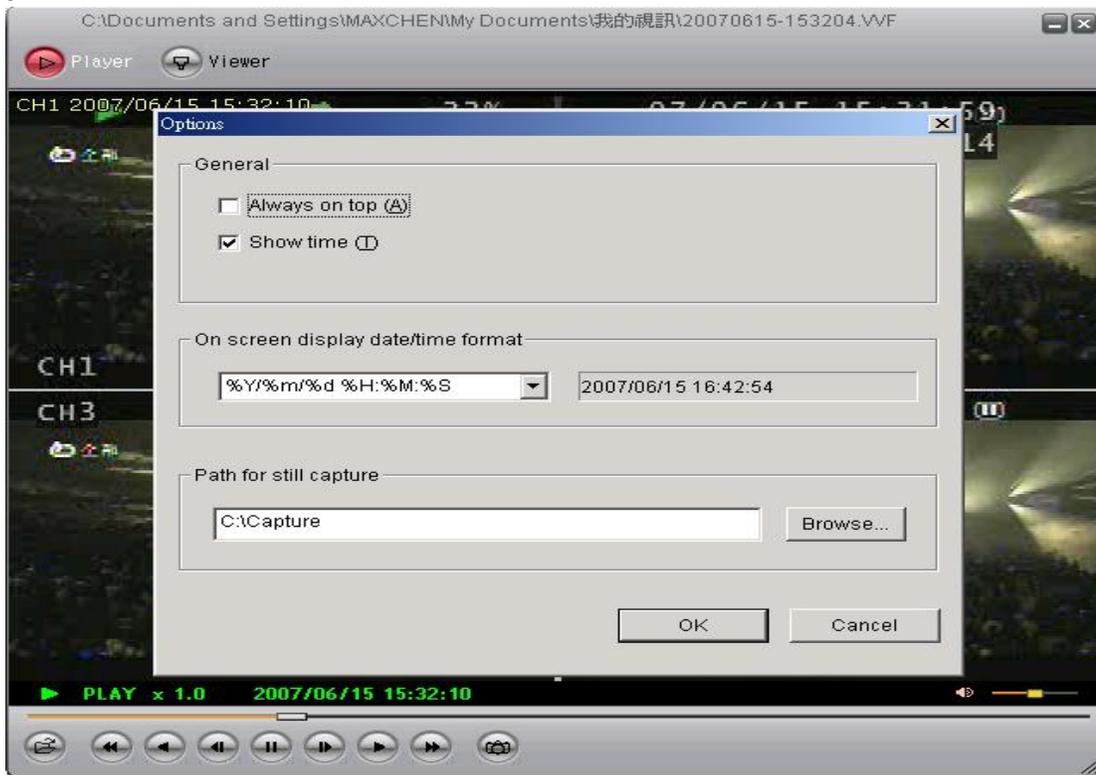

Always on top: Player always on top even other data folders opened


Show time: Show the PC time when user started recording backup file ←

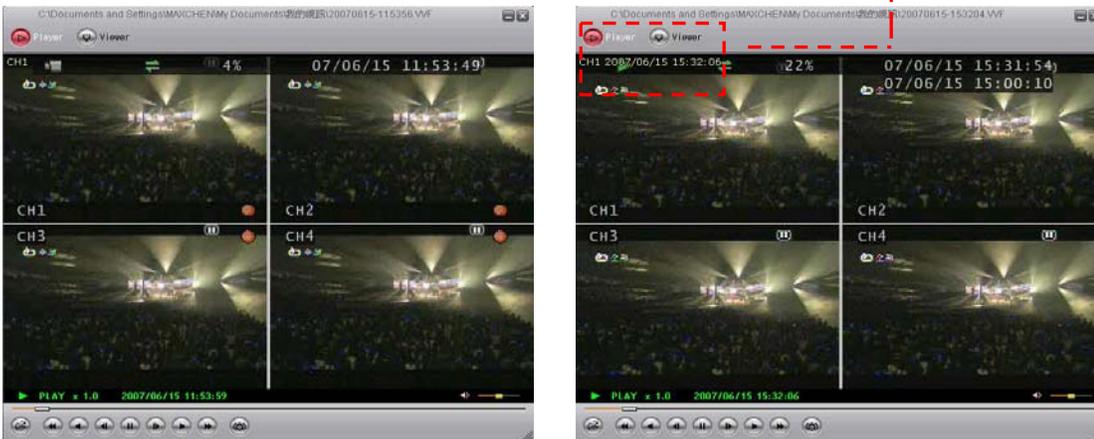

On Screen display date/time (Show time) format: Please select the date format desired:

- %Y/%m/%d %H:%M:%S: 2007/06/15 15:32:29
- %y/%m/%d %H:%M:%S: 07/06/15 15:32:29
- %Y/%m/%d %p %l:%M:%S: 2007/06/15 PM 03:32:29
- %y/%m/%d %p %l:%M:%S: 07/06/15 PM 03:32:29
- %b %d %H:%M:%S %Y: JUN 15 15:32:29 2007
- %b %d %p %l:%M:%S %Y: JUN 15 PM 03:32:29 2007

### VVF file export to AVI

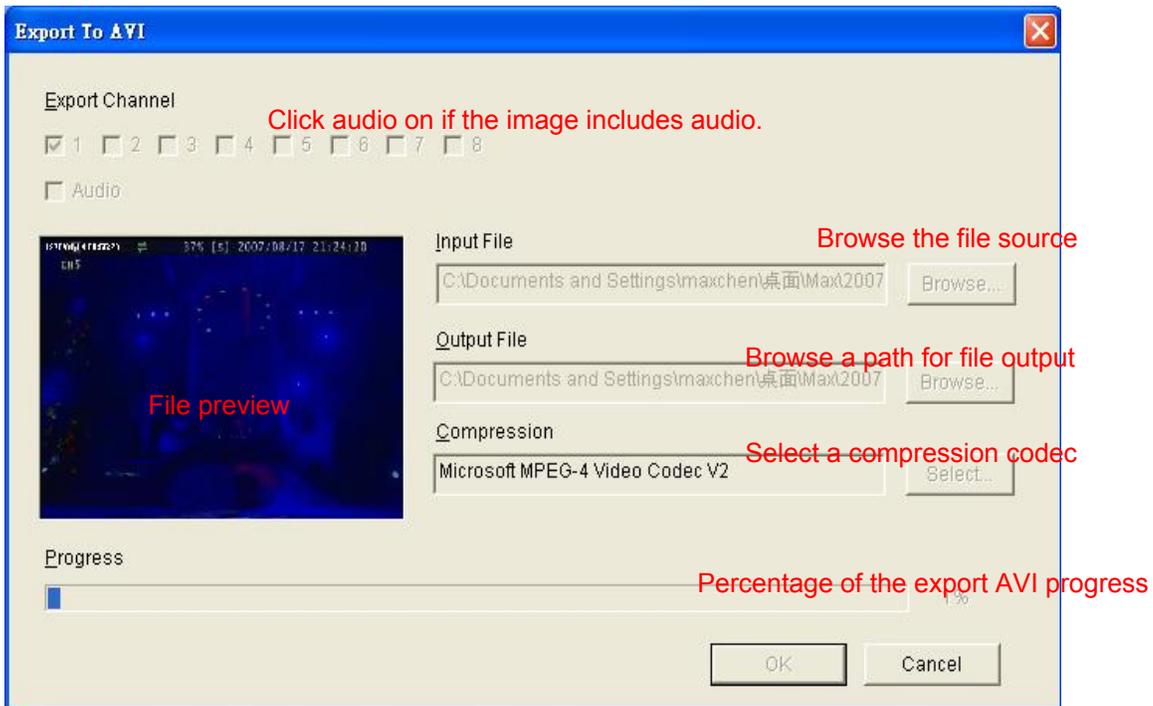

Users please wait until file export completed.

## **Specifications**

<b>Model</b>	4, 8 or 16 CH DVR
Input	4, 8 or 16 CH Inputs 1.0Vp-p, 75ohm unbalanced (BNC Type)
Output	VGA and composite (BNC type)
Horizontal Resolution	640x480 (NTSC)
S/N Ratio	Better than 40dB
Color	6.7 Million

### **Monitoring Method**

Sequence Display	Available Full: 640(H)x 480(V) Active Pixels(NTSC);
Screen Quality	Quad Screen: 320(H) x 240(V) Active Pixels(NTSC);
Display Rate	Real-Time (30fps/channel)

### **Recording/ Play Function**

Recording (Max) NTSC	4/8 - Max 60 fps(NTSC); 16 - Max 120 fps(NTSC)
Recording Resolution	4/8 - 720x240(NTSC); 16 - 720x240, 320x240(NTSC)
Recording Quality	High, Normal, Low
Compressed Picture	Storage: MJPEG. Network / Internet: MPEG4
Recording Control	Auto / manual / schedule / motion / alarm
Playback Mode	Time list / event list / Date & Time search

### **Other Function**

Operation Mode	Record / Play / Network
Motion Detect	16 x16 grids per camera for every channel
Alarm	Alarm in x 4 / Relay out x 1
Back-Up	USB 1.1/2.0 memory and network remote backup
Storage	HDD x2 (max:1TB)
Audio Input	RCA x 1
Audio Output	RCA x 1
HDD Record Mode	Full stop / overwrite
Remote Backup	Through client application
PTZ Control	PELCO-D, PELCO-P, MERIT LI-LIN
Key Lock	Yes
Dwell Time	Programmable with adjustable dwell time. 0 ~ 999 seconds
Real Time clock (RTC)	Support NTP (Network Time Protocol)
Remote Control	Support PHILIPS RC5, NEC

**Network Function**

Ethernet	10 /100 Base-T
Network Connection	TCP/IP, PPPoE, DHCP, DDNS
Client Application	Display/playback/DVR control
Power Supply	DC 12V / 5A
Weight	N.W./G.W. 3.06kg/3.68kg
Dimension	426(W) x 328.5(D) x 65(H) mm
Operating Temperature	41 °F~104 °F (5 °C~+40 °C)
Operating Humidity	Less than 90%