



User manual

Flectronic air ioniser for wardrobe and bathroom

Attention! Do not touch the needles when unit turned on!

Function:

By the combination of three of the world's most recognized technologies of purification, **AIRBUTLER** Martin is able to guarantee a maximum of purification: dust purification, removal of bacteria and elimination of nasty odours. All that can be achieved by a very powerful generator of ions. It produces negatively charged ions, which are able to destroy virus and mites. The produced active oxygen is in the position to purify air, to eliminate smoke and neutralize bad smells. The power consumption is only 2 W.

Bond of dust:

After a few days of use, you will find a considerably deposit of air pollutants on the dust collectors inside the device.

Well-being effect:

AIRBUTLER Martin cares for all textiles including woollen products and silk. AIRBUTLER Martin removes odours completely from all garments by using the active oxygen.

Low-noise:

The appliance works without fan and is silently.



In wardrobes and bathrooms





MARTIN

Start-up:

AIRBUTLER The AIRBUTLER Martin can be battery-operated (6 x D#) or mains-operated with the provided cable. Please note that only battery operation is permitted in moist areas such as bathrooms (Danger of short-circuit due to humidity). The batteries are inserted at the back of the appliance.

Settina:

AIRBUTLER Martin can be operated at LOW or HIGH mode. Set the level required according to the impurities in the air or garments. LOW mode: The appliance works for 60 minutes and then turns off itself for 60 minutes. Afterwards it will switch on again in an endless circle of 2 minutes on - and 60 minutes off. HIGH mode: The appliance works for 60 minutes and then switches off for 60 minutes. Afterwards it will turn on again in an endless circle of 5 minutes on - and 60 minutes off. You have the possibility to operate the appliance manually by using the BURST button. The BURST mode restarts the device for about 60 minutes and returns automatically to the pre-selected mode LOW or HIGH. New batteries have a service life of approx. 6 months due to the low power consumption of the AIRBUTLER Martin.

Cleaning / Maintenance:

AIRBUTLER Martin must be cleaned regularly due to the pollution of his environment, but at least once a month. At the bottom of AIRBUTLER Martin, remove the dust collectors by pressing the buttons and pulling them up. The dust collectors should be cleaned with a small brush and a mild detergent. Please make sure that all parts are dry before you assemble them again.

Important information:

- Do not insert any metallic objects into the unit to prevent electrical shocks and damage. Do not place the unit close to inflammable and explosive objects.
- AIRBUTLER Martin should not be in contact with water or
- Do not expose AIRBUTLER Martin in direct sunlight or closed to any heat sources.
- Do not use alcohol or benzene for cleaning the casing to avoid any damage on the surface.
- Keep appliance out of reach of children and pets.

Further information:

AIRBUTLER Martin purifies air, it is not a substitution of regular airing of rooms. Do not modify the appliance in any way. Neither the manufacturer nor the trader can accept any responsibility of any kind damage thus resulting.

AIRBUTLER

We are at your service for questions or application problems:

office@airbutler.com

Accessories:


- 1 adapter cable 230 V
- 1 suspension device

Accessories for wall mounting

Technical data:

Туре	AIRBUTLER Martin
Voltage	230 V / 6 x D# Batteries
Power consumption	2 W
Negative Ions	> 3,2 × 10 ⁵
Active Oxygen	< 0,06 ppm
Dimension	200 x 150 x 65 mm
Weight	212 g
Applicable area	10-15 m ²

AIRBUTLER reserves the right of any technical modifications of the appliance.

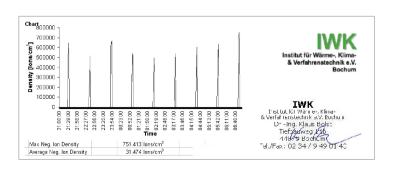



Warranty for MARTIN

- 1. All **AIRBUTLER** products are subjected to stringent testing before they leave the factory. Guarantee of function for two years from date of purchase.
- 2. Damage and malfunctions within the warranty period are only dealt with on presentation of the completed warranty certificate. Please return the appliance to the trader so that the cause of malfunction can be identified. If the damage or malfunction is due to a production fault then the appliance will be repaired immediately or replaced with a new appliance. Damage which is not due to a production fault cannot be taken into account.
- 3. The warranty does not include any damage due to incorrect handling, faulty reassembly, manual conversion in or on the appliance, omission of cleaning, exterior damage to the appliance or obvious damage to the interior of the casing (such as e.g. lightning, artificial cause or natural events).
- 4. The date on the warranty certificate and submission of the bill are imperative for any warranty claims.

×
Name:
Adress:
Purchase date:
Phone:
Stamp of trader:









