

Samsung GALAXY Tab™ 10.1

IT'S TIME TO TAB.™

It's time for a better tablet. It's time for the Samsung Galaxy Tab™ 10.1. Faster, thinner and smarter, the Galaxy Tab 10.1 is truly ahead of its time, giving you the portability and power to do what you want, when you want.



MANAGING CONTACTS
KEEP TABS ON YOUR FRIENDS


Creating a New Contact

- From the Home screen, touch **Applications**, then **Contacts**.
- Press the **Add Contact** icon.
- Choose where you want to save the contact information.
- Enter the desired information into the appropriate fields.
- Touch **Done** to store the new entry.

Editing an Existing Contact

- From the Home screen, touch **Applications**, then **Contacts**.
- Touch a contact entry that you want to edit.
- Select **Edit** and touch within any field to edit the information.
- Touch **Done** to complete and store the edited entry.

4G LTE network speeds and a top-of-the-line dual core processor get you up to speed with smooth streaming media, video chat and more, while the 10.1" high definition screen ushers in a new era of ultraclear, rich video and gaming experiences. The Android™ 3.2, Honeycomb platform means the moment has come for true, smooth multitasking, and a full HTML browser and Adobe® Flash® 10.3 technology let you enjoy millions of complete web pages that other tablet devices cannot. Samsung Media Hub gives you access to thousands of movies and TV shows, and Android Market™ offers countless apps and games for maximum fun on the fly. Packed with advanced features in a lighter, thinner form, the Samsung Galaxy Tab™ 10.1 gives you more entertainment and productivity options while on the go. It's Time to Tab.™



DOWNLOADING APPS
INSTANT FUN ON THE FLY

Android Market™ provides access to downloadable applications and games to install on your Samsung Galaxy Tab™ 10.1.

Accessing the Android Market™

- From the Home screen, touch **Applications**, then the **Android Market** icon.




USING BLUETOOTH®
QUICKLY CONNECT. NO WIRES REQUIRED.

From the Home screen, press **Applications**, then **Settings**, then **Wireless and network**, then **Bluetooth**. The green check mark indicates Bluetooth® is on. To turn Bluetooth off, touch the Bluetooth field again.

Pairing Bluetooth Devices

- Verify Bluetooth is active.
- Place the other Bluetooth device in discoverable mode. (See the device user manual for more information.)
- Touch **Scan for devices**. Your device displays a list of discovered in-range Bluetooth devices.
- Touch a device from the list to initiate pairing.
- Enter the passkey or PIN code, if needed, and touch **OK**.
- The external device must accept the connection and enter your device's PIN code.
- Once successfully paired to a device, the Bluetooth icon displays in the Status area.



DOWNLOADING A NEW APP


To download a new app, you will need to use your Google account to sign in to Android Market.

- From the Home screen, touch **Applications**, then the **Android Market** icon.
- Browse through the categories, find an application you're interested in, and touch the name.
- Touch **Download** if the app is free, then **Accept & download**.
- Touch **Download**, then **Accept & download**.
 - If prompted, follow the on-screen instructions to pay for the application.

2. If not already logged in to your Google™ account, touch **Next**.

3. Touch **Sign in** and enter your Google account information.

4. Touch **Accept** to agree to Android Market™ terms of service.



USING THE CAMERA AND CAMCORDER
SEE THE BIGGER PICTURE

To Take Pictures:


- From the Home screen, touch **Applications**, then **Camera**.
- Using the display as a viewfinder, compose your picture by aiming the lens at the subject. Touch the **Settings** icon to select desired settings.
- Press the **Camera** key to take the picture.
- After taking a picture, touch **Image Viewer** to view the picture. While viewing the picture, you have the following options:
 - Slide two fingers on the screen in a pinching motion to zoom in and out, or double-tap the picture to zoom all the way in or out.
 - Touch the **Delete** icon to erase the picture.
 - Touch the **Share via** icon to send the picture via AllShare™, Bluetooth®, Gmail™, Picasa™, email or messaging.
 - Touch **Menu**, then **Set as** to assign the picture as a contact icon or a wallpaper.
 - Touch the **Back** key to return to the camera to take more pictures.

To Capture Videos:

- From the Home screen, touch **Applications**, then **Camera**. Then slide the mode button on the side of the screen to the camcorder position.
- Using the display as a viewfinder, compose your shot by aiming the lens at the subject.
- To start recording, touch **Record**.
- To stop recording, touch **Record**.
- After recording, touch **Image Viewer** to view the video.

From the **Gallery**, a quick touch on the video will play the video. Touch and hold the video to open a menu that allows the following functions:


- Touch the **Share via** icon to send the picture via Bluetooth®, Gmail™, YouTube™, email or messaging.
- Touch the **Delete** icon to erase the video.
- Touch **More**, then **Details** to view details about the video.
- Touch the **Back** key to return to the camcorder to take more videos.



INSTALLING THE SIM CARD
GET UP TO SPEED

This device requires a SIM card. Prior to turning on the device please insert the SIM card included in the package into the device. This SIM card will only work with this device. Once the SIM card has been inserted, do not remove! Open the SIM card socket cover. Make sure the gold contacts on the SIM card are facing down toward the back of the tablet and that the notched corner of the card goes in first. Then, carefully slide the SIM card into the SIM card socket until the card locks into place.

Note: If the SIM card is not inserted correctly, the Tab will not detect the SIM card and will not make a connection with the network.



CONFIGURING EMAIL
MAKE A SPECIAL DELIVERY


You can use your Samsung Galaxy Tab™ 10.1 to access the internet for email using a connection through your wireless carrier or using a Wi-Fi® connection.

To Set Up a Personal or Corporate Email Account:

- From the Home screen, touch **Applications**, then **Email**.
- Touch **Email address** to enter your email address, then touch **Password** or **Next** to enter your password.
- Touch a setup option:
 - Manual setup:** Configure the account manually. Touch **POP3** or **IMAP** to set up a personal email account, or select **Microsoft Exchange ActiveSync** to set up a corporate email account, then enter your account details.
 - Next:** This option connects to the server to set up your account automatically. Follow the prompts to complete setup, then touch **Done**.

ACCESSING MEDIA HUB
CENTER OF YOUR ENTERTAINMENT WORLD

Samsung Media Hub is your gateway to a mobile video experience unlike any other. With hundreds of movies and TV shows at your fingertips available for download. Watching your favorite content while you're on the go has never been easier.



SAMSUNG

To learn more about the Samsung Galaxy Tab™ 10.1, visit:

www.uscellular.com/4g
www.samsungmobileusa.com

U.S. Cellular

© 2012 Samsung Telecommunications America, LLC. All rights reserved. Samsung, Galaxy Tab and It's Time to Tab are all trademarks of Samsung Electronics Co., Ltd. 4G LTE service provided through King Street Wireless, a partner of U.S. Cellular. Google, Google Mobile, Gmail, Google Maps, Google Talk, Google Voice, Google Books, YouTube, Android and Android Market are trademarks of Google Inc. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Appearance of device may vary. Screen images simulated. Other company and product names mentioned herein may be trademarks of their respective owners. Printed in U.S.A.

ADDING WIDGETS TO A HOME SCREEN


- Navigate to the screen on which you want the widget to be placed.
- Touch and hold on the screen or touch the **Customize** icon.
- Touch **Widgets**, then touch a widget to add it to Home screen. Sweep the screen to the left to see more widgets.
- Touch **Back** to return to the Home screen.

Removing Widgets

Touch and hold the widget until the **Remove** icon appears at the top right corner of the screen, then drag the widget to the **Remove** icon to remove it.

Adding a Wallpaper

- Navigate to a screen.
- Touch and hold on the screen or touch the **Customize** icon.
- Touch **Wallpapers** to view the wallpaper menu.



OWNING OR RENTING MOVIES

- Own:** Purchase the movie or show for unlimited viewing on your device. Follow the prompts to enter payment details.
- Rent:** Purchase a time-limited download of the movie. Follow the prompts to enter payment details.

USING THE WEB BROWSER
SEE THE BEST OF THE WEB


With a full HTML browser and Adobe® Flash® technology, your mobile web experience will be the same as it is on your PC. View any website, any video and any animation without giving up anything. To access your web browser, touch the **Home** icon, then **Browser**.

CUSTOMIZE DEVICE APPEARANCE
MAKE IT YOUR OWN

Whether it's changing wallpaper images or adding new widgets, customizing the look of your Samsung Galaxy Tab™ 10.1 is easy thanks to the powerful Android™ 3.2, Honeycomb platform.



IT'S TIME TO TAB.™



FINAL PRODUCTION MECHANICAL

File Name: USC10809_GalaxyTab_QSG_MCH.ai

Size: W3" x H4" finished

Client: Samsung

Date: 02.06.12

Instructions:

Note: Printer responsible for trap. A minimum of 3 complete samples due to traps.

USC Tab 10.1 QSG

IGNITE

214 302 0390

©2011 All Rights Reserved
Suite 205
Frisco, TX 75034

IT'S TIME TO TAB.™