

User Manual



Safety Cautions



This unit is applicable to 12V automotive power system (minus earth), do not install this unit directly on other automotives of 24V, otherwise damage of this unit will be resulted in.



Do not operate this unit while in driving. To prevent breach of the traffic laws & regulations, do not watch programs or operate this unit while in driving, otherwise accidents may be caused.



For the sake of safety and to ensure the normal use of the product, please have a professional who sells this product to install it, do not dismantle or repair this unit without permission, otherwise damage of this unit or accidents may be caused.



Do not place this product in humid environment or water to prevent electric shock, damage or fire hazard due to short circuit.



The display screen of this product adopts precision electronic structure; do not knock the TFT display screen by hand, otherwise injury or damage may be caused.



Back surveillance function of this unit can only be used for auxiliary purpose while in backing a car, our company assumes no responsibilities for any accidents occurred thereof.

Contents

Panel Keying	1
Main menu Functions.....	3
DVD Functions	5
DVD Play.....	6
VCD Play.....	7
Search & Play	8
CD/MP3/WMA Disc Play	9
JPEG File Play	10
USB/SD Function	10
Radio Function	11
TV Function.....	12
External Input Function	14
Bluetooth Function	14
Navigation function.....	17
IPOD function.....	17
Rearview Mirror Function	18
Setting.....	18
DVD Setting.....	19
Theme Setting	20
Calender setting	20
Sound setting	21
Steering wheel control Setting	22
System setting	23
Radio setting	24
Touch Screen Calibration	25

 
Caution

For safety & proper use of this product, please carefully read this Manual, which is subject to change of specification & design due to technological improvement without further notice!

Panel Keying

User shall find the corresponding functions in the following table in accordance with the push-button silk-screen printing on faceplate:

<Faceplate function button> Table:

Push-button	Functions						
	Navigation Mode	DVD Mode	USB/SD Mode	Radio Mode	External Input Mode	Bluetooth Mode	IPOD Mode
	MUT/ Startup & Shutdown	MUT/ Startup & Shutdown	MUT/ Startup & Shutdown	MUT/ Startup & Shutdown	MUT/ Startup & Shutdown	MUT/ Startup & Shutdown	MUT/ Startup & Shutdown
	Volume Up/Down	Volume Up/Down	Volume Up/Down	Volume Up/Down	Volume Up/Down	Volume Up/Down	Volume Up/Down
	Non-function	Non-function	Confirm	Confirm	Non-function	Non-function	Confirm
	Non-function	Non-function	Move the cursor	Move the cursor	Non-function	Non-function	Move the cursor
RST	Reset	Reset	Reset	Reset	Reset	Reset	Reset
RADIO FM/AM	Enter radio function	Enter radio function	Enter radio function	AM/FM switch	Enter radio function	Enter radio function	Enter radio function
GPS/NAVI	Exit the navigation function	Enter the navigation function	Enter radio function	Enter radio function	Enter radio function	Enter radio function	Enter radio function
DVD	Enter DVD function	Non-function	Enter DVD function	Enter DVD function	Enter DVD function	Enter DVD function	Enter DVD function
AUX	Enter external input function	Enter external input function	Enter external input function	Enter external input function	Non-function	Enter external input function	Enter external input function
SRC MODE	Mode shift/Back to Main menu	Mode shift/Back to Main menu	Mode shift/Back to Main menu	Mode shift/Back to Main menu	Mode shift/Back to Main menu	Mode shift/Back to Main menu	Mode shift/Back to Main menu

Push-button	Functions						
	Navigation Mode	DVD Mode	USB/SD Mode	Radio Mode	External Input Mode	Bluetooth Mode	IPOD Mode
EJECT 	Eject the disc	Eject the disc	Eject the disc	Eject the disc	Eject the disc	Eject the disc	Eject the disc
 PLAY	Non-function	Pause/Play	Pause/Play	Non-function	Non-function	Non-function	Pause/Play
 SEEK	Non-function	Previous song	Previous song	Progressive station scanning	Non-function	On the phone	Previous song
 SEEK	Non-function	Next song	Next Song	Downward station scanning	Non-function	Hang up	Next song
MUTE	Mute	Mute	Mute	Mute	Mute	Mute	Mute
DIMMER	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment	Backlight Adjustment
STOP	Non-function	Stop Play	Stop Play	Stop Play	Stop Play	Stop Play	Stop Play

! Note: the bold font means to press the button for long time to realize the function.

Functions on Main menu

This vehicle multimedia playing system provides DVD, Radio, External Input, Bluetooth, Navigation, SD, USB, and iPod functions, user can realize the relevant functions just by directly touching the function modules on the Main menu. Return to the Main menu by touching the right corner on touch screen under different play modes.

As shown in the following diagram:



<Function Buttons on main menu>Table

Serial no.	Serial number of push-buttons
1	Touch “  ” icon to enter the External Input Function
2	Touch “  ” icon to enter the Setting Menu
3	Touch “  ” icon to return to the Previous State
4	Touch “  ” icon to enter the Navigation Function
5	Touch “  ” icon to enter the Radio Function
6	Touch “  ” icon to enter the Digital/Analog TV Function
7	Touch “  ” icon to enter the Bluetooth Function
8	Touch “  ” icon to enter the DVD Function
9	Touch “  ” icon to enter the USB Play Function
10	Touch “  ” icon to return to the SD Play Function
11	Touch “  ” icon to enter the IPOD Play Function

DVD Function Operation

This vehicle multimedia system can play discs of various formats, such as DVD/VCD/CD/MP3/WMA/JPEG/MPEG4/MP5/RMVB and so on (limited to the standard round disc with diameter of 12CM).

Basic Operation

Enter/Exit <DVD Function Operation>

Under the Main menu, touch “” icon to enter the DVD Function.

Under the DVD status, touch the right upper corner of the screen to exit the DVD Function

Touch “” icon on DVD menu to exit the DVD Function.

Enter/Exit the Disc Operation

Put the side with silk-screening up, lightly put it in the slot; the disc drive can load in the disc and play it automatically, touch “” icon to eject out the disc.

DVD Hidden Functions

To enable user to use it more conveniently and quickly, hidden press-button function is specially designed with this vehicle multimedia system, eight hidden touch zones are divided under the DVD play status, as shown in the following diagram:

	A	B
C	D	E
F	G	H

<DVD Hidden button Functions>Table


Serial no.	Functions
A	Pop-out the Search Menu
B	Return to Main Menu
C	Previous Song
D	Pop-out DVD Function Buttons
E	Next Song
F	Fast Backward
G	Pause/Play
H	Fast Forward

Notes: please use standard genuine disc, keep the disc clean, and keep good use habit to guarantee the normal service life of this vehicle multimedia system.

DVD play

During the DVD playing, touch the midpoint position of touch screen (D zone), <DVD Play Button> pops out, touch the midpoint position (D zone) again, <DVD Play Button> shuts off.

<DVD Play Button> exits automatically if no operation is carried out for 10 seconds. As shown in the following diagram.

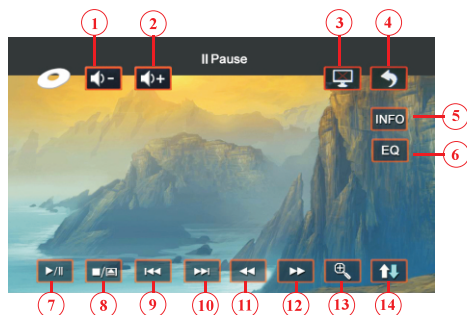


Page 1 of <DVD Play Button> Table

Serial no.	Functions
1	Volume Down
2	Volume Up
3	Shut off the Display Screen,and Open It by Touching Any Position on It
4	Return to Main Menu
5	Display the Current Play Information
6	Enter EQ Setting
7	Pause/Play
8	Stop/Eject the Disc
9	Previous Song
10	Next Song
11	Fast Backward
12	Fast Forward
13	Zoom
14	Enter Page2



Touch “ ” icon to enter the Play Buttons on P2. As shown in the following diagram.

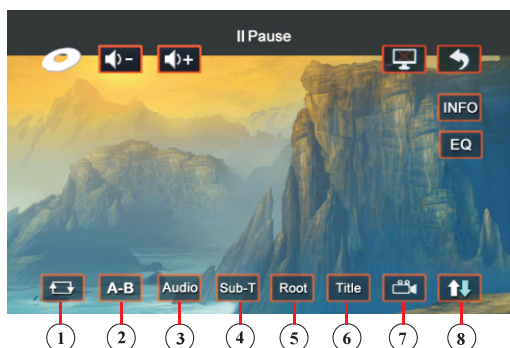

Page 2 of <DVD Play Button> Table

Serial no.	Functions
1	Repeat Play
2	A-B Repeat Play
3	Sound Channel/Language Switchover
4	Caption Switchover
5	Return to Main menu
6	Return to Title Menu
7	Angle Switchover (to be supported by disc)
8	Enter Menu on P1

VCD Disc Play

 




The menu operation for VCD disc play is similar to that of DVD play; PBC (Main menu of disc) function is effective only to VCD2.0 disc.

Search Play

During disc playing, touch the upper-middle position on the touch screen (A zone), the <Search Play> menu pops out, and touch “EXIT” icon to shut off the <Search Play> menu. If no operation is conducted for 10 seconds, <Search Play> menu exits automatically. As shown in the following diagram:

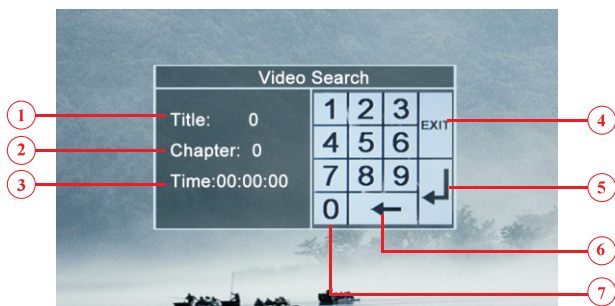

<Search Play Button>Table

Serial no.	Functions
1	Search Title
2	Search Chapter
3	Search Time
4	Exit <Search Play Press-button> Menu
5	Confirm the Search
6	Delete a Number Entered
7	Number Key

For example: to play the program section at the thirty-fifth minute

- 1.Touch the upper-middle position of touch screen (A zone) to pop-out the <Search Play> Menu.
- 2.Touch “ Time: ” icon, enter number 3500, and then touch “ ← ” to confirm it, the system automatically switch to the designated position and play.


CD/MP3/WMA Disc Play



Serial no.	Functions
1	Enter Setup Interface
2	Return to Main Menu
3	Instruction of Current Play Information
4	Previous Song
5	Next Song
6	Stop
7	Pause/Play
8	Random Play
9	Zoom
10	Track List
11	Search Play
12	Repeat Play

JPEG File Play

 This vehicle multimedia system supports the JPEG image file; you can enjoy images through the screen.

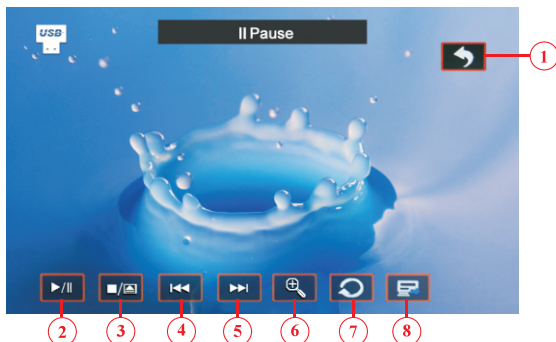

<JPEG Play Button> Table

Serial no.	Functions
1	Return to Main Menu
2	Pause/Play
3	Stop/Eject the Disc
4	Previous Image
5	Next Image
6	Zoom
7	Rotate the Image(respectively rotate by90,180,270and zero degrees)
8	Select the Image Switch Mode

USB/SD/ Play

USB/SD supported files: MP3/WMA/JPEG/MPEG/MP5/RMVB video files.

Basic Operation

Enter/Exit <USB-SD> Function

- Under the Main menu, touch “” icon to enter the USB-SD function.
- Under other status, insert in USB-SD equipment, it automatically enters the USB-SD function.
- Touch “” icon under <USB-SD> menu to exit the USB-SD function.
- Pull out USB-SD equipment, the USB-SD function exits automatically.

 
Notes: Please refer to CD/MP3/WMA Disc Play for the operating method of MP3/WMA file.
Please refer to JPEG File Play for the operating method of JPEG files.
Please refer to DVD Disc Play for the operating method of MPEG files.

Radio Function

Basic Operation

Enter/Exit <Radio> Function

- Under the Main menu, touch “” icon to enter Radio Function.
- Touch “” icon under Radio menu to exit the Radio Function.

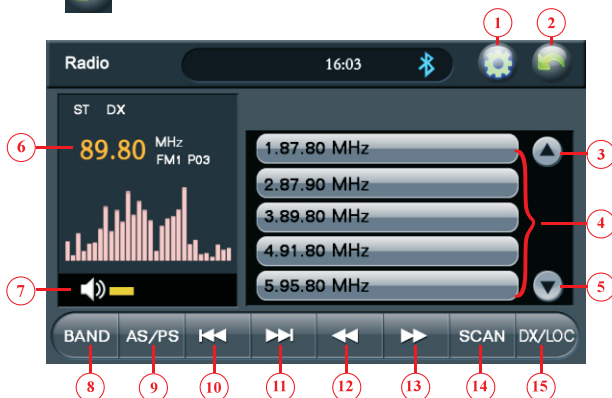

<Radio Function Button> Table

Serial no.	Functions
1	Enter Setup Interface
2	Return to Main Menu
3	Saved Stations On Previous Page
4	Station List
5	Saved Stations on next Page
6	Current Station Information
7	Volume Adjustment
8	Band Switch
9	Scan the Stations Saved/Press Continuously for Three Seconds for Automatical Station Scanning.
10	Semi-automatically Scan Stations to Low-end Frequencies

11	Semi-automatically Scan Stations to High-end Frequencies
12	Adjust Channels by Single Step towards Low-end Frequencies
13	Adjust Channels by Single Step towards High-end Frequencies
14	Scan Full-band Stations
15	Long/Short Range Switchover

Station Scan

- Search FM/AM waveband
Touch "**BAND**" key in Radio interface, switch the waveband among FM1/FM2/FM3/AM.
- Semi-automatical station scan
Touch "" key in Radio interface, the system automatically scans signals to high-end frequencies, and stops when broadcast station with strong signal or in good receive status is scanned; or retouch the key to stop scanning.
Touch "" key in Radio interface, the system automatically scan signals to low-end frequencies, and stops when broadcast station with strong signal or in good receive status is scanned; or retouch the key to stop scanning.
- Play of selected saved station
Select the waveband you wanted, and touch the Saved Station Play in Radio interface.
- Manual Station Saving
Select the waveband, and then scan the station at the required frequency, select the frequency of the station number you want to save, press the display bar continuously for three seconds, the station is saved to the designated position.
- Local Scan Mode (LOC)
Local Scan Function (LOC) only scans the stations with sufficient strong signal and in good receive status; when Local Scan Function is activated, the DX icon on the screen changes to LOC.

 
TV Function

Basic operation

Enter/Exit <TV> function

Under the Main menu, touch "" icon to enter the TV Function.

Touch "" icon under TV menu to exit the TV Function.

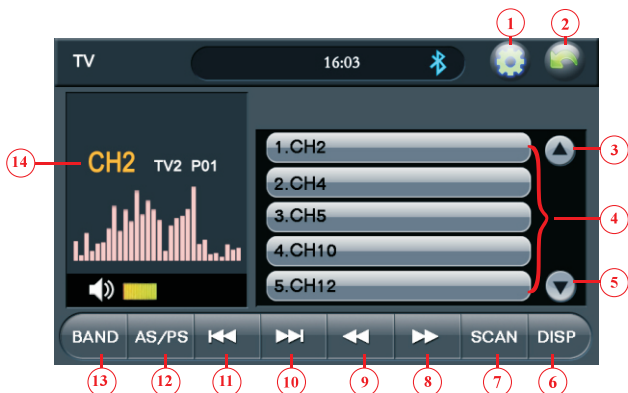

<TV Function Button> Table

Serial no.	Functions
1	Enter Setup Interface
2	Return to Main Menu
3	Saved Stations On Previous Page
4	Station List
5	Saved Stations on next Page
6	Display the Current Video
7	Scan Full-band Stations
8	Adjust Channels by Single step towards High-end Frequencies
9	Adjust Channels by Single Step towards Low-end Frequencies
10	Automatically Scan Stations to High-end Frequencies
11	Automatically Scan Stations to Low-end Frequencies
12	Scan the Stations Saved/Press Continuously for Three Seconds for Automatical Station Scanning
13	Band Switching between TV1 and TV2
14	Current Station Information

Note: 1.Our player built-in Analog TV function for customers whose country region can provide Analog signals.

 
2.Digital TV is an attachment function,it shall be selected & matched by user himself.

External Input Function

Basic operation

Enter/Exit <External Input> Function

- Under Main menu, touch “” icon to enter the external input function.
- Touch “” icon in External Input menu to exit External Input function.

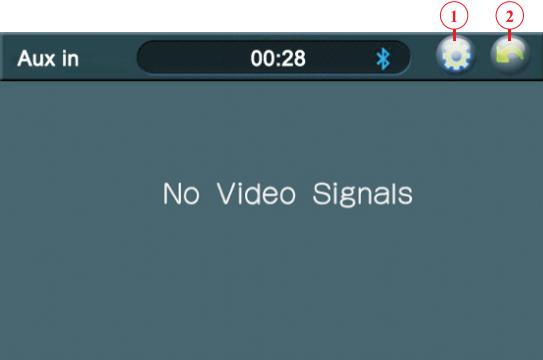

<External Input Function Button> Table

Serial no.	Functions
1	Enter Setup Interface
2	Return to Main Menu

Bluetooth Function

Basic operation

Enter/Exit <Bluetooth> Function

- Under the Main menu, touch “” icon to enter the Bluetooth Function.
- Touch “” icon under Main menu to exit the Bluetooth Function.



<Bluetooth Function Button> Table

Serial no.	Functions
1	Instruction of Bluetooth Connection Status
2	Enter Setup Interface
3	Return to Main Menu
4	Display the Current Operation Information
5	Answer
6	Hang Up
7	Switching Key of Mobile Phone and Bluetooth
8	Play/Pause
9	Stop
10	Previous Item
11	Next Item
12	Match the Mobile Phone
13	Delete a Entered Number
14	Numeric Keypad

Instruction of Bluetooth Function

1 Pairing

After entering the Bluetooth status, touch "**Pair**" icon, open the Bluetooth function of mobile phone to search the equipment, and select "Connect" after searching out Bluetooth of this product, (Bluetooth equipment of this unit is named "car kit"), enter the pair password "0000", the Bluetooth icon is displayed on upward side of the screen after the pairing is completed successfully.  Icon of Bluetooth Connection Status:

- ① When icon twinkles, it means the Bluetooth equipment is not connected.
- ② When icon displays all the time, it means the Bluetooth equipment has been connected.

2. Making a call

Method 1: after pairing is completed successfully, type the phone number you want to dial, and touch "Dial" icon, then you can make a call using the Bluetooth function.

Method 2: after pairing is completed successfully, directly make a call using the mobile phone, the machine will pop-out the Bluetooth interface automatically.

3. Answering a call

After pairing is completed successfully, when there is a call coming in, the system automatically switches to the Bluetooth status under whatever modes, touch "" icon to answer the phone.

4. Hanging up a call

Touch "" icon to reject any incoming calls or end the conversation.

5. Conversation switchover

Touch "**Voice**" icon during the conversation to switch the conversation mode to the mobile phone, touch "**Voice**" icon again to switch the conversation mode back to the machine.

6. Bluetooth Music Play (only realizable by the mobile phone that supports the A2DP Protocol)

After Pairing of Bluetooth and mobile phone is successfully completed, touch Play Button in the Bluetooth interface to play the Bluetooth music.

Note: due to the difference with the brand design of mobile phone, some music can be played only after selected through the mobile phone; some can be played just by directly touching the play key in Bluetooth interface.

! Due to the difference of Bluetooth modules and software used by various brands of mobile phones, there may exist certain difference and even incompatibility with some functions during the actual use process, please forgive us for any inconveniences caused to you!

Navigation Function

Basic operation

Enter/Exit <Navigation> Function


- Under Main menu, touch “” icon to enter the Navigation status.
- Shut off navigation in the Navigation menu to exit the navigation status.
- Use “NAVI” key on the faceplate to quickly enter or exit the navigation function.
Please refer to “Instruction Book of Navigation Software” for the using method of navigation software.

IPOD Function

Basic operation

Enter/Exit <IPOD> Function

- Under the Main menu, touch “” icon to enter the IPOD Function.
- When under other status, insert the IPOD equipment, it automatically enters the iPod function.
- Touch “” icon under <IPOD> menu to exit the IPOD function.
- Pull out the IPOD equipment, it automatically exit the IPOD function.

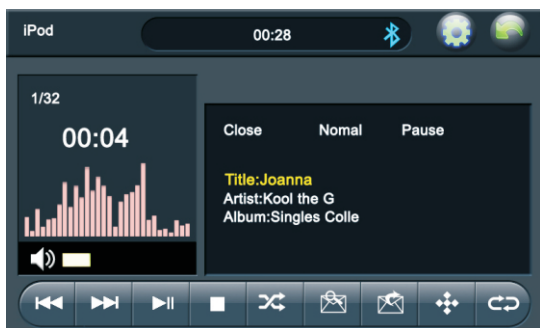


Note: Please refer to <CD/MP3/WMA Disc Play> for the operating method of IPOD interface.

Rearview Mirror Function

Basic operation

Enter/Exit <Rearview Mirror> Function

- Adjust the gear of vehicle to the rearview gear to enter the Rearview Mirror Function automatically.
- Touch the “” icon under <Rearview Mirror> menu to exit the Rearview Mirror Function.
- Adjust the vehicle gear to the forward or stop gear, it automatically exits the Rearview Mirror Function.

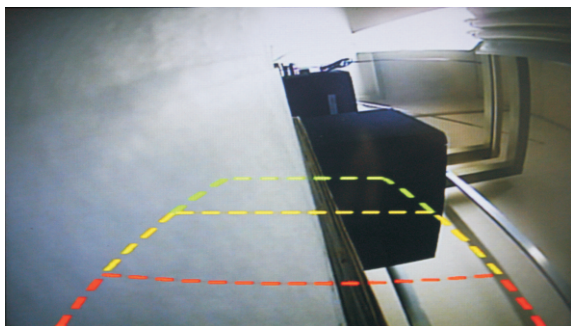

Setting Function

Basic operation

Enter/Exit the <Setting> Function

Under the menu of various function status, touch “” icon to enter setting.

Touch “” icon under the <Setting> menu to exit the system setting function.



DVD Setting

Touch "  " icon under the setting menu to enter the DVD setting interface.




<DVD Setting Button> Table

Serial no.	Functions
1	Return to the Main Menu
2	Set DVD Caption
3	Set DIVX Caption
4	Set DVD Language

Theme Setting

 Touch "Theme" icon under Theme Setting menu to enter the Theme Setting interface.

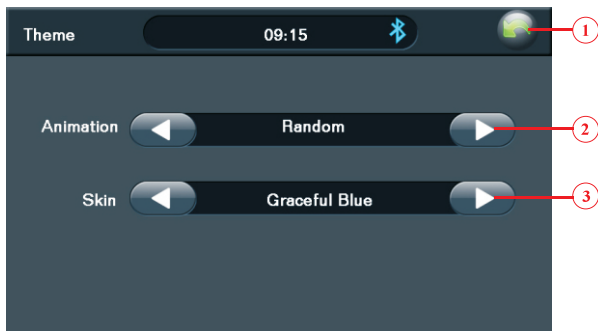

<Theme Setting Button> Table

Serial no.	Functions
1	Return to the Main Menu
2	Setting of Image Switching Effect: random/rolling blind/shutter-up and down/shutter – left and right/shutter – flip left/shutter – flip right/screen flip/screen rotate/fade-in fade-out/slide to left/slide to right/outward extension/shrink inward/drag to the right/shut off.
3	Skin Switching

Calendar/clock Setting

Touch "Calendar" icon in Setting menu to enter the calendar/clock setting interface.




<Calendar/clock Setting Button> Table

Serial no.	Functions
1	Adjust Year/Hour
2	Adjust Month/Minute
3	Switch to the Clock-adjusting Status
4	Return to Main Menu
5	Switch to the Date-adjusting Status
6	Confirmation
7	Date-adjusting

Sound Setting

 
Touch "  "icon under setting menu to enter the Sound Setting Interface.

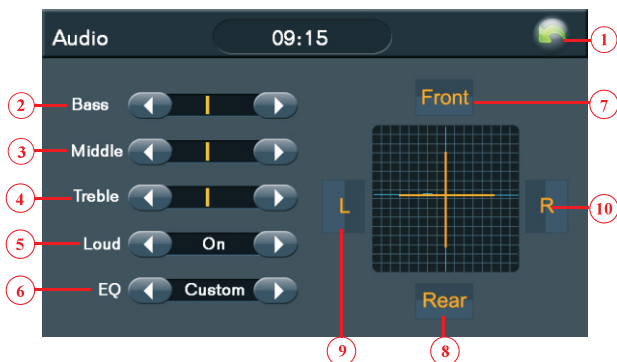

Serial no.	Functions
1	Return to the Main Menu
2	Bass Tuning up/down
3	Mediant Tuning up/down
4	High Pitch up/down
5	Volume Control Switch
6	EQ Setting
7	Adjust Forward of front/back Adjustment
8	Adjust Backward of front/back Adjustment
9	Adjust Leftward of left/right Adjustment
10	Adjust Rightward of left/right Adjustment

Calendar/clock setting

 Touch "  " icon in Setting menu to enter the calendar/clock setting interface.

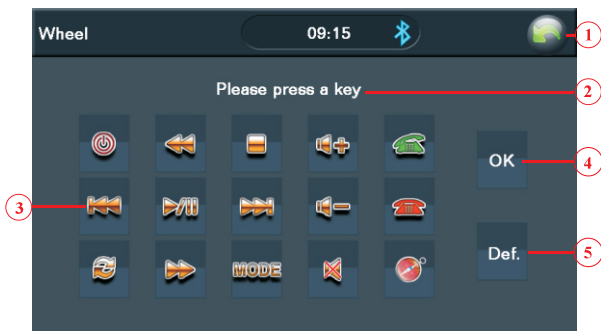

<Steering Wheel Setting Button> Table


Serial no.	Functions
1	Return to the Main Menu
2	Instruction of Current Operation
3	Common Function Buttons
4	Confirmation
5	Clear all Steering Wheel Press-buttons Settled

Set the operating method of steering wheel press-buttons, the setting method of "  " key in the steering wheel is as follows:

1. Enter the steering wheel setting interface.
2. Press down the "  " key in the steering wheel.
3. Touch the "  " key on the screen.
4. After setting all press-buttons in steering wheel, touch the Confirm button on the screen to complete steering wheel setting.

System Setting

 Touch "System" icon in Setting menu to enter the system setting function.

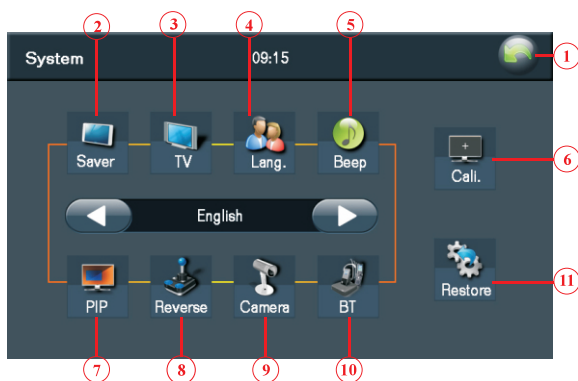


<System Setting Press-button> Table

Serial no.	Functions
1	Return to the Main Menu
2	Screen-saver Time Setting, Range of Adjustment: 0~30m shut off.
3	TV Signal System Setting
4	Language Setting: Chinese/English /Arabic/French/Russian/German /Italian/Portuguese/Thai
5	Keypad Tone Setting: Shut off/Dingdong/Bubbling/Metal pad/ Spiral tone/Dangdang
6	Touch Screen Calibration
7	Picture-in-picture Setting: on/off
8	Reverse Switch Setting: on/off
9	Backsight Image Setting: normal/mirror image
10	Automatic Bluetooth Answer Setting: on/off
11	Restore to Factory Defaults

Setting of Navigation Path

 Touch “” icon in Setting menu to enter the Navigation Path Setting function.

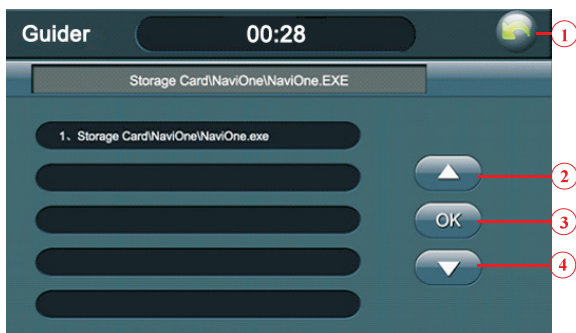

<Navigation Path Setting Press-button> Table

Serial no.	Functions
1	Return to Main Menu
2	File on Previous Page
3	Confirm
4	File on next Page

Setting method of navigation path is as follows:

1. Enter the navigation path setting page.
2. Select navigation engine file, with general file extension name of .exe.
3. Touch OK to finish the setting.

Radio Setting

Touch “” icon in Setting menu to enter the Radio Setting function.




<Radio Setting Press-button> Table

Serial no.	Functions
1	Return to Main Menu
2	Radio Region Setting

Touch Screen Calibration

Touch “” icon in system setting menu to enter the touch screen calibration interface.

Method of calibration: aim the touch pen at the central position of “+” icon, press it continuously till the “+” icon run to the next point of calibration, repeat the above operation, calibrate five points properly in the sequence as shown in the following diagram, and then randomly touch one position of the touch screen to exit the touch screen calibration status, if it does not aim at the central position of “+” icon while in calibration, recalibration needs to be carried out, exit the touch screen calibration status till the touch screen is properly calibrated.

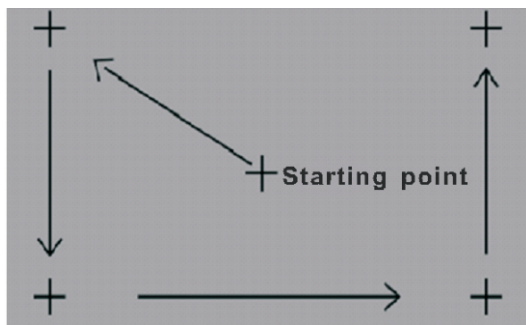

Precautions

1. Precautions for host machine

- Do not insert hard object or other metal contents in the unit.
- Do not attempt to repair it. This display screen consists of many precision electronic components, damage or breakage may be resulted in by any dismantlement or modification, power it off immediately in case of a failure, and notify the company or your dealer of that.
- Do not expose the display screen to humidity, dust, steam, oily fume or any other pollutants.
- Do not wipe the surface of display screen with thinner or other chemical cleaners; wipe away the dirt on the surface with a soft cloth.
- Do not expose the display screen to sunlight for a long time.
- If moisture content or other objects enter this unit, power it off immediately and contact with the company or your dealer.
- Please cut off the power when clearing off the dirt.
- This product is designed for the vehicle equipped with 12V negative grounding battery system.

2. Precautions for Use of Disc

- Misoperation would be caused when dirty, dusty, scratched or bended disc was used.
- Do not put it on sharp objects to prevent disc being scratched.
- Disc shall be taken out when not used.
- Disc shall not be placed in the following areas:
 1. Area exposed to direct sunlight.
 2. Dirty, dusty and humid areas.
 3. Area where there is an auto heater nearby.
 4. On vehicle seat or meter panel.
- Do not use disc with diameter less than 12cm (12cm excluded) or irregularly shaped disc (heart shape or octagon and so on)
- Disc cleaning: wipe the disc surface with a soft wet cloth; if the disc is very dirty, wipe it gently with a soft cloth soaked with warm propanol liquid. Do not use solutes, such as gasoline, thinner and so on, to prevent disc surface being scratched.

3. Precautions for External Connected Power Amplifier

- Before connecting, check to ensure the sound box impedance matches the optimal matching impedance of power amplifier.
- Please select high-quality loudspeaker cable; the cable length shall be just sufficient for proper in-position connection.
- When connecting the signal line, the jack/interface of sound track shall match exactly.
- To reduce noise, when there is a external connected power amplifier, first adjust the volume of Host machine to 1/3 of the maximum sound level, and then adjust the volume of external connected power amplifier, till the sound is distorted (note: the tone shall be adjusted centered).
- While in installation, the input/output line shall be far away from power source and computer wire, otherwise noise may be caused.

Troubleshooting

Before sending this unit for repair, check the problem that has occurred with the unit against the following table, and take corresponding countermeasures to carry out simple inspection or minor adjustment, thus the problem may be possibly eliminated and the unit may restore normal operation. If the problem cannot be effectively resolved with the remedies as shown in the table, please contact our company or the professional maintenance center.

Problem	Possible cause	Countermeasure
LCD no display	Power switch and ignition switch not connected	Connect the switch
	Connection wire loose	Reconnect it properly
	Protective tube burn out	Replace it with a new protective tube
No sound played	The system is in Mute status	Shut off Mute
	Sound box connection loosen off	Reconnect it properly
	Sound box damaged	Replace it with a new sound box
No image played	Disc not properly loaded	Place the disc with the label side face-up on the tray
	Disc dirty or damaged	Try other discs
Occasional sound jumping	Disc dirty or damaged	Try other discs
Musical sound jumps while in vibrating	Host machine not properly installed	Ensure the host machine firmly fixed
	Changer fixing screw screwed down in the wrong position	Adjust the screw marked with screwdriver to the proper mounting direction
Bluetooth handfree non-function	Not properly matched with host machine	Rematch

Warning

Directions: please operate it in accordance with this Manual before using;

This unit is made of precision components, pay attention to guard against damp;

Pay attention to prevent LCD display being scratched;

High pressure in the unit, dismantlement can only attempted by authorized personnel;

Instructions: few color dots may appear on LCD display, it is a common phenomenon in active matrix display technology, and does not represent any defects or faults.

Thanks for your use

