

instructions

DeLonghi



OIL FILLED RADIATOR

V550715 - V550920 and V551225


DeLonghi

Living innovation

Description of Appliance

The following terms are used throughout the instruction manual

Thermostat pointer

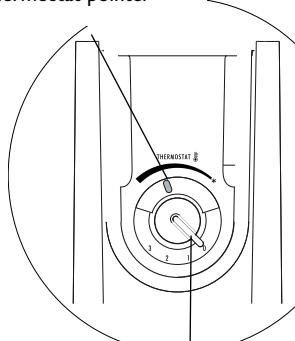


Power selector

Indicator light

Cord storage

Easy Wheels

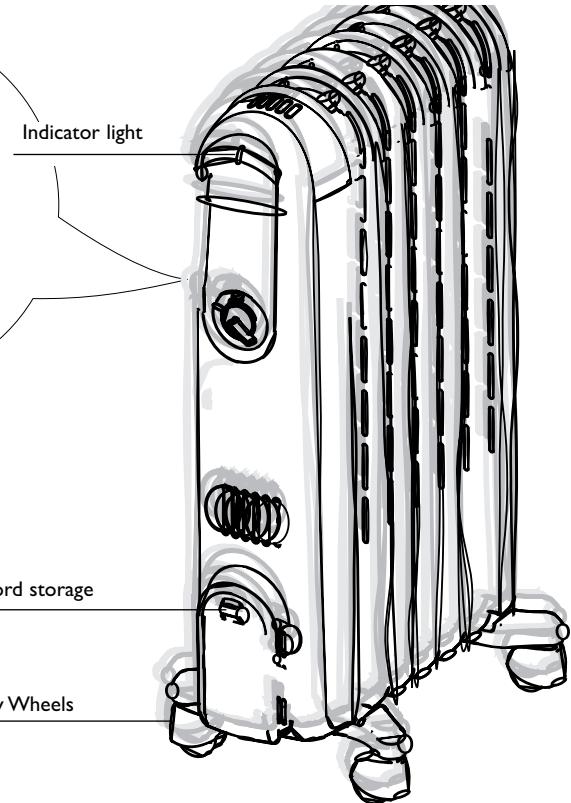

Thank you for choosing this De'Longhi radiator. To get the best results from your new heater please read these instructions carefully before use. This should ensure optimum results and maximum safety.

SAFETY WARNINGS

- **Do not use the radiator near bath tubs, showers, sinks or swimming pools.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use the radiator to dry washing.
- Do not rest the power cable on hot elements.
- The heater must be positioned at least 50cm from furniture or other objects.
- Always use the radiator in the vertical position.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised service centre in order to eliminate all risk. Please see guarantee leaflet for Customer Service details.
- **When you turn the appliance on for the first time, operate it at maximum for at least two hours.**
During this time, you should ventilate the room to eliminate the "new" smell given off. This is completely normal and not a cause for concern.
- It is normal for the appliance to make "creaking" noises when first turned on.
- The appliance must not be placed immediately under a fixed power socket.
- This appliance is filled with a precise quantity of oil and repairs requiring it to be opened must be carried out by the manufacturer or an authorised technical assistance centre only. In the event of oil leaks, contact the manufacturer or an authorised technical assistance centre. See enclosed guarantee leaflet.
- When disposing of this appliance, respect legislation on disposal of oil.
- Do not use this appliance in rooms measuring less than 4m².
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the radiator.

- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.



WARNING: In order to avoid overheating, never under any circumstances cover the appliance during operation.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Important - UK only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth
Blue = Neutral
Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- Warning: this appliance must be earthed.

Note:

- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your De'Longhi Authorised

Repairer (see guarantee leaflet).

- If a non-rewireable plug is cut off it must be destroyed immediately. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance complies with European Economic Community Directive 2004/108/EEC.

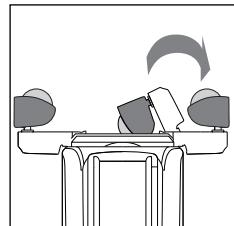


Fig. 1

OPERATING THE RADIATOR

MODELS WITH "EASY WHEEL" SYSTEM

Turn the radiator upside down and rest it on a piece of cloth or other soft surface to avoid damaging the paint. Open the wheels completely by rotating them outwards (fig. 1). Turn the radiator upright.

IMPORTANT

When in use, the radiator should always be kept vertical (wheels at the bottom, controls at the top). Any other position could be dangerous!

1. WHERE TO LOCATE THE APPLIANCE

Position the radiator in a place where you most need the warmth.

We recommend that you position it underneath the coldest window in the room as this helps to increase the convective movement of the heat. The appliance must not be positioned directly underneath a fixed power point. Do not use the appliance in rooms with a surface area of less than 4 m². The heater must be positioned at least 50cm from furniture or other objects.

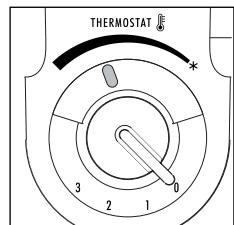


Fig. 2

2. CONNECTION

Before plugging the radiator into the mains, check that your supply voltage is the same as that shown on the rating plate of the radiator. Avoid contact between clothing, household linen, furniture, inflammable material and the socket providing power to the radiator.

3. TURNING ON

Plug into the mains, turn the thermostat pointer as far as it will go to maximum and turn the radiator on using the power selector (fig. 2) as described below:

- Turn the power selector to **1** (minimum power) (the light comes on).
- Turn the power selector to **2** (medium power) (the light comes on).
- Turn the power selector to **3** (maximum power) (the light comes on).

NB: For economic operation, once the appliance has reached working temperature , you can use minimum or medium power (**1** or **2**).

4. ADJUSTING THE THERMOSTAT

When the room has reached the required temperature, turn the thermostat slowly clockwise until a "click" is heard and no further.

The thermostat will automatically regulate the temperature set and keep it constant. If your model has three power levels, in the spring or autumn or on mild days, you can further save energy by using minimum power.

Frost protection function

With the thermostat dial in the  position and one of the power levels selected, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

NB: To turn the appliance off completely, turn the power selector to "**0**".

Safety device

A safety device shuts the radiator down in the case of overheating. To start the radiator up again, call the nearest service center. See enclosed guarantee leaflet.

6 . MAINTENANCE AND SERVICE

Before performing any operations on the appliance, always unplug from the mains socket and leave to cool.

Wipe the radiator with a soft damp cloth without using detergents or abrasives. If the radiator is not to be used for a long period of time, wrap the cable around the cable tidy and store the appliance in a dry place. This appliance has been made to last many years without problems. In the event of malfunction or doubt, do not try and repair on your own. There would be the danger of fire or electric shock. Call the nearest service centre (see guarantee leaflet for customer services details).



De' Longhi Appliances

via L. Seitz, 47
31100 - Treviso - Italia

5710910011/04/05.10