



CMT-1 Chromatic Clip-on Metro Tuner


Item ref: 173.273UK



User Manual

Features

- Auto power-off function: The device will turn off automatically if there is no signal present or operation in 5 minutes.
- Tuning modes: Chromatic, Guitar, Bass, Violin, Ukulele C, Ukulele D.
- Tempo range: 30-250bpm.
- Settings saved upon powering off.
- Backlit LCD display and multi-angle mounting clamp

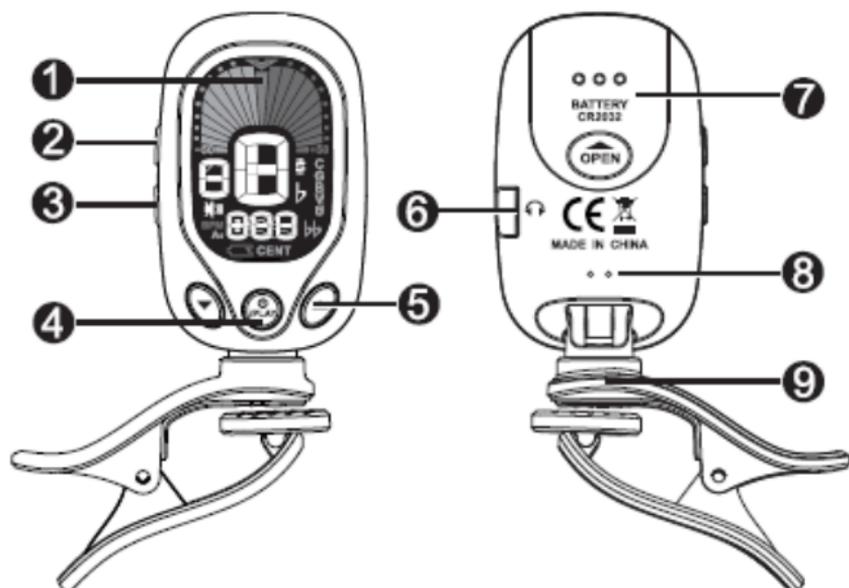

1 LCD

2 MODE/TUNING ITEM/BEAT

3 VOLUME/FLAT

4 POWER/PLAY

5 ▼ ▲ PARAMETER

6 HEADPHONE JACK


7 BATTERY COVER

8 SPEAKER

9 CLIP

OPERATION

Tuning Mode

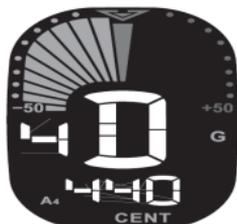

1. The default mode is chromatic. Press the POWER/PLAY button for 2 seconds to turn on/off.
2. Press ▼▲PARAMETER buttons to adjust A4 value: 430~450Hz.
3. In Guitar/Bass tuning mode, press **VOLUME/FLAT** button to enable flat tuning.
4. Press **MODE/TUNING ITEM/BEAT** to select mode. C(chromatic), G(Guitar), B(Bass), V(Violin), U-C(Ukulele C), U-D(Ukulele D).


Metronome Mode



1. Press and hold **MODE/TUNING ITEM/BEAT** button for 2 seconds to switch between tuning mode and metronome.
2. Press **MODE/TUNING ITEM/BEAT** button briefly to adjust the BEAT value: 0-9.

3. Press **VOLUME/PLAY** button to adjust the volume of the speaker.
4. Press ▼ ▲ **PARAMETER** buttons to adjust the tempo speed: 30~250bpm.
5. Press **POWER/PLAY** button to play/stop the beat.
6. When the headphone is plugged in, the speaker will be silent.

Installing the battery

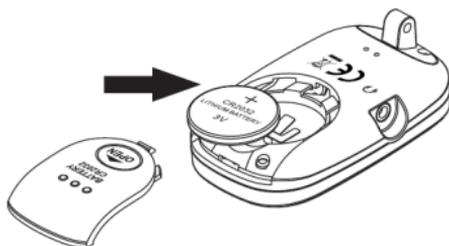

When the battery charge is low, the LCD will become dim.
Please replace the battery as soon as possible.

Specifications

Battery	3V (1 x CR2032 included)
Measuring range	27.5Hz - 4186Hz (A0 - C8)
Tuning range	A4 430 - 450Hz
Accuracy	±1%
Tempo range	30 - 250bpm
Beat types	0,1,2,3,4,5,6,7,8,9
Dimensions	37 x 60 x 43mm
Weight	36g

*Errors and omissions excepted.
Copyright© 2015. AVSL Group Ltd.*