



# Home Music System

*User's Guide for Model IHB624B v1018-01*

For the most up-to-date version of this User's Guide, go to [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

# Important Safety Instructions

## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



**WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

# Warnings and Precautions

## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.  
*AVIS: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.*
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.  
*AVIS: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never

be incinerated since they might explode.

- **WARNING:** Shock hazard - Do Not Open.  
*AVIS: Risque de choc électrique - ne pas ouvrir*
- Caution and marking information is located at the rear or bottom of the apparatus.  
*Attention et de marquage des informations est situé sur le panneau arrière ou inférieur de l'unité.*
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.  
*Objets remplis de liquides, comme des vases, ne doivent pas être placés sur l'appareil.*
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.  
*La prise du secteur est utilisé pour déconnecter le système. La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- This product is supplied with a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death.  
*Ce produit est livré avec une pile pièce / touche. Si la pile pièce / bouton est avalé, il peut causer des brûlures internes graves et peut conduire à la mort.*
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.  
*Gardez les piles neuves et d'occasion à partir des enfants. Si le compartiment de la batterie ne pas fermer correctement, cesser d'utiliser le produit et garder loin des enfants.*
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.  
*Si vous pensez que les batteries peuvent avoir été avalé ou placé à l'intérieur d'une partie du corps, consulter immédiatement un médecin.*
- Do not mix old and new batteries.  
*Ne pas mélanger vieilles et nouvelles batteries.*
- Completely replace all old batteries with new ones.  
*Remplacer complètement toutes les piles par des neuves.*
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.  
*Ne mélangez pas des piles alcalines, standard (carbone-zinc) ou rechargeables (Ni-Cd, Ni-MH, etc) batteries.*
- Batteries should be recycled or disposed of as per state and local guidelines.  
*Piles doivent être recyclées ou éliminées selon les directives étatiques et locales.*

# Table of Contents

---

<b>Your Home Music System</b> .....	<b>5</b>
Features & Specifications	
Includes	
<b>Setup</b> .....	<b>5</b>
Connecting the Speakers	
Power	
Remote Battery	
<b>Orientation</b> .....	<b>6</b>
Speaker Controls (Left Side)	
Speaker Rear Inputs	
<b>Orientation</b> .....	<b>8</b>
Remote Layout	
<b>Clock, Alarm, &amp; Sleep Timer</b> .....	<b>9</b>
Setting the Clock	
Setting the Alarm	
Setting the Sleep Timer	
<b>Bluetooth &amp; Charging</b> .....	<b>10</b>
Pairing a Bluetooth Device	
Playing Audio Wirelessly	
Charging a Device	
<b>CD, FM Radio &amp; Line In</b> .....	<b>11</b>
Loading and Playing a CD	
Programming a CD	
Playing the FM Radio	
Programming Radio Station Presets	
Tuning to a Saved Preset Station	
Using the Line In	
<b>Company Information</b> .....	<b>12</b>
Contact Information	
International Support	
Green Initiative	
Warranty	

# Your Home Music System

## Features & Specifications

- Supports Bluetooth v2.0
- Wireless range: 33 feet
- LED pairing indicator
- CD player: CD, CD-R/RW
- Digital FM radio (PLL)
- Station memory presets (20 FM)
- 3.5mm audio input
- Digital volume control
- Top-load disc player
- USB port for mobile phone charging
- User's setting memory
- Negative LCD display with white backlight
- Digital clock
- Sleep timer
- Single alarm
- Full-function remote
- Color-changing lights with on/off switch
- 2 channel stereo sound
- EQ presets

 
## Includes

- Remote control with CR2025 battery pre-installed

# Setup


## Connecting the Speakers

Connect the included speakers to the **SPEAKER OUTPUT** on the back of the music system. The speaker to the right side of the music system should be plugged into the output labeled "R". The left speaker should be plugged into the output labelled "L".

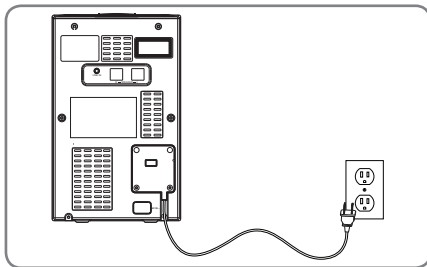

### Power

 Plug the built in AC power cord into a standard wall outlet.

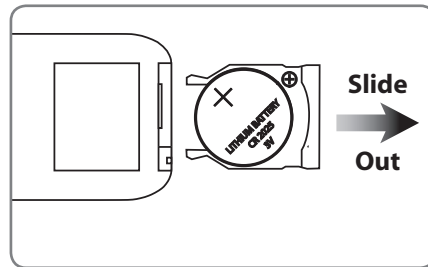


### Remote Battery


Requires a CR2025 battery (pre-installed)

# Orientation
 
## Speaker Controls (Left Side)

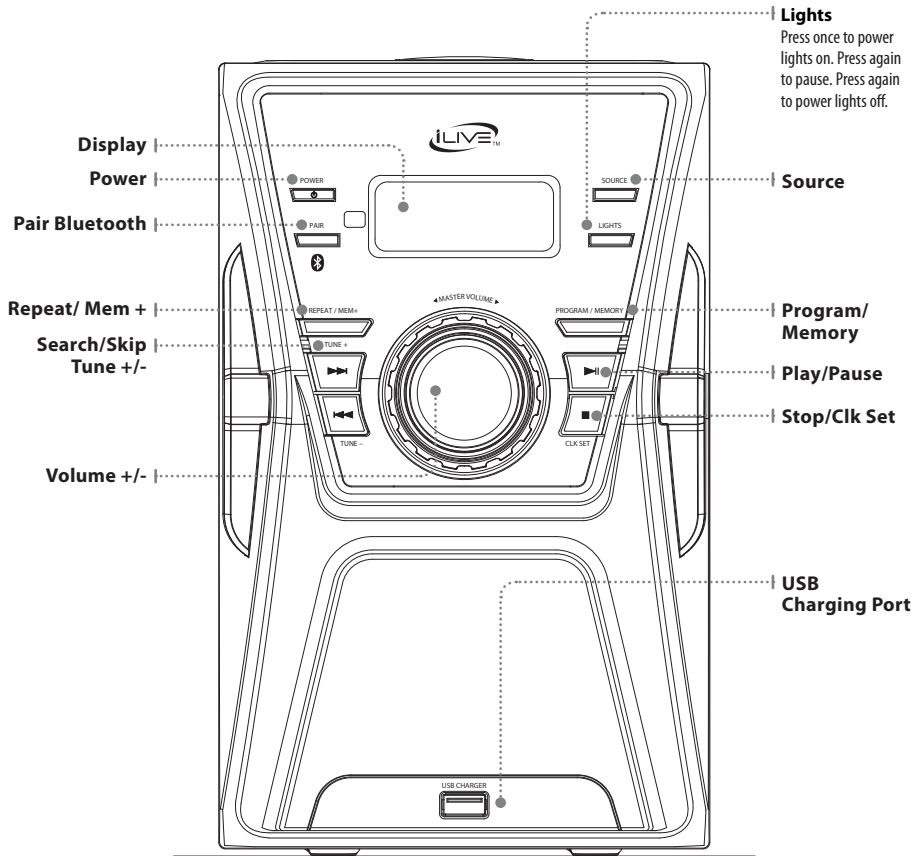

## Speaker Rear Inputs

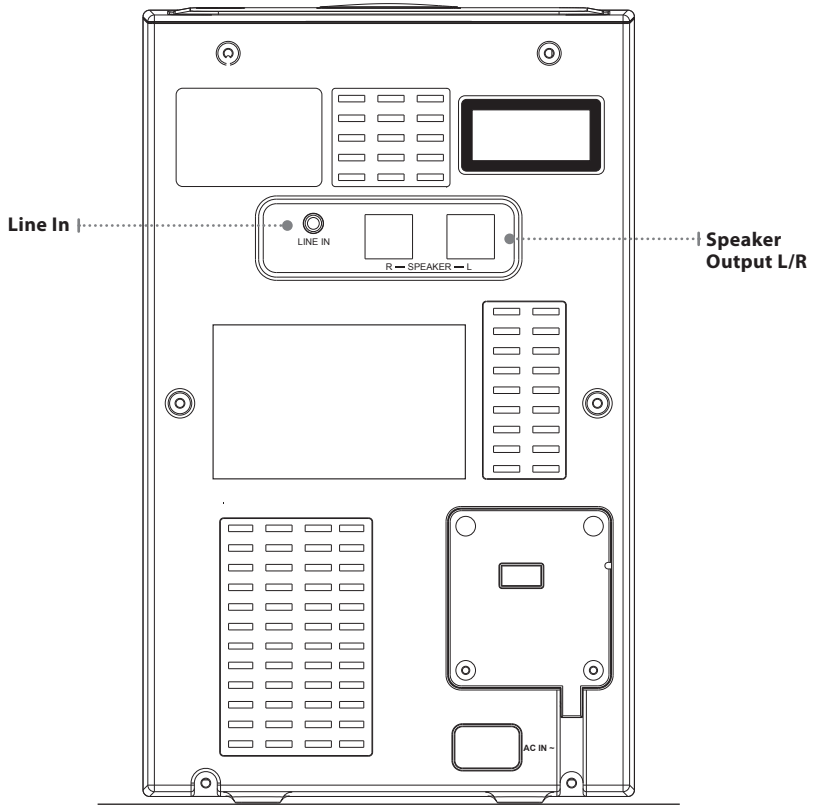 

# Orientation

## Remote Layout

**Power**  
Press to power the unit on or off.

 
**Repeat/Mem +**  
Press to repeat the current track or an entire CD. Press to cycle through saved radio stations.

**Skip/Search/Tune +/-**  
Press to skip between tracks, or press and hold to search through tracks. Press to tune the radio, or press and hold to search for the next available station.

**Alarm**  
Powered off, press to begin setting the alarm.

**Sleep**  
Powered on, press to begin setting the sleep timer.

**EQ**  
Press to set the equalizer to Rock, Jazz, Pop, Classic, Bass, or Off.

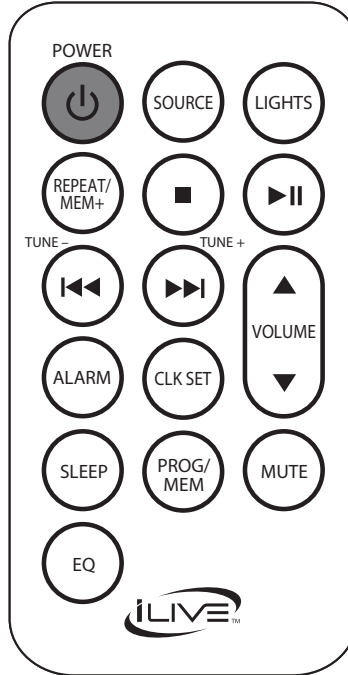

**Lights**  
Press to play, pause or deactivate the lights.

**Play/Pause**  
Press to play or pause a track.

**Volume**  
Press to adjust the volume.

**Mute**  
Press to mute the volume.

**Source**  
Press to switch between Line in, iPod and Bluetooth modes.

**Stop**  
Press to stop a CD during play.

**Clk Set**  
In off mode, press to begin setting the clock.

**Program/Memory**  
Press to program tracks to play in a specific order. In FM Radio mode, press to begin saving a station as a preset.



# Clock, Alarm, & Sleep Timer

---

## Setting the Clock

1. With the stereo powered off, press the **CLK Set** button on the music system to set the time. *The hour will begin to blink on the display.*
2. Press the **Skip/Search** buttons to adjust the hours. An "AM" indicator will appear on the display when the time is set to AM. A "PM" indicator will appear on the display when the time is set to PM.
3. Press the **CLK Set** button again to set the minutes, using the **Skip/Search** buttons as above.
4. Press the **CLK Set** button to finish setting the clock.

## Setting the Alarm

1. With the unit powered off, press the **Alarm** button on the remote. *The display will flash.*
2. Press the **Skip/Search** buttons to select the alarm source: **OFF**, **bb** (buzzer) or **Fr7** (FM).
3. Press the **Alarm** button again to set the alarm time. *The hour will begin to blink on the display.*
4. Press the **Skip/Search** buttons to adjust the hours. An "AM" indicator will appear on the display when the time is set to AM. A "PM" indicator will appear on the display when the time is set to PM.
5. Press the **Alarm** button again to set the minutes, using the **Skip/Search** buttons as above.
6. Press the **Alarm** button to finish setting the alarm. The unit will power on when the set time is reached.




## Setting the Sleep Timer

1. Press the **Power** button to power the unit on.
2. Press the **Sleep** button to set the desired time (90-10 minutes).
3. Once the set sleep time has expired the clock radio will automatically power on.

# Bluetooth & Charging

---

## Pairing a Bluetooth Device

1. With the unit powered on, press the **Source** button to switch to Bluetooth Mode. *The display will show the Bluetooth icon .*
2. Press the **Pair** button. The  icon will flash quickly on the display. *When pairing, remain within 3 feet of the unit.*
3. Using the controls on your Bluetooth device, select the **IHB624** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0 0 0 0**. *Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
4. When successfully paired and connected, the  icon will stop flashing and audio will be heard through the speakers.

*After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.*

## Playing Audio Wirelessly

1. To play, pause or skip the selected track, use the controls on the connected Bluetooth Device or press the Play/Pause or Skip/Search buttons on the unit.
2. Audio played through the connected Bluetooth device will now be heard through the speakers.

## Charging a Device

1. Make sure the unit is plugged into the wall.
2. Using the appropriate **USB charging cable** (not included), connect one end to the device you wish to charge and the other to the **USB Charger** on the unit. The device will now charge.

*Note: This device uses a USB charging port with a 1A maximum charging capacity. Refer to the user's manual for your specific device for manufacturer's required charging amperage as well as determining the appropriate cable for your device before charging.*

# CD, FM Radio & Line In

---

## Loading and Playing a CD

*Note: This unit is not compatible with MP3 CDs.*

1. Open the **Disc door**.
2. Load a CD or CD-R/RW disc into the player, label side facing up.
3. Close the **Disc door**.
4. Press the **Source** button to set the unit to **CD** mode. Press the **Play/Pause** button begin playing music.

## Programming a CD

1. Press the **Stop** button to stop the CD during play.
2. Press the **Prog/Mem** button on the remote.
3. Use the **Skip/Search** buttons to enter the desired track number, then press the **Prog/Mem** button to set the next track.
4. Repeat step 3 until the desired number of CD tracks are programmed.
5. Press the Play/Pause button on the remote to begin playing the programmed tracks.

## Playing the FM Radio

Adjust the position of the antenna to improve FM radio reception.

1. Set the **Source** to **FM mode**.
2. Use the **Tune +/-** buttons to tune the radio. Press and hold to rapidly seek through the frequencies.

## Programming Radio Station Presets

1. With the radio on, tune to a desired frequency and press the **Prog/Memory** button once on the remote or the unit.
2. Press the **Tune +/-** buttons on the remote to select a preset number. *Up to 20 stations may be preset.*
3. Once you have selected the preset number you wish to program, press the **Prog/Memory** button again to save the current station to that preset.

## Tuning to a Saved Preset Station

1. In FM Radio mode, press the **Repeat/Mem+** button to cycle through saved presets.

## Using the Line In

Requires a 3.5 mm audio input cable (not included).

1. Plug one end of a 3.5 mm audio input cable into the **Line In** input on the rear of the unit, and plug the other end of the cable into the audio output on an MP3 Player or other audio source.
2. Set the **Source** to **Line In**.
3. Audio played through the connected device will be heard through the speaker. Use the controls on the connected MP3 player or other audio source to play your audio through the unit.

# Company Information

---

## Contact Information

**Website:** [www.iLiveElectronics.com](http://www.iLiveElectronics.com)  
**Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)  
**Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)  
**Phone Support:** 1-888-999-4215

## Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to:  
[www.iLiveElectronics.com](http://www.iLiveElectronics.com)

## International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

## Green Initiative

Our Environmental Commitment to "Protect for Today and Sustain for Tomorrow". On a continual basis DPI, Inc. is making efforts to sustain the environment and improve the recyclability of its products and packaging.

Focusing on "protecting for today and sustaining for tomorrow" DPI, Inc. has committed to reducing packaging size, increasing the usage of recyclable plastics, and ensuring that packaging and manuals are made with up to 85% recycled material. In addition to material consideration, DPI, Inc. has also focused on the finer details that positively impact the environment such as employing the usage of soy-based inks.

DPI, Inc. also ensures that the factories that produce the company's wide variety of consumer electronics adhere to environmentally friendly air and water restrictions. This is yet another example that every step of the way DPI, Inc. is making efforts to lessen any impact on the environment.

In 2011 DPI, Inc. also began conversations with Energy Star in order to ensure that the consumer electronics being produced meet high standards of energy efficiency. The ultimate goal is keeping energy costs for consumers low while providing quality, feature-rich products.



Copyright © 2014 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

---