

**brandstand  
products™**

**cbietime**

User Manual

## **Introduction**

Thank you for purchasing the Brandstand CubieTime. Please be sure to read this User Manual carefully to ensure proper installation.

The information in this document is subject to change and does not represent a commitment on the part of Brandstand Products. No part of this document may be reproduced, transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, or translated into any language for any purpose other than the purchaser's personal use, without the written permission of Brandstand Products.

## **Product Features**

- User-friendly alarm clock with single day alarm (optional)
- Convenient connections for AC and USB-powered devices
- Efficient and stylish design
- Surge protection through all AC outlets and/or USB Ports

## **Product Description**

- 2 AC Outlets
- 2 USB Charging Ports
- Single Day Alarm Clock
- Right Angle Pass-Through Plug
- Surge Protection
- 6ft 15A Power Cord
- Adhesive Mounting Pad
- Security C-Clamp
- 2 Wood Screws (included)

## Important Safeguards

 
- CAUTION – Do not install this device if there is not at least 10 meters (30 feet) or more of wire between the electrical outlet and the electrical service panel.
- Ensure that the unit is plugged into an AC120V-60Hz outlet. The use of incorrect outlets could cause the unit to malfunction or catch fire.
- To reduce the risk of fire or electrical shock, do not use this device with a receptacle in which the slot openings do not align with the blades.
- Do not allow children to operate the unit without adult supervision.
- Always ensure the product is unplugged from the electrical outlet before relocating or cleaning it.
- Keep the power cord and product away from heated surfaces.
- The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on or around the product.
- Do not place or drop product into water or other liquids. If product falls into water, immediately unplug it from the electrical outlet; do not pull on power cord.
- Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Do not operate the product if it has a damaged or cut power cord or adapter, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped in or exposed to water.
- Place the unit where there is good air circulation.
- This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform the servicing; take the product to an electrical repair shop of your choice for inspection and repair.
- No open flame sources, such as candles, should be placed on the product.
- Product should only be used indoors and in dry locations. It should not be used with aquariums or other water-related products.
- Never allow any water or other liquids to get inside the unit while cleaning.

**Battery Handling and Usage:**

**WARNING:** Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions.

- Follow the battery manufacturer's safety and usage instructions.
- Keep batteries away from children and pets.
- Do not mix a new and a used battery or mix batteries of different chemistries or sizes.
- Insert the batteries observing the proper polarity (+/-) as indicated inside the battery compartment. Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove spent or discharged batteries when not using the product for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

Cubie Time – Top View

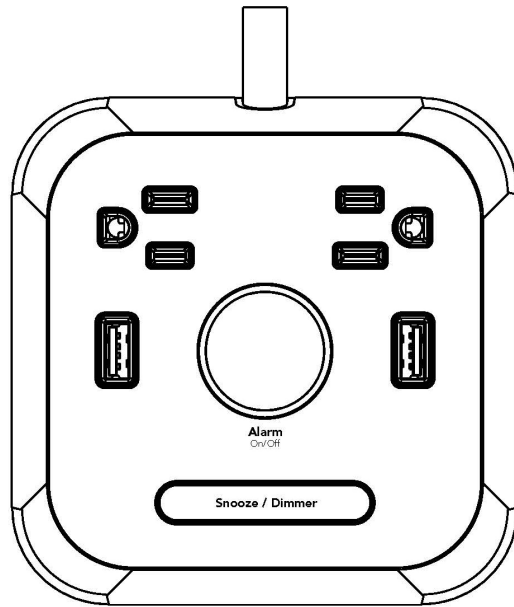

## **Unpacking and Set up:**

- 1. Carefully remove from packaging. Verify that you have all necessary components before you dispose of display carton.**

Component List:

- CubieTime Main Unit
- C-Clamp
- 2 Wood Screws

- 2. Place in desired location.**

Note: This product is designed to be used on a level, stable, flat surface such as a table, desk, shelf or stand, convenient to an AC outlet, out of direct sunlight and away from sources of excess heat, dust, moisture or vibration.

- 3. Plug directly into wall AC outlet. Do not plug into another surge protector or extension cord.**

- 4. Secure cord with C-Clamp to back of nightstand or desk. Wood screws are included.**

**Setting the Time:**

1. Press and hold SNOOZE/DIMMER button for 6 seconds

 
2. Year will begin to flash, adjust by rotating knob, press knob to select



3. Month will begin to flash, adjust by rotating knob, press knob to select



4. Day will begin to flash, adjust by rotating knob, press knob to select

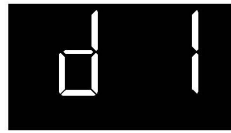

5. Hour will begin to flash, adjust by rotating knob, press knob to select hour.



6. Minutes will begin to flash, adjust by rotating knob, press knob to select minutes.





## Setting the Alarm

1. Press knob to turn ON alarm
2. Alarm time will begin to flash, adjust by rotating knob, press knob to select. (Alarm will automatically set to last selected alarm time after 6 seconds)



3. Press knob to turn OFF alarm

In Single Day Alarm On Mode: alarm time will reset to 6:00am with every activation of the alarm.



In Single Day Alarm Off Mode: the alarm time will default back to the last set alarm time with every activation.

## **Secure Battery Door/Hidden Switches**

### **Single Day Alarm (Preset to ON)**

ON: Alarm time will reset to 6:00am with every activation of the alarm.  
OFF: the alarm time will default back to the last set alarm time with every activation.

### **Daylight Saving Time (Preset to ON)**

ON: Time will automatically update +1 or -1 hour based on the pre-set Daylight Saving Time Calendar. Year, Month and Day must be set correctly for this feature to work properly  
OFF: Time will not automatically update for Daylight Saving Time. Any changes to the time must be manually updated.

### **Back Up Battery Function**

Two "AAA" size batteries are supplied with the clock. If the AC supply is interrupted, the internal clock will not be interrupted due to battery back up. The back up battery will not support the Alarm Settings.

**Other Features:****Snooze/Dimmer Button**

When in standby mode, press SNOOZE/DIMMER button to change brightness (off, dimmest, medium, brightest). When the display is turned off, user can also press or rotate the knob to turn display on.

When alarm is sounding, press SNOOZE/DIMMER button to go to snooze status, the alarm symbol will flash and the alarm will resound after 9 minutes.

**Gradual Awake**

Alarm will sound in a low volume and gradually increase to a higher volume.

**Technical Specifications:**

**Continuous Duty Electrical Rating**

125VAC 12A 60Hz 1500W

**Maximum Energy Dissipation**

600J L-N 300J L-G 300J N-G 300J

**Maximum Spike Current**

36000A L-N 12000A L-G 12000A N-G  
12000A

**UL Clamping Voltage (3-line)**

UL1449 800V

**AC Outlets Output**

125V 12A

**Powered USB Output**

5V/2400mA shared

**EMI/RFI Filtration**

150kHz-1000MHz up to 40db

**Surge Response Time (ns)**

<20 ns

**Working Temperature**

No higher than 95° F

**Power Cord**

6ft 15W 3-line

**Housing Material**

UL94V-0

**Working Surroundings**

Indoor Fixed Mount

**Limited 1-Year Warranty**

Products are warranted by Brandstand Products against manufacturing defects in materials and workmanship under normal use for 1-year (365) days from the date of purchase. Defective products will be exchanged for the same or a comparable item.

**Return Policy**

For a refund or exchange, products must be returned within 30 days of original purchase date. Customers must contact Brandstand Products to obtain a Return Merchandise Authorization (RMA) number and specific shipping instructions prior to returning the product. Any product returned without a RMA will be refused. Product must be in original box with original accessories and packaging in undamaged, clean and brand-new condition. Products that are incomplete, damaged or have been used will require a deduction in refund. There is a 30% restocking fee on all returned products. Refunds will be issued by check. Refund checks are mailed the 10-day from the date the product is returned. Delivery charges and customized products are non-returnable.

**Disclaimer of Damages**

In no event shall Brandstand Products, or its suppliers, be liable for indirect, incidental, or consequential damages, loss of profit, loss of use or data, or interruption of business, whether the alleged damages are labeled in tort, contract, or indemnity, even if Brandstand Products or its suppliers has been advised of the possibility of such damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply.

**Important:** This product's USB outlets cannot be used as a USB hub and does not transmit data. The powered USB outlets on this unit are intended solely for charging devices that can be charged via a USB interface.

**Brandstand Products**

3301 Matrix Drive #200  
Richardson, TX 75082, USA  
877-843-3681  
[www.brandstand.com](http://www.brandstand.com)

© 2014 TXS Industrial Design Inc. d.b.a. Brandstand Products  
Brandstand is a registered trademark of TXS Industrial Design, Inc. in the United States.