



USER MANUAL ENGLISH

Article number	104570
Voltage	220-240 V ~ 50/60 Hz
Rated power	30 Watt
Protection class	II
Net weight	0.809 kg
Container capacity	1L
Lid can be used as bowl	

V01

TABLE OF CONTENT

IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT OVERVIEW	5
BEFORE FIRST USE	5
APPLIANCE ASSEMBLY	6
OPERATING THE APPLIANCE	6
MAINTENANCE AND CARE	8
DISPOSAL INSTRUCTIONS	8
CUSTOMER SERVICE / WARRANTY	9

IMPORTANT SAFETY INSTRUCTIONS



When using electric appliances, basic safety instructions must be followed. In order to avoid burns, electric shock, fire and/or personal injury, please read the user manual thoroughly before using for the first time and adhere to all instructions when using the appliance.

Please keep this manual carefully for future reference. When passing the appliance on to a third party, please additionally hand over this user manual.



GENERAL INFORMATION

- Electric appliances are not toys! Keep children away from the appliance!
- Use the appliance only as intended.
- The appliance is intended for use in private households only and is not suitable for commercial purposes.
- Do not leave the appliance unattended when in use or connected to the mains.
- Switch off and unplug the appliance when not in use, in case of malfunctions and when cleaning.
- Do not carry the appliance by holding the mains cable.
- Keep the appliance clean and dust-free.
- Do not use the appliance outdoors.

- Regularly check the appliance for visible damage. You must not use the appliance if the appliance is damaged, has been dropped or does not function properly. Do not attempt to repair the appliance on your own.
- Only carry out repairs by qualified persons.
- The socket must be located close to the appliance in order for the mains plug to be disconnected easily in case of emergency



ELECTRIC DANGERS:

- The voltage indicated on the rating plate of the appliance must correspond to your local supply voltage.
- Connect the appliance only to a properly installed wall socket. Do not use multiple socket outlets or extension cables.
- Never operate the appliance by means of a timer or other remote control systems.
- Never touch the appliance, mains cable and mains plug with wet hands or when standing on a wet floor.
- Do not route the mains cable through sinks.



- If the outer surface of the appliance has become wet, unplug the appliance.
- Do not immerse in water.
- Immersing the appliance in water or other liquids presents a life-threatening situation due to electric shock!
- Keep the appliance, mains cable and mains plug away from hot surfaces, open fire, direct sunlight and sharp edges. When using the appliance, make sure not to jam the cable (e.g. between doors).
- When unplugging the appliance, always pull the plug. Never pull the cable.
- If the mains cable of this appliance has been damaged it must be replaced by a properly qualified person in order to avoid hazards. The same applies to the mains plug.

**DANGER TO LIFE:**

- This appliance is not suitable to be used by persons (including children) with reduced physical, sensory or mental capabilities or with lack of experience and/or knowledge, unless they are supervised or receive instructions regarding use of the appliance by a person who is responsible for their safety.
- Children must be supervised in order to make sure they do not play with the appliance.
- Children do not understand the dangers regarding the use of electric appliances. Keep children away from the appliance. Pay special attention when the appliance is used near children!
- Keep packaging material, such as plastic bags and polystyrene parts, as well as other small parts away from children. There is a risk of suffocation!
- When routing the mains cable, make sure no one can trip over it.
- Make sure the appliance itself does not present a trip hazard.

**PRODUCT RELATED HAZARDS:**


- Do not direct the appliance towards humans or animals!
- When operating the appliance, be sure to keep hair, loose clothing or similar items away from moving parts.
- Objects must not be inserted into openings or get close to moving parts!
- Only use the appliance on a flat, stable and liquid-resistant surface. Avoid tilting the appliance during use!
- Do not route the mains cable through sinks!
- Never use bare hands to press on the juicer! The appliance automatically turns on when the top is being pressed! Risk of injury!
- The appliance is only intended for squeezing citrus fruits such as oranges, lemons, limes or grapefruits. Do not use the appliance for squeezing other foodstuffs.
- Only use the appliance with the original accessories provided!
- Make sure the appliance is properly assembled before use!

- Do not operate the appliance for longer than approx. 30 seconds at a time. Otherwise there is a risk that the motor may become overheated. Pause between each operation.
- Wait until the appliance has stopped completely before removing the lid.
- The container is not suitable for heating food! Do not put it in water baths, microwave ovens or similar devices (e.g. ovens).
- Switch off and unplug the appliance before changing, removing, cleaning or approaching the juicer cones.

PRODUCT OVERVIEW

1. Lid
2. Large juicer cone
3. Small juicer cone
4. Upper pulp strainer
5. Lower pulp strainer
6. Container with fill level indication
7. (200 ml – 1000 ml)
8. Drive connection
9. Trim (fixed to the base and without function)
10. Motor unit

Without illustration: mains cable with mains plug; can be wound up between the trim and the motor base.

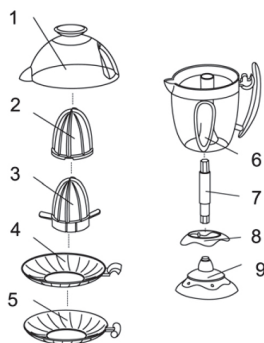


BEFORE FIRST USE

- Unpack all product parts and remove all packaging material and padding.
- Rinse all accessories thoroughly under water in order to remove any existing production residue (dust, etc.). Dry all parts with a cloth.
- Do not immerse the *motor unit* (9) and the mains cable in water or other liquids! Wipe these parts with a dry cloth!
- Put the appliance on a stable, flat and liquid-resistant surface.

APPLIANCE ASSEMBLY

- First put the *container* (6) over the drive connection (7) onto the *motor unit* (9).
- Turn the *container* (6) clockwise until it locks into place and cannot be removed anymore from the *motor unit* (9).
- Then put the *lower pulp strainer* (5) onto the *container* (6) with the handle of the *pulp strainer* (5) resting in the designated notch of the container's handle.
- Then put the *upper pulp strainer* (4) onto the *lower pulp strainer* (5) with the handle of the *upper pulp strainer* (4) enclosing the handle of the *lower pulp strainer* (5).
- Next put the *small juicer cone* (3) onto the drive connection (7). The clamp of the *small juicer cone* (3) must click into place and in doing so, connect both *pulp strainers* (4 + 5).
- Depending on the size of the fruits, you will have to place the *large juicer cone* (2) onto the *small juicer cone* (3). Make sure that the openings in the bottom frame of the *large juicer cone* (2) run over the blades of the *small juicer cone* (3).

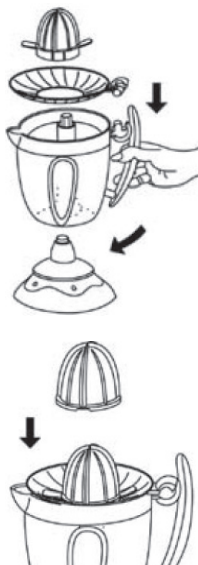

OPERATING THE APPLIANCE

NOTE: Only use the appliance for squeezing citrus fruits (oranges, lemons, limes, grapefruits)!

TIP: The lid can be used as bowl. For this, turn the lid upside down and have it sit on the handle which will then function as the leg.

After having assembled the appliance according to above steps, you can start juicing fruits.

1. Cut the desired citrus fruits into halves without peeling them!
2. Choose the *juicer cone* (2, 3) according to the fruits (oranges and grapefruits usually require the *large juicer cone* (2). For lemons and limes use the *small juicer cone* (3)).
3. Fully unwind the mains cable and connect it to a properly installed wall socket.

CAUTION: The appliance is now ready for use and the *juicer cones* (2, 3) start rotating once they are pressed!

4. Take one of the fruit halves and press it onto the *juicer cone* (2, 3). The *juicer cone* (2, 3) starts rotating and squeezes the fruit half.



5. By moving the *lower pulp strainer* (5) at its handle you can adjust the space between the *pulp strainers* (4, 5) from completely open (lots of pulp) to completely closed (no pulp). This way you can control the amount of pulp that gets into the juice.
6. The fill indication level next to the window of the *container* (6) shows the amount of juice being squeezed.
7. The appliance will stop the moment you remove the fruit half from the *juicer cone* (2, 3). Depending on the amount of pulp collected in the *pulp strainer* (4, 5), use a spoon to remove it in order for the juice to continue running into the *container* (6) without obstruction.
8. After you have squeezed enough juice, use a spoon to remove the pulp collected in the *pulp strainers* (4, 5). Rinse the *pulp strainers* (4, 5) and *juicer cones* (2, 3) under running water and then reinstall.
CAUTION: When disassembling the *pulp strainers* (4, 5) and *juicer cones* (2, 3), bear in mind that the *small juicer cone* (3) is connected to the *pulp strainers* (4, 5) with safety clamps! Carefully press the plastic hooks towards the inside in order to release the connection. Following this, disassemble the parts.
9. Close the openings in the *pulp strainers* (4, 5) and close the *lid* (1).
NOTE: The *lid* (1) can only be installed if the *pulp strainers* (4, 5) are placed on the *drive connection* (7)!
10. Carefully turn the *container* (6) at its handle in order to disconnect it from the *motor unit* (9); lift it up to remove. Then pour the juice from the *container* (6).
NOTE: Always consume fresh juice within a few hours and keep it cool (refrigerated)!

MAINTENANCE AND CARE

Caution:

Always unplug the appliance before cleaning.

Regularly clean the appliance after each use. If you have not used the appliance for a longer period of time, you should clean the appliance and all removable accessories with clear water before use.

- Do not immerse the motor unit, mains cable and mains plug in water or other liquids for cleaning. Clean them with a dry cloth.
- In case of heavy staining, carefully clean the exterior with a damp cloth. Dry thoroughly afterwards.
- Clean the removable accessories by hand in the sink; dry afterwards.
- Do not use aggressive cleaning agents, steel brushes, abrasives or other hard objects that could scratch the surface.
- Never use solvents, petrol or oil-based cleaning agents as these could damage the housing.
- Plastic might discolour from the squeezed fruits; this is normal and hygienically harmless.

DISPOSAL INSTRUCTIONS



Electric appliances used in private households

- If you do not wish to use the electric appliance anymore, return it to a public collection point offering the free disposal of electric appliances.
- Do not dispose of electric appliances as residual waste (see symbol).

Further disposal instructions

- Return the waste electric appliance in a way that does not affect the future recycling and reuse of the appliance. Remove batteries beforehand and avoid destroying any containers containing liquid.
- Waste electric appliances can contain hazardous substances which, in the case of improper use / damage to the appliance, could cause health problems / water and soil contamination when the appliance is recycled in the future.

CUSTOMER SERVICE / WARRANTY

The warranty is valid for 3 years starting with the date of purchase. It is important to keep the purchase receipt as proof of the purchase date.

The warranty covers defects and malfunctions occurring within the warranty period and during normal use.

In case of a warranty claim repairs are free of charge.

The warranty will be void in case of damage, modifications or if the appliance is not used as directed. This does not apply if these factors fall within the responsibility scope of the warranty provider. This especially applies to the following:

- Alterations of the appliance by unauthorised persons.
- Modifications on or inside the appliance, removing or obliterating the serial number, removing or altering the product seal.
- Damage caused by collision, downfall or external causes.
- Damage caused by unintended use or misuse.
- Damage caused by external reasons, e.g. excess voltage, lightning strikes.
- Commercial use of the appliance.

This warranty does not impair your statutory rights (subsequent delivery, withdrawal, reduction, damages) in case of defects of the appliance.

Please keep the original packaging in case you need to return the appliance for repair.

Repaired or replaced components are generally subject to the residual warranty period of the appliance.

If you have questions concerning the product or this user manual, or if you experience product deficiencies, please contact our service hotline directly for help.

Important note:

Please do not return your product to our address without our approval. It is essential that you contact our **service hotlines** first.

Service Hotline: Telephone: +49(0)431 53 039 171
E-Mail: superior@zhg-online.de

Art. Nr.: 104570

Hergestellt für: / Produced for:
Zentrale Handelsgesellschaft - ZHG - mbH,
Hanns-Martin-Schleyer-Straße 2, D-77656 Offenburg,
www.zhg-online.com
Made in China



All illustrations are for reference only and do not always represent the exact image of the appliance.
All rights reserved.