



COMPUTTHERM Q7 RF THERMOSTAT USER MANUAL

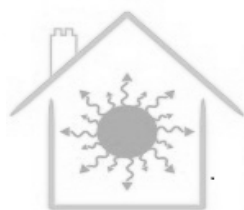


**Helvetic
Heating**

Brings the sun into your home

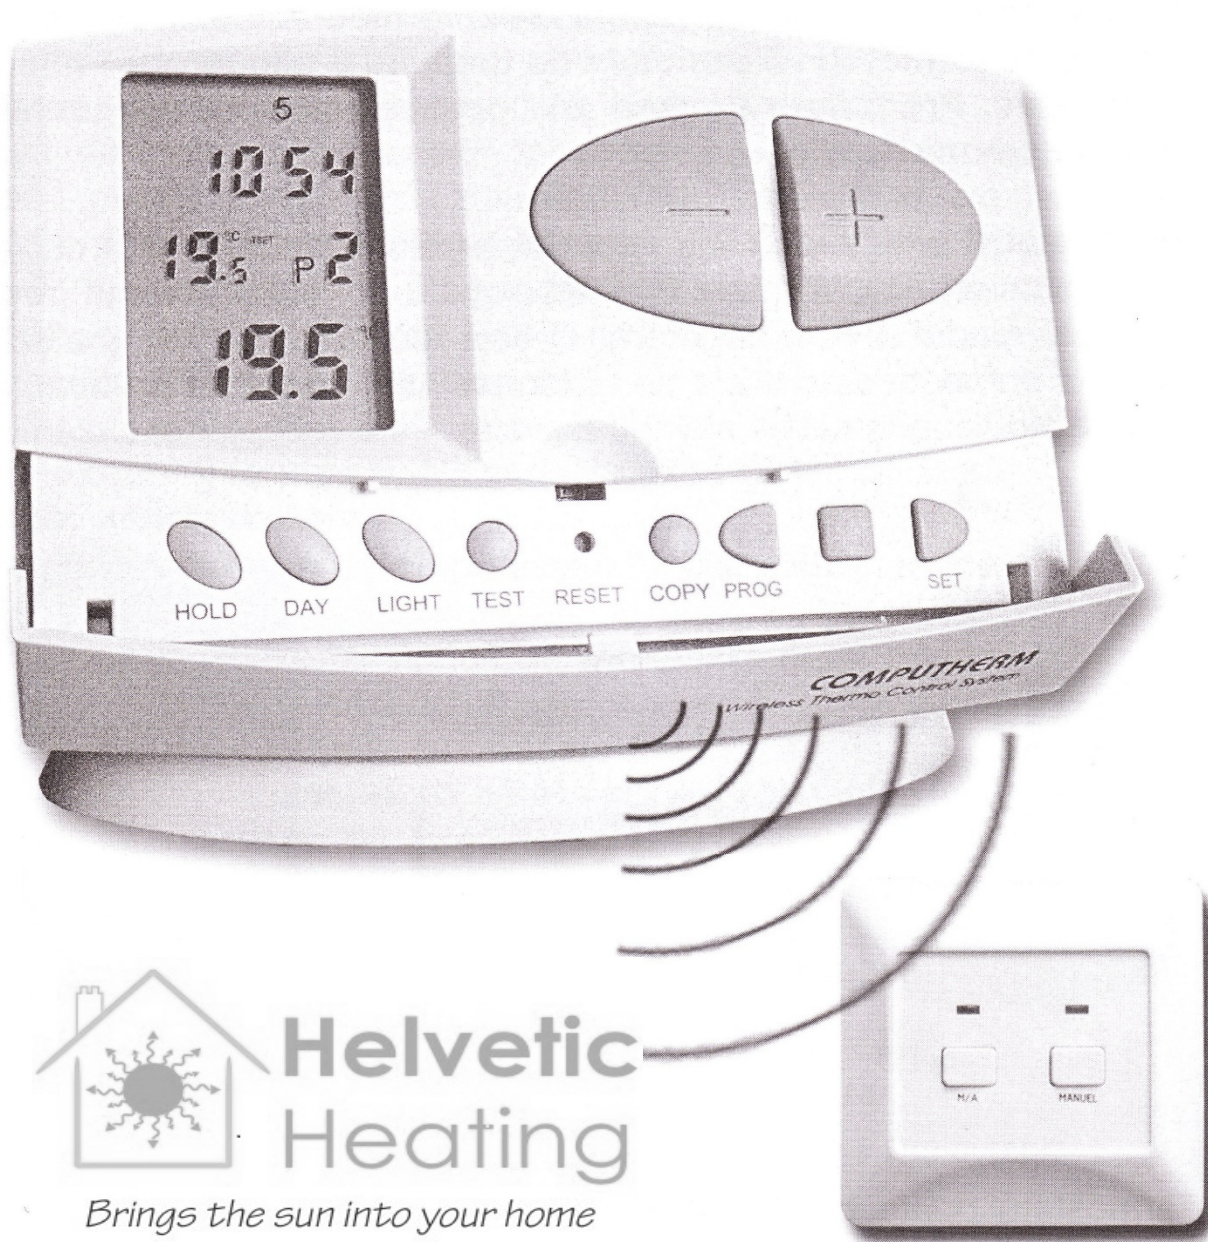


4A Kealew Business Park, Mountrath Road, Portlaoise, Laois, Ireland. www.helvetic.ie


COMPUTHERM Q7RF THERMOSTAT USER MANUAL

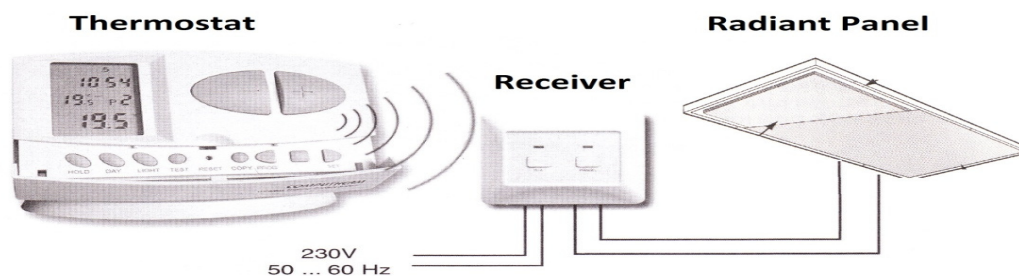

Wiring Instructions

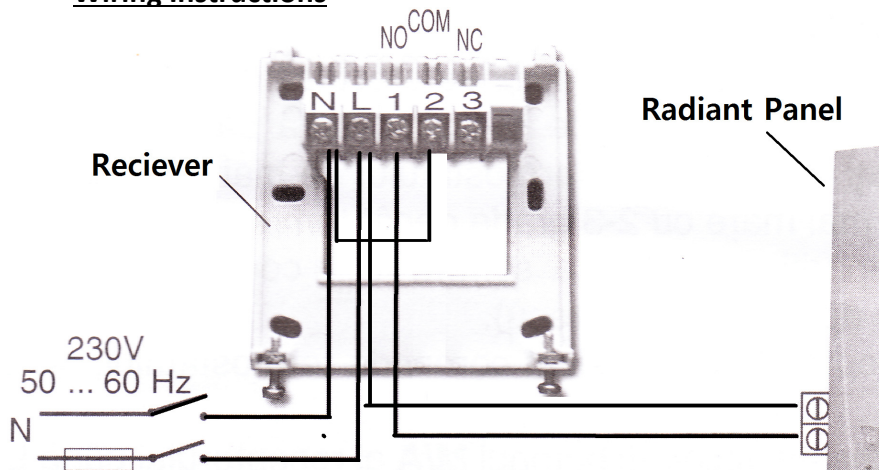

Display Icons

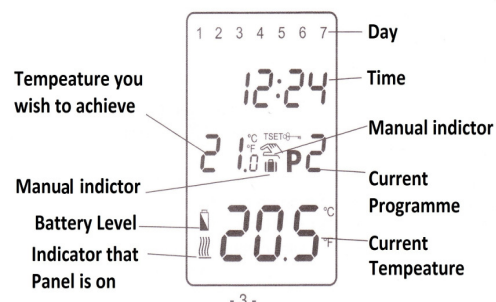

ADJUSTING THE CURRENT DAY AND TIME

1. Press the SET key to go in to the main screen.
2. Press the DAY key. The day of the week will start to flash.
3. With the Keys - + keys adjust the day.
4. Press the TIME key and the hour starts to flash.
5. With the - + adjust the minutes
6. Press the SET key to finish the programming and go back to the main screen.

PROGRAMMING

In the Wireless thermostat you can set a daily programme (every day of the week has the same daily program) or a weekly program (different programs for each day of the week)

By default the wireless thermostat has the following daily program:

Slot	Start time	Set Temperature
P1	7.00	20 Degrees
P2	9.00	17 Degrees
P3	12.30	20 Degrees
P4	15.00	19 Degrees
P5	17.30	22 Degrees
P6	23.00	17 Degrees

The start time of each slot and the consignment temperature can be modified in the following way.

THE SAME DAILY PROGRAMMING FROM MONDAY TO SUNDAY

1. Press the SET key to go to the main screen.
2. Press and hold the SET key then press PROG to go to the program. In the upper part of the screen, the days of the week start Flashing.
3. With the - + keys, select the group of days: MON TUE WED THR FRI SAT SUN.
4. Press the PRO key to confirm the program block. Then the hour of the key - + keys set in steps of 10 minutes

Press the PROG key.

The desired temperature of the slot starts flashing. With the help of - + keys set the desired temperature. The Temperature can be set in steps of 0.5 Degree. Press the PROG key to confirm the programming and going to the next slot. Repeat the steps 1 and 2 until you have programmed the 6 slot. Finish the programming by pressing the set Key.

If you want to modify the programming for any day, do the following weekly programming. Press the SET key to go to the main screen.

Press and hold the SET key then press the PRO to go to the programming. The upper part of the screen, the days of the week start flashing.

With the - + Keys, select the day you want to modify: MON TUE WED THR FRI SAT SUN is illustrated by 1 2 3 4 5 6 7 . The programming will automatically become daily and the modified day is adopted within the programming. Press the PROG to confirm the day.

Then the hour of the first slot P1 starts flashing. With the help of the - + keys set start hour of the first slot. The time can be set in steps of 10 minutes. Press the PROG key. The program temperature for the first slot starts flashing. With the help of the - + keys set the desired temperature. The Temperature can be set in steps of 0.5 degree. Press the PROG key to confirm the programming and going to the next slot. Repeat the step 1 and 2 until you have programmed the 6 slots. Finish the programming by pressing the set key

If you want to modify the programming for any day, do the following: Weekly programming Press the SET key to go to the main screen. Press and hold the Set key then press the programming. In the upper part of the screen, the days of the week starts flashing. With the - + keys, select the day you want to modify: SUN.....Sat. The programming will automatically become weekly and the modified day is adopted within the programming. Press the PROG to confirm the day.

1. Then the hour of the first slot P1 starts flashing. With the help of the - + keys set start hour of the first slot. The time can be set in steps of 10 minutes. Press the PROG key.
2. The Consignment temperature of the first slot starts flashing. With the help of the - + keys set the desired temperature can be set in steps of 0.5 degree. Press the PROG key to confirm the program.

Repeat the step 1 and 2 until you have programmed the 6 slots. Finish the programming by pressing the set key. Repeat the process if you want to modify the programming of any other day.

TO DISPLAY THE SET PROGRAM

Press the SET key to go to the main screen. Press the PRO key. If you use a daily program: In the upper part of the screen, the seven days of the week SUN... MON is displayed and the lower part the screen displays the start time and temperature of the first slot P1.

By pressing the PROG key several times, the screen will display the start time and desired temperature of every one of the following slots: P2, P3, P4, P5 and P6.

PROGRAMMING THE CURRENT DAY

In the upper part of the screen it displays the current day indicator and in the lower part it displays the start time and temperature of the first slot P1 of that day. By pressing the PROG several times, the screen will display the start and consignment temperature of every one of the following slots P2, P3, P4 and P6.

PROGRAMMING ANY OTHER DAY OF THE WEEK DIFFERENT FROM THE CURRENT DAY

The program of daily program will download to the weekly program. With the help of the - + Keys select the day of the week you want to check SUN.....SAT. In the lower part of the start time and consignment temperature for the first slot P1 are displayed by pressing the PROG key several times, the screen will display the start time and consignment temperature of everyone of the following slots: P2, P3, P4, P5 and P6. If you want to check the programming of any day, repeat the steps above. To go back to the main screen, press the SET key. If you want to reset the weekly program, you can just press, SET and PROG key together then press + or – key to go back to daily mode. The program will be reset to factory settings again.

COPY FUNCTION

In AUTO mode press COPY key for 5 seconds display COPY week flashing. Press + or – key to select the date that you want to copy. Press COPY key week stops flashing. Press + or – key to select which date that you want to copy. Press COPY key to download. Press + or – Key again to copy another date. Press COPY key once again, it's ok. Repeat the above process to copy the date that all you required press SET key to confirm or exits auto in 15 seconds.

HOW TO MANUALLY CHANGE THE CONSIGNMENT TEMPERATURE

The manual variation of the consignment temperature may be done in four different ways. Nit the next slot during the certain number of hours (Selectable from 1 to 9 hours). During a certain number of days (Selectable from 1 to 99 days) permanently

HOW TO CHANGE THE TEMPERATURE UNTIL THE NEXT SLOT

Press the SET key to go to the main screen. Press the + key to increase the desired value. Press the – key to increase the desired value.

NOTE: to cancel the temperature manual variation and then go back to the temperature adjust by the program press the SET key.

When the manual variation is done in the consignment temperature until the next slot, in the screen, alternatively the time remaining until the next slot is displayed, and together with the consignment temperature indication, if displays the word MANUAL.

HOW TO CHANGE THE CONSIGNMENT TEMPERATURE DURING A CERTAIN NUMBER OF HOURS

Press the SET key to go to the main screen. Press the + or – key to increase or decrease the consignment value. Press the DAY to enter the number of hours (from 1 to 9) during which you want to modify the programming

NOTE: to cancel the temperature manual variation and then go back to the temperature adjust by the program press the SET key.

When you make a manual variation of the consignment temperature during a certain number of hours, the screen alternatively displays the time remaining until the next slot together with a consignment temperature indicator and the word COMFORT

Once in the slot you want to modify press the + or – keys you can modify the temperature again as you want.

HOW TO CHANGE THE CONSIGNMENT TEMPERATURE DURING A CERTAIN NUMBER OF DAYS

Press the SET key to go to the main screen. Press the HOLD key. With the + - keys adjust the desired temperature. Press the HOLD key during and keep pressing it during 3 seconds to enter the number of days in the programming. The screen displays the letter d and the number of days is flashing. With + - keys select the number of days (from 1 to 99) during which you want to modify the programming. NOTE: To cancel the temperature manual variation and then go back to the temperature adjusted by the program, press the SET key. When you make a manual variation of the consignment temperature during a certain number of days, the screen alternatively displays the time remaining until the next slot together with a consignment temperature indicator, and the word F.

HOW TO CHANGE THE CONSIGNMENT TEMPERATURE PERMANENTLY

Press the SET key to go to the main screen. Press the + or – keys to increase or decrease the desired value.

NOTE: If you want to cancel the temperature manual variation and go back to the temperature adjusted in the program, press the SET key. When you make a manual permanent variation of the consignment temperature, the screen displays the word HOLD beside the consignment temperature indicator.

TO TURN ON THE BACK LIGHT

Press LIGHT once. The back light will turn on for 10 seconds. Unless other keys are pressed it will keep on until last key is pressed.

BEFORE SENDING OUT, WE WILL SET UP THE COMMUNICATION BETWEEN THE TRANSMITTER AND RECIEVER UNITS, BUT IF YOU FIND THERE IS ANT INTERFERENCE OR REASON YOU WANT TO CHANGE THE COMMUNICATION ADRESS, PLEASE FOLLOW THE THESE STEPS:

HOW TO SET UP THE COMMUNICATION BETWEEN THE TRANSMITTER AND RECIEVER

Install the receiver unit and turn on the power. Install power supply to the receiver. Press the M/A key for 10 seconds, green LED will flash and will enter in to learning mode. First press transmitters SET key and press DAY key. After 10 second's later transmitter green LED stops flashing and learning id successful. The receiver unit green LED should be turned off. Now pressing and holding TEST key for 2 seconds on the transmitter. The transmitter unit will transmit RF signal every five seconds alternatively. This can be helping you to find a suitable range to operate the unit. The receiver unit can be operated manually by pressing MANUAL key once to adjust to manual (Green Led on) or auto (Green Led off) mode. You can turn the system on and off by pressing M/A button alternatively the red LED on indicates heating system is on. If you want to go into mode again just press the MANUAL button once (Green LED off) then the system will turn on and off according to the signal received.