



 
Russell Hobbs

Smart in the kitchen...




coffee maker

instructions

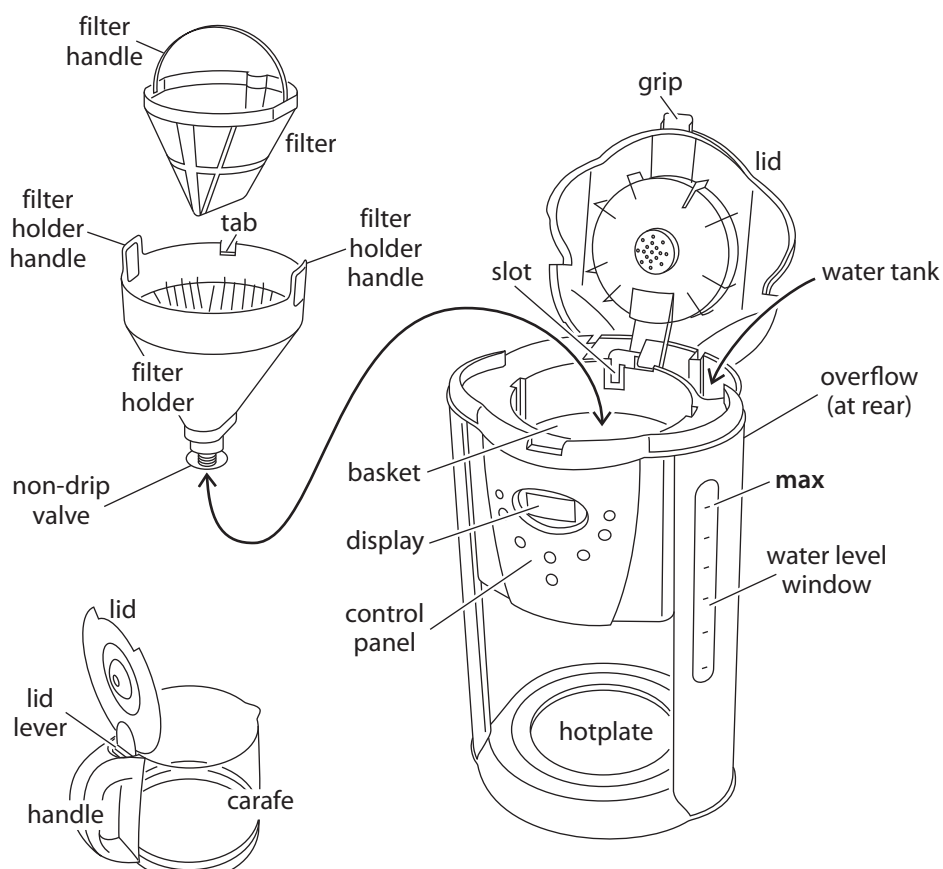

control panel

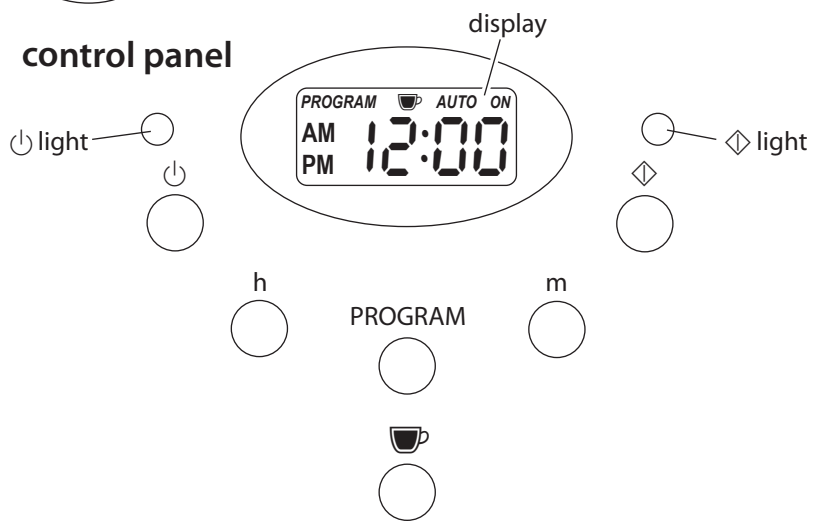




Read the instructions and keep them safe. If you pass the coffee maker on to anyone else, you should also pass on the instructions too.

Remove all packaging before using the coffee maker, but keep it till you're satisfied the coffee maker is working.

important safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Don't put the coffee maker, or plug in any liquid; don't use the coffee maker in a bathroom, near water, or outdoors. 
- 2 The coffee maker must only be used by or under the supervision of a responsible adult.
- 3 Sit the coffee maker on a stable, level, heat-resistant surface.
- 4 The scald hazard lasts long after boiling. Keep the coffee maker away from the edges of worktops and out of reach of children.
- 5 Steam will collect under the lid. To avoid the risk of scalding, don't open the lid after use, till the machine has cooled down fully.
- 6 Check that the lid is properly closed before using the coffee maker.
- 7 Take care when pouring – don't over-tilt the carafe.
- 8 Don't connect this coffee maker to an external timer or remote control system.
- 9 Don't touch hot surfaces e.g. carafe or hotplate. Use the handle and grip.
- 10 Route the cable so it doesn't overhang and can't be caught or tripped over accidentally.
- 11 Unplug the coffee maker when not in use, before moving or cleaning. Let it cool down before cleaning and storing away.
- 12 Fill the machine from a jug or the carafe, not directly from the tap.
- 13 Don't fill the coffee maker above the **max** mark.
- 14 Put the carafe on the hotplate before brewing.
- 15 To stop the coffee maker, press the  button. The  light will go out. Let it cool for 10 minutes before re-use.
- 16 Don't use the coffee maker for any purpose other than those described in these instructions.
- 17 Don't put the carafe in a microwave oven.
- 18 Don't try to reposition the carafe handle. You risk breaking the glass.
- 19 Keep the coffee maker, carafe, and cable away from hotplates, hobs, and burners.
- 20 Don't use accessories or attachments other than those we provide.
- 21 Don't use the coffee maker if it's damaged or malfunctions. If the cable or plug is damaged return the coffee maker in order to avoid hazard.

household use only

coffee

Use medium-ground filter coffee. The amount will vary with the type of coffee and individual taste. We suggest starting with two rounded teaspoons per cup.

bottled water

If you use bottled water, check it has no added ingredients or flavourings. Use flat water, not sparkling. The carbon dioxide which gives the sparkle will adversely affect the flavour of your coffee.

milk

If you take milk, use warm milk, to avoid overcooling the coffee. For maximum flavour, coffee should be cool enough not to scald or burn, but hot enough for the flavour to fill the mouth, sinuses and nose.

taste

Don't be tempted to pass old coffee through the machine. You'll damage the machine and the coffee will be undrinkable.

Clean the filter holder, basket and carafe, after each use, any taint from a previous brewing will spoil your coffee.

position

- 1 Sit the coffee maker on a stable, level, heat-resistant surface, near a wall socket and out of reach of children.
- 2 Don't plug it in yet.

before using for the first time

Fill the water tank to the **max** mark with water, then run the machine without coffee. Discard the hot water and clean the machine.

water fill

- 3 Use the grip to open the lid.
- 4 Use the carafe to fill the water tank with as much water as you need, but don't fill past the **max** mark. The scale on the water level window is marked in coffee cups, e.g. 2 = 2 coffee cups.
- 5 Don't fill the water tank with less than 2 cups of water.
- 6 Don't fill past the **max** mark. If you overflow the coffee maker, water will drip out of the overflow and on to the work surface – not a good idea.


nb The amount of brewed coffee will be less than the amount of water placed in the water tank, as about 10% of the water is absorbed by the coffee grounds.

- 7 Put the carafe on the hotplate.

coffee fill

- 8 Lower the filter holder into the basket, so the tab on the filter holder, fits into the slot in the coffee maker.
- 9 Put the filter into the filter holder.
- 10 Put two rounded teaspoons of ground coffee per cup, into the filter.
- 11 Push the lid down to close it.

control panel

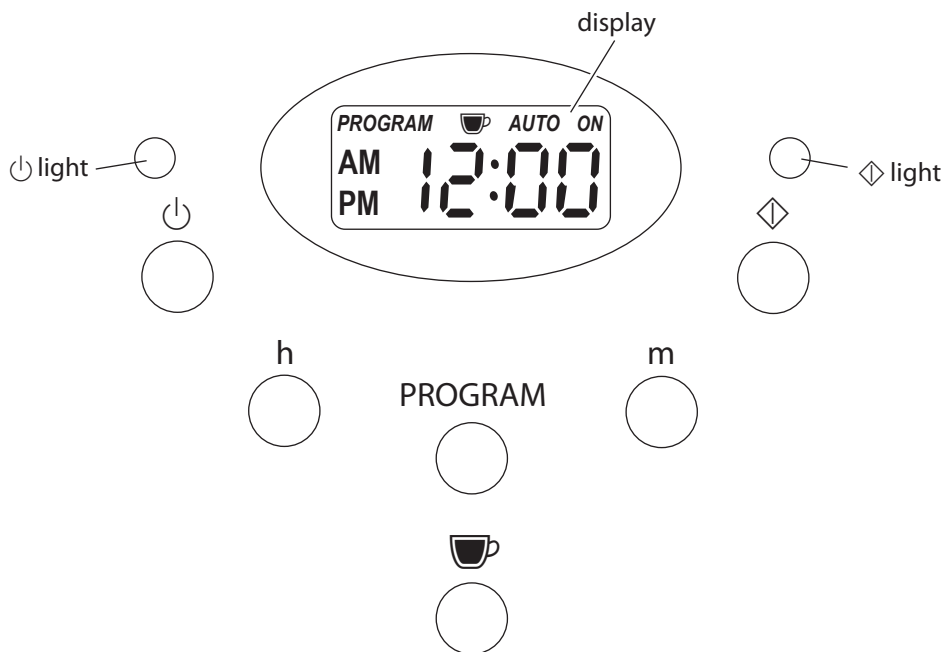

switch on

12 Plug the coffee maker into the wall socket (switch the socket on, if necessary).

coffee now

13 Ignore the time shown in the display.

14 Check that the carafe is on the hotplate, and the coffee maker lid is closed.

15 If you're making less than 5 cups of coffee, press the button to turn the brew strength feature on. will appear in the display (see "brew strength ").

16 Press the button, the light will come on.

17 **ON** will appear in the display.


 








18 After a few seconds, coffee will drip into the carafe.

pause and pour

 
19 You may remove the carafe to pour coffee at any time. The non-drip valve will stop coffee dripping on to the hotplate.





20 To avoid overflowing, replace the carafe within 30 seconds. This may not sound much, but its more than enough time to pour a couple of cups.

coffee later – timer



- 21 Check that the carafe is on the hotplate, and the coffee maker is plugged in.
- 22 Make sure that the  light is off. If it isn't, press the  button.
- 23 The display will show AM and 12:00 will flash.
nb If you go past the hour or minute you want, you can't go back, you have to keep pressing the **h** (hour) and **m** (minute) buttons to you get back round to it again. Hold the buttons down to fast forward.
- 24 To set the time, press the **h** (hour) and **m** (minute) buttons. Check that the time is set to the appropriate AM or PM setting, if it isn't, keep pressing the **h** button till it is.
nb If you unplug the coffee maker, the time will reset to AM 12:00, the next time you plug it in.
- 25 Press the **PROGRAM** button. The display will show AM 12:00 and **PROGRAM** will flash in the display. The coffee maker is now in 'program mode'.
nb If you don't press the **h** or **m** button to change the brewing time within about 5 seconds, the coffee maker will come out of 'program mode' and the display will show the time.
- 26 Press the **h** and **m** buttons to select the time you want the coffee maker to make you coffee. Check that the time is set to the appropriate AM or PM setting, if it isn't, keep pressing the **h** button till it is.
- 27 Press the  button to activate the timer, the  light will come on, and **AUTO** will appear in the display.
- 28 Brewing will start at the pre-selected time. The  light will go out, **AUTO** will disappear from the screen, then the  light will come on and **ON** will appear in the screen.
- 29 When the brewing process has finished, the coffee maker will stay on for 2 hours while the hotplate keeps your coffee hot, then the coffee maker will auto shut-off (see "auto shut-off" - next page).
- 30 If you need to cancel the timer before brewing has started, press the  button, the  light will go out, and **AUTO** will disappear from the display.
- 31 If you need to stop the coffee maker whilst it's brewing, press the  button. The  light will go out, and **ON** will disappear from the display.

brew strength

Use the brew strength feature  when brewing less than 5 cups of coffee. The brew strength feature slows down the brewing process, so your coffee will have the same strength, as coffee from a full carafe.

- 32 The  (brew strength) button can be pressed before or during the brewing process, to activate or deactivate the brew strength feature.
- 33 Press the  button to activate the brew strength feature, the  icon will show up in the display.
- 34 Press the  button to deactivate the brew strength feature, the icon will disappear from the display.

finished?


35 When the carafe is empty, press the  button, the  light will go out. Unplug the coffee maker and let it cool down fully before cleaning, or for 10 minutes before refilling.

warning watch out for steam when you open the lid to refill the filter.

hotplate

36 The hotplate will keep the coffee hot while the machine is on. Don't leave it too long, after an hour or so, chemical changes in the coffee liquor start to degrade the flavour.

auto shut-off

Your coffee maker will auto shut-off, 2 hours after the brewing process has finished. The  light will go out and **ON** will disappear from the display.

care and maintenance

37 Unplug the coffee maker and let it cool down fully.

38 Use the grip to open the lid.

39 Use the filter handle to lift out the filter, then tip the used coffee grounds into the bin.

40 Use the filter holder handles to lift the filter holder out of the coffee maker.

41 Wipe the basket, hotplate, and the body of the coffee maker with a damp cloth.

42 Wash the filter, filter holder and carafe in warm soapy water, rinse thoroughly and dry.

43 To reassemble, put the filter in the filter holder, put the filter holder into the basket, then close the lid.

44 Put the carafe on the hotplate.

Don't wash any part in a dishwasher.

Don't put the machine in any liquid.

Don't use harsh or abrasive cleaners or solvents.

descale regularly – even in soft water areas

Limescale may be white, coloured, even rusty-looking, but it's normally visible.

Phosphate scale isn't generally visible, but it's there, even in soft water areas.

All scale causes overheating, and reduces the life of the coffee maker.


So, even with soft water, descale regularly, to help keep your coffee maker in working order.

Use a descaler suitable for plastic products (all coffee makers have plastic parts). Follow the instructions on the descaler, then fill the water tank, and run the machine without, to ensure no residues are left.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

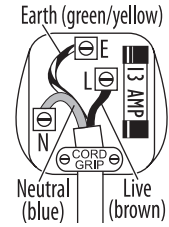

spare parts

Note the Model No (on the rating label) and the parts, ring 0845 658 9700 for prices, or email service@saltoneurope.com, then purchase using VISA or MASTERCARD.

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS UK

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.