

**Blue Eco**  
**Marine**  
**240/320/500**  
**900/1500/2200**  
***User Manual***



Dear Blue Eco user,

Thank you for choosing Blue Eco pumps! With these pumps you own the latest technology in variable pumps. Blue Eco pumps are the most energy efficient pumps worldwide and are fitted with high tech features.

Your Blue Eco pump has a standard warranty period of 2 years after initial start up (optional expandable to 4 years). For a decent warranty registration your pump has a maximum speed of 1200 RPM. This maximum speed is set by the manufacturer as a good speed for "running in" the pump. After registration on [www.blue-eco.nl](http://www.blue-eco.nl) you (or your supplier) will receive 2 codes that will release the full speed of the pump. If you do not appreciate a personal registration you can register the pump on your supplier's name/e-mail address, the purpose of this registration is to have the serial numbers of the pump and controller on the initial day of use.

During registration on [www.blue-eco.nl](http://www.blue-eco.nl) you will be asked for serial number 1 & 2 of the controller. You can retrieve these numbers in the display when you follow these instructions:

1. Turn on the controller and wait for "0" in the display.
2. Press the 'MENU' button, the display will show 'SYSTEM'.
3. Press 'ENTER' and press the yellow button with the ▲ symbol 3 times.
4. 'SERIAL NUMBER 1' will appear in the display, write down this number.
5. Press the ▲ button again and write down 'SERIAL NUMBER 2'.

You now have the 2 serial numbers for registration. After registration and entering these serial numbers you will receive an e-mail with codes and these instructions:

**EXAMPLE:**

You have successfully registered your pump and received 2 codes. Your registration will be processed.

RPM activation code 1: xxxx;

RPM activation code 2: xxxx;

Your warranty period starts today.

**NOTE! THE PUMP MUST NOT RUN WHEN YOU ENTER THE CODES!**

**Follow these instructions to activate the codes:**

1. Turn on the controller and wait for "0" in the display.
2. Press the 'MENU' button once, the display will show 'SYSTEM'.
3. Press 'ENTER' (the display will show TIMER MODE), then press the yellow button with the ▲ symbol 5 times.
5. The display will show 'ACTIVE CODE !' with 4 digits (for example 3998)
6. Now enter the code that you have received: by pressing the 'SELECT' button the last digit will start blinking.
7. With the ▲ and ▼ buttons you can change this number. Press 'SELECT' again to go to the 3rd number and change with the ▲ and ▼ buttons. Repeat these steps for the 2nd and 1st numbers. If you made a mistake press the 'SELECT' button to go to the wrong number to change.
8. Carefully check if all 4 numbers are now corresponding the received code, then press 'ENTER'.
9. The display will show 'ALERT EEPROM CHANGE'.
10. Press 'RESET' to store code 1.
11. Now wait again wait for "0" in the display, then repeat all above steps (at Step 3 press the ▲ button 6 times to reach Code 2).

As soon as the display shows "0" again you can press 'RUN' to start the pump. You can use the ▲ and ▼ buttons to change the RPM of the pump.

If you need any assistance you can call the Estrad service desk at +31-529481543.

Estrad BV is not responsible for damage caused by the pump user.

Thank you for choosing Blue Eco pumps!

The Blue-eco Team.

If you registered your pump on the website it is not necessary to send in the supplied warranty papers. Keep them safe for future use.

## **About this manual**

Please read the manual carefully before installation and operation of the pump to avoid questions and problems. Operating the pump is considered as acknowledgement that you have read the manual. In the case you didn't catch on the manual, please contact your dealer.

## **Warranty claims & claims based on defects**

### **1. Warranty claims**

1.1 We are liable that our goods are free of faults until passing of risk. Negligible deviations from conditions stated or marginal impairment of serviceability are to be disregarded. The state contractually owed, durability and usage of the goods delivered, comply with the written specifications, product descriptions and/or manuals. Any further statements, in particular, preliminary talk, advertisement and/or referenced industrial standards shall be only integral part of the contract when written. Our expressly stated characteristics of the product apply. Guaranteed characteristics made by third parties cannot be accepted. The characteristics expressly stated in this manual apply. If the goods are to be used for purposes other than intended, the customer must carefully check usability and reliability on his own responsibility. We are not liable for any usage other than expressly stated. Manipulations of the pump, the impeller, the electronics as well as the trial to hack or read the firmware immediately voids warranty. Please note that the controller software is protected. Trying to read this software will activate its deletion.

Any customer is solely responsible for the intended usage of his BLUE ECO PUMP. Using this manual does not absolve the user's responsibility for safe installation, operation and maintenance. By the use of this manual the customer accepts that the manufacturer cannot be held liable for material and personal damages arising from usage of the product. In particular, damages arising from improper tubing, lack of maintenance, calcinations, as well as absorbed foreign substances, like sand/rocks, which will damage impeller and bearings, are not covered by warranty.

1.2 Our liability for defects is strictly limited to supplementary performance. At its own option Estrad BV shall mend or replace the defective goods. In the case of rejection, impossibility or failing of supplemented performance the customer may lower the price or negotiate the contract. Higher costs for supplemented performance arising from the fact, that the customer moved the goods to a place other than his primary location will be charged. Warranty is limited to the pump itself. In no event will be liable to the purchaser, or to any user of Estrad BV products, for any damages, expenses, lost revenues, lost savings, lost profits, or any other incidental or consequential damages arising from the purchase, use or inability to use Estrad BV products, even if Estrad BV has been advised of the possibility of such damages. The customer is solely responsible for a standby unit in case of malfunction.

1.3 The Customer shall be obliged to check the delivered goods, also for product reliability, immediately and notify the supplier in writing of any discrepancies. Concealed damages have to be reported immediately after detection. The customer has to report transport damages to the carrier within 24 hours after delivery. No observance of due diligence will void the customers claim warranty.

1.4 Furthermore we are not liable for consequences resulting from not intended operation, handling and maintenance of the goods by the customer or his subsidiaries, particularly for consequences resulting from thermal, chemical, electrochemical or electrical effects, as well as infringements to the manual. The same applies, if the damage results from intervention or instructions by the customer, which are not affirmed by us.

1.5 Our liability for gross negligence is limited to claims arising from injuries of life, body and health, to claims from Product Liability Code as well as claims from culpably breach of important contractual duties, which compromise the purpose of the contract. Incidentally, our liability for gross negligent infringement of essential contractual obligations is limited to the typically incurring damages, which were predictable when the contract was concluded. Generally the customer takes full responsibility for damages arising from inappropriate operation of the goods. When returning any goods, the customer has to care about break-proof packing. The customer is liable to the full extend for damages arising from an inappropriate packing.

1.6 Warranty claims against us are limited to 1 year after delivery of the goods to the purchaser. The same applies for claims of compensation for whatever legal ground. The restriction for the period of limitation does not apply for fraudulent concealment of a defect, for claims based on the product liability code as well as damages arising from injuries to life, body and health and for damages, which result from intention or coarse negligence.

1.7 If our investigations or repairs on a defect, claimed by the customer, turn out to be coarsely negligent, we reserve to ask an adequate compensation for our investigations and/or repairs. The customer is entitled to refuse an essential repair and may request the return of the pump. Basically, we ask a costs compensation, if the inspection of a defect turned out to be caused by the customer.

### **2. Spare parts**

Our obligation for stocking/delivery of spare parts is limited to a period of 5 years after delivery. The prices of our price list apply for spare parts.

### **3. Disposal**

We offer free disposal and recycling of all our products covered by the "Electrical and Electronic Equipment Act", which have been delivered after 2005, August, 13th within Germany. If the customer decides to arrange the disposal himself, he accepts the duties according the legal requirements on his own expense and indemnifies us from the take-back obligation stated in § 10 section 2 of the "Electrical and Electronic Equipment Act" and coherent claims of third parties.

4. The manufacturer is entitled to initiate hard- and software modifications of the product without notification, as long as operation, reliability and quality of the pumps were improved. No claims can be made, when e. g. design, functionality or power of the pumps were changed fundamentally. It is assured, that the guaranteed specifications remain unmodified.

#### **CE-Manufacturer's declaration**

The manufacturer ensures and declares that the products of the BLUE ECO PUMP series are in accordance to the following EWG regulations, when installed and used according the manual:

Machine (98/37/EG)

Electromagnetic Compatibility (89/336/EEC)/(73/23/EWG (95)

EN ISO 12100 Norm

EN 61000-6-2 Electromagnetic Compatibility

EN 61000-6-3 Electromagnetic Compatibility

EN 60335-1:2002 Household and similar electric devices

EN 60335-2-41:2003 Household and similar electric devices; typical requirements for pumps.

EN 60335-2-55:2003 Household and similar electric devices; typical requirements for electrical devices like used in tanks and (garden) ponds.

EN 50366:2003 Household and similar electric devices. Electromagnetic fields. Procedures for evaluation and measurement.

EN 55014-1:2006 Electromagnetic compatibility. Requirements for household devices, electric tools and similar devices; emissions.

EN 55014-2:1997 Electromagnetic compatibility. Requirements for household devices, electric tools and similar devices. Immunity; product group standard.

#### 3.1. Manufacturer

Estrad BV

Westeinde 46

7711 CL Nieuwleusen

#### 3.2. Production

All BLUE ECO PUMP series pumps and accessories are made in Netherlands and China.

Dear customer,

Thank you for choosing BLUE ECO pumps. This pump has been developed under the newest technology available with the most modern and reliable parts. Blue Eco pumps use True Sine Wave technology to provide the most energy efficient technique. Please read this manual carefully before using the pump.

#### **Symbols**



**CAUTION – HIGH VOLTAGE  
IGNORING THIS INSTRUCTION MAY HARM USER AND/OR ANIMALS.**



**CAUTION  
IGNORING THIS INSTRUCTION MAY DAMAGE THE PUMP AND/OR OTHER DEVICES ATTACHED.**

#### **Not intended use**

This manual is intended to give you brief information about the device. The user, installer or maintenance personal, is solely responsible for the strict adherence of all instructions made in this manual. The BLUE ECO was manufactured according state-of-the art technology and current safety regulations. Nevertheless this device may involve risks for life and physical condition if not used as intended or if safety regulations were ignored. If not used as intended, our liability expires as well as the general operating license. Children, youth below an age of 16 as well as persons who may not recognize possible risks or who are not familiar with this manual must not use the device for safety reasons. Please keep this manual safe and hand out in the case of change of proprietor. The combination of water and electricity may severely harm life and physical condition if the device was not connected properly or used inappropriate.



Do not use the device as long as persons remain in the water! Unplug all devices in the water before touching the water! Check the specification of the mains against the electrical specifications on the package or the label of device. Make sure the device is connected to a fault current detection switch with a fault leakage below 30 mA (DIN VDE 0100T739) Use the device only if plugged into a wall plug installed according to regulations).

Keep the power plug and all connections dry! Install cables dry and save to avoid damage.



### **DO NOT CUT OR TRIM THE CABLE OR PLUG OF THE DEVICE; CLAIMS AND WARRANTY EXPIRE IMMEDIATELY!**

Only use cables, adapters, installations, extension cords or power cables which are designed for outdoor use (DIN VDE 0620) and with a proper cable diameter. Do not pull or carry the device on the cables! In the case of a defective cable or housing, the device must not be used! Protect cables and accessories against heat, oil, UV light and sharp objects. The manufacturer cannot be held liable for damages resulting from unintended or inappropriate use or negligence of the user or installer. Damages to the power plug or the housing remains the device unusable. Repairs are impossible due to the fact that the cables were cast into the housing. Keep the connectors dry. In the case the connector got wet or humid it must be rinsed in demineralised water and must be carefully dried by a trained service person.



Generally the pump must be cleaned carefully before put out of operation. At return of service check clearance of the impeller. If the impeller cannot be moved the pump must be disassembled and cleaned. DO NOT unplug the power plug while operating the pump and the controller. This may result in severe damage of the internal electronics and dangerous hazards due to grounding problems. The controller must be connected to a safety fault current detector (30mA) and a properly installed wall plug. Do not modify or replace any cables. Electric installations on garden ponds must be in accordance with national and international regulations, guidelines and engineer standards. Never open the housing of the device or attached parts if not explicit stated in the manual .Use original spare parts and accessories only. Repairs must be executed by trained service persons only. DO NOT pump any liquids beside water. In the case of questions or problems, for your own safety, contact trained service persons.



Unplug the pump from main power before service and/or maintenance!



### **Applications**

The BLUE ECO pump was designed for fresh-, brackish- or salt water, or other low viscosity liquids which are neither explosive nor aggressive or oily. The pump may be used for clean water and in a limited way also for contaminated water. The pump is not intended for water with coarse debris. Particles should not be larger than 0.8 mm. Basically the pump is intended for use with „clean water“ without solid particles which may damage the bearings, like, for example sand and pyrolusite after the treatment of ponds with potassium permanganate. Warranty does not apply for damages resulting from above described particles. The bearings of the pump are milled spirally to evacuate particles larger than 0.8 mm. The bearing plate contains enough space for a filter. The filter must be cleaned regularly regardless the degree of soiling. A special amount of water is flushing the pump housing to ensure long term operation of the pump. To decrease the flow rate in the housing, perfectly close the plate and adjust to the smallest dot on the plate. Now the bearing lubrication by water is very low.

The BLUE ECO Pump is generally used for filter systems of ponds or pools and /or for brooks and cascades. The pump is not self-priming, so for use above the water surface a check valve must be installed to the pump's inlet. In this case the pump must be water filled before operation.

**Pre-filter example**



**Intended use**

Liquid temperature: 0 to +40°C.

Environmental temperature: from 0 °C to max. +50 °C

Maximum operation pressure: 2 bar (20 meters water column)

**Features**

Model	Marine	240	320	500	900	1500	2200
<b>Voltage</b>	110/220 Volt 50/60 Hz						
<b>Induced power</b>	P1 240 watt	P1 240 watt	P1 320 watt	P1 500 watt	P1 900 watt	P1 1500 watt	P1 2200 watt
<b>Nominal power</b>	P2 216 watt	P2 216 watt	P2 280 watt	P2 473 watt	P2 851 watt	P2 1490 watt	P2 2068 watt
<b>Efficiency</b>	90%	90%	90%	90%	94,6%	94,6%	94,6%
<b>External controller</b>	yes	yes	yes	yes	yes	yes	yes
<b>IP68</b>	yes	yes	yes	yes	yes	yes	yes
<b>Cable</b>	10m	10m	10m	10m	10m	10m	10m
<b>Digital display</b>	yes	yes	yes	yes	yes	yes	yes
<b>Dry &amp; wet application</b>	yes	yes	yes	yes	yes	yes	yes
<b>Inlet</b>	40/50mm	2½" male thr.	2½" male thr.	2½" male thr.	2½" male thr.	2½" male thr.	2½" male thr.
<b>Outlet</b>	50/63mm	50/63mm	50/63mm	2" male thr.	2" male thr.	2" male thr.	2" male thr.
<b>Weight in kg</b>	3	3	4	7	7,95	14,9	15,9
<b>Warranty pump</b>	2 (4)	2 (4)	2 (4)	2 (4)	2 (4)	2 (4)	2 (4)
<b>RPM</b>	300 - ±2850	300 - ±2850	300 - ±3200	300 - ±2850	300 - ±3000	300 - ±3400	300 - ±3400

For more specification refer to the type plate.

Model identification: The Blue Eco 240 and 320 Watt use the same model pump, the controllers are different. This means that a model 240 can be controlled by a 320 watt controller and vice versa. Model 500 uses the same pump as model 900. The controller determines the model. In the future you can decide to buy a 320 controller for a model 240 or a 900 controller for a 500. Model 1500 uses the same pump as model 2200.

**Noise emission:**

The noise emission of the pump is within the limits of the machine guidelines of the European Council.


# Short Instruction

The pump is driven by a DC-motor and, therefore, equipped with a controller. Check the following sequence when starting the pump:

- 1.) Flush the pump thoroughly to remove any residual disinfection fluids!!!
- 2.) Install the pump below the water surface (Pump is not self-priming).
- 3.) Interconnect pump and controller using the attached controller cable (check pins).
- 4.) Check the main power switch is set to „0” (OFF).
- 5.) Connect the mains cable to the controller and plug into a wall plug.
- 6.) Switch on the controllers power switch.
- 7.) Press the RUN button (pump will start after a 10 seconds delay)



Coded plug, fits only one way

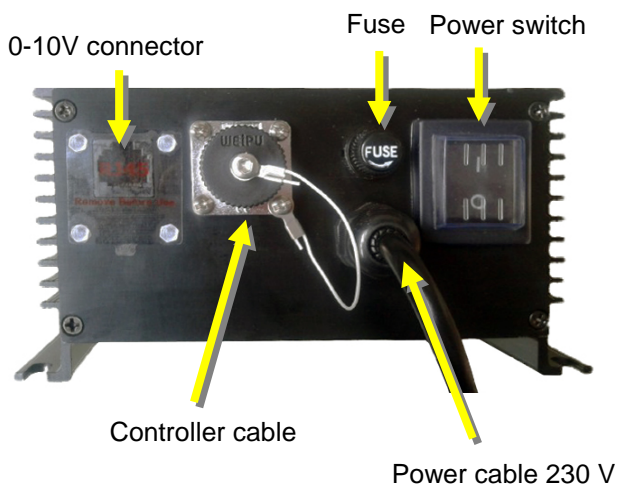

Key	Function
	Switching the pump on and off
	RUN: to start the pump
	STOP: to stop the pump
	INCREASE PUMP POWER (when running) <i>Higher flow-rate, more energy consumption</i>
	DECREASE PUMP POWER (when running) <i>Lower flow-rate, less energy consumption</i>

After switching on there is a 10 second delay countdown. After that, the pump slowly increases speed to the previous value set, while the flow rate is also updated.

When switched off, the pump stops immediately.

▲ / ▼ keys:



Use the ▲ / ▼ to set the power of the pump. This will also change the flow (l/h) and the energy consumption (W) and the RPM.  
**The power can be set between 10 and 240/320/500/900/1500/2200 watt (depending on the model).**

The pump will always run on the set power.

After a power break the pump will automatically return to the last setting.



**INSTALLING**

If used in dirty water the pump requires a pre-filter as mentioned earlier in the manual. We recommend the use of 2- or 3/3 unions, for easy disassembly for pump cleaning or maintenance.



**Example 1**  
**Suction side:** 2-part unions with rubber ring for easy sealing (art.nr. AG287: 2½" x 63mm, see picture). **Pressure side:** a PVC 3 part Union (Ø63mm) can be glued on the pressure side. **Do not glue straight socket fittings on the pump as this makes disassembly extremely complicated!** The use of pieces of flexible is recommended to prevent vibration and resonation. (see example 2).



**Model 240/320**



**Model 240/320**

**Example 2:** Flexible fittings provide a vibration free performance and are very easy to remove. **Suction side:** a solvent ring 90mm x 2½" fem. thr. (art.nr. AB367) can be fitted with some liquid Loctite 5331 (art.nr. AK142) or Teflon tape. On this ring a flexible reducer fitting (90mm/3" to 63mm/2") can be fitted (art.nr. FC146). On the **pressure side** you can put a 63mm/2" flexible fitting (straight socket "FC122" or a 90° bend "FC172"). The rubber feet underneath the pump will provide a complete vibration free performance.



**Model 500/900/1500/2200**

**Example (Model 500/900/1500/2200)**  
**Suction side:** 2-part unions with rubber ring for easy sealing (art.nr. AG287: 2½" x 63mm, see picture). Option 2: a solvent ring 90mm x 2½" fem. thr. (art.nr. AB367) can be fitted with some liquid Loctite 5331 (art.nr. AK142) or Teflon tape. On this ring a flexible fitting (90mm to 110/90/63mm) can be fitted (art.nr. FC146). For the **pressure side** you can use a 3/3 PVC union Ø63mm x 2" fem. thr. (art.nr. AB246) with teflon or Loctite 5331 (art.nr. AK142), or a or a 2/3 union 2" x 63mm (AG279) that seals with the rubber ring.



## Assembly

### Attention:



Read the manual carefully before installation of the pump. Damages resulting from non-observance are not covered by warranty.

When unpacking the pump, check the parts for completeness and damages. Damages detected must be advised to the supplier within 8 days after purchase. It is possible that the pump is moist or wet after unpacking due to the fact that the pump had been tested before leaving the manufacturer. Before wrapping, the pump has been treated with a biodegradable disinfectant to eliminate possibly existing germicides. Therefore the pump must be rinsed thoroughly before operation. Check the pump for damage before putting into operation. A damaged pump must NOT be operated. Immediately contact your supplier! Putting the pump into operation in spite of visible damages will void warranty and manufacturers liability.

Unplug the pump from the mains and make sure it cannot be operated. The pump must not be connected to the mains during the entire installation process. Never put your hands or fingers into the openings of the powered pump to prevent injuries.


### 1.1. Controller

The controller unit can be installed indoor and outdoor. Do not expose the controller to direct sun light or heat (powerful lamp, radiator). Be sure there is enough air circulation. Keep all sides of the unit free for at least 10cm.

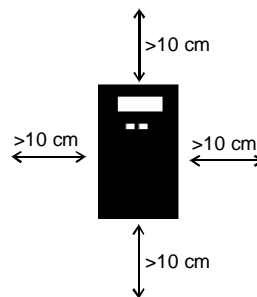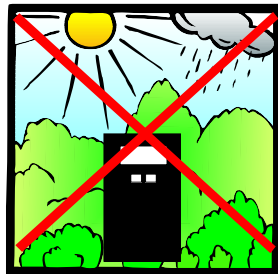

### 1.2. Pump

The pump must be installed in a horizontal position. The pump must rest firmly on a flat and even surface. Install the intake line to the pump's inlet (1) (see fig.). Make sure the pump can evacuate air from the outlet (2). At best, install the pump below the water level (3). The pump may be installed inside (4) as well as outside (dry) of the water (5). If operated outside, check for sufficient air circulation. Do not expose the pump to direct sunlight. Install the pump as close as possible to the location of water withdrawal, i. e. the intake line should be as short as possible. If the pump was operated above the water level (6) install a check valve to the pump's inlet (7). In this case, the intake line of the pump must be filled with water. This kind of installation exposes the pump to dry run damages if the check valve doesn't work correctly. Damages resulting from running dry are not covered by warranty.

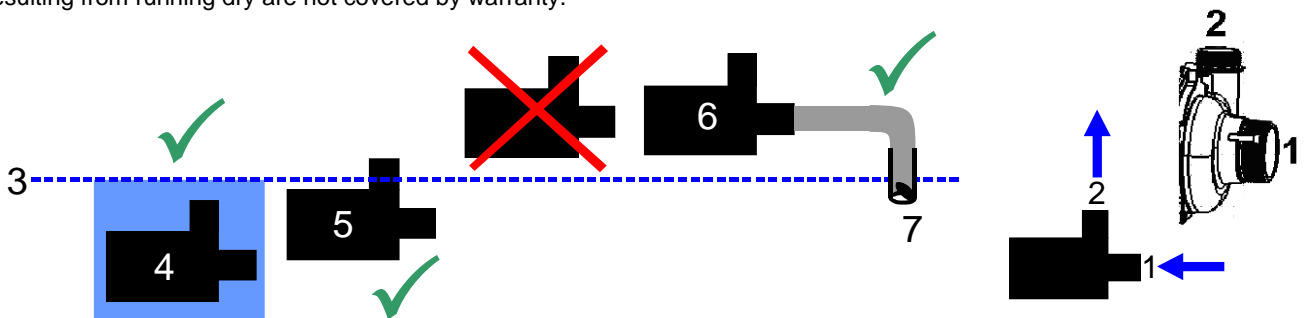

### 1.3. Suction side (pump inlet)


If there is not enough water, due to the resistance of the intake line the pump needs a lot of power and the electronics will heat up in the long run. The electronic circuit protects itself by powering down. If the flow rate of the pump decreases within a couple of hours or days, the reason might be the too high resistance of the intake line, especially on warm days.

Try to enlarge the pipe diameter after the pump to a sufficient size for more pump capacity and lower energy consumption.


It is not allowed to let the pump run dry. It will lead to irreparable damage to the shaft and silicium carbide bearings. Especially when the pump is mounted above the water surface level (with a check valve) you have to be very careful about

this. When used in dirty water the use of a (previously described) pre-filter is necessary. The use of flexible fittings or unions is recommended for easy dismantling for cleaning and/or maintenance.

The pipe work must be fitted in a way that possible mechanical stress (due to changing temperatures) have no negative influence on the pump house. Any tubing on the intake line must be 100% air tight. If a hose was used as intake line, make sure the hose is in accordance to the requirements for intake hoses. It is very important that the intake line on the pump head is primarily straight (min. 5 times the diameter of the inlet). This will increase the power of the pump, due to the laminar water flow on the impeller. Avoid short 90° bends, try to use long swept bends (less pressure loss).

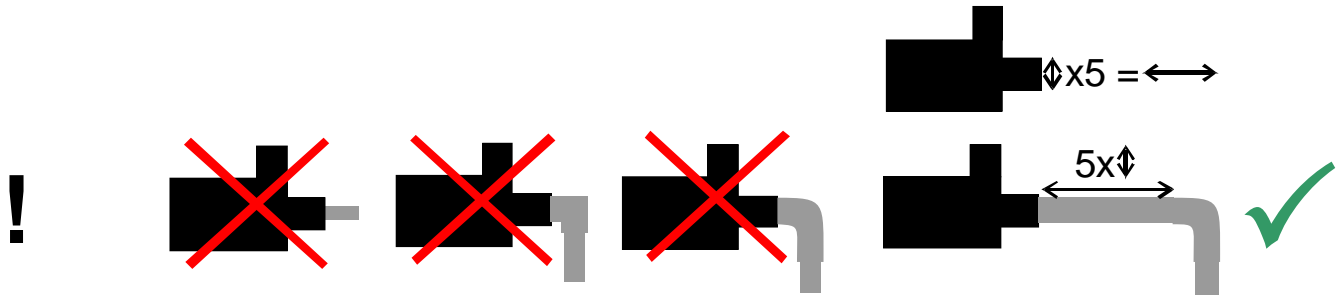

If the intake line is longer than 10 meters or the intake height is higher than 1 meter, the diameter of the intake line must be 1 or 2 sizes bigger than the inlet of the pump.

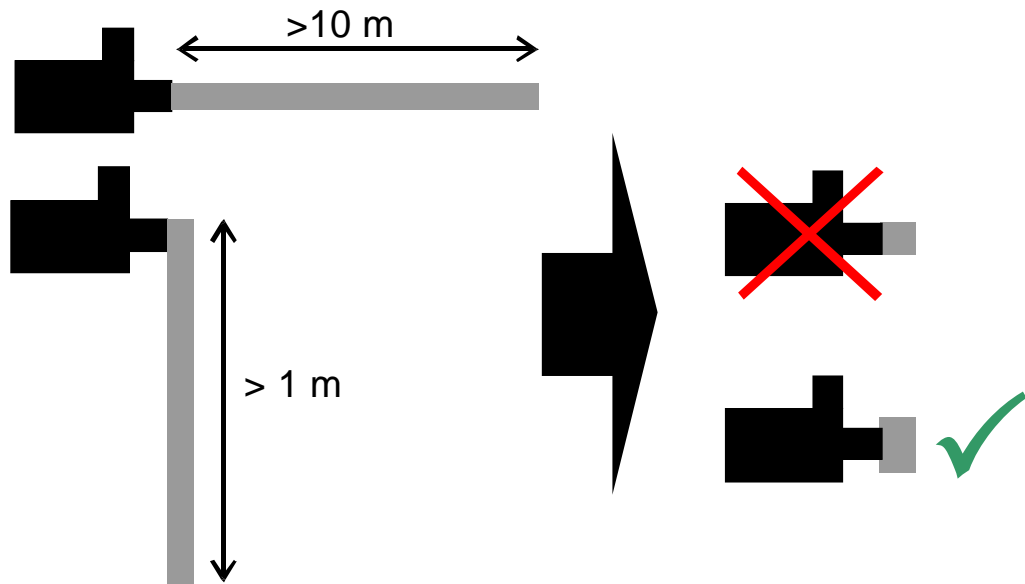


**Suction side:**

2 1/2" male threaded / Ø110mm outer diameter (dependant of model). Suction line must be at least Ø75mm.


**1.4. Pressure side (pump outlet)**

The pressure side must be at least the same diameter like the diameter of the pump's outlet to avoid pressure drop, too high flow rates and noise to a minimum. At best increase the diameter of the tubing directly behind the pump to increase flow rate and save energy.

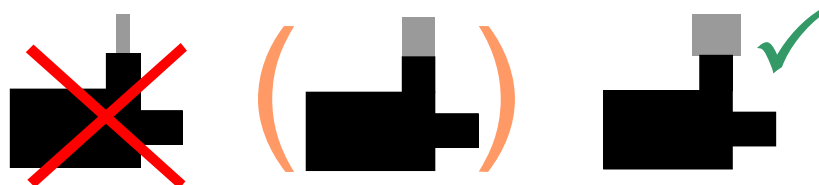

Avoid short 90° bends, try to use long swept bends (less pressure loss).

If there is a chance of a blocked pump (e.g. closed ball valve), a bypass must be installed to the pressure line to ensure some water flow through the pump.

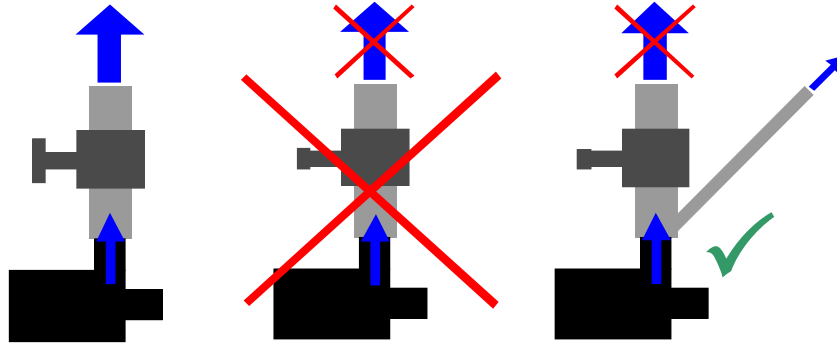

**Connection pressure side:**  
50/63mm or 2" male threading (dependant of model)

**Flow**

Maximum flow – volume in pipe diameter:

Pipe diameter [mm]	Optimal flow for minimum pressure loss[l/h]
50	8.000
63	14.000
75	20.000
90	29.000
110	43.000
125	55.000

**Electrical connections– initial startup**

Compare voltage and frequency imprinted on the specification plate to the specifications of your mains voltage. The one who is responsible for the installation must check, if the voltage grounding was according to specifications. It's also important to check, if the installation was secured by a sensitive fault current detection switch (30mA - DIN VDE 0100T739). The mains fuses should be stronger than the pump fuses.

**Fuse:**

Power	Pump fuse	Mains fuse
240Watt	1,2 ampère	4 ampère
320Watt	1,6 ampère	4 ampère
500Watt	2,5 ampère	6 ampère
900Watt	6 ampère	10 ampère
1500 Watt	10 ampère	16 ampère
2200 Watt	16 ampère	16 ampère

**Overload protection**

The Blue Eco pumps were equipped with electric and electronic fuses for overload protection. If the impeller blocks, the motor stops. When blockage has been cleared the pump can be restarted again or it restarts itself where applicable.

## General operation

Operation and function of the display.

### Attention:

The imprint on buttons and display may differ from the text in the manual, but the functions remain the same.


## Keys & Display



1	LCD Display
2	Run LED: This led is on during pump performance
3	Stop LED: This led is on when the pump has stopped
4	Increases the RPM
5	Decreases the RPM

The other buttons are not in use unless you activate a code (see “Code” chapter in this manual).

## LCD Display

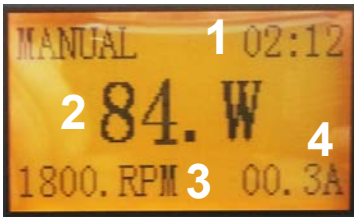

The display shows the following data:

1. Hour counter: shows how many hours the pump has been running.
2. Wattage: the current energy consumption
3. RPM (Rotations Per Minute).
4. Amperage


## External connections

The external connection with RJ45 connector can be used to change the RPM. A 10volt signal triggers the maximum RPM ( $\pm 2800$ ). Please note: the 0-10volt signal cannot trigger a RPM setting lower than the current value. Example: the pump is running at 1500 RPM and the 0-10v connector sends out a low voltage that is below the 1500 RPM, nothing will happen. The moment the outgoing signal is higher than the 1500RPM, the 1500 RPM will increase. Use pin 2 and 5 of the RJ45 connector.

### Signal port

- 1 = Source current of 5 Volt
- 2= DC control current 0-10 volt
- 3= Program inlet TXD
- 4= Program in Program inlet let RXD
- 5= GND
- 6= NC
- 7= NC
- 8= NC

0-10V connection

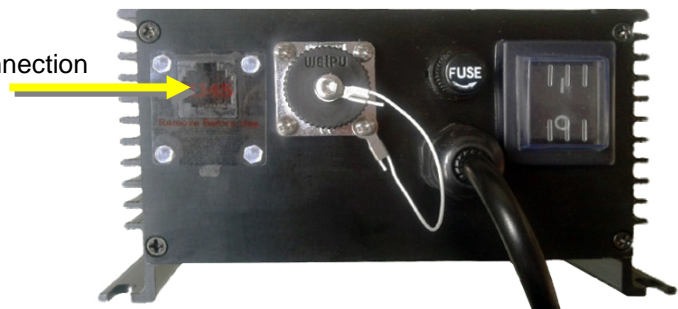

## Error messages

When there are errors or changes occur the output to the pump will be stopped and the display will give an ALERT message. The 3<sup>rd</sup> line in the display will indicate the error code. This is a list Wanneer er fouten ontstaan of veranderingen plaatsvinden zal de output naar de pomp gestopt worden en komt er ALERT in het display te staan. De derde regel geeft de foutcode weer hieronder volgt een index met fout codes

Over Voltage	The DC voltage is higher than 400V, which may happened when pump speed down quickly without load.
Low Voltage	The DC voltage is lower than 220V, which may happened on the time of the power just on or off.
Over Out Current	The current of pump get too big suddenly, and controller stop output to protect the pump.
P 2 P Short Circuit	There is a short circuit between two output phases.
P 2 E Short Circuit	There is a short circuit between phase and earth.
Data Error	The data in eeprom get wrong, should initial all data to recover this error.
All Data Initial	All data in eeprom was initialized.
User Data Initial	User data in eeprom was initialized.
Key Data Modified	Some important data in eeprom was changed.
CT U Error	The current transducer on U phase is wrong.
CT V Error	The current transducer on V phase is wrong.
Power Supply ERR	The input power is wrong.
IPM Overheating	The temperature of controller gets too high.
Over In Current	The current of input gets too big.
Pump Blocked	The pump is blocked and controller can't start it.
Cable Error	The output cable connection is wrong.
Unauthorized	The software is unauthorized.

## Controller diagram

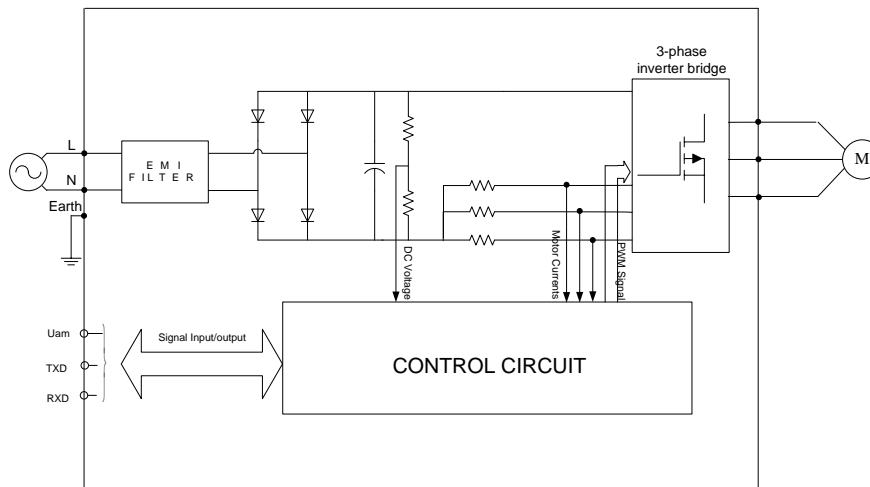


Diagram of Pump Controller

## Maintenance

Unplug the pump before maintenance. Blue Eco series are basically treated as low maintenance. In normal case maintenance is restricted to impeller checking for clogging. Remove potential objects from the impeller with a thin, spiky tool. A reduced delivery rate of the pump is generally caused by waste in the impeller. In the case of calcification (especially when used in salt water) remove the scale with a weak acid like vinegar. Avoid sidewise pressure to the impeller or the rotor. The pump can be completely disassembled for cleaning. The rear bearing can be easily removed by unscrewing of the bearing plate counter clockwise. Use an appropriate tool to move the shaft to the front, so the impeller unit can be removed much easier. In fresh water applications, calcification generally occurs before and after a complete pond filling. The dissolved lime scale will precipitate within 2 or 3 days.

Use a M6-Allan key to remove the titanium screws (1), which mount the pump head to the motor housing. Now, the complete pump head can be removed. If necessary, remove the complete impeller from the 240/320 unit by pulling out the shaft after removing the O-ring. For the models 500/900/1500/2200 you need to remove the nut on the impellers front. This will reveal 3 screws that also need to be removed. You can now remove the shaft.

Be very careful, because the impeller is fixed to its position by a strong magnet. Releasing the shaft occasionally may hit the bearing resulting in severe damage. **Do not underestimate the power of the magnets. If you lose grip the shaft will hit the rear bearing, which most likely will result in severe damage and, thus, in expensive repair costs...**

After maintenance reassemble the pump in reverse order. Do not over tighten the screws, due to the fact that the threads in the case are made from plastic. The O-rings are made from silicone or EPDM/Viton, depending on the application. As spare parts, only use new and original O-rings with the proper thickness and hardness. Used O-rings slowly alter their hardness. Always replace with new parts if disassembled to prolong the life time of the pump. Silicone and EPDM/Viton O-Rings are resistant against acids and bases.




### Bearings

The bearings of the 240 and 320 are based on silicium/ carbide (the hardest material after diamond). The front and back bearing are equal and can be switched. At normal use they will last for life. Both bearings sit in a EPDM O-ring that will adsorb vibrations and keep the bearing in a exact position. The shaft of the Marine/240/320 is made of wolfram and also acts as a bearing. The 500/900/1500/2200 Watt model have a flat silicium carbide slip bearing that will keep up with the axial and radial forces. These bearings are exchangeable. These bearings are based on a wet sealant that means that the pump has no seals that can leak. The shafts of the 240/320 watt are made of an improved wolfram that is seawater resistant. The shafts of the 500/900/1500/2200 Watt are made of 100% pure titanium of the highest class G5.


### Power outage + auxiliary power supply

After a power out the pump automatically restarts itself and the controller resets to the speed previously set. The pump can be with a common auxiliary power supply, when equipped with a rectifier. The pump can be used with a common UPS, when equipped with a rectifier.

### Troubleshooting

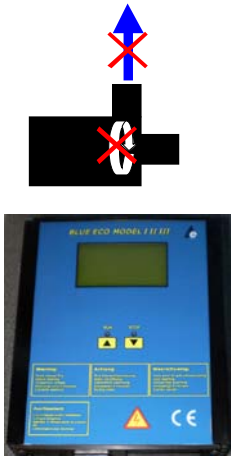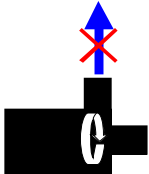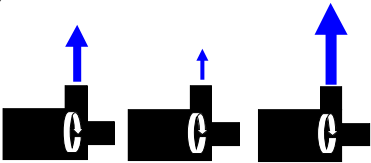MALFUNCTION	POSSIBLE CAUSE	SOLUTION
1) The Pump delivers no water. The Motor is not running. The display is not lit.  	1) The Pump delivers no water. The Motor is not running. The display is not lit. 1) Low mains voltage 2) Connector not properly seated 3) No proper connection from pump to controller 4) Fault current protection switch triggered 5) Impeller clogged 6) Pump electronics or motor defective 7) Motor fuse switched off motor	1/2/3) Check mains and power plug 4) Reset fault current protection switch, If it's triggered again check the impeller for blocking 5) Check Impeller for blocking. Probably the armature must be removed also to clean the housing 6) Contact service 7) Motor indicates an error. Check the inlet and the housing for clogging
2) The Pump delivers no water. The motor is not running.  	1) Pump takes air in 2) Air bubble in impeller housing 3) Too much head pressure in the system 4) Pump not filled with water 5) Inlet tube or check valve clogged 6) Delivery height exceeded	1/2) Repeat some start up's. Fill pump and inlet tubes with water. 3) Check tubes and valves for clogging. Valves are closed? 4/5) Check 6) Contact service
3) The volume of water delivered is limited	1) Refer also to 2) 2) Impeller worn or damaged 3) Electronics over heated 4) Low speed	1) Refer to 2) 2) Contact service 3) Bad ventilation, when built into cabins or exposed to sunlight or high environment temperature. Check inlet. 4) Set speed to maximal power
4) Erratic fluctuations  	1) Impeller rotation blocked 2) Voltage out of range 3) Motor damage	1) Remove solids 2) Adjust voltage as required 3) Contact service

**Parts list**

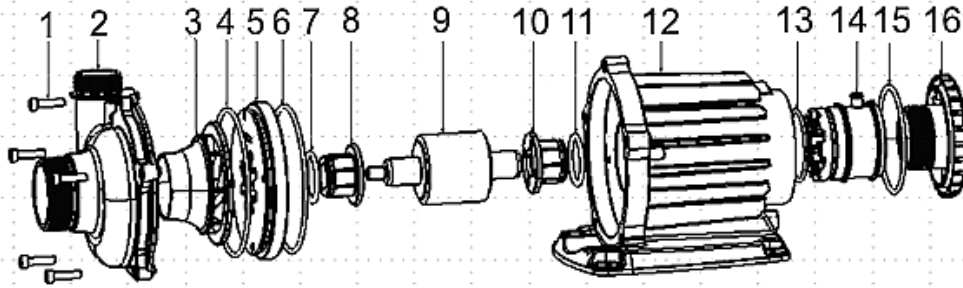

1	Titanium screws	5	Front bearing seat	9	Shaft	13	Bearing O-ring
2	Pump head	6	O-ring bearing seat	10	Rear bearing seat	14	Rear bearing lock
3	Impeller	7	Bearing O-ring	11	O-ring rear bearing seat	15	O-ring rear plate
4	Silicone O-ring	8	Silicium carbide bearing	12	Motor housing	16	Rear plate

**Codes**

The controller has a few buttons that are not activated to keep the usage simple. These buttons can be activated through an optional code.

**What do these codes offer?**

After activating the codes the controller offers 5 different timers that can be independently programmed for e.g. different seasons. With these timers both the time as well as the RPM can be adjusted. Blue Eco pumps model 900 and up also activate a dry-running protection that protects the bearings and a "Cruise Control" option.

This code can be purchased via e-mail: [info\\_estrad@me.com](mailto:info_estrad@me.com)

In order to get these codes you need to write down 2 serial numbers from the controller display. How to obtain these serial numbers:

1. Turn on the controller without the pump cable.
2. After the start up the display shows "0 RPM".
3. Press the "MENU" button. Display shows "SYSTEM".
4. Press "ENTER" to activate.
5. Press "arrow up" button twice; the first serial number will appear (write this down)
6. Press "arrow up" button twice again; the second serial number will appear (write this down).
7. Send these 2 numbers via e-mail to [info\\_estrad@me.com](mailto:info_estrad@me.com)

You will receive an invoice. After the payment has been received you will get an e-mail with the activation codes and a manual how to use them. You also have access to the telephone helpdesk of Estrad for advice.

**Extended warranty**

When you send your service/warranty papers to [info\\_estrad@me.com](mailto:info_estrad@me.com) you can choose to extend your warranty from 2 to 4 years. You will receive an invoice. Once paid the extended warranty is valid. This extended warranty is only possible within 30 days after the pump purchase. Extended warranty after this period is possible after a pump/controller inspection through Estrad and will be charged separately.

**Service/Warranty card**

You need to check if your dealer completes the service card at the time of purchase and sends it out to Estrad. We can only guarantee a swift service if we have your service card. Warranty extension and upgrade codes cannot be supplied if we don't have your service card. By sending this service card in time you will be informed about updates through e-mail and you will be served fast for repairs and other issues. Telephone support is only possible if we have this card.

A pump that is send to us without having the service card in our system must be registered first which costs time. We cannot guarantee 24 hours service if we do not have the service card.