


CMT7118HR User's Manual

High-Speed CompactFlash Controller with External IDE

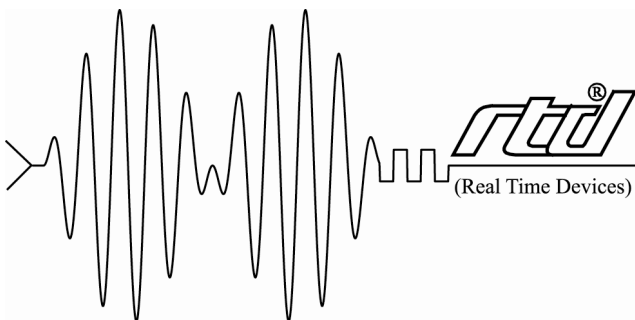

RTD Embedded Technologies, Inc.

"Accessing the Analog World"®

BDM-610020040
Rev. A

ISO9001 and AS9100 Certified

CMT7118HR User's Manual



RTD EMBEDDED TECHNOLOGIES, INC.

103 Innovation Blvd
State College, PA 16803-0906

Phone: +1-814-234-8087
FAX: +1-814-234-5218

E-mail
sales@rtd.com
techsupport@rtd.com

Web Site
<http://www.rtd.com>

Manual Revision History

Rev A	Initial Release
-------	-----------------

Published by:

RTD Embedded Technologies, Inc.
103 Innovation Boulevard
State College, PA 16803

Copyright 2005 by RTD Embedded Technologies, Inc.
All rights reserved.

The RTD Embedded Technologies Logo is a registered trademark of RTD Embedded Technologies. dspModule, cpuModule, and utilityModule are trademarks of RTD Embedded Technologies. PC/104, PC/104-*Plus*, and PCI-104 are registered trademark of PC/104 Consortium.

Table of Contents

Introduction	5
Product Overview	5
Board Features	5
Recommended Cables	5
Physical Attributes	5
Getting Technical Support	5
Configuring the utilityModule	6
Connector and Jumper Locations	6
Connecting CompactFlash Drives	7
Connecting External Drives	7
External LED Connectors JP2 and JP5.....	7
Jumpers	8
PCI Configuration Options	8
Switch SW1 – PCI Slot Selector.....	8
Solder Blob B3 – Bus Master Control	8
Board Installation	10
Installing the Hardware	10
Static Precautions	10
Steps for Installing	10
Software Installation	11
DOS and Booting	11
Windows Support.....	11
Performing a Fresh Install of Windows 2000/XP or Windows NT 4.0.....	11
Linux.....	12
Other Operating Systems	12
Limited Warranty.....	13

Introduction

Product Overview

The CMT7118HR is a high-speed, PC/104-*Plus* EIDE controller. It includes two CompactFlash sockets, as well as an external EIDE connector. It is compatible with most operating systems, including Windows, Linux, and DOS.

Board Features

- Dual-channel PCI IDE Interface
- Supports up to 4 EIDE Drives in a PC/104-*Plus* system
 - Two CompactFlash sockets on the primary channel
 - Two external drives on the secondary channel (0.1" connector)
- CompactFlash sockets support +3.3V and +5V devices
- Interface decoded from PC/104-*Plus* bus
- Transfer rates up to UltraDMA133
- Drive activity LEDs with external connections

Recommended Cables

- 40-conductor or 80-conductor EIDE cable which can be used to connect an external drive (hard drive or CD-ROM drive) to the CMT7118.

Physical Attributes

- Size: 3.6"L x 3.8"W x 0.6"H (90mm L x 96mm W x 15mm H)
- Weight: 0.16 lbs (0.07 Kg)
- Operating Temperature: -40° C to +85° C
- Storage Temperature: -55° C to +125° C
- Controller Power Requirements:
 - Typical: 1.75 W @ +5 VDC

Getting Technical Support

For help with this product, or any other product made by RTD, you can contact RTD Embedded Technologies via the following methods:

Phone: +1-814-234-8087

E-Mail: techsupport@rtd.com

Be sure to check the RTD web site (<http://www.rtd.com>) frequently for product updates, including newer versions of the board manual and application software.


Configuring the utilityModule

The following sections contain information on configuring the utilityModule.

Please read this entire section before attempting to use the utilityModule.

Connector and Jumper Locations

The figure below shows the location of the connectors and jumpers on the CMT7118.

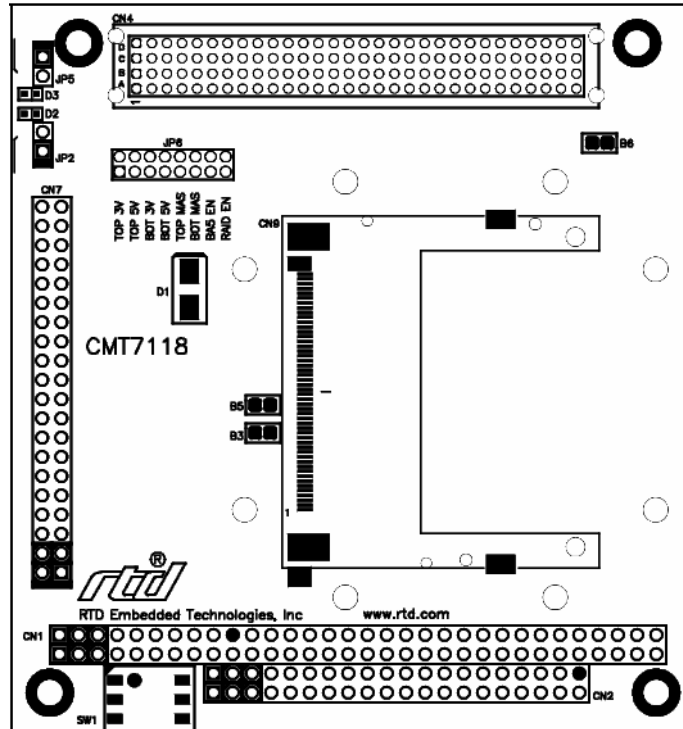

- CN1 – PC/104 XT Connector
- CN2 – PC/104 AT Connector
- CN4 – PC/104-Plus PCI Connector
- CN7 – External EIDE Connector
- JP2 – Primary Controller External LED Connector
- JP5 – Secondary Controller External LED Connector
- JP6 – Options Jumpers
- SW1 – PCI Slot Selection Switch
- B6 – Three PCI Master Selection

Connecting CompactFlash Drives

The two CompactFlash sockets on the CMT7118 are attached to the primary IDE channel. CompactFlash drives are installed by simply inserting them into the top and/or bottom sockets. The top socket features an ejector. To remove the CompactFlash drive, press the ejector button and slide the drive out of the socket. The bottom drive can be removed by pulling it out of the socket.

Retention bars are available for both the top and bottom socket. The retention bars mount to the PC board with screws, and prevent the CompactFlash drive from vibrating out or accidental removal. Please contact RTD Embedded Technologies for more information.

The CompactFlash sockets operate in True-IDE mode. This means that they appear to the operating system as a standard hard drive. However, this also means that they cannot be inserted or removed while the system is operating.

Note: Never install or remove any drive from the CMT7118 while power is applied to the system. The CompactFlash sockets are not hot-swappable.

Connecting External Drives

The External Drive connector (CN7) on the CMT7118 is attached to the secondary IDE channel. It allows two additional EIDE devices to be attached. They can be either additional hard drives, or CD-ROM drives. If more than one drive is connected, one of the drives must be configured as a master, and one as a slave.

There are two types of cables that are used for EIDE drives: a 40 conductor cable, and an 80 conductor cable. The 80 conductor cable adds a ground wire between each signal, and uses the standard 40 pin connectors. A 40 conductor cable can be used for speeds up to UDMA Mode 2 (Ultra ATA/33). An 80 conductor cable is required for higher speeds. The BIOS or operating system detects the type of cable that is attached, and selects an appropriate speed. The on-board CompactFlash sockets are configured in 80 conductor mode.

External LED Connectors JP2 and JP5

Two 2-pin connectors are provided for connecting an external drive activity LED. Current limiting resistors are included on the CMT7118. The value of the resistors is 150 Ohm, with a 5V supply. That provides a forward current of 20mA for an LED with a forward voltage of 2V. The connector pin descriptions are shown below.

Pin	Description
1	LED Anode
2	LED Cathode

Jumpers

Jumper JP6 configures the board. The configuration options are shown in the table below.

Label	Pin Numbers	Description
TOP 3V	1-2 (default)	Selects 3.3V or 5V to power the top CompactFlash socket. A jumper must be present in one of these positions. Most CompactFlash drives operate at 3.3V.
TOP 5V	3-4	
BOT 3V	5-6 (default)	Selects 3.3V or 5V to power the bottom CompactFlash socket. A jumper must be present in one of these positions. Most CompactFlash drives operate at 3.3V.
BOT 5V	7-8	
TOP MAS	9-10 (default)	TOP MAS selects the top CompactFlash socket as master, and the bottom as slave. BOT MAS selects the bottom socket at master and top as slave. A jumper must be present in one of these positions.
BOT MAS	11-12	
BA5 EN	13-14	Reserved. Jumper 13-15, or none.
RAID EN	15-16	

PCI Configuration Options

To install the CMT7118 into the stack, the PCI Slot Number must be configured correctly. This is done by the PCI Slot Selector located at SW1.

There are four possible PCI Slot Numbers (0 – 3). Each PCI device (PC/104-*Plus* or PCI-104) must use a different slot number. The slot number is related to the position of the board in the stack. Slot 0 represents the PCI device closest to the CPU. Slot 3 represents the PCI devices farthest away from the CPU.

Note: In a PC/104-*Plus* or PCI-104 system, all PCI devices should be located on one side of the CPU board (above or below the add-on cards). The CPU should not be located between two PCI devices.

Switch SW1 – PCI Slot Selector

The PCI Slot Number can be configured as follows:

Switch Position	PCI Slot Number
0	Slot 0 (closest to CPU)
1	Slot 1
2	Slot 2
3	Slot 3
4	<i>Undefined</i>
5	<i>Undefined</i>
6	<i>Undefined</i>
7	<i>Undefined</i>

Solder Blob B3 – Bus Master Control

When the PC/104-*Plus* Specification was first introduced, it only allowed for three PCI add-on cards to be bus masters. Version 2.0 of the PC/104-*Plus* specification was released in November

2003. This version of the specification (which the CM17407 is designed for) adds support for all 4 PCI slots to be bus masters.

For compatibility with CPUs designed for the older PC/104-*Plus* Specification, the CM17407 offers a configuration solder blob at location B3. If this solder blob is open (the default), the board supports bus mastering in all 4 PCI slots. If it is closed, the board will work in a 3 bus master configuration.

Note: The CMT7118 comes with solder blob B3 open by default. This should be compatible with most PC/104-*Plus* CPUs. There is no need to change this blob unless you are having compatibility problems with your specific CPU.

Board Installation

Installing the Hardware

The CMT7118 can be installed into a PC/104-*Plus* or PCI-104 stack. It can be located above or below the CPU, as long as all PCI add-on cards are on the same side of the CPU.

Static Precautions

Keep your board in its antistatic bag until you are ready to install it into your system! When removing it from the bag, hold the board at the edges and do not touch the components or connectors. Handle the board in an antistatic environment and use a grounded workbench for testing and handling of your hardware.

Steps for Installing

1. Shut down the PC/104-*Plus* system and unplug the power cord.
2. Ground yourself with an anti-static strap.
3. Set the PCI Slot Selector as described in the previous chapter.
4. If any other PCI add-on cards are to be included in the stack, be sure that their PCI slot numbers are configured correctly (Slot 0 for the board closest to the CPU, Slot 1 for the next board, etc).
5. Install CompactFlash module(s) into the CMT7118 if needed.
6. Line up the pins of the CMT7118's PC/104 and PC/104-*Plus* connectors with the corresponding bus connectors of the stack. Make sure that both connectors are lined up.
7. Apply pressure to both bus connectors and gently press the board onto the stack. The board should slide into the matching bus connectors. Do not attempt to force the board, as this can lead to bent/broken pins.
8. Attach external drive(s) to the CMT7118 if needed.
9. If any boards are to be stacked above the CMT7118, install them.
10. Attach any necessary cables to the PC/104-*Plus* stack.
11. Re-connect the power cord and apply power to the stack.
12. Boot the system and verify that all of the hardware is working properly.

Note: If multiple PCI devices are configured to use the same PCI slot number, the system will not boot.

Software Installation

DOS and Booting

A BIOS extension is used to allow the system to boot to the CMT7118, and to provide support under DOS. The BIOS extension is loaded at boot time, and normally doesn't require any user intervention. Any drive that is attached to the CMT7118 appears as a normal DOS hard drive, and can be used as a boot device.

Windows Support

Drivers are required to use the CMT7118 under Windows NT 4.0, 2000, or XP. They are provided on the CD that ships with the board, and are available from the RTD website (www.rtd.com). For further information on installing the drivers, review README.TXT in the driver archive file.

Performing a Fresh Install of Windows 2000/XP or Windows NT 4.0

When performing a fresh install of Windows 2000/XP, or Windows NT 4.0, the following instructions should be followed so your system will be able to boot to a device attached to the CMT7118. Note that the installation procedure requires a floppy disk that contains a copy of the CMT7118 Windows driver.

Copy the Windows device driver from the CMT7118 CD-ROM on to a floppy for use with the installation procedure, and follow these installation steps:

1. Power off the system. With the CMT7118 installed in the system, connect a disk drive to the CMT7118 external IDE connector (CN7) or one of the Compact Flash sockets. If your CPU does not have an integrated IDE controller, also cable a CD-ROM drive to the CMT7118's external IDE connector. Power on the System.
2. Insert a Windows NT/2000/XP CD into the CD-ROM/DVD drive.
3. At the beginning of text mode installation, press F6 for third party SCSI or driver installation. Press "s" when prompted to specify an additional device, and insert a floppy disk with the Windows device drivers. Press 'Enter' and select 'Silicon Image Sil 0680 ATA/133 Controller'.
4. Press 'Enter' to continue text mode setup.
5. Follow the setup instructions to select your choice for partition and file system.
6. After setup examines your disks, it will copy files to Windows 2000 installation folders and restart the system. The setup program will continue and finish the installation after restart.
7. Wait until Windows 2000 finishes installing devices, regional settings, networking settings, components, and final set of tasks, reboot the system if it is required.
8. To verify the controller was installed correctly for Windows 2000/XP:
 - a. Right click on 'My Computer' icon, select 'Properties', left click on 'Hardware' tab, and then on 'Device Manager' button.

- b. Double click on 'SCSI and RAID Controllers', If there is no yellow '!' or '?' in front of 'Sil Sil 0680 ATA/133 Controller', the driver is started correctly.
- c. To view information about the devices attached to the controller, right click the 'Sil 0680 ATA/133 Controller' and select Properties from the context menu, then select the tab labeled 'Device Info'.

To verify correct installation for Windows NT 4.0:

- a. Double click on 'My Computer' icon, select 'Control Panel', click on 'SCSI Adapters' icon, 'Sil 0680 ATA/133 Controller' should displayed correctly under 'Device' and 'Driver' tab.
- b. To view information about the devices attached to the controller, double click on the 'Silicon Image ATA Controllers' control panel applet. Select a controller from the list at the top of the dialog. Then select a device from the 'Device Location' drop down list to view its information.

Linux

Support for the CMT7118 is included in the Linux kernel version 2.4.18 or later. The exact procedure for installing and configuring the disk drives will depend on your Linux distribution. Consult the documentation provided with your distribution vendor for more information.

Other Operating Systems

Because the CMT7118 uses PCI interrupts and resource allocation, it does not operate the same as a standard AT IDE controller. The CMT7118 is based on the Silicon Image Sil680A. For more information on support for other operating systems, please contact their website at www.siliconimage.com.

Limited Warranty

RTD Embedded Technologies, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from RTD EMBEDDED TECHNOLOGIES, INC. This warranty is limited to the original purchaser of product and is not transferable.

During the one year warranty period, RTD EMBEDDED TECHNOLOGIES will repair or replace, at its option, any defective products or parts at no additional charge, provided that the product is returned, shipping prepaid, to RTD EMBEDDED TECHNOLOGIES. All replaced parts and products become the property of RTD EMBEDDED TECHNOLOGIES. Before returning any product for repair, customers are required to contact the factory for an RMA number.

THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCTS WHICH HAVE BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by RTD EMBEDDED TECHNOLOGIES, "acts of God" or other contingencies beyond the control of RTD EMBEDDED TECHNOLOGIES), OR AS A RESULT OF SERVICE OR MODIFICATION BY ANYONE OTHER THAN RTD EMBEDDED TECHNOLOGIES. EXCEPT AS EXPRESSLY SET FORTH ABOVE, NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND RTD EMBEDDED TECHNOLOGIES EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN. ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES FOR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS WARRANTY. IN THE EVENT THE PRODUCT IS NOT FREE FROM DEFECTS AS WARRANTED ABOVE, THE PURCHASER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. UNDER NO CIRCUMSTANCES WILL RTD EMBEDDED TECHNOLOGIES BE LIABLE TO THE PURCHASER OR ANY USER FOR ANY DAMAGES, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOST PROFITS, LOST SAVINGS, OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.