# Oxlife INDEPENDENCE



# USER MANUAL

# PORTABLE OXYGEN CONCENTRATOR

**USER:** READ THIS MANUAL BEFORE OPERATING THIS DEVICE. SAVE THIS

MANUAL FOR FUTURE REFERENCE.

**DEALER:** THIS MANUAL MUST BE GIVEN TO THE END USER.

# PROUDLY MADE IN THE U.S.A.

PLEASE READ THIS OPERATION MANUAL CAREFULLY BEFORE USING THIS DEVICE. BE AWARE OF ALL WARNINGS AND SAFETY INFORMATION. ONLY USE ACCESSORIES APPROVED BY O2 CONCEPTS AND REFERENCED WITHIN THIS MANUAL. IF YOU DO NOT FULLY UNDERSTAND ALL THE WARNINGS. SAFETY

PRECAUTIONS, AND OPERATING INSTRUCTIONS
CONTACT YOUR AUTHORIZED DEALER OR PROVIDER FOR
TECHNICAL SUPPORT.

CAUTION: U.S. FEDERAL LAW RESTRICTS THESE DEVICES TO SALE BY OR ON THE ORDER OF A PHYSICIAN.

# **Table of Contents**

Section 1: Introduction	7
Symbols Reference	7
How to Contact O2 Concepts	9
Specifications	10
Indications for Use	12
Section 2: Safety Guidelines	13
Device Safety Guidelines	13
Battery and Power Supply Safety Guidelines	15
Section 3: Product Description	16
Device and Accessories:	16
Feature Identification	17
Understanding the Control Panel	18
Applied Parts	19
Section 4: Operating Instructions	20
Before Operating	20
Locating Your Device	21
Device Settings	22
PULSE MODE BOLUS VOLUMES	23
Installing and Removing the Battery	24
Typical Battery Operation Times	24
Battery Time Management	25
AC Power Supply Home	26

DC Power Supply Auto	27
DC Power Supply Information Guide for Use	28
DC Power Supply Troubleshooting Guide for Us	s <b>e</b> 29
Handling	31
Accessory Bag	32
Cannula Use	33
Humidifier Kit	34
Firesafe <sup>TM</sup> Cannula Valve	35
Section 5: User Alerts and Alarms	37
Alarm and Alert Screens	37
How to Simulate Alarms and Alerts (Providers Only)	38
How to Respond to Alarms	40
Section 6: Maintenance and Cleaning	42
Maintenance	42
User Care and Cleaning	42
Air Inlet Filter Cleaning	42
Battery Disposal	44
Device Disposal	44
Section 7: Standards Compliance	45
NOTES	46

# Section 1: Introduction

# Symbols Reference

<u>ICON</u>	<u>MEANING</u>	ICON	<u>MEANING</u>
(h)	On/Off Buffon	8	Use no grease or oils
[M]	Mode Button	∱	Type BF Equipment
~	Continuous Mode	X	Do not dispose of in household waste
	Pulse Mode	学	Keep dry in transport and storage
~	Breath Detect Icon		Not suitable for use in the presence of a flammable anesthetic mixture
	Increase Flow Setting	(3)	No smoking while using or near device
	Decrease Flow Setting	<b>(A)</b>	No open flames
Ē	Battery Life Indication		Date of Manufacture
	AC/DC Power	!	Caution (as seen in manual)
<i>\$</i>	AC/DC Charging Indicator	<u>^</u>	Warning (as seen in manual)

$\otimes$	Do not disassemble		Auto (as seen in manual
*	Home (as seen in manual)	IP22	The Oxlife Independence protects again solid objects over 12mm and direct sprays of water up to 15° of vertical (IEC 60529)
	Refer to instructions	CE	The device conforms to Directive 93/42/EEC concerning medical devices
	Class II Equipment		

The Oxlife Independence complies with IEC 60601-1 3<sup>rd</sup> Edition; Medical Electrical Equipment; Part 1: General Requirements for Basic Safety and Essential Performance.

# **How to Contact O2 Concepts**

Please contact your homecare provider if your Oxlife Independence requires service.

Please call O2 Concepts Technical Support, at 1-(877)-867-4008, for support with your Oxlife Independence. Please call Customer Service to report any unexpected operation and events associated with the device.

Information about the Oxlife Independence and O2 Concepts can also be found on our website at <a href="https://www.o2-concepts.com">www.o2-concepts.com</a>.

# **Specifications**

DIMENSIONS				
Device Dimensions with Handle/Wheels	W: 10.85 in W: 27.55 cm			
w im Handie/Wheels	D: 9.45 in D: 24 cm			
D: 9.45 In				
Device Weight	16.7 lbs. (7.57 kg)			
Cart Kit (Wheels & Pull Handle)	2.17 lbs. (7.37 kg)			
Battery	1.4 lbs. (0.63 kg)			
AC Charger	1.4 lbs. (0.65 kg) 1.9 lbs. (0.86 kg)			
DC Charger	.37 lbs. (0.16 kg)			
	MODES OF OPERATION			
Continuous Flow	0.5 to 3 LPM in 0.5 LPM increments; Measured flow values are within ± 2% of actual values. Max flow 3.0 LPM. Flow maintained with outlet pressure ranging from			
	0 to 5.0 psig (0-34kPa)			
Pulse Dose	0.5 to 6.0 (8mL-96mL) setting increments; Measured flow			
	values are within ± 2% of actual values			
Battery Specification	14.4V Lithium Ion Battery			
External Pow er Supply Pow er	AC pow er: 100 - 240 VAC, 50/60 Hz			
Input	@ 2.5 amps			
	DC pow er: 12-15 VDC; Recommended: 15A outlet at			
	12V			
Altitude	0-13,123ft or (0-4000m)			
Oxygen Purity	91% ± 4% (87 - 95%) from 0.5 to 3.0 LPM; Measured purity			
	values are within ± 2% of actual values; There is no			
Operating Temperature	variation in purity w ithin the operating altitude.  50°F (10°) to 104°F (40°C)			
Operating Humidity	10% - 95% @ 82.4°F (28°C)			
Operating Atmospheric	10% - 95% @ 62.4°F (26°C) 101kPa to 63kPa			
Pressure	TOTKFO TO 65KFO			
Operating Environment	Free of smoke, pollutants, and fumes.			
Transport/ Storage Temperature	-4°F (-20°C) to 140°F (60°C)			
Transport/ Storage Humidity	0 -95% non-condensing			
Operating Time	24 hours per day when connected to an external AC or			
Spordring limb	DC pow er source. This is a continuous operation device.			
Cannula Specification	DO NOT use cannula tubing longer than 7ft (2.13m)			
	w hen using Pulse Flow Mode			
	Do NOTuse cannula tubing longer than 50ft (15.25m)			
	when using Continuous Flow Mode.			
A-Weighted Sound Pressure	The volume that the device will reach at maximum			
Level	settings will be ~ 56dBA with maximum peaks of			
	58.8dBA.			
Alarm Sound Level	All alarms triggered by the device will be 85dBA at			
	10cm from the unit.			
Maximum Outlet Pressure	Device will maintain flow up to 5psi back pressure.			
	Maximum back pressure is 7.0psi.			
Service Life	Device: 5yrs, Accessories: 1yr			

## Contraindications

⚠ Under certain circumstances, the use of non-prescribed oxygen therapy can be hazardous. This device should only be used when prescribed by a physician.

Mot for use in the presence of aerosol sprays or flammable anesthetics.

Additional monitoring may be required for patients using this device who are unable to hear or see alarms or communicate discomfort.

 
The Oxlife Independence is not appropriate for any patient who would experience adverse health consequences as a result of a temporary interruption in oxygen therapy.

The availability of an alternate source of supplemental oxygen is strongly recommended in the case of power interruption or a mechanical failure of the device.

This device is for adult use only. It is not qualified for use by pediatric patients.

## Indications for Use

# PRESCRIBED MODE AND FLOW SETTINGS SHOULD ONLY BE ADJUSTED UNDER THE ADVICE OF A PHYSICIAN

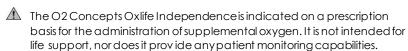

A Federal law restricts this device to sale by or on the order of a physician.

A No modification of this equipment is allowed.

There is no know interference posed by ME equipment during specific investigations or treatments.

There are no known devices that will cause interference issues.

# **Section 2: Safety Guidelines**

# **Device Safety Guidelines**

- Avoid exposure to open flames or creation of any spark near your Oxlife Independence. This includes sparks from static electricity created by any type of friction. Protect electrical power cords from sharp edges to avoid electrical shock and serious physical injury.
- Locate the Oxlife Independence in a well ventilated area to allow for adequate air intake. Avoid the intake of airborne pollutants, smoke, or fumes.
- Use only approved accessories as specified in this User Manual. Use of non-approved accessories may cause serious damage to the device and will void the warranty.
- Locate oxygen tubing and power cords away from hot surfaces and in a manner to prevent tripping hazards.
- ① **DONOT** Operate the device in an enclosed space, such as a closet.
- ① **DO NOT** block the air inlet or the exhaust vents located on the side of the device.
- ① **DO NOT** cover the device with a towel, blanket, etc.
- ① **DO NOT** drop or insert any objects or liquid into any opening.
- **DONOT** leav e your Oxlife Independence or batteries in your v ehicle or trunk. Extreme hot or cold may damage your device and or batteries.
- DONOT ship the Oxlife Independence with the batteries installed.

  Batteries must be shipped separately and packaged appropriately.

# **Device Safety Guidelines**

DO NOT SMOKE WHILE USING THIS DEVICE. KEEP ALL MATCHES, LIT CIGARETTES, CANDLES, OR OTHER SOURCES OF IGNITION AT LEAST 10 FEET FROM THE DEVICE. THIS DEVICE PRODUCES ENRICHED OXYGEN GAS WHICH ACCELERATES COMBUSTION.

⚠ Outdoor use must be conducted using battery power.

A Keep unit away from children, pets, and potential house hold pests.

Use caution when operating with long power cords or cannulas due to possibility of strangulation from excess length.

⚠ Use caution as small parts may pose a choking hazard

Do not remove any parts or fasteners from unit. Small parts can cause injury if inhaled or swallowed.

**DONOT** use the device with a damaged power cord or plug.

**DO NOT** operate the device on wet surfaces or in standing water, and do not submerge or expose to water. If the Oxlife Independence has been dropped, damaged or exposed to water please contact your authorized dealer for inspection and possible repair of the device.

**DONOT** come in contact with the device when wet.

**DO NOT** use oil, grease, or petroleum based products on or near the device.

**DO NOT** use the device with an extension cord.

# **Battery and Power Supply Safety Guidelines**

- ① Use of non-approved battery or power supply may cause serious damage to the device and will void the warranty.
- ① Store the battery in a cool dry place when not in use.
- Remove the battery from the device if it will not be used for an extended period of time.
- Locate the external power supply in the open air to prevent overheating when in use.
- U.S. Department of Transportation (DOT) and United Nations (UN) regulations require that batteries be removed from the device when checked as luggage on international flights.
- ① The battery may explode if exposed to or disposed of in a fire.
- Use only the supplied battery; AC and/or DC power supplies that were provided with the device.
- (1) Keep the battery away from children.
- Use of a damaged battery or power supply may cause personal injury.
- ① **DO NOT** attempt to disassemble the battery or power supply.
- **DONOT** short circuit the battery's metal contacts with metallic objects such as keys or coins. It may cause sparks or excessive heat.
- ① **DO NOT** use the battery or power supply for anything other than its intended purpose.
- DO NOT drop the battery or expose it to mechanical shock.
- DO NOT expose the battery to water or other liquids.
- DO NOT expose the battery to excessive heat or cold.

# **Section 3: Product Description**

# **Device and Accessories:**

Information regarding how to operate the Oxlife Independence and its accessories can be found in the following sections: Product Description and Operating Instructions.


The use of certain humidifiers and administration accessories not specified for use with this oxygen concentrator may impair performance

# Accessories for the Oxlife Independence:

- Battery
- BatteryShell/Blank
- Desktop Charger (Single Bay)
- Desktop Charger (6 Bay)
- AC Power Supply
- DC Power Cord
- Accessory Bag
- Humidifier Kit
- 7ft Cannula
- 50ft Cannula
- Firesafe™ Cannula Valve


# **Feature Identification**

- 1. CONTROL PANEL
- 2. LCD DISPLAY
- 3. OXYGEN OUTLET PORT
- 4. EXHAUST PORT
- 5. WHEELS
- 6. RECHARGEABLE BATTERY SLOTS
- 7. FAA APPROVAL IDENTIFICATION
- 8. PULL HANDLE
- 9. AIR INTAKE PORT FILTER
- 10. EXTERNAL POWER INPUT
- 11. HANDLE LOCK/RELEASE BUTTON
- 12. CARRY HANDLE

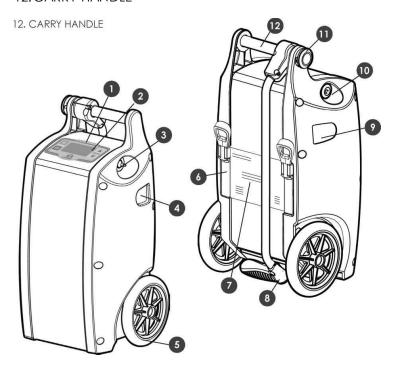

# **Understanding the Control Panel**


- 13. POWER BUTTON
- 14. BATTERY STATUS
- 15. EXTERNAL POWER SOURCE / BATTERY CHARGING INDICATOR
- 16. INCREASE/UP BUTTON
- 17. DECREASE/DOWN BUTTON
- 18. SYSTEM STATUS
- 19. BREATH DETECT (PULSE MODE ONLY)
- 20. MODE SETTING
- 21. MODE BUTTON

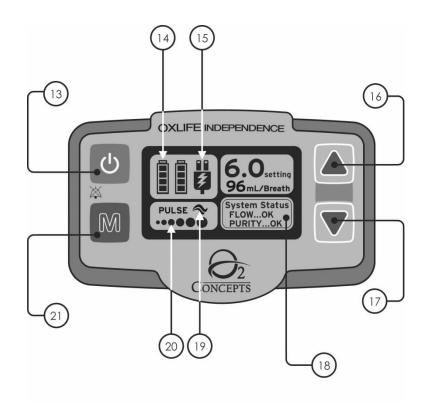

# **Applied Parts**

The applied parts, or components that a patient will come in contact with during normal operation of the device, are listed below:

- 1. Handle
- 2. Display
- 3. Oxygen Port

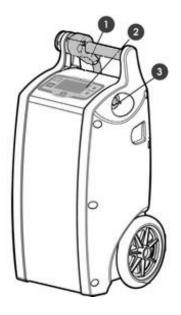

# **Section 4: Operating Instructions**

# **Before Operating**

Your authorized dealer will and or should demonstrate proper operation of your Oxlife Independence. This manual should be saved for future reference to help you safely operate your device. If you have any further questions please contact your authorized dealer.

This equipment needs to be installed and put into service in accordance with the information provided in the accompanying documents.

**DO NOT** operate the Oxlife Independence without first reading the Safety Guidelines included in **SECTION 2** of this manual.

Please follow all operating instructions.

If you are relocating your Oxlife Independence from an extreme environment, allow the device to return to the specified operating temperature and humidity ranges before use.

Operating your device outside of specified ranges may damage your device, impact device performance and may void your warranty. See Operating Temperature and Humidity Ranges listed in the Specification Table.

Fully charge batteries before first use.

# **Locating Your Device**

Place the Oxlife Independence in a well ventilated area free of smoke, fumes, pollutants, and away from direct sun light. Avoid high humidity environments.

Ensure that air intake and exhaust ports are not obstructed.

The Oxlife Independence MUST be located so that alarms can be heard.

Position the oxygen supply tubing and power cords in a manner that prevents kinking, air flow obstructions, and tripping hazards.

To protect device finish, it is recommended to use the Oxlife Independence in either an upright position or lying on its back.

**DO NOT** operate the device in an enclosed space, such as a closet.


**DO NOT** locate the Oxlife Independence near any flammable materials or cleaning product or in the direct path of any heat source such as a stove, heat register or a car heater. Keep the Oxlife Independence at least 5 feet (1.6m) from hot sparking objects or open flame.

# **Device Settings**

Turn the device on by pressing the Power Button .

Press the Mode Button to select Continuous or Pulse Flow Mode

Press the Increase or Decrease buttons to select the correct flow rate.

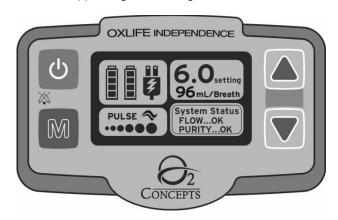

THE PROPER FLOW MODE AND FLOW RATE ARE PRESCRIBED BY YOUR PHYSICIAN.

DO NOT CHANGE THESE SETTINGS WITHOUT CONSULTING WITH YOUR
PHYSICIAN.

PULSE FLOW MODE SHOULD ONLY BE USED UNDER THE DIRECTION OF YOUR PHYSICIAN. APPROPRIATE AND SAFE PULSE MODE SETTINGS MUST ACCOMMODATE THE INDIVIDUAL PATIENT'S LIFESTYLE INCLUDING REST, TRAVELAND EXERCISE.

The device may take up to 3 minutes in order to warm up and reach desired performance.



#### CONTINUOUS FLOW MODE

In Continuous Flow Mode a continuous flow of oxygen will flow through the cannula and into your nose. The oxygen is measured in Liters per Minute or LPM.



#### **PULSE FLOW MODE**

In Pulse Flow Mode the device will detect your breath and supply a measured pulse of oxygen or bolus. The breath detect icon will flash on the control panel with each breath.


At higher flow settings, you may notice the motor revving which normal and necessary to achieve maximum oxygen output.

## **PULSE MODE BOLUS VOLUMES**

Pulse Mode Setting	Bolus Volume (mL)
0.5	8
1.0	16
1.5	24
2.0	32
2.5	40
3.0	48
3.5	56
4.0	64
4.5	72
5.0	80
5.5	88
6.0	96

If no breath is detected for 45 seconds, the display screen will turn amber, and the device will beep once. If no breath is detected for an additional 15 seconds, the device will default to the previous continuous flow mode setting.

# <u>Installing and Removing the Battery</u>

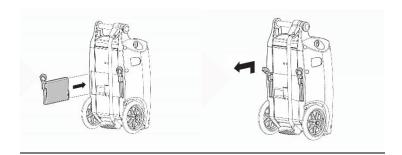

INSTALL	REMOVE
SLIDE INTO BACK OF DEVICE; BATTERY WILL DROP DOWN SLIGHTLY AND	PULL TAB AWAY FROM UNIT; LIFT BATTERY UP SLIGHTLY: THEN SLIDE
CLICK INTO POSITION	STRAIGHT OUT

# **Typical Battery Operation Times**

(@ 20 Breaths/Minute)

FLOW RATE	CONTINUOUS FLOW (Hours of Battery Life)		OW RATE (Hours of Bat		PULSE FLOW (Hours of Battery Life)	
SETTING	1 Battery	2 Batteries	1 Battery	2 Batteries		
0.5	2hr 53 min	5hr 45min	3hr 8 min	6hr 15min		
1.0	2hr 38 min	5hr 15 min	3hr	6hr		
1.5	1hr 45 min	3hr 30 min	3hr	6hr		
2.0	1hr 15 min	2hr 30 min	2hr 53min	5hr 45min		
2.5	1hr	2hr	2hr 23min	4hr 45min		
3.0	45 min	1hr 30min	2hr	4hr		
3.5			1hr 45min	3hr 30min		
4.0	N/A		1hr 30 min	3hr		
4.5			1hr 15min	2hr 30min		
5.0			1hr 8min	2hr 15min		
5.5			1hr	2hr		
6.0			53min	1hr 45min		

OPERATING TIME WILL DEGRADE WITH BATTERY USE AND AGE.


# **Battery Time Management**

With the combined use of the battery, AC power cord, and DC power cord your time away from home is virtually limitless. Using the AC and DC power cords whenever possible will give you optimal battery life. The battery will charge in the device, when plugged into an external power source.

The Oxlife Independence comes equipped with a rechargeable lithium battery that is **NOT** user serv iceable.

Battery Charge Status is also displayed on the control panel. Each bar represents approximately 25% of the total battery charge. When the battery is fully charged (ov er 90%) the battery icon will appear solid.


The Oxlife Independence battery includes a battery charge status indicator located on the front of the battery. Simply press the "PUSH" button on battery to display the remaining battery life in 25% increments.

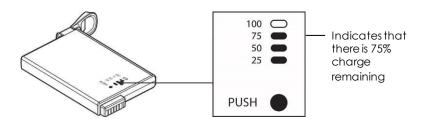

The typical time to recharge a fully discharged battery is approximately 1.5 hours if charging a single battery and 2.5 hours if charging two with the device plugged into AC power and powered off. Battery Charge times with the device running will v ary depending on setting used.

There is no routine maintenance or service to the O2 Concepts rechargeable batteries.

# **AC Power Supply Home**

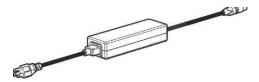 

Use only the power supplies provided with this device.

The AC power supply charges the battery using a 100-240 volt 50/60 Hertz outlet (a typical wall outlet in your home). Using the AC power supply allows you to use your Oxlife Independence while simultaneously recharging the battery.

To use the AC powersupply, connect the powersupply to a wall outlet and the Oxlife Independence. The external power source icon will be displayed on the control panel.

#### Recommendation for Use:

Use no electrical outlets controlled by a switch.

When changing power sources wait for the control panel to display the new power source icon and unit to beep before removing the original source.

The detachable power supply cord to the power supply is the means of isolating the unit from the supply mains.

If AC power is removed from the device, wait 10 seconds before re-applying power.

When traveling internationally a standard international power plug adapter is all that is required.



# **DC Power Supply Auto**



① Use only the power supplies provided with this device.

The DC power supply allows you to power your Oxlife Independence from your vehicle's (car, boat, RV) 12/15 volt DC outlet, (cigarette lighter) in all settings. Use the DC outlet closest to the battery. Use no other DC outlets in the vehicle. If your vehicles DC power drops below 11.5 volts, the device will revert to battery power. A 15 amp outlet at 12 volts is recommended for use with the device.

 $ilde{\mathbb{A}}$  The external power supply icon will be displayed on the control panel.

Recommendations for Use:

- ALWAYS have the vehicle's engine running before plugging in your Oxlife Independence. With the engine running, plug in and turn on your device.
- When operating the Oxlife Independence in your vehicle, ensure that the device is securely stowed and will not get damaged during transport.
- $\triangle$  Ensure that air inlet and exhaust ports are not blocked.
- A Batteries will not charge at any setting if the engine is not running.
- DC power is not sufficient to charge the batteries at all settings. Charging will **NOT** occur at settings higher than Continuous 2.0 or Pulse 4.0.
- The device may "rev" more while operating on DC power. This is normal operation while connected to DC power and not cause for any concern.
- DO NOT leave the device plugged into the vehicle when the engine is not running.
- $\triangle$  DO NOT use the Oxlife Independence with any power splitting devices.

# DC Power Supply Information Guide for Use

#### Starting the Device on DC Power

- 1. Be sure that the vehicle's engine is running PRIOR to plugging in your Oxlife Independence.
- Plug DC power cord into the device before plugging into the vehicle's DC outlet.
- 3. Plug DC power cord into the vehicle's DC outlet.
- 4. Remove the DC power cord from the vehicle's DC outlet when the engine is not running.

#### Stopping the device on DC power

- Without batteries installed, keep the vehicle's engine running and power the device Off by pressing and holding the power button.
- 2. When the device is Off, disconnect the DC power cord from the vehicle's DC outlet.
- 3. **With** batteries installed, disconnect the DC power cord from device. The device will beep once and switch to internal battery power.

#### To Reset / Reboot

- With batteries installed, remove DC power from the device and wait 15 seconds.
- 2. Remove the batteries from the device.
- 3. Re-insert the DC power cord into the device.
- 4. Turn device On using the power button.

# DC Power Supply Troubleshooting Guide for Use

<u>Event</u>	<u>Solution</u>
Batteries Not Charging	<ul> <li>If there is no charging icon (lightning bolt symbol), reduce the device setting to 0.5LPM Continuous and wait for charging icon to appear.</li> <li>Next, increase the flow rate by 0.5 increments until desired flow rate is reached. (Batteries will not charge on settings higher than 2.0 Continuous or 4.0 Pulse)</li> </ul>
Low Battery Alarm	<ul> <li>If batteries are fully depleted to 0%, they may not charge until the device is powered off.         Batteries may require being charged to 10% in order for the lightning bolt to appear on the display.     </li> <li>To prevent accidental discharge of fully charged batteries, batteries can be removed from the device while running on DC power.</li> </ul>
Device Alerting / Beeping Intermittently	<ul> <li>If the DC power drops below 11.5 volts, the device will beep.</li> <li>If batteries are installed, the device will switch to battery power.</li> <li>The device will automatically return to DC power once the vehicle supplies the proper voltage. The device will default to the most reliable source of power to supply oxygen.</li> </ul>
Unit Not Running	Perform a Reset/Reboot
Low External Power Alarm	<ul> <li>There may be too much of a power draw on the vehicles electrical system (ie: air conditioning, radio, or GPS). Try eliminating these power draws.</li> <li>Check your vehicle's user manual or consult an auto technician to determine your vehicle's DC power amperage and wattage. The device requires 150 watts (15 amps) to run at all settings.</li> <li>You may require an Inverter with at least a 450 watt capacity. This can be purchased through any Auto Service Provider.</li> </ul>


# **Handle Operation**

# OPEN/CLOSE

Press button to unlock handle.

Begin rotating and release button.

Handle will re-lock in open/close position automatically.

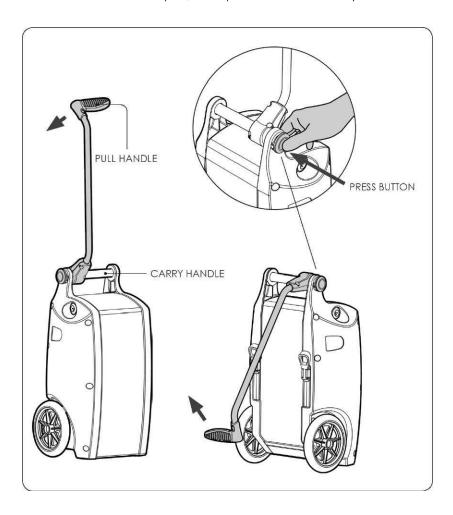

# **Handling**

## DO NOT LEAN ON UNIT

To prevent damage to the unit, avoid resting excessive weight on handle.



# CAUTION (

# STAIRS


While transporting the unit down stairs, it is recommended to allow unit to travel down first.





# **Accessory Bag**

The Accessory Bag is designed to carry your Oxlife Independence accessories including batteries, AC charger and cable, and DC charger.

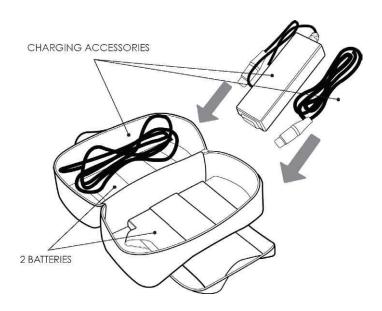

## Cannula Use



1 Your physician or dealer will recommend the proper cannula for your use



⚠ Use of a cannula not specified for use with oxygen may impair the performance of your device.



**DONOT** use cannula tubing longer than 7 feet when using Pulse Flow Mode.



**DONOT** use cannula tubing longer than 50 feet when using Continuous Flow Mode. Your physician will prescribe the appropriate cannula for your use.

Connect the cannula to the oxygen outlet port as shown on adjacent page. The cannula fitting may be tight.


**DO NOT** use grease or oils to lubricate the oxygen outlet port.

Read and follow the instructions included with the cannula, and follow the instructions giv en by your authorized dealer.

Place the cannula over your ears and position the cannula prongs in your nose.

Clean and replace your cannula regularly as instructed by your authorized dealer.

O2 Concepts recommends M125310 from Salter Labs, or equivalent, as a 7ft cannula and 1650HF-50-10 from Salter Labs, or equivalent, as a 50ft cannula.

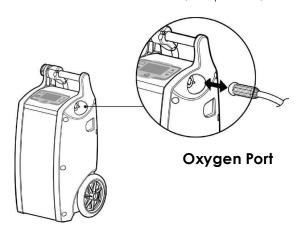

## **Humidifier Kit**

The O2 Concepts Oxlife Independence portable oxygen concentrator is designed to be used with a humidifier bottle in continuous flow mode only. Use of this Device with a humidifier in pulse mode may impair performance and/or damage your device. **DO NOT** overfill humidifier. Fill the humidifier with distilled water only to the level shown by the manufacturer of the humidifier bottle.

**DO NOT** reverse the oxygen input and output connections. Water from the humidifier will travel through the cannula and back to the patient.

**DO NOT** operate your O2 Concepts Oxlife Independence and ambulate while a humidifier is attached. Always remove the humidifier before walking.

**DO NOT** lay your device down horizontally while attached to a humidifier.

#### Using the Humidifier:

O2 Concepts recommends using the 800-1015 Humidifier Bottle Strap to attach your humidifier to your oxygen concentrator.

- Raise the Oxlife Independence handle, slide the humidifier strap on unit, pull it down until tight, and buckle the bottom strap.
- 2. Place the humidifier bottle into the front pocket.
- 3. Install the tubing to the top of the humidifier bottle.
- 4. Connect the other end of the tubing to the oxygen output connector on the Oxlife Independence.
- Install the cannula to the output port on the humidifier bottle.

Refer to the 800-1015 Humidifier Bottle Adapter Assembly Instructions for additional direction descriptions and troubleshooting help.

#### Cleaning the Humidifier:

Note: To clean the humidifier, follow the instructions provided by the manufacturer. If none are provided, follow these steps:

- 1. Clean the humidifier daily.
- 2. Washit in soapy water and rinse it with a solution of ten parts water to one part vinegar.
- 3. Rinse thoroughly with hot water.

Replace the humidifier monthly or as recommended by the manufacturer or your authorized dealer.

Purchase of humidifier bottle and cannula equipment should be purchased through your oxygen provider.

O2 Concepts recommends the use of the 7100-0-50 humidifier from Salter Labs or equivalent.

## Firesafe<sup>TM</sup> Cannula Valve

#### Intended Use:

The Firesafe™ Cannula Valve is a thermal fuse designed to extinguish an oxygen delivery tube fire and stop the flow of oxygen if the tube is accidently ignited.



⚠ Read Firesafe™ Cannula Valve Instructions before installing. As with all medical equipment, attempting to use or install this device without a thorough understanding of its operations and limitations may result in patient or user injury.

The device is intended for a life of 4 years from the manufacturing date stated on the device label


The Firesafe™ Cannula Valve must be used in order to comply with IEC 60601-1 and ISO 8359.

Refer to Instructions for Use for Part Number: 1109-2017 CE from Applied Home Healthcare Equipment. This includes intended use, warnings, installation instructions, cleaning, maintenance, disposal, and device specifications.

#### Section 5: User Alerts and Alarms

The functionality of the alarm system is verified automatically by the unit upon start up by the unit flashing the various visual display colors and audible indicators. There are delays that are greater than 10 seconds inherent to specific alarms, and these delays are explained in detail for each alarm in the tables below.

#### **Alarm and Alert Screens**

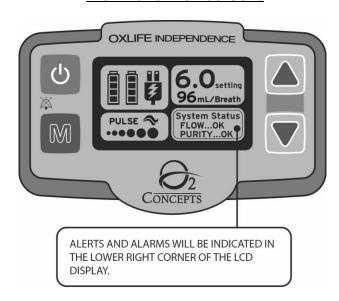

#### **Red Screens**

NO FLOW

No External Power

HIGH EXTERNAL POWER

UNAUTHORIZED BATTERY

LOW PURITY OVER TEMPERATURE

LOW BATTERY INVALID MOTOR TEMPERATURE

LOW EXTERNAL POWER

INVALID BOX TEMPERATURE **Amber Screens** 

ALERT LOW Purity

**NO Breath** 

ALERT LOW Battery

UNAUTHORIZED BATTERY

ALERT LOW EXTERNAL POWER

# How to Simulate Alarms and Alerts (Providers Only)

Alarm Name, Priority and Type	Alarm Description	How to Simulate Alarm
No Breath Alarm (Low Priority) (Physiological)	When in PULSE mode, if a breath is not detected for 45 seconds the screen will turn amber, sound one beep and the text "ALERT No Breath" will flash in the system status window.  If no breath is detected for an additional 15 seconds, the unit will switch to the previous CONTINUOUS mode setting selected.	Run unit in PULSE mode with no cannula connected. Urit will automatically trigger alarm and revert to CONTINUOUS mode.
Low Battery Alert (Low Priority) (Technical)	When calculated battery run time reaches 6 minutes remaining the screen will turn amber, sound one beep per 30 seconds and the text "ALERT Low Battery" will flash in the system status window.  Pushing POWER button once silences the beeping.	Run unit in CONTINUOUS mode 2.0 with one low charge battery. Unit will alarm with 6 minutes of run time remaining.
Low Battery Alarm (High Priority) (Technical)	When battery power is depleted, the pump shuts off the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Low Battery" will flash in the system status window.  The unit will continue to sound until; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds hose spired.	Run unit in CONTINUOUS mode 2.0 with a low charge battery. Allow unit to enter battery alert mode, then alarm mode.
Low Purity Alert (Low Priority) (Technical)	When oxygen levels drop below 85%, the screen will turn amber, sound one beep per 30 seconds and the text "ALERT Low Purity" will flash in the system status window. Pushing POWER button once silences the beeping.	Introduce a nitrogen rich stream of gas to the inlet port of the enclosure. Oxygen purity should fall when unit is deprived of "clean" air.
Low Purity Alarm (High Priority) (Technical)	When oxygen levels drop below 72%, the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Low Purity" will flash in the system status window  The unit will continue to sound until; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Introduce a nitrogen rich stream of gas to the inlet port of the enclosure. Oxygen purity should fall when unit is deprived of "clean" air.
No Flow Alarm (High Priority) (Technical)	When the flow of oxygen is stopped for 45 seconds, the screen will flash red at 2Hz, sound a 10 beep sequence repeated ofter 2.5 seconds of slence and the text "No Flow" will flash in the system status window  The unit will continue to sound untit, the power button is pressed to slence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Run the unit in 2.0 Continuous and allow it to warm up. Place a cap over the outlet of the unit and wait the appropriate amount of time.
Over Temperature Alarm (High Priority) (Technical)	The maximum operating temperature of the enclosure and pump is 70C and 90C respectively. When either of these temperatures are reached the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Over Temperature" will flash in the system status window  The unit will continue to sound until; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Remove dsplay circuit board and associated sheet metal. Apply heat from a heat gun gradually to thermistor located on board until unit alarms. Sensor output can be monitored in "engineering mode" of device in real time.
Invalid Motor Temperature (High Priority) (Technical)	When the motor temperature sensor is out of a valid range, the screen will flash red at 2Hz sound a 10 beep sequence repeated ofter 2.5 seconds of silence and the text "Invalid Motor Temperature" will flash in the system status window. The unit will continue to sound until; the power button is pressed to silence the audo, the power button is held to power off the unit, or 15 seconds has expired.	Disconnect the temp wires on the motor hall sensor cable (2 purple wires)

Invalid Box Temperature (High Priority) (Technical)  Unauthorized Battery Alert (Medium Priority)	When the internal box temperature sensor is out of a valid range, the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Invoid Box Temperature" will flash in the system status window  The unit will continue to sound until; the power button is pressed to silence the audo, the power button is held to power off the unit, or 15 seconds has expired.  If the unit detects that a battery other than one from O2 Concepts has been installed in the unit the battery com will show an exclamation point within the battery outline. The unit will continue to run if on AC, DC ar a second valid battery is present. The screen will turn amber, sound a 3 beep sequence repeated after 15 seconds of silence and	Chill the unit to 34 deg F while off then turn on while still cold  Install a battery from a manufacturer other than O2 Concepts while another
(Technical)	the text "Unauthorized Battery" will flash in the system status window.  Pushing POWER button once silences the beeping.	power source is present.
Unauthorized Battery Alarm (High Priority) (Technical)	If the unit detects that a battery other than one from O2 Concepts has been installed in the unit the battery icon will show an exclamation point within the battery outline. If no other power source is present the screen will flash red at 2tz sound a 10 beep sequence repeated after 2.5 seconds of sience and the text "Unauthorized Battery" will flash in the system status window  The unit will continue to sound until; the power button is	Install a battery from a manufacturer other than O2 Concepts with no other power source present.
Laur Satarrad B	pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.  When the voltage from an external power source falls to	Connect to an external DC
Low External Power Alert  (Medium Priority)  (Technical)	11.6 volts or less (as measured by the unit internally) the screen will turn amber, sound a 3 beep sequence separated by 15 seconds of silence and the text "ALERT Low Ext Power" will flash in the system status window.  Pushing POWER button once silences the beeping.	power supply capable of delivering 20amps. Run unit on 2.0 continuous. Starting at 14 volts steadily reduce input voltage until unit alerts.
Low External Power Alarm (High Priority) (Technical)	When the voltage from an external power source falls below 10.6 volts (as measured by the unit internally) the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Low External Power" will flash in the system status window  The unit will continue to sound untit; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Connect to an external DC power supply capable of delivering 20amps. Run unit on 2.0 continuous. Starting at 14 volts steadly reduce input voltage until unit alarms.
High External Power Alarm (High Priority) (Technical)	When the voltage from an external power source is above 26 volts (as measured by the unit internally) the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "High External Power" will flash in the system status window  The unit will continue to sound untit; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Connect to an external DC power supply capable of delivering 20amps. Run unit on 2.0 continuous. Starting at 1.4 volts steadily increase input voltage until unit alarms.
No External Power Alarm (High Priority) (Technical)	If power is removed while the unit is running the unit will sound a 10 beep sequence repeated after 4 seconds of silence.  Since the power is remove the display is blank and no backlight color is available.	Run unit on 2.0 continuous using AC power supply, Remove dl batteries. Remove AC power supply.

## **DO NOT IGNORE ALARMS**

## **How to Respond to Alarms**

Alarm Name, Priority and Type	Alarm Description	Solution
No Breath Alarm (Low Priority) (Physiological)	When in PULSE mode, if a breath is not detected for 45 seconds the screen will turn amber, sound one beep and the text "ALERT No Breath" will flash in the system status window.  If no breath is detected for an additional 15 seconds, the unit will switch to the previous CONTINUOUS mode setting selected.	Ensure cannula tubing does not exceed 7 feet (2.1 m). Ensure user breathing through nose and not mouth. Note: No Breath Detected is used when in Pulse Flow Mode ONLY.
Low Battery Alert (Low Priority) (Technical)	When calculated battery run time reaches 6 minutes the screen will turn amber, sound one beep per 30 seconds and the text "ALERT Low Battery" will flash in the system status window.  Pushing POWER button once silences the beeping.	Plug into an external power source.  OR  Replace depleted battery (batteries) with a charged battery.
Low Battery Alarm (High Priority) (Technical)	When battery power is depleted, the pump shuts off, the screen will flash red at 2Hz sound a 10 beep se quence repeated after 2.5 seconds of silence and the text "Low Battery" will flash in the system status window  The unit will continue to sound until; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Plug into an external power source. Replace deple ted battery (batteries) with a charged battery.
Low Purity Alert (Low Priority) (Technical)	When oxygen levels drop below 85% the screen will turn amber, sound one beep per 30 seconds and the lext "ALERT Low Purity" will flash in the system status window.  Pushing POWER button once silences the beeping.	Clean or replace air inlet filter. Contact your authorized dealer.
Low Purity Alarm (High Priority) (Technical)	When oxygen levels drop below 72% the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Low Purity" will flash in the system status window.  The unit will continue to sound until; the power button is pressed to silence the oudio, the power button is held to power off the unit, or 15 seconds has expired.	Repair or replace tubing or humidifier. Clean or replace air inlet filter. Contact your authoized dealer.
No Flow Alarm (High Priority) (Technical)	When the flow of oxygen is stopped for 45 seconds the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 25 seconds of silence and the text "No Flow" will flash in the system status window. The unit will continue to sound until; the power button is pressed to silence the audio, the powerbutton is held to power off the unit, or 15 seconds has expired.	Check cannula connection. Repair or replace tubing or humidifier. Clean or replace air inlet filter. Move device to ensue adequate air flow. Contact your authorized dealer.
Over Temperature Alarm (High Priority) (Technical)	The maximum operating temperature of the enclosure and pump is 70°C and 90°C respectively. When either of these temperatures are reached the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Over Temperature" will flash in the system status window. The unit will continue to sound until; the power button is pressed to silence the oudio, the power button is held to power off the unit, or 15 seconds has expired.	Allow the device to reach operating temperature. Utilize an atternate source of oxygen if necessary.
Invalid Motor Temperature (High Priority) (Technical)	When the motor temperature sensor is out of a valid range the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Invalid Motor Temperature" will flash in the system status window  The unit will continue to sound until; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Allow the device to reach operating temperature. Utilize an atternate source of oxygen if necessary.
Invalid Box	When the internal box temperature sensor is out of a	Allow the device to reach operating temperature.

1em perature	walled reasons the server will flesh read at 21 h, so und a 10	Utiliza an alternate source of
(High Priority)  (Technical)	valid range the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text "Invalid Box Temperature" will flash in the system status window  The unit will continue to sound until; the power button is pressed to silence the audio, the powerbutton is held to power off the unit, or 15 seconds has expired.	Utilize an alternate source of oxygen if necessary.
Unauthorized Battery Alert (Medium Priority) (Technical)	If the unit detects that a battery other than one from O2 Concepts has been installed in the unit the battery con will show an exclamation point within the battery outline. The unit will continue to run if on AC, DC or a second valid battery is present. The screen will turn amber, sound a 3 beep sequence repeated after 15 seconds of silence and the text "Unauthorized Battery" will flash in the system status window.  Pushing POWER button once silences the beeping.	Remove unauthorized battery and replace with an authorized O2 Concepts battery.
Unauthorized Battery Alarm (High Priority) (Technical)	If the unit detects that a battery other than one from O2 Concepts has been installed in the unit the battery con will show an exclamation point within the battery outline. If no other power source is present, the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 25 seconds of silence and the text "Battery Alarm" will flash in the system status window. The unit will confinue to sound until; the power button is pressed to silence the audio, the power button is held to power off the unit, or 15 seconds has expired.	Remove unauthorized battery and replace with an authorized O2 Concepts battery.
Low External Power Alert (Medium Priority) (Technical)	When the voltage from an external power source fails to 11.6 volts or less (as measured by the unit internally the screen will turn amber, sound a 3 beep sequence separated by 15 seconds of silence and the text "ALERT Low Ext Power" will flash in the system status window.  Pushing POWER button once silences the beeping.	Ensure all charging connections are intact. Refer to the DC user guide section of this manual.
Low External Power Alarm (High Priority) (Technical)	When the voltage from an external power source falls below 10.6 volts (as measured by the unit internally) the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 2.5 seconds of silence and the text. "Low External Power" will flash in the system status window  The unit will continue to sound untit; the power button is pressed to silence the audio, the powerbutton is held to power off the unit, or 15 seconds has expired.	Ensure all charging connections are intact. Refer to the DC user guide section of this manual.
High External Power Alarm (High Priority) (Technical)	When the voltage from an external power source is above 26 volts (as measured by the unit internally) the screen will flash red at 2Hz, sound a 10 beep sequence repeated after 25 seconds of silence and the text "High External Power" will flash in the system status window  The unit will continue to sound untit; the power button is pressed to silence the audio, the powerbutton is held to power off the unit, or 15 seconds has expired.	Disconnect the external power source from the Oxife Independence and use an alternative power source that is within the operating limits.
No External Power Alarm (High Priority) (Technical)	If power is removed while the unit is running the unit will sound a 10 beep sequence repeated after 4 seconds of silence.  Since the power is removed, the display is blank and no backlight color is available.	Ensure all charging connections are intact. In the case of an extended power outage, utilize an alternate, non-powered, source of oxygen.

### Section 6: Maintenance and Cleaning

#### Maintenance

All maintenance MUST be conducted by a qualified Oxlife Independence service technician. **DO NOT** attempt to disassemble or perform any maintenance on your device. Any such attempt will void the warranty.

Routine cleaning of the air inlet filter, as described below, is the only routine maintenance. The Oxlife Independence and its parts requires maintenance at the end of the 5 year service life or as required, determined by your care provider. There is no routine maintenance or service to the O2 Concepts rechargeable batteries.

### **User Care and Cleaning**

- Unplug your Oxlife Independence and or power supplies before cleaning.
- **DO NOT** use alcohol, ethylene chloride or petroleum based cleaners on the case or power supplies.
- ① Clean the outside case of your device using a soft cloth dampened with a mild detergent and water.
- ① **DONOT** spray or soak the case or front panel.

#### **Air Inlet Filter Cleaning**

Regular cleaning of the Air Inlet Filter is the only maintenance you will perform on your device. To keep your Oxlife Independence working properly, it is recommended you clean the Air Inlet Filter weekly.


If the Oxlife Independence is used in a dusty env ironment, more frequent cleaning of the Air Inlet Filter may be required.

Neveruse your Oxlife Independence without an Air Inlet Filter.

### **Air Inlet Filter Cleaning (Continued)**

Follow these simple directions to clean the Air Inlet Filter:

- 1. Remove the Air Inlet Filter
- 2. Wash the filter by running under warm tap water using a mild detergent.
- 3. Rinse thoroughly under warm, running water.
- 4. Squeeze out excess water.
- 5. It is important to allow the filter to dry completely before reinserting into the device. Moisture from a wet or damp Air Inlet Filter may damage your device.
- ① You may want to keep an extra Air Inlet Filter to use as a replacement while one is drying.

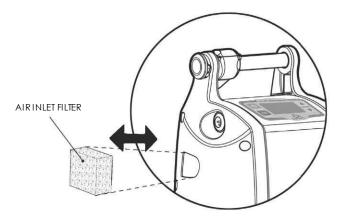

Contact your authorized dealer for extra Air Inlet Filters.

## **Battery Disposal**

Your battery is rechargeable and can be recycled. Always return to your authorized dealer for proper disposal. You can also contact your local city or town offices for proper disposal instructions for a lithium ion battery.

## **Device Disposal**

This product may contain substances that could be harmful to the environment if disposed of in landfills that are inappropriate. Follow local governing ordinances and recycling plans regarding disposal of the device.

#### <u>Section 7: Standards Compliance</u>

This device is designed to comply with the following standards:

- IEC 60601-1 3<sup>rd</sup> Edition; Medical Electrical Equipment; Part 1: General Requirements for Basic Safety and Essential Performance
- IEC 60601-1-2 2<sup>nd</sup> Edition; Medical Electrical Equipment, Part 1-2: General Requirement for Safety – Collateral Standard: Electromagnetic (EMC) Compatibility
- ISO 8359 2<sup>nd</sup> Edition; Oxygen Concentrators for Medical Use Safety Requirements
- RTCA, DO 160, Section 21, Category M; Emission of Radio Frequency Energy
- ISO 13485:2003 Medical Devices; Quality Management Systems; Requirements for Regulatory Purposes

## **NOTES**

#### Oxlife INDEPENDENCE

O2 Concepts LLC 15 Commerce Road, Newtown, CT 06470 (877) 867-4008 www.o2-concepts.com

#### Represented in Europe by:

MT Promedt Consulting GmbH Altenhofstrasse 80 66386 St. Ingbert Germany



PN: 800-1008 Rev: C

April 15, 2015