

WISEreader N520

E-Book Reader

 
User Manual

Content

QUICK GUIDE.....	4
DEVICE BUTTONS	4
USING SKILL	4
BASIC OPERATION.....	6
MAIN MENU	6
READING INTERFACE	6
RECENT READING.....	7
BOOK CASE	8
PICTURE VIEW.....	10
MUSIC.....	11
SETTINGS	13
ADOBE READER INSTRUCTION	17
FORMAT.....	17
DRM	17
STEPS OF SETTING UP DRM	17
OTHER OPERATIONS	19
BATTERY CHARGING.....	19
FILE MANAGEMENT	19
APPENDIX.....	21
TECHNOLOGY SPECIFICATION	21

CAUTION.....	21
PRODUCT MAINTENANCE.....	23

Quick Guide

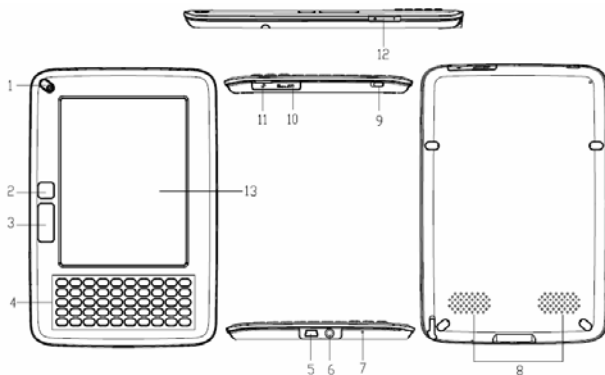

Device buttons

1) Power button

Press this button to turn on/off the device. The red indicator will light when the device is charging, and the blue indicator will light when the device is operating.

2) Page Up button

Press this button to turn page up. Continue pressing this button can turn ten

pages up.

3) Page Down button

Press this button to turn page down. Continue pressing this button can turn ten pages down.

4) Keyboard area

Including: Number button, letters, function keys.

Index button (Number)

Press any number button 1~9 to select and operate the corresponding function at the function menu.

Page jump button (Number)

Under the reading status in DOC, TXT, HTXT, HTML, press the number button 0~9 or any combined number button can jump to the corresponding page directly.

Function shortcut key (Number)

Press “MENU”, the function menu will display. Press any number button to select and operate the corresponding function.

Play/record button

Open or close the “Recorder and Player” interface.

Zoom button (Z)

Press this button to zoom in/out the fonts or pictures.

MENU button

Press this button, function menu will display, press direction button or number button to select and operate the corresponding function.


OK button

Press this button to confirm the operation. Continue pressing “OK” button to lock the keypad, and continue pressing this button again, the keypad will be unlocked.

Direction button

Press these four buttons to turn page or select option.

Return button

Press Return button  to cancel the operation or return to the previous interface.

Refresh button

Press this button  to refresh screen.

5) Mini USB port

USB connection port, it is used for charging the device or transmitting data from PC.

6) Earphone outlet

Plug in/out earphone here.

7) MIC: Microphone**8) Speaker**

Broadcast voice file.

9) Lock button

Switch on/off the lock button on top of machine to lock/unlock the keyboard.

10) TF card slot

Insert TF storage card into it.

11) Reserved USB Hot**12) Volume Control****13) Display screen****Using skill**

1. Press “MENU”, and number button “1”, the system can return to the main menu directly. Under the “Recent reading”, “Settings”, “User’s Guide” and “Recorder and Player” interface, press “↩” button directly to return to the main menu.
2. Under the reading status, please press refresh button to refresh the screen compulsively if the display is not clear.
3. Under the reading status, press the number button and “OK” to jump to the

corresponding page directly.

4. It will be faster and safer to use TF card to transfer data between PC and device.

Basic operation

 
Main menu

Turn on the device, the main menu will display automatically, as the following picture shown.



Reading interface

The screen is separated into 3 parts, status area is on the top of the screen; reading area is in the middle; the page information area is at the bottom of the screen.

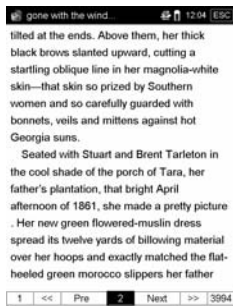

1. Status Area: the menu icon, titles, SD card icon, battery, time and “ESC” icon display at this area.
2. Reading area: function list, file list, text or pictures will display at this area.
3. Page information area: display the current page number, total page number, “Previous” and “Next” page button, turn 10 pages up or down button.

Recent Reading

The latest 14 files will display. Press ↑ / ↓ button to select a book and press OK to confirm, or press the number button to open a book directly. The page you read last time will display when you open this book. If it is the first time you read this book, it will begin from the very beginning.

Note: *If one of the books you read is deleted in the SD card, the reading record will still be remained in the “Recent reading” list, but it cannot be opened.*

Book Case

Book reading

 
Select “Book Case” and press “OK” step by step to select one book finally, and then press OK to confirm or press the corresponding number button to open the book directly.

Page turning

Press the direction buttons to turn page, you can also press the page up/down button.

Page jumping

Under the reading status, press any number button, and then press “OK” to confirm, the book will jump to the corresponding page directly. If there is a mistake, press the direction button to delete the number you've input, and input again.

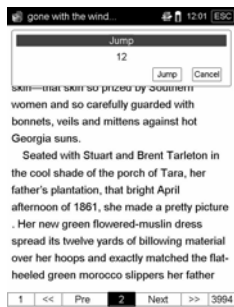

Note: If the number you've input is more than the total page number, the system won't accept this operation.

Font zoom

Press zoom button(Z) to adjust the font size in 3 levels, small, middle and large.

Supported format

Support the following format: TXT, HTXT, PDF, EPUB, DOC, HTML.

Search

Press "MENU" button, select "Search" in the menu, an input frame will display, you could press any button to input words. Then press "ok" button to find the content that you want, press return button "↵" to close the frame.

If you want to search the other content, just click the input frame again to awake it, and input anything you want, and then press “ok”.

Bookmark

There are two kinds of bookmark: normal bookmark and shift bookmark. Normal bookmark can only be used in one book and can be added 5pcs at most. Shift bookmark can shift books, but before you add a shift bookmark, you need to select “txt” option in “Continuous turning” located in the “Settings”.

Add a bookmark: Under the reading status, press “MENU” button, and select “Bookmark”, then press number “0” button, a bookmark will be added in the current page.

View bookmark: Press “MENU” button and select “Bookmark”, the bookmark list will display. Press the corresponding number button to select a bookmark, then the corresponding page will open.

Note: *The bookmarks will be sorted by date; only the recent 5 bookmarks can be shown.*

In the image files, only shift bookmark can be added.

Picture View

Picture turning

All pictures saved in the folder can be browsed continuously.

Picture view

There are four display modes for viewing the pictures: Fit Window, Fit Width, Fit Height and Actual Size. Press “MENU” button, then select the corresponding display modes by press related number button.

Supported format

Support the following format: JPG, BMP, GIF, TIF and PNG.

Picture size

Support 3,000,000 pixels in maximum.

Music

There are two functions in this option: record and play.

Play music

Select “Music” in the main menu, and press “OK”, the music list will display, and press “OK” button to open the “Recorder and Player” interface.

Support the following format: mp3, wav, wma.

Play record

Select “Music” in the main menu (press the corresponding number button), and press “OK” to enter the “recorder and player” interface, click “Rec” to record, the

recording file will save at E-audio folder, which format is wav. Press the number key “1” to play this recording file.



Recorder settings

Play/Pause: Press the number button “1” to play/pause music or record, and a speaker icon will appear at the status area.

Record: Press the number button “2” to record, and a microphone icon will appear at the status area.

Stop: Press the number button “3” to stop music or record.

Forward/Rewind: “Forward” and “Rewind” functions are implemented by the number button “4” and “5”.

Single/Cycle: These two playing modes are implemented by the number key

“6”.

VOL+/-: Press the direction button \leftarrow/\rightarrow to decrease or increase the volume.

Pre/Next: Press the direction button \uparrow/\downarrow to select the previous or next music.

Settings

Select “Settings” in the main menu, and press “OK” to enter the interface. Press the direction button to select the corresponding option, and you also can press the number button to select the function.

Continuous turning

Including picture, html, txt, all files saved in one folder can be browsed continuously.

Sleep Settings

Sleep: Select “Yes”, the system will sleep after 3 seconds if there isn’t any operation on the device, the LED indicator will turn off; select “No”, the system won’t sleep, and the LED indicator will always light. The system won’t sleep in this option: “Music”.

Sleep Delay: There are three levels can be selected: short, middle, long. Select “short”, the system will get into sleeping mode quickly; select “long”, the

system will get into sleeping mode slowly.

Recent Files

Select “Record”: Save the reading records.

Select “Not Recorded”: The system will not save the reading records.

Clean up: The recent reading records will clean up.

Key tone

Select “on” or “off” to turn on or off key-press sound.

Reading Voice

There are some options for reading voice, such as male voice and female voice.

Font settings

There are two effects for displaying font: Clear and Smooth.

System time

Display the current date and time in the system.

Modify time: Click “Modify time”, or press the direction button to select “System time”, and press the number button “1” to open “Modify time” interface, and press the number button directly to input time, and then click “OK” to save the new time. Press return button, the new time will not be saved.

Refresh mode

There are two refresh modes in the system: Part and Global.

Part refresh: Part screen will be refreshed.

Global refresh: The whole screen will be refreshed. Under the direct sunlight or low temperature, global refresh is recommended.

Factory default

Default: Restore the system to the default settings. Please save all data on the SD card before you restore the system.

Clear temp: Clear the temporary files in the system. This function can't be used very often. If the system space getting smaller or the performance getting worse, please operate this function. After that, all previous bookmarks will clear up; the book will be opened from the very beginning.

System Maintenance

Download the update package, decompress the package and save it under the root directory in SD card, select "Update", the system will operate the software updating automatically. ((Be careful to operate this function, and please refer to the cautions in appendix))

Device information

Display the device ID and version information in this option.

Device ID: With the device ID, you could get our support after sale, including

technical services and more legal E-books resources and reading authority, and so on.

Set DRM: With DRM setting, you can acquire Adobe solution for PDF and EPUB files support. The setting process and related information will be shown in the following chapter.

Adobe reader instruction

Format

Support PDF and EPUB files

DRM

1. Adobe DRM protected PDF and EPUB file is supported only if Adobe Digital Editions 1.5 or later is installed on your computer and your WISereader is connected r to the computer.

2. Digital Rights

Displays the following only if a book with DRM is selected.

- a. Full viewable: the entire book can be read.
- b. Restricted: Some or all of the book cannot be read.

3. Expiration date

Displays the expiration date of a book if the book with DRM has an expiration date.

Steps of setting up DRM

Step 1. Install the Adobe Digital Edition on your computer.

Step 2. After installation, open the above software, and enter your Adobe account

(which should be applied at beginning).

Step 3. After turning on the WISEreader, (click on “Set DRM” which is included in the “Settings” interface. Please ignore this item if you cannot find it). Then, keep the Adobe Digital Edition open, and connect the WISEreader to the computer, there will show a window for activation. Click “Authorization”, then DRM activation is completed.

Notes:

- 1. The authorization information is stored in SD card. Thus, you need to active the device again if using a new SD card.*
- 2. After activated, if you want to use a new account to active, please delete the hidden folder under SD root: “.adobe-digital-editions”.*

Please refer to below website for more information.

<http://www.adobe.com/products/digitaleditions>

Other operations

Battery charging

Please charge the battery when it run out. The device can be charged through USB data wire or charger (selective accessory)

There are two ways to charge the battery, power-on charging and power-off charging.

Connect the device to the computer with a USB plug data wire. The red LED indicator will light; the battery icon in the status bar will indicate the battery is charging.

Note: *The charging time is about 4 hours. The red LED indicator will be off when charging is finished. It's better to charge the battery when the hint screen disappears, and please ensure the battery is fully charged. This will extend the Lithium battery life.*

File Management

Connected to computer

Connect the device to the computer with the USB data wire. Turn on the device, "Are you sure to transmit data?" will display on the screen. Press "OK" to confirm. The computer will automatically detect a new storage device connecting.

Files management

Select “removing disk” in “My computer”, you could remove, copy or delete the files or folders. At that moment, your E-book reader is under the locked status.

Under the default status, there are several pre-store folders in the SD card: e_audio, e_book, e_image, save the files in the corresponding folder respectively.

Note: *These pre-stored folders can't be renamed or deleted, and please save the files in the right folder, otherwise, the files won't be opened, for example, save TXT, HTXT, PDF, EPUB, DOC, HTML files into “e_Book ”, save pictures into “e_image” and save music into “e_audio”.*

Appendix

Technology Specification

Size	173×117×10.3mm
Screen	5" Electronic Paper Display (EPD); 8-level gray scale; Ratio 4:3; Pixel resolution: 800×600
Weight	195g(Net)
Storage device	Expanded SD card (32GB in maximum)
Power supply	internal Lithium battery 1500mAh; USB Charge
Operating temperature	0℃～40℃, 32°F～104°F
Storing temperature	-20℃～55℃, -4°F～113°F

Caution

About SD card

If SD card can't be recognized for a long time, you can plug in the SD card again or restart the device. When the system is reading data, please do not remove the SD card or reset the system.

If SD card needs to be formatted, please backup all data in SD card first, and

then select FAT-32 format.

Restart the device

1. When the device is crash or freeze, click the “RESET” hole located at the back of device to restart the system.
2. When the power run out and device can not be turned on, please charge the device.

Others

1. Under the direct sunlight or low-temperature environment, the characters displayed on the screen would be fading, please enter “Settings” interface and select “Global” to refresh the whole screen.
2. Due to the limitation of memory, some complex DOC, PDF and HTML files can't be decoded by the device.
3. Prevent impaired hearing
By using earphone for a long time, high volume will damage the hearing. Please adjust the volume at a lower level before using the earphone.
4. Technology service: tech@hanvon.com
5. Web site: <http://www.hanvon.com>.

Product maintenance

Software upgrade

Please download the legal upgrade package from Hanvon website. Copy “Update.bin” and “Update.cde” to the root directory of SD card.

Select “Settings” in the main menu, and select “System update”, then press number button “1”. The hint information “Are you sure to update system?” will pop-up. Press “OK” to confirm, the system will update automatically.

Note: *During the update period, please be sure the battery is not in low power status. After that, the system will restart and enter the main menu automatically. If the updating procedure is interrupted, there will be an error for the system.*

Operating environment

The operating temperature for this device is from 0℃ to 40℃ (from 32°F to 104°F). The performance will get worse, if the operating temperature extend this range. Please avoid using this device under the direct sunlight, in damp and dust place. In very cold areas, please avoid using this device outside in the winter.

Keep clear of the slot

The slots of the device is used for heat output, please keep clear of the slot.

Safety

The parts in this device are friable; please prevent the device from dropping,

smashing, bending and high pressure.

Please don't read during driving and riding.

Cleaning

Don't clean the device when it is power-on or charging.

Please use soft cloth or the other similar material (except cotton) to clean the screen and faceplate;

The foam, solvent, water, alcohol and the other cleanser (or spray cleanser) are forbidden.