

WINAUTO



(044)361-05-06

ICQ:495-089-192

(067)469-02-12

ICQ:613-211-859

(099)048-99-03

(093)672-77-76

User's Manual

Car DVR Prestigio Roadrunner 520GPS with display and GPS module

In the online store Winauto you also can buy [car DVR Prestigio Roadrunner 520GPS](#). Delivery in Kyiv and throughout Ukraine with payment upon receipt!

winauto.ua




Archive - Audio, video - Sound and Components - Security Systems - Video observation and parking - Car Goods - Automotive Lighting - Tweak - Car Chemicals and Power Supply - Sale -



1. Packing List

- | | | |
|-----------------------|---------------|----------------------|
| 1. Prestigio car DVR | 4. USB cable | 7. Quick start guide |
| 2. Suction mount | 5. HDMI cable | 8. Warranty card |
| 3. Car charger | 6. AV cable | |
| 9. GPS receiver cable | 10. CD Rom | |

2. Device Overview

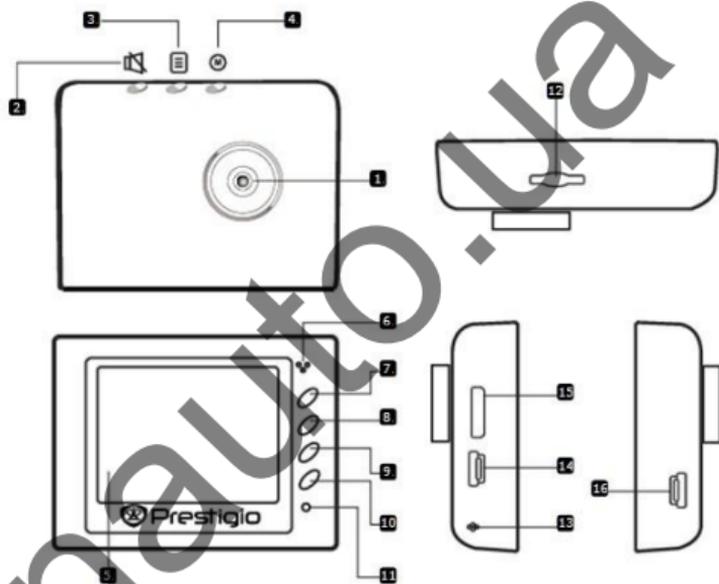

- | | |
|-------------------------------------|--|
| 1 Lens | 9 Down Button / Zoom out Button |
| 2 Sound / Screen Button | 10 OK Button |
| 3 Menu Button | 11 Reset Button |
| 4 Mode Button | 12 Micro SD card Slot |
| 5 LCD display | 13 Microphone |
| 6 Speaker | 14 USB Port |
| 7 Power Button | 15 HDMI Port |
| 8 Up Button / Zoom in Button | 16 GPS receiver port |

Getting started

3. Power on/Power off

- Position the device in the vehicle using the suction mount and press the Power button to turn it on. To power off the device press the button again.
- You can also connect the device to the car charger. It will automatically turn on and start recording when the car engine starts. When the engine stops, the device will automatically save the last file and turn off.

4. Charging

- Using the car charger: Connect the device to the car charger. The device will start charging after the car engine is turned on. The device will automatically turn on and start recording. When the engine stops, the device will automatically save the last file and turn off.
- Normally it takes approximately 2-3 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charge.

5. Inserting the Micro SD-card

- Before starting video recording, please, insert a Micro SD card (not included) into the Micro SD card slot in the device.
- To extract the Micro SD card slightly push it inside the device, and remove.

Note:

After inserting the Micro SD card the device will automatically recognize it as default storage and all the data will be saved on this card.

6. Recording

- To start recording make sure the Video Mode is selected. Press the **Record** button to start recording. The recorded files are saved on Micro SD Card. To stop recording, press **Record** button again or stop the car engine if the device is connected to the car charger. The light will turn off.
- With car charger connected the device will automatically turn on and

start recording.

Note:

Press **MODE** button to lock current file during recording and the locked file won't be replace until a manual unlock.

7. Taking pictures

- To take a picture make sure the Picture Mode is selected. Press the **Record** button to take a photo. Taken photos are saved on Micro SD Card.
- To zoom the lens in/out press **Up / Down** button.

Settings

8. Video Menu settings

Turn on the device and make sure the Video mode is selected.

Note:

To select Video or Picture Mode press the **Mode** button. The appropriate symbol will be displayed in the top right corner of the screen.

- Press **Menu** button to enter Settings. Press **Up / Down** button to select the option and press **OK** to enter, and then press **Up / Down** button to set the value.
- Press **Menu** button to enter Settings. Press **Up / Down** button to select which menu you want to set.

The following options list is available in the Video menu:

- **Movie Mode:** Select the video image size from 1920x1080 (30 fps), 1280x720 (60 fps), 1280x720 (30 fps), 848x480 (30 fps).
- **Movie Quality:** Select the video quality.
- **Movie Clip Time:** Select one of the values to set the video duration.
- **Power off Delay:** Select recording time after the engine stops.
- **Sound Record:** Select to turn the microphone on or off.
- **Mic. Sensitivity:** Select the sensitive of the Mic.
- **Scene Selection:** Select the video mode (such as sports, portrait, landscape or beach etc).
- **Exposure Adjust:** Select the exposure compensation (when the device fails to identify the correct exposure automatically).



- **White Balance:** Select the correct white balance according to the lighting conditions.
- **ISO Sensitivity:** Set the ISO.

9. Picture Menu settings

Turn on the device and make sure the Picture mode is selected.

- **Still Image Size:** Select the image size from 14M, 12M, 8M, 5M, 3M, 2M wide, 1.2M and VGA.
- **Still Quality:** Select the picture quality.
- **Scene Selection:** Select the video mode (such as sports, portrait, landscape or beach etc).
- **Exposure Adjust:** Select the exposure compensation (when the device fails to identify the correct exposure automatically).
- **White Balance:** Select the correct white balance according to the lighting conditions.
- **ISO Sensitivity:** Set the ISO.
- **Color:** Select the special color to apply to the image.
- **Effect:** Select the special effect to apply to the image.

10. Playback settings

The following settings are available:

- **Volume:** Select the playback volume and tone volume on key press.
- **Delete:** To select the file you want to delete.
- **Protect:** To protect or unprotect files.

11. Media Tool

The following settings are available:

- **Format SD-card:** Select to format the SD card.

Important note:

Once you select YES and press **OK** button the card will be formatted without warning. All data on it will be erased.

- **SD-Card INFO:** SD-Card storage status.

12. General settings

- **Beep:** Select the Beep Sound on or off.
- **Power Off:** Select the time of automatic power off when the device is not in use.
- **Clock Settings:** Install the current time.

- **Date/Time Format:** Install the date format.
- **Language:** Select the desired language from the list.
- **TV System:** Select TV output system.
- **HDMI Output:** Select HDMI output system.
- **Flicker Frequency:** Change frequency to remove the blinking effect when recording under artificial lighting.
- **USB Function:** Select the function of USB connection.
- **LCD Rotate:** The device can record video in 2 different positions – when the camera is on the top and when it is in upside down position. To make sure the video file is not played upside down, select LCD Rotate – On.
- **LCD Power Save:** Select the time for LCD turn off automatically during recording to save power.
- **Reset Setup:** Select to restore default system settings.
- **Version:** Displays the current system version.

13. USB connection

To download registered files on your PC/notebook, please, connect the device to the PC or notebook via USB-cable provided. After connecting the device to the PC, the device will appear in “My computer” as the removable disk. All registered files are stored in DCIM folder, videos are stored in AVI format, and the pictures are stored in JPG format. You can now download the files from the device.

14. Playback on TV

To playback the recorded files on TV connect the device to your TV with the AV or HDMI cable provided and follow the TV instructions or refer to your TV user manual.


Notes:

- Please insert the Micro SD card before recording. Micro SD card is not included in the package.
- When the Micro SD card is out of memory, it will automatically erase the oldest files and start recording from the beginning (only if the Recycle option is activated).


15. Playback on GPS Video Player

Firstly, insert the Driver CD into PC to start installation process, and then follow the instructions on screen to install driver step by step. Finally, restart PC when the process is completed.

Double click "GVP.exe" to enter GPS Video Player interface,

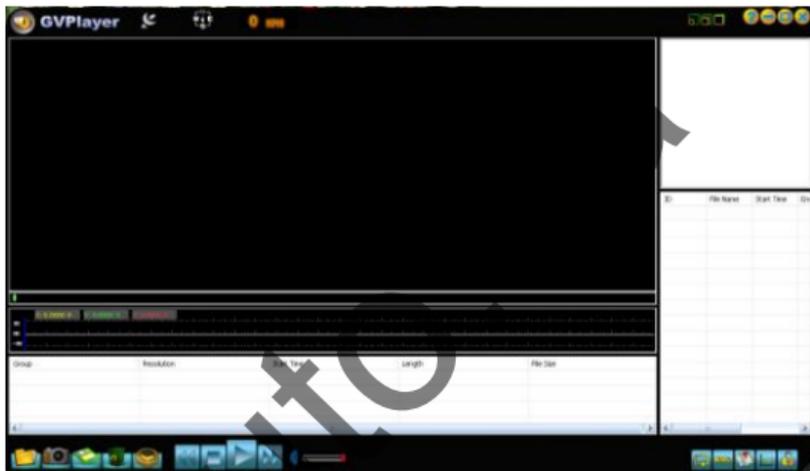

 and the following symbols may be displayed on the screen:



Click to open a video file or a folder



Take a snapshot from the playing video file



Copy the current video file to PC



Delete the current video file



 
Select the Map and Language



Playback control




Volume Control



Select to set repeat



 Save the KML file of the current Video file, which can be used on Google earth



Switch on / off the map



Switch on / off the wave chart of G-sensor



Unlocked the locked file



Display the driving speed



Max. or Min. the interface

EN **Safety precautions**

Please observe all safety precautions before using Prestigio Roadrunner 520GPS. Please follow all procedures outlined in this manual to correctly operate the device.

- Do not attempt to disassemble or alter any part of the device that is not described in this guide.
- Do not place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the device from the computer. Continuing use of the device may result in fire or electrical shock. Please consult your product distributor or the closest support center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.
- Never place the device in vicinity of equipments generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or data corruption and loss.

Technical Specifications

Recording resolution	1920x1080 (30 fps), 1280x720(60 fps), 1280x720(30 fps), 848x480 pixels(30 fps)
Video format	MOV
Picture format	JPG
Power source	Rechargeable battery and car charger
Interfaces	HDMI, USB, AV out, SD card (Supports max 32GB, high-speed SD card recommended)
Microphone	Built-in
Operating temperature	0 °~ 45°C

Video Storage Capacity

Storage card(G)	H.264 1080P	H.264 720P	848 X 480P (WVGA)	2592 X 1944 (5M)	3264 X 2448 (8M)	3264 X 2448 (12M)
8G	120min	120min	320min	4600 photos	2800 photos	1850 photos
4G	60min	60min	120min	2200 photos	1380 photos	900 photos
2G	30min	45min	60min	1100 photos	700 photos	450 photos
1G	15min	20min	30min	550 photos	350 photos	270 photos

Disclaimer

As the Prestigio products are constantly updated and improved, your device may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.