



Music Powerbox Manual

Thank you for purchasing the Tenergy Music Powerbox speaker! Powered by Bluetooth and an internal rechargeable battery, Powerbox takes freedom to another dimension. Before enjoying your music time, please take some time to read this User Manual. Thank you so much for your attention.

Features:

1. Bluetooth Version: 3.0
2. AUX in function.
4. Power Bank function.
5. Reset function

Buttons:

1. "⌘" **key:** Bluetooth connection reset
2. "←" **key:** Play previous song (press once); Reduce the volume (press and hold)
3. "+" **key:** Play next song (press once); Increase the volume (press and hold)
4. "▶" **key:** Play/Pause the song (press once); Turn the speaker on/off (press and hold)

How to Use



Bluetooth Mode:

1. Press and hold on ▶ button for 3 to 5 seconds to turn on the Powerbox (you will hear a "ding" sound to indicate the speaker is on).
2. Enable Bluetooth on your iOS, Android, Windows, or Bluetooth enabled device and search for "Music Powerbox" and select to connect the device. When the BLUE indicator light slowly flashes and makes a "tick" sound, the devices is paired.

If the Bluetooth searching is unsuccessful (exceeds 1 minute), the BLUE light will flash rapidly. Press and hold on the ⌘ button on the Powerbox to restart the process.

When you turn off the device after successfully pairing the device it will default to the previous paired device. If the device does not automatically sync, remove the device from your Bluetooth enabled device list on your mobile device and re-sync the devices.

Phone Function:

If there is an incoming call the Powerbox will make a repetitive sound indicating so. To answer, press the ▶ button to answer via the Powerbox to utilize the speaker phone function. If during the phone call you wish to transfer it to your handset, press and hold the ▶ button.

If you want to end or decline an incoming phone call, press the ⌘ button.

AUX In Function:

Connect the 3.5mm audio cable with the computer's (or other audio device's) output interface "🎧" and the Powerbox's AUX port. This will allow you to hear your devices audio through the Powerbox speaker.

Power Bank Function:

The 4 BLUE lights in queue are the indication lights for Power Bank. Each LED light indicates that 25% power. So from the left to the right, it means that 100% - 75% - 50% - 25% of the battery power. These 4 BLUE LED lights steady as a Battery Indicator, while they flash slowly from right to left means battery is charging. When the speaker battery is low in power, the 4 LED light will flash at the same time, 30 seconds later the device will shutdown

automatically. You should charge the speaker when you see the battery is low.

Use as a Power Bank:

You can easily charge your mobile phone using the Powerbox speaker. Just simply connect your mobile phone's USB charging cable to the Powerbox's USB port (5V/1A), and the device should start charging automatically.

Reset Function:

If you find the Powerbox is unable to pair or power on, reset the device by pressing the reset button located in the small port on the back (above the DC port).

Product parameters:

Battery: Lithium Polymer
Capacity: 5000mAh
Charging voltage: DC-5V
Output: 5V/1A
Control Range: About 26 ~32fts
Music Playback: 24hrs+ (fully charged)*
Weight: 267g
Weight: 90 x 40 x 100mm

* Actual play time may vary.