



---

Dear customer,

Thanks for purchasing CyberBox.

Please do look through this user manual carefully before using. There are functional guidance, product introduction, and application means, which will make your operating experience more convenient.

Any loss caused by misuse of software and hardware will not be our responsibility. We reserve the rights on final explanation of this user manual.

**Announcements:**

1. Place the product far away from high-intensity magnetic field and water. Make sure to keep it dry.
2. Avoid dropping or striking when you are using which will cause to damage and lost data .
3. Do not expose in moist atmosphere, raining, and damping.
4. Do not use chemicals or cleaning agent to clean it to prevent from damaging and corrosion.
5. Do not cut power suddenly in the course of upgrading and uploading to avoid data missing or program error.
6. Do not over charge the power and bend strongly or squeezing the power line to avoid the fire hazards.
7. Please do not use it within a gas station or near the fuel and chemicals.
8. Only the service man and qualified iView personnel is authorized to repair it.
9. Use original accessories and do not use accessories that match our product specification.
10. Read manual and get the specific instructions when connecting it to other electronic devices.

---

## Content

1.Preparation.....	2
2.Power.....	3
3.Operating Detail.....	4
4.Main Menu.....	6
4.1 System Main Menu.....	6
4.2 Browser.....	8
4.3 File Manager.....	9
4.4 Picture Browser.....	10
4.5 Music.....	12
4.6 Local Video.....	13
4.7 Browser (Internet Browsing and Online Video).....	14
4.8 Setting.....	15
4.9 Apk Installer.....	21
5 Calculator.....	22
6 Calendar.....	23
7 Email.....	23
8 Google Play Store.....	24
9 Specification.....	25
10 2.4G wireless remote.....	26

---


## 1. Preparation

### 1.1 Package Inner List

It includes the items in the box. Please check carefully and at once contact with local dealers if parts are missing.

Inner Contents	Quantity	Components name	Quantity
CyberBox	1	HDMI Cable	1
Wireless Keyboard	1	Y/Pb/Pr Cable	1
Manual	1	AV Cable	1
Adapter	1		

### 1.2 Appearance

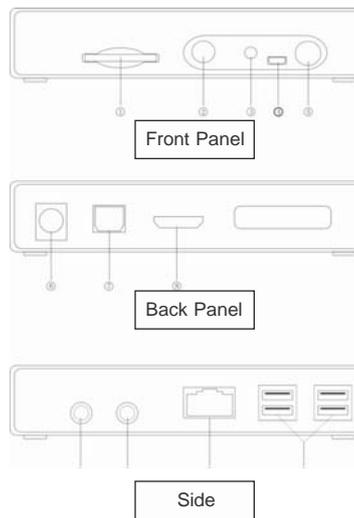

---

1	Card Reader	5	Power on/off	9	Y/ Pb/ Pr
2	IR	6	DC power	10	AV Out
3	Reset	7	Optical	11	Lan
4	Indicator	8	HDMI ports	12	USB

## 2. Power

---


2.1 Plug the miniport of AC charger to the DC port of CyberBox, and another end into power outlet. When the power indicator of Box changes to red, it means the power input is working properly.

Notice: In order to make sure TV Box operates under best condition, make sure to take notice of below:

- Do not power on in high temperature surroundings, such as in the sun or under direct light.
- Please unplug the power cord when the CyberBox does not work for a long time.

2.2 Connect the AV cable to the CyberBox and the display monitor, and output the video signals.

2.3 Connect the HDMI output of the CyberBox to the HDMI input of the TV if you use an HDMI Cable. Or, you can use RCA AV out of the CyberBox to connect the input of the TV.

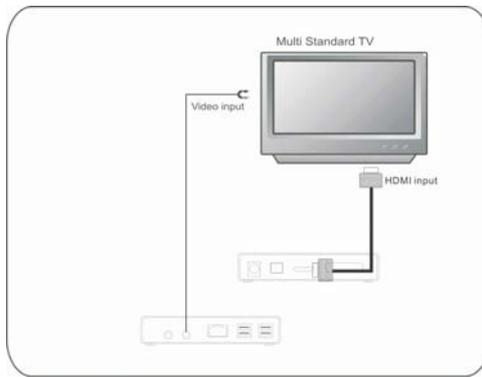

## 2.2 SD Card

here is SD card slot on the CyberBox to read the Multimedia files in the SD card. Please input the SD card properly according to the slot setting and push the card till it clicks, which indicates the card has been inserted right. When taking out the SD card, push the SD card once, and then release. The SD card will automatically pop up.

\* Please insert the SD card to the Slot properly.

\* When operating on SD card such as reading, copying, do not pull out the storage card to avoid any data error.

\* Avoid applying the SD card at places of high temperature, and humidity.

\* Keep the SD card far away from liquid and corrosive materials.

## 3. Operating Detail

---

### 3.1 Connect to TV

Connect the HDMI cable to the ports of the CyberBox and high resolution TV. If the display image is not properly, set the contrast ratio of TV to "Automatically".

### 3.2 Connect to Web

WIFI connection:

Set the WIFI connection at "SETTING"->"Wireless and Network" in WIFI available circumstances.

Ethernet Connect:

Connect the Ethernet cable to the web port, just the same way to computer Ethernet connection.


Wireless & Networks:

Setting: Click setting icons  , enter setting interface, and Click WIFI setting.

Power on WIFI



- Click needed network signal, write the code.

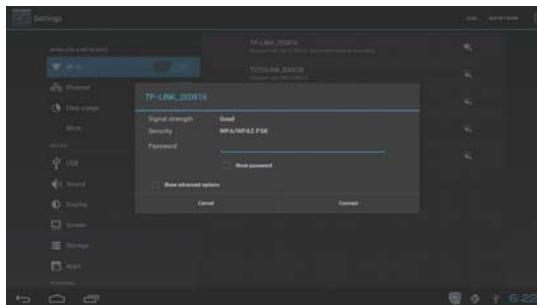

Setting Ethernet:



- For Automatically default IP address, there is no need to input IP address, subnet, and default gateway.
- For Static IP address, you need to input IP address subnet, and default gateway. Use soft keyboard to input IP address or use wireless keyboard.
- Click connect to confirm it.

## 4. Main Menu

---

### 4.1 System Main Menu

When power on, the CyberBox will automatically load into the system main menu, shown as below image. There are some functional icons to guide you.



1 ) Detail explanation of the functional icons on the menu:

MAIN	FUNCTIONS	MARKS
Video	Play Video	
Music	Play Music	
Gallery	Picture Browser	
Play Store	Go to Play Store	
Browser	Surf Internet	
Settings	Settings	

2 ) OS Interface

Click  to enter into the OS application interface






### 3) Operating on Main Menu

- Control the cursor by Touch Pad, and open the icon or program by clicking the icon with tapping the touch pad of the wireless keyboard.
- Click Apps icon to get into application interfaces.

## 4.2 Browser

After the web connection by WIFI or Ethernet successfully, click on the Icon of main surface, and get into the Browser interface. as shown below.

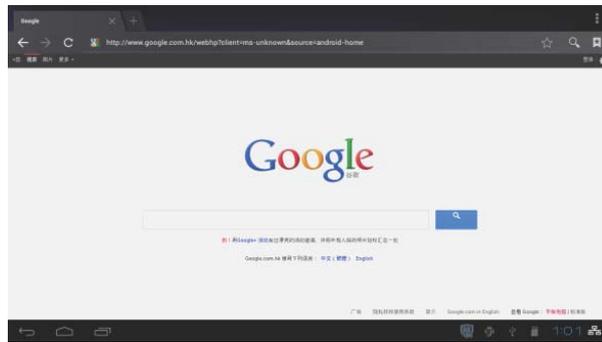

- Press the "RETURN" button of the Wireless Keyboard to close the surface.

### 4.3 File Manager

Use the touch pad of the wireless keyboard or use directional keys  to go the File Manager icon  and tap the touch pad of the wireless keyboard to get into the the file manager as shown below.



- Tap  to return to main surface.
- Tap  to return to upper surface.
- Tap  to choose multiple files and you are able to choose the file name.
- Tap  to add new file holder, input file name, and tap “confirm” to add.
- Click  may insert the internet shared function.



- Click return button of the wireless keyboard to get into the directory.

#### 4.4 Picture Browser

Tap  via touch pad of the wireless keyboard to enter the icon interface and the screen will show as below:



- Click on one of the image file and folder and click the picture and it will display as below:



- Click "Menu" to choose the movie, editor, spins to the right or left, clip, and make the photos.
- Click "Share" to use bluetooth and skype to send the pictures
- Click "Dustbin" to delete or cancel.




#### 4.5 Music



Click  icon to enter music player, as follow.



Choose one singer and the display shows as below:

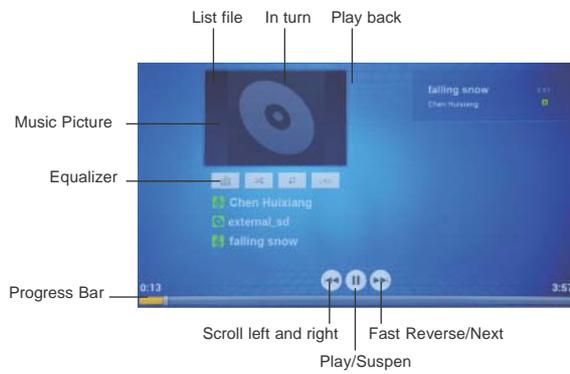


- Click "Scroll Bar" and "Fast Reverse" keys to move to the video
- Click  to cycle in the music played file.
- Click  to play the music by the broadcast list.
- Click  to open the Equalizer file list

#### 4.6 Local Video

Click  to enter video player as follow:



- Click on the video files into video player and begin to play video as follows:

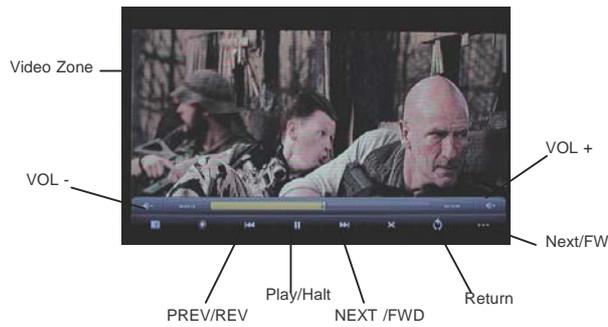

#### 4.7 Browser (Internet Browsing and Online Video)


After connecting to the internet by WIFI, click the  Browser icon to go to website interface where you input website addresses to go to the website you want or Online video website to play the video you like.



## 4.8 Setting




Setting: Click setting icons  , and enter setting interface.

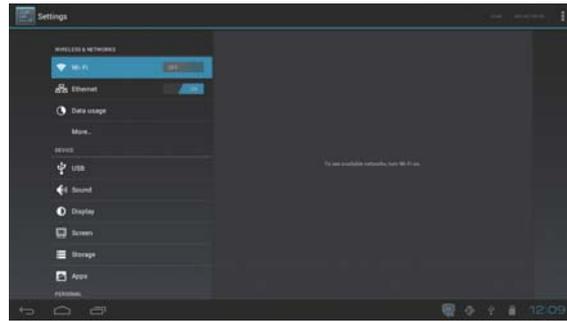


### 4.8-1 Sound

At Setting interface, click Sound, and enter into setting display as follows:

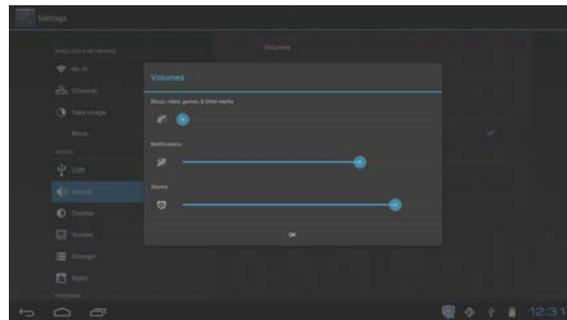


#### 4.8-2 Screen

At Setting interface, click  Screen, and enter into setting display as follows:

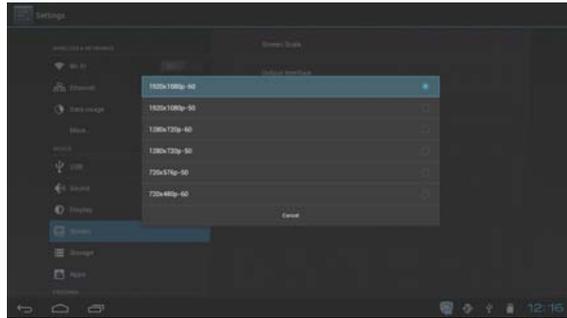


#### 4.8-3Accounts & sync

At Setting interface, click  Accounts & sync, and enter into setting display as follows:

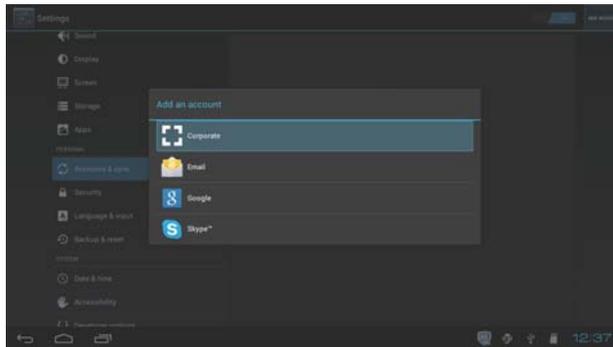

#### 4.8-4 Display

At Setting interface, click  display, and enter into setting display as follows:

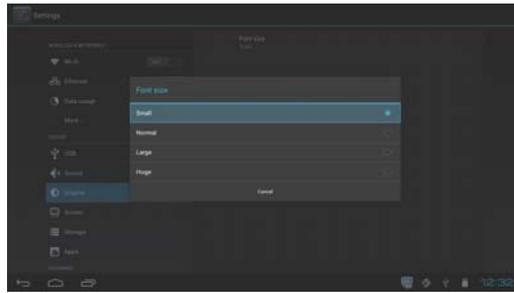

#### 4.8-5 Applications

At Setting interface, click  application, to enter into its interface as the following:



- Manage Applications: Manage and remove installed applications

Enter  "Setting">"Application">"Manage Application" and you will see the program list

1. Click to uninstall icons to get into the following interface

2. Click uninstall, then you can delete the application



#### 4.8-6 Security


At Setting interface, click  **Security**, and enter into setting display as follows:

**Unknown Sources:** For accessing and installing applications from Google Play Store go to "Unknown Resources" first and click once to make a "check" on the empty box on the top of right corner. Then you can download application from the market.




#### 4.8-7 Backup & input

At Setting interface, click  backup & input and it will show as following.

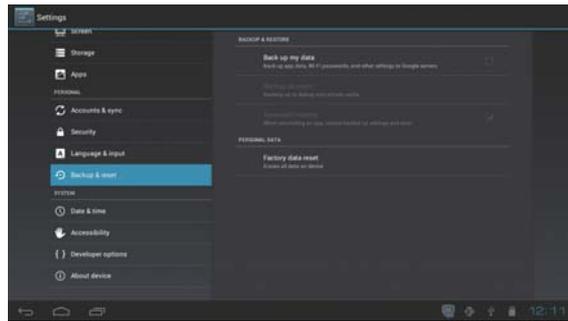


#### 4.8-8 Storage

Remove TF card, view of the available storage space

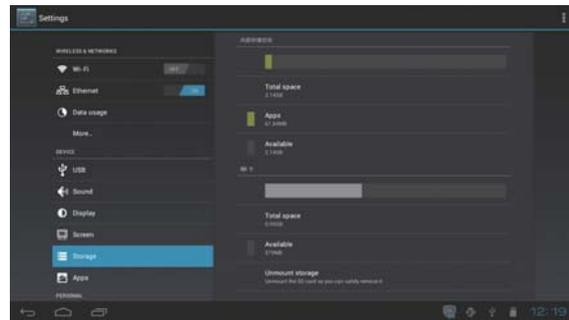

#### 4.8-9 Storage

Remove TF card and view available storage space.

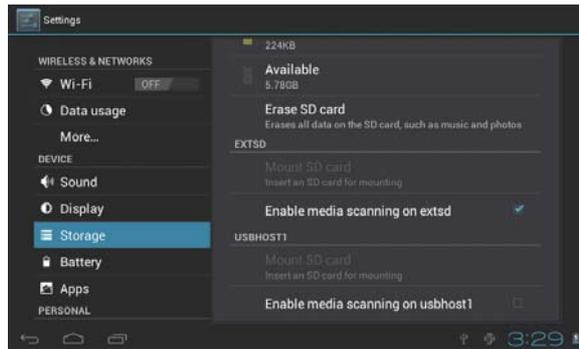

#### 4.8-10 Language & keyboard

Language Setting, text input, and automatic error correction options;



---

Select Language: 54 kind of national languages are available

- Remark: Android system can support 54 kind of language but menu interface supports 14 language.
- Android keyboard: Android keyboard setting
- Sound on Key-press
- Auto-capitalisation
- Show suggestions: Display suggested words while typing
- Auto-Complete: Spacebar and punctuation automatically insert highlighted words

#### 4.9 Apk Installer

Use mouse to click this icon to insert the main interface

click  to go to Apk Installer and you will see the below options. You can install and manage the files from the mobile storage such as flash drive and SD Card etc.






## 5. Calculator

---



Click  icon to use the calculator function as follow.

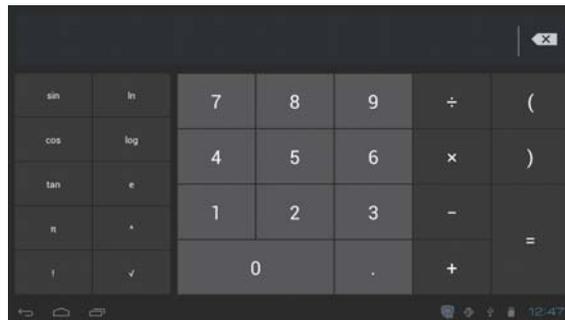


---

## 6. Calendar

---


You must first log in the Gmail Account first to view the Calendar

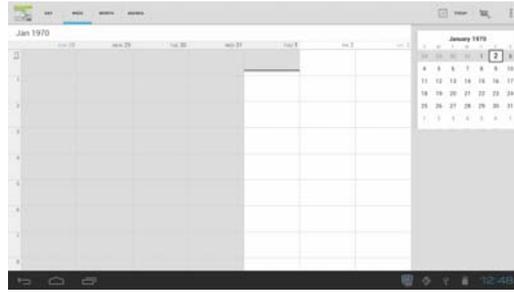

## 7. Email

---


Go to the website icon and get into the interface, a website page will pop up. Then enter the email website address you want to search such as Hotmail. You can input your account name and password to log in your email account.

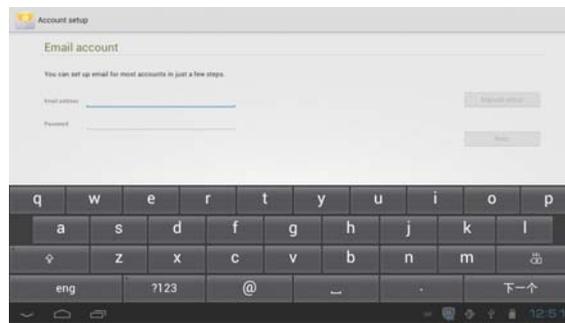

---

## 8. Google Play Store

---

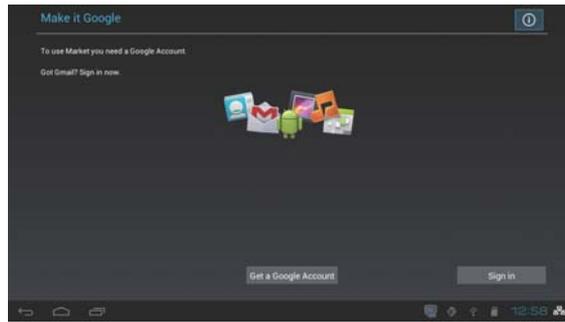


- To download applications from the Google Play Store you must first register a Gmail Account. After logging into the account you can access the Play Store.
- For installing applications from Google Play Store you need to go to "Unknown Resources" first and click once to make a "check" on the empty box on the top right corner. Then you can download application from the market.

## 9. Specification

Key Features	
Product	CyberBox
Processor Main Frequency	1.2GHz
RAM	DDR3-1GB
Memory	NAND 8GB
Memory	Copy to SD memory or removable hard disk
O/S	Android 4.0
Main Function	
Interface	Android style interface
Brower	Internet Browser
GOOGLE TV	Play local HD videos
Video	Connect to internet and watch video online
Audio	MP3/WMA
Music	Connect internet , listen music on line
Photos	View photos
External memory	SD memory or removable hard disk
Connectors and Ports	
USB	4 * USB HOST
SD	1 * SD card port
RJ45	Can connect to network by plugging network cable into RJ45 network port
HDMI	Connect HD TV , put out audio
Remote	Support IR remote and 2.4G wireless remote
Support	1080P HD output
Support CVBS	Audio, Video
Optical	Audio output
Power voltage	5V 2A DC adaptor
Others	
Resolution	1920*1080
Screen	No Screen, support HDMI output to TV
Size	125*125*28mm





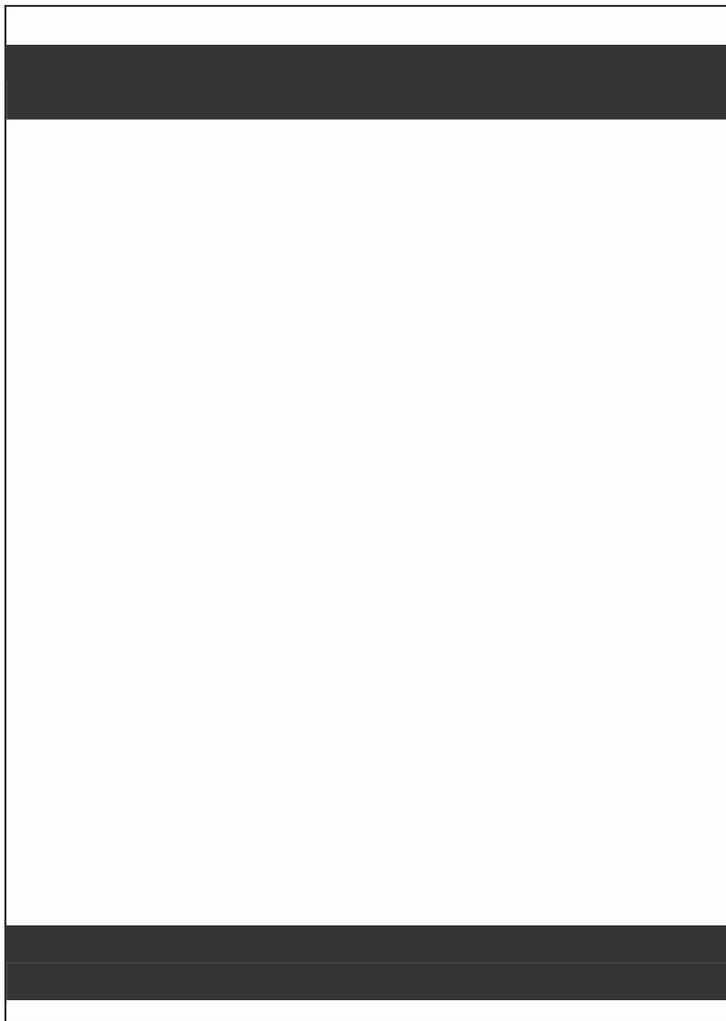

! ! !  
! ! !  
! ! ! ! ! ! !  
! ! !  
! ! !  
! ! ! ! ! ! !  
! ! !  
! ! !

*can also be four.*