

---

---

## Butterfly Spinner - #403

---

---

### USER'S GUIDE



**Enabling Devices**

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

New traditional toy that introduces you to the world of cause and effect. Simply press your capability switch (not included) creating a swirling blend of colors and music, and watch as the butterflies and ladybugs spin around. Size: 8.25"L x 8.25"W x 11"H. Requires 4 AA Batteries.

### **Operation:**

1. Butterfly Spinner requires four AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit over to reveal the black battery compartment. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and slide the cover off. Observing proper (+) & (-) battery polarity, install four AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Connect the Butterfly Spinner to any external capability switch via the jack, located on the base of the unit. The Butterfly Spinner is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.
4. Now actuate your external capability switch to start the Butterfly Spinner. The user will see a swirling blend of colors and music, as the butterflies and ladybugs spin around.
5. The Butterfly Spinner will only continue playing while the external capability switch is actuated. Once you release the switch, the Butterfly Spinner will stop.

### **Important Note:**

The push down spinner top has been disabled for manual use; the Butterfly Spinner can only be operated with the use of a switch. Trying to use it manually will cause damage to the Butterfly Spinner.

### **Troubleshooting:**

**Problem:** The Butterfly Spinner does not spin and/or there is no music.

**Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action#3:** Make sure that you have a tight connection between the external switch and the top. There should be no gaps.

**Action#4:** Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

### **Care of the Unit:**

The Butterfly Spinner can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**