


CRESCENDO™ CR-200 USER MANUAL

Product Interface

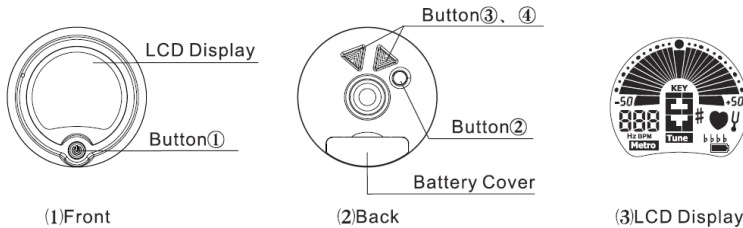

Button Functions

1. Remove battery cover and place battery in harness with “+” side of battery up. Install into tuner.
2. To turn the tuner on, press Button ① for two seconds. To turn off, press and hold Button ①.
3. Tuner Mode
 - Press Button ① to cycle between different tuning modes: C (Chromatic), G (Guitar), B (Bass), V (Violin), U (Ukulele).
 - Press Button ③ or ④ to adjust A440 from 435-445 Hz. The tuner is preset to 440 Hz.
 - Press button ② to transpose from one to four flat levels: b, bb, bbb, bbbb
 - After setting up the tuning mode, A440 frequency, and transpose function, clip the tuner onto the headstock of the instrument. For best results, after placing clip on the headstock, back off slightly so that only the top and bottom of the clip is touching the headstock.
 - Play a string. The tuner will indicate the pitch and the number of the string.
 - Flat-** the indicator is yellow
 - Sharp-** the indicator is red
 - In tune-** the indicator is green or blue in the middle of the display
3. Metronome Mode
 - Press button ② for two seconds to switch to metronome mode. The ♥ symbol on the screen will flash at 80 BPM. You can adjust the beat with buttons ③ and ④. Holding down one of these buttons will rapidly advance the tempo up or down 30-250 BPM.
 - For tap tempo, press button ① continuously for at least three times. The tempo will adjust to the tap.
 - Press button ② for two seconds to switch back to tuner mode.

Specifications

- Tuning Range: A435-445 Hz
- Tuning Modes: C (Chromatic), G (Guitar), B (Bass), V (Violin), U (Ukulele)
- 4 Semi-tones Flat Transpose: b, bb, bbb, bbbb
- Tempo: 30-250 BPM
- Battery: CR2032
- Size: 42x50x58 mm

Precautions

- Keep away from high temperature or humidity or direct prolonged exposure to sunlight.
- Avoid corrosive environments and magnetic fields.
- Use a dry soft cloth to clean the tuner. Do not use water or chemicals to clean.
- If tuner is in an abnormal state, remove the battery and re-insert after 30 seconds.
- When the display is not clear it is time to change the battery.
- Remove the battery to prevent leakage if unit is not in use for long periods of time.