

Radio Modem (Part # C-002 and C-003) Operation Manual

The Radio Modem (Part # C-002) and Base Station (Part # C-003) allow for wireless communication with a deployed HOBO[®] Weather Station or Micro Station (H21) logger. Using a Radio Modem Base Station plugged into the computer's COM port, you can contact the Radio Modem wirelessly, giving you the ability to launch, read out, and check the status of a remote H21 logger from your home or office. The Radio Modem is designed to be mounted on the same mounting pole or tripod mast used with the H21 logger, making setup convenient and easy.



Specification	900 MHz Radio Modem System	
	Radio Modem	Base Station
Radio Frequency	902 to 928 MHz, unlicensed ISM Band	
Radio Type	MaxStream™ 9XStream frequency hopping spread spectrum transceiver with 7 different hopping sequences through 25 channels. See www.maxstream.net for full radio specifications.	
Antenna	½ Wave Whip Antenna (also see Accessories below)	
Modem Communications Rate	19200 bps (max) throughput. May vary depending on signal quality	
Transmitter Power	100 mW	
Receiver Sensitivity	-107dBm	
Antenna Gain	½ Wave Whip Antenna: 2.1dBi 4 Element Yagi (optional accessory C-ANT-1): 8.2 dBi	
Operating Temperature Range	-20° to 50°C (-4° to 122°F), with Alkaline Batteries -40° to 70°C (-40° to 158°F) with customer supplied DC power supply	0 to 70° C (32° to 158°F)
Environmental Rating	Weatherproof	Indoor use only, non-condensing, non-fogging
Power	6 alkaline D cells (included); connector for user-supplied 400 mA DC Power adapter (2.1 mm ID [positive] 5.5 mm OD [negative]), minimum 6V, maximum 10V	9V, 400 mA DC power adapter (2.1 mm ID [positive] 5.5 mm OD [negative]) (included)
Battery Life	Varies with temperature, data logging rate (bytes/day) and frequency of connections. Typically provides 1 year of service when offloading daily or weekly and up to 10 months of service when offloading hourly. Battery life may be significantly reduced when used at temperatures below freezing. (See Table 1 for more details).	NA
Weight	2.1 kg (4.6 lbs) including D batteries	233 g (0.5 lbs)
Dimensions	14.6 x 22.2 x 5.7 cm (5.75 x 8.75 x 2.25 inches) not including mounting plate or antenna	14 x 7 x 3 cm (5.5 x 2.8 x 1.2 inches) not including antenna
Regulatory Compliance	Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference	

Specification	900 MHz Radio Modem System	
	Radio Modem	Base Station
	received, including interference that may cause undesired operation. Approved for use in the United States and Canada.	
Logger Compatibility	H21-001 and H21-002 (H21-002 requires Micro Station Adapter Cable Part # CABLE-HWS-F)	
Functional Range	Typically 3–5 km (2–3 miles) line of sight, or 150–300 m (1/8–1/4 mile) non-line of sight. Range increases to 5–7 km (3–5 miles) with optional Yagi antennas (for more info, see <i>Operational Range</i> on page 5)	
Network Size	At least seven units per location supported (see <i>Multiple Radio Modems</i> on page 11)	
Operational Indicators	Status LEDs: <ul style="list-style-type: none"> • Radio On • Receiving Data 	Status LEDs: <ul style="list-style-type: none"> • Power • Data In • Data Out
Battery Voltage Out	Screw-terminal connector allows for a voltage sensor connection (10K output impedance)	NA
Serial Communications Cable	1 meter (3.3 ft) weatherproof cable connects to the external communications port on the HOBO Weather Station and HOBO Micro Station (H21-002 requires Micro Station Adapter Cable Part # CABLE-HWS-F)	2 m (6.6 ft) RS232 DB9 M/F Serial Cable connects to computer serial port
Enclosure Access	Cover secured by six screws	NA
Mounting	Clamps to mast of 4.1 cm (1.6 inches) maximum diameter with included U-bolts and clamps or vertical surface with screws (not included)	NA
Accessories	900 MHz 4-Element Yagi Antenna (Part # C-ANT-1) Grounding Kit (Part # M-GKA)	NA



WARNING: Severe shock hazard. Before installing any HOBO Weather Station or Micro Station tripod or mounting pole, ensure that there are no electrical power lines overhead. Do not install the system during any atmospheric electrical activity. Do not assemble or transport tripods, mounting poles, or other structures unless there is sufficient clearance from potential electrical sources or other obstructions.



WARNING: Do not climb on or around the HOBO Weather Station or Micro Station tripod. The HOBO Weather Station and Micro Station and any of its associated hardware, towers, poles, etc. are not designed to support the weight of a person. Injury may result.



WARNING: If using stakes to stabilize the tower or grounding rod, ensure that there are no underground wires or pipes before installation.



WARNING: Electrical hazard. Make sure the HOBO Weather Station or Micro Station is properly grounded to reduce the chance of damage from electrical storms and activity.



WARNING: This equipment is approved only for mobile and base station transmitting devices, separation distances of (i) 20 centimeters or more for antennas with gains < 6dBi or (ii) 2 meters or more for antennas with gains ≥ 6dBi should be maintained between the antenna of this device and nearby persons during operation. To ensure compliance, operation at distances closer than this is not recommended.

Radio Modem components and accessories

The Radio Modem Communications System works with H21 loggers only. The following components are required to add wireless communications to an existing or new H21 system:

- 900 MHz Radio Modem (Part # C-002). This is a wireless modem that is connected to the logger. Data from the logger is then transmitted wirelessly, via radio antenna signal, to a base station connected to a computer.

- 900 MHz Radio Modem Base Station (Part # C-003). This is the component that sends and receives data from the Radio Modem. It connects to the computer via COM port.
- Remote Site Manager software (Version 1.1 or greater) with PC cable (Part # RSM), which is included with the Base station (Part # C-003)

Optional accessories:

- Yagi antenna kit (Part # C-ANT-1). This is a directional antenna with higher gain that can be used in place of the built-in 1/2 wave whip antenna on the Radio Modem to increase the communication range.
- Grounding Kit (Part # M-GKA) required if using the optional Yagi antenna kit or any third-party antenna, otherwise optional.
- Guy Wire Kit (Part # M-GWA) may be appropriate for some locations to avoid vibrations and oscillations when deploying the system where winds will be 30 MPH or greater.

Setting up the Radio Modem

IMPORTANT: Before mounting the Radio Modem with the H21 logger and deploying it outside, you must first configure the Radio Modem for wireless communication. This involves assigning channel and address numbers to the Radio Modem using Remote Site Manager software, and then completing a bench test with the Radio Modem Base Station.

Configure the Radio Modem

1. Install the Remote Site Manager software, version 1.1 or higher (see the *Remote Site Manager User's Guide* for details).
2. Unscrew the cover from the Radio Modem.
3. Insert the six D-cell batteries, observing polarity.
4. Connect the PC cable (included with Remote Site Manager software) to the computer's COM port. Ensure that the cable coming out of the Radio Modem is not connected to a logger.

5. Plug the other end of the PC cable into the serial jack on the Radio Modem (labeled COMM PORT).



PC cable plugged into comm. port

6. Using the Remote Site Manager software, set up a remote site profile, selecting a Radio Modem as the connection route. **IMPORTANT:** When setting up the profile, you must assign an address and channel number to the radio modem by clicking the Remote Module Configuration button. **The address and channel number must be set before operating the system, otherwise the Radio Modem will not be able to transfer data from the logger to the base station.** For additional details on setting up a profile, see the Quick Start in the *Remote Site Manager User's Guide*.
7. Once configured, unplug the PC cable from the Radio Modem and from the computer.

Set up the Radio Modem Base Station

1. Screw the ½ wave whip antenna into the Antenna Port on the Radio Modem Base Station. If using the optional Yagi antenna, follow the steps for mounting the antenna on page 8.
2. Plug the power adapter into the 7-18VDC jack on the Radio Modem Base Station, and then plug into an electrical outlet.
3. Connect one end of the serial cable to the Serial Port on the Radio Modem Base Station. Connect the other into the same COM port on the computer you used to configure the Radio Modem.
4. Turn on the power on the Radio Modem Base Station.

Test radio modem with logger

1. Connect the weatherproof communications cable that is built into the Radio Modem to the logger.

To connect to a Weather Station, remove the protective cap on the right side of the logger enclosure and plug the communications cable into the connector.

To connect to a Micro Station, plug the communications cable into the External Communications Port Adapter Cable (Part # CABLE-HWS-F) attached to the logger.
2. Use the Remote Site Manager software to contact the logger using the profile you created when you configured the Radio Modem. Make sure the channel and address for the base station match

those for the Radio Modem connected to the logger. For instructions on using the software, see the *Remote Site Manager User's Guide*.

3. If you will be deploying multiple Radio Modems with a single base station, you should verify communication with each of them to ensure there are no channel or address conflicts.

If you have trouble contacting the logger, refer to *Troubleshooting* on page 13.

Mounting/assembly instructions

Before you begin

IMPORTANT: You must complete the steps in *Setting up the Radio Modem* before completing these instructions. The Radio Modem must be configured as described in the previous section before it is deployed.

Tools required

- Medium sized Phillips head screwdriver
- 1/2 inch wrench
- 3/4 inch open-ended wrench or 8–10 inch adjustable wrench
- Cutters for trimming the zip ties

Operational range

The operational range for the radio modem system varies depending on where you place the logger and radio modem. The range is typically 2 to 3 miles line of sight, 400m (1/4 mile) non-line of sight. Range may be increased further with optional Yagi antennas. When selecting a location to deploy the logger and radio modem, factor in both the distance between the radio modem and base station and the environment in that distance. You can optimize the reception in marginal locations by doing the following:

- Move the antennas to get a true line of sight. Trees, hills, buildings, and other obstructions will interfere with radio reception. Even a single tree or obstruction can significantly reduce signal quality and range.
- Place the antennas as high as possible. It may be necessary to use a taller mast and/or longer cable lengths to obtain optimum range.
- Use a higher gain antenna such as a Yagi directional antenna instead of the ½ wave whip antenna.
- Mount the base station with its antenna in a window facing the station. Radio waves will go through the glass better than building walls. If necessary, you can add a serial extension cable between the PC serial port and the 2 m (6.6 ft) RS232 DB9 M/F Serial Cable that connects to the base station. (Note: RS232 may not function properly at distances exceeding 15 m (15 ft).
- Mount the base station antenna outside the building using as short an extension cable as possible. You will need to provide your own extension cable.
- Mount antennas away from metallic objects to avoid interference. Metallic objects should be at least half a wavelength (10 cm [6 inches]) away from the sides of the antenna. No metallic objects should be in front of the antenna (between the antenna and the base station/Radio Modem).
- Both the base station antenna and the Radio Modem antenna should have the same polarization. For example, if the Radio Modem antenna is vertical, then the base station's antenna should also be mounted vertically. This is normal operation when the Radio Modem is mounted on a pole. If you are using the Yagi antenna, the grey PVC part should be mounted up and the whip antenna at


the base station should be mounted up. If the Yagi is mounted sideways (elements are parallel to the ground), then the whip antenna on the base station should also be oriented parallel to the ground.

Not all sites will work. In some cases the only solution may be to move the radio modem closer to the base station or to a better location (i.e. higher or direct line of sight).

Once the logger data is downloaded via radio modem, you have the option of sending the data to others automatically. This can be done by configuring the Remote Site Manager software to send logger via email or FTP. This requires a connection to the Internet. For details on setting up email and FTP data transfer and the minimum requirements needed, see the *Remote Site Manager User's Guide*.

Note: The Radio Modem and Base Station may interfere with the operation of 900 MHz cordless phones, computer speakers, and other electronic devices.

Steps for mounting Radio Modem

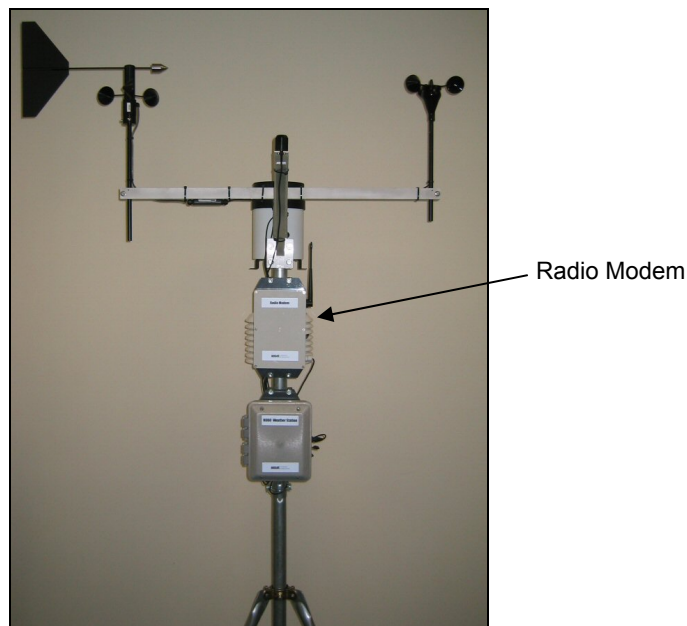

Tools required

- Medium sized Phillips Head screwdriver
- 1/2 inch open-ended wrench


Before choosing the site where you will be installing the logger, Radio Modem, and antenna, read the mounting guidelines in the *Operational Range* section on page 5.

1. Make sure the batteries are installed correctly in the Radio Modem
2. Place the two desiccant packs inside the Radio Modem body.

3. Screw the cover onto the Radio Modem.




4. Assemble the tripod and mount the logger. See the *HOBO Weather Station User's Guide* or *HOBO Micro Station User's Guide* for instructions on assembling the tripod.
5. Using the two 1-5/8 inch U-bolt assemblies provided, mount the Radio Modem on the mast just above or below the logger enclosure. **Note:** When assembling the U-bolts, place them around the upper mast, and install the saddle clamp. Place the Radio Modem against the saddle clamps as shown in the following photo and hand-tighten the U-bolt nuts.

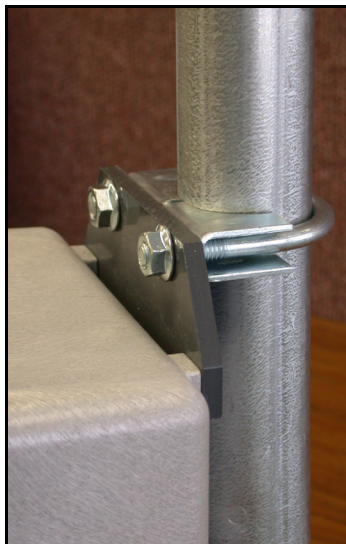

6. If you are using the Guy Wire Kit, position the radio modem so that it will not be in the way of the guy wires.
7. Tighten all four U-bolts with a 1/2 inch wrench until the Radio Modem is secure on the mounting pole.

8. A weatherproof communications cable is attached to the side of the Radio Modem. Take the other end of this cable and plug it into the side of the logger. Twist the collar of the connector clockwise to lock it into place.

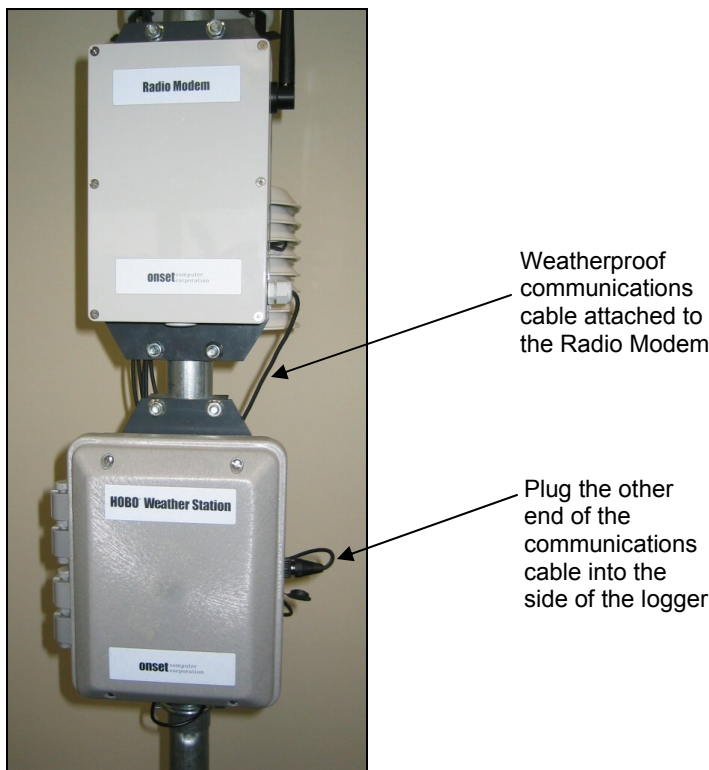

Steps for mounting Yagi antenna


IMPORTANT: The HOBO Weather Station or Micro Station must be grounded before installing the Yagi antenna (use Grounding Kit, Part # M-GKA) or an equivalent grounding system.

Tools required

- Medium sized Phillips Head screwdriver
- 5/16 inch open-ended wrench
- 3/4 inch open-ended wrench
- 1/2 inch open-ended wrench
- Medium-sized pliers

Important: The following steps should be completed before checking modem operation and before the modem is deployed.

1. Remove the ½ wave whip antenna from the side of the logger. Begin by opening the Radio Modem and unscrewing the cable from the radio module (a 5/16 inch wrench may be required). The radio module can be carefully removed by lifting up on it gently. Use a ¾ inch open-end wrench to remove the nut and lock washer on the inside of the right angle connector on the left-hand side of the box. Carefully feed the cable and connector out from the enclosure. Save this cable/antenna assembly in case you want to use it in the future.

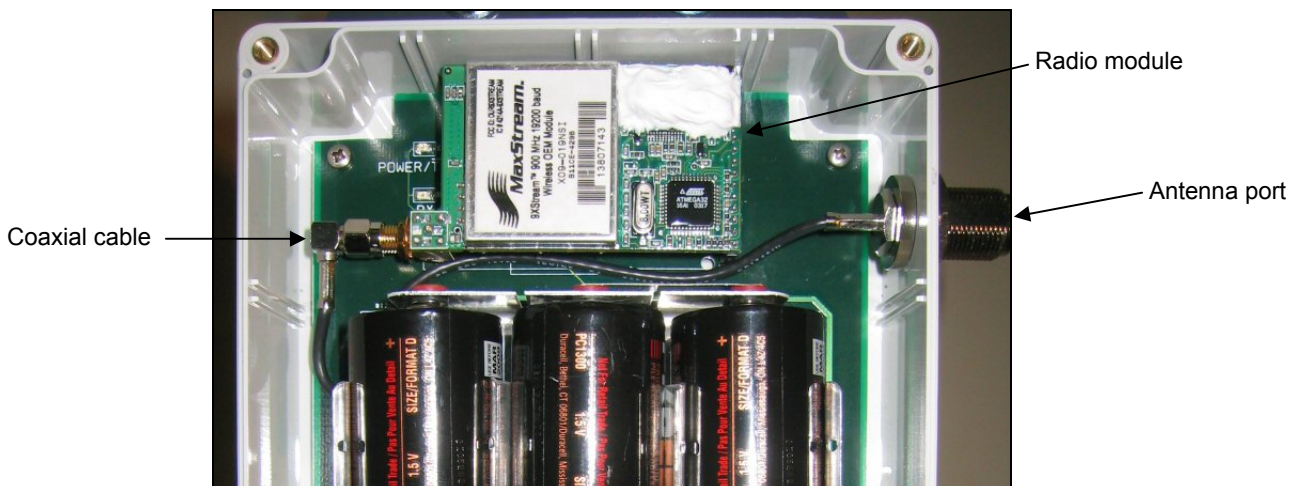


2. Attach the extension cable supplied with your Yagi antenna carefully to the radio module, and feed the N Bulkhead connector through the case from the inside (make sure that the back o-ring is in the groove of the connector). Install the lock washer and nut from the outside of the case and tighten. Double-check that the radio module is firmly installed, and all the pins line up, and then replace the cover of the Radio Modem.
3. Note: Use a 5/16 inch wrench to gently tighten the coaxial cable connection to the radio module. The connector can be damaged if it is over-tightened, but it should not be loose either.


Installing the Yagi antenna in the field

Before choosing the site where you will be installing the logger, Radio Modem, and antenna, read the mounting guidelines in the *Operational Range* section on page 5. The Grounding Kit (Part # M-GKA) is required when using a Yagi antenna.

1. Using the inch U-bolt assembly provided, mount the antenna high as possible (typically just below the cross arm). **Note:** When assembling the U-bolts, place them around the upper mast, and install the saddle clamp. Place the antenna against the saddle clamps as shown in the following photo and hand-tighten the U-bolt nuts.

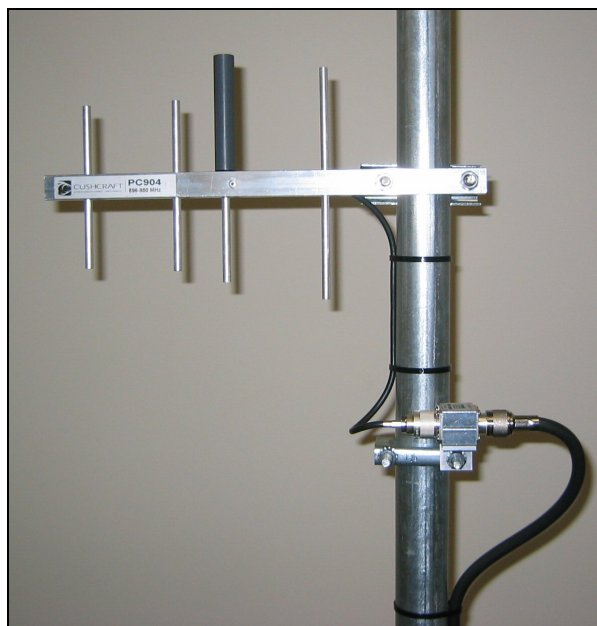


2. Screw the lightning protective device into the loose end of the antenna cable. The lightning protection device then must be mounted firmly on the (grounded) tripod to a U-bolt as shown above. Attach the other end of the lightning protective device to the Radio Modem using the supplied RG-213 coaxial cable. The lightning protection device **MUST** be firmly mounted on the (grounded) tripod for it to function properly.
3. If practical, test the system now before applying the weatherproofing tape.
4. Take the butyl rubber tape and wrap it completely around the lightning protection device and attached connectors. Then, use the vinyl black tape and wrap all the butyl rubber tape. This will form a watertight seal around the connectors and the lightning protection device. The butyl rubber and vinyl tape can also be used to seal the coaxial connection to the Radio Modem

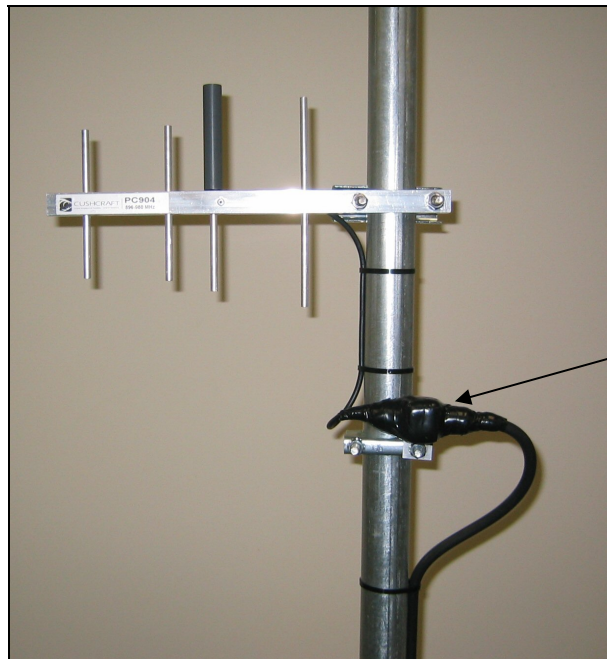

Vinyl tape surrounding butyl rubber tape on lightning protection device

5. Tighten the U-bolt with a 1/2 inch wrench until the antenna is secure on the mounting pole.
6. Secure the cable along the tripod with tie wraps.

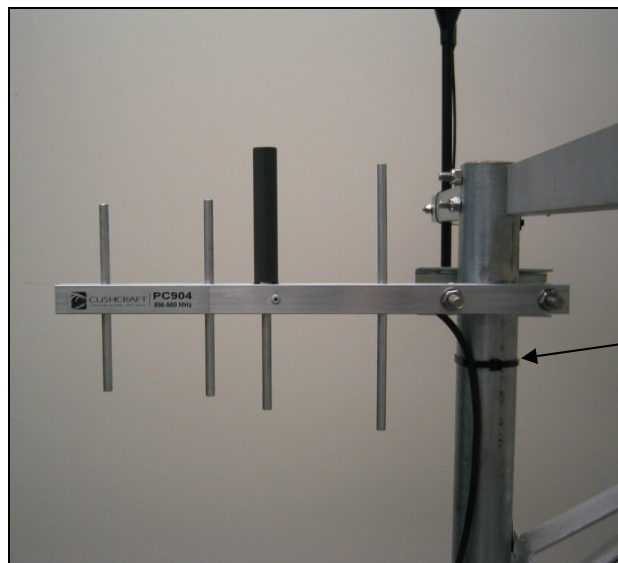


Tie wrap

Radio Modem operation

Once the Radio Modem is installed, use the Remote Site Manager software to connect to the logger. For complete instructions on connecting to the logger via Radio Modem, see the *Remote Site Manager User's Guide*.

There are two lights inside the Radio Modem that serve as operational indicators (see below). The Power light (labeled POWER/TX) indicates the Radio Modem is powered up. The Connected light (labeled RX) indicates the Radio Modem is sending or receiving information from the Radio Modem Base Station. During normal operation the Power/Tx light will flash every 16 seconds. This happens when the Radio Modem “wakes up” and checks to see if a base station is trying to contact it. When the Radio Modem wakes up, the Power/Tx light will be on most of the time and will flicker when the Radio Modem is transmitting.

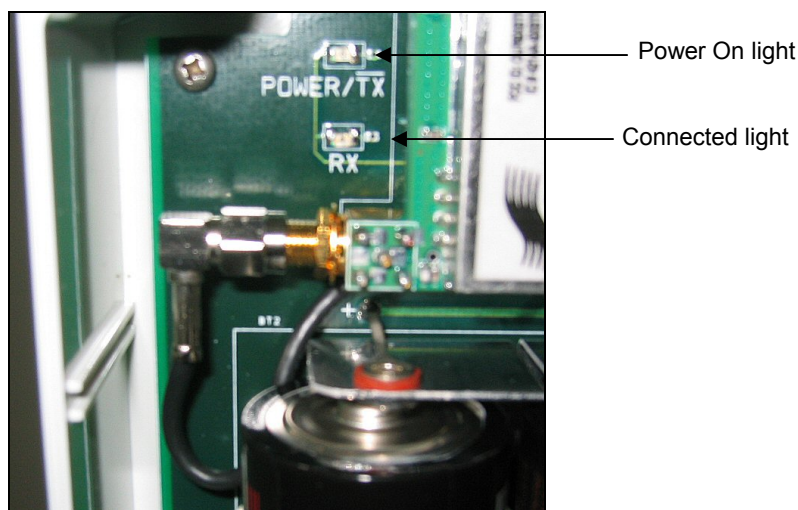

Multiple Radio Modems

You can deploy multiple Radio Modems, each connected to a logger, as a network. Only one base station is required for contacting multiple Radio Modems. When configuring the Radio Modem with Remote Site Manager, a channel and address is assigned to the Radio Modem. These numbers make it identifiable on the network by the base station. The channel can be any number from 1 to 7 and the address can be any number from 1 to 65535. In theory, the maximum network size could be quite large (the maximum number of channels multiplied by the maximum number of addresses, or 7 X 65535). In reality, however, there are limitations to the number of Radio Modems and loggers you can deploy. There are two factors that affect how many systems you can expect to deploy successfully:

- How often you will be calling each Radio Modem. The more frequently you contact a Radio Modem, the less time it leaves to contact other Radio Modems.
- How many Radio Modems are using the same channel. Any time you contact one Radio Modem on a certain channel, all other Radio Modems on the same channel wake up, which depletes the battery life more quickly. For example, when two multiple radio modems are on the same channel, you will be calling each twice as often as you would if each had their own channel, which can lead to battery depletion twice as quickly as normal.

If you will be configuring more than one Radio Modem, but less than seven: Each modem should have a different channel number and any module address. This will prevent multiple modems with the same channel from powering up when a given modem on that channel is contacted and will maximize battery life.

If you will be configuring more than seven Radio Modems: Modems that share a channel address must have different module addresses, and again you should spread out the Radio Modems across as many channels as possible to maximize battery life. Every modem that is on the same channel gets powered up whenever any one modem on that channel is contacted.

Batteries

Choosing a power source

The Radio Modem can be powered by either batteries or a user-supplied 9V DC adapter. Battery power consists of six D alkaline batteries. If you use an external power supply, the batteries can remain in the Radio Modem and function as a backup to the external power supply. Use the following table to determine which power source is best for you.

Battery/power source configuration	Recommended for use when:
D alkaline batteries	<ul style="list-style-type: none"> Offload frequency is twice a day or less frequent Offload frequency is hourly and you have access to the system to change batteries every five to ten months (see Table 1 next page) Temperatures are between -20° to 50°C (-4°F to 122°F)
External 9V DC	<ul style="list-style-type: none"> Offload frequency is hourly or more frequently AC power is available Temperatures exceed the battery operation range of -20° to 50°C (-4° to 122°F)

Approximate battery life of the Radio Modem

Expected battery life varies based on the amount of data being transferred (number of sensors and logging interval) and the frequency at which you connect to the modem. The following table shows typical battery life for several configurations of loggers.

Offload Frequency	H21-00x with four 10-bit sensors 1 minute logging interval	H21-00x with ten 10-bit sensors 1 minute logging interval	H21-00x with four 10-bit sensors 15 minute logging interval	H21-00x with ten 10-bit sensors 15 minute logging interval
5 minutes	2 months	2 months	NA	NA
15 minutes	5 months	4 months	6 months	5 months
1 hour	7 months	5 months	10 months	8 months
12 hours	8 months	6 months	12+ months	12+ months

Table 1: Typical modem battery life

You can check whether the Radio Modem batteries are low with the Remote Site Manager. Connect to the logger and check the Remote Battery on the status tab, which will list either “good” or “low.” A “low” remote battery status indicates that approximately 10 to 20% of battery life remains. If low, replace the batteries and follow these recommendations:

- Make sure the Use Before date on the battery housing is at least two years from the current date.
- Alkaline batteries will lose up to 10% of capacity a year sitting on a hot shelf and can lose up to 50% or more if “cooked” repeatedly (for example, if stored on a car dashboard). Placing batteries

in the refrigerator can reduce self-discharge to 1 to 2% per year, but they should be protected so that condensation does not form on the batteries.

- Check and if necessary replace the H21 logger batteries. Note: The logger and Radio Modem's power supplies are independent and both should be checked and changed as required.

Battery voltage sense terminals

The modem has screw terminals for measuring the primary battery voltage (D cells or 9V input). This terminal has a 10K output impedance and is not suitable for powering any external devices. Total voltage for six fresh D cell batteries is 9.0 to 9.6 volts. Replace the batteries when the total voltage for all six D cells is 6.0 to 6.6 volts.

Maintenance

The Radio Modem enclosure should not require regular cleaning. However, in the event that it becomes dusty inside the enclosure, you can blow it out with compressed air. Do not allow water inside the enclosure. In the event that moisture gets into the enclosure, carefully dry it out with a fan or lamp (do not use a heat gun).

In addition, as part of regular H21 logger maintenance, you should periodically check the system and make sure all screws and bolts are tightly secured.

Replace the batteries on a regular basis using the above battery life chart as a guide. You may need to use a screwdriver to gently pry the D cell batteries out of their holders when replacing them.

The desiccant pack included with the Radio Modem is an indicating desiccant pack, which means it changes color from bright blue to light pink when it is no longer absorbing moisture. If the desiccant pack is blue, it is still good. If it is pink, it needs to be reconditioned or replaced. To recondition a desiccant pack, place it in a warm, dry spot until it turns blue. For example, place the desiccant pack in an oven set to 50 to 70°C (122 to 158°F) for 24 hours. Once it turns blue again, you can place it back in the modem. If the desiccant pack is light pink, also check for condensation within the modem. If there is condensation, check that the fittings are still tight and make sure the cover's gasket is clean and there is no damage to the Radio Modem housing. If moisture remains a problem, consider moving the modem and logger to a drier location.

Troubleshooting

Use the following chart to help you resolve problems with the Radio Modem system.

Problem	Possible Solutions
Cannot connect to the logger at all	<ul style="list-style-type: none">• Make sure the Base Station is plugged in and the power is on.• Check that the Base Station is connected to the correct COM port; this should be the same COM port specified in the Remote Site Manager profile.• Verify that the Power LED on the Radio Modem is on or flashes at least every 16 seconds. If not, verify that fresh batteries are installed properly in the Radio Modem.• Check that the correct channel, address, and sleep time is set in the profile for the Radio Modem.• Check that the Radio Modem is plugged into the data logger. Also make sure the logger is not connected directly to the computer with the PC interface cable.• Make sure that the antennas on both the Base Station and Radio Modems are connected.• Make sure you are using the correct profile in the Remote Site Manager to connect to the logger.

Problem	Possible Solutions
	<ul style="list-style-type: none"> Verify that you can communicate directly with the logger using just the PC cable. If you cannot, the logger may need new batteries or have another problem. Consult the logger's user guide for more details. Verify that you are using Onset-supplied MaxStream radio modules. Standard radio modules from MaxStream will not work with the C-002/3 system without modification by Onset.
Cannot connect to the logger at long range	<ul style="list-style-type: none"> Verify all steps above. Move antenna(s) so that a line-of-sight condition exists (see <i>Operational Range</i> section for mounting recommendations). Increase the height of the antenna(s). Switch to a higher gain antenna (use a Yagi antenna instead of the built-in Radio Modem antenna) Verify the Radio Modem and Base Station antennas have the same polarization (vertical or horizontal) Verify that there are no metallic objects within 10 cm (6 inches) of the antennas
Connections to the logger are intermittent	<ul style="list-style-type: none"> Check for loose connections; tighten and waterproof all external antenna connections If the signal seems to be marginal, has something changed at the site? Vegetation and traffic can block the signal. Check the sleep time is set correctly. The sleep time set in the Remote Site Manager profile should match the sleep time in the Radio Modem.
Premature battery failure	<ul style="list-style-type: none"> The sleep time may not be optimized. Set the sleep time for 16 seconds for maximum battery life. The call frequency may be too high. See the Battery Life table on page 12 for more details. The operating temperature may be too cold. Minimum operational temperature is -20°C (-4°F). Customer supplied 9V DC source is required for operation below -20°C (-4°F).
Moisture in the modem enclosure	<ul style="list-style-type: none"> Verify that all thru-hole fittings are snug and in good condition. Replace desiccant if color has changed from blue to pink. Check seal on modem cover and tighten all screws.

Warranty

This product is warranted to be free from defects in material and workmanship for a period of one year from the date of original purchase. During the warranty period, Onset will, at its option, either repair or replace products that prove to be defective. This warranty is void if the Onset products have been damaged by customer error or negligence, or if there has been any unauthorized modification.

Support

For support, contact your place of purchase (Onset Computer Corporation or Authorized Onset Dealer), or visit www.onsetcomp.com or www.hobohelp.com.

Onset Computer Corporation
P.O. Box 3450
Pocasset, MA 02559-3450
470 MacArthur Blvd.
Bourne, MA 02532
Sales: 1-800-LOGGERS (1-800-564-4377)
www.onsetcomp.com
sales@onsetcomp.com

Returns

Note: Please direct all warranty claims to the place of purchase.

Before returning a failed unit directly to Onset, you must obtain a Return Merchandise Authorization (RMA) number from Onset. You must provide proof that you purchased the Onset product(s) directly from Onset (purchase order number or Onset invoice number). Onset will issue an RMA number that is valid for 30 days. You must ship the product(s), properly packaged against further damage, to Onset (at your expense) with the RMA number marked clearly on the outside of the package. Onset is not responsible for any package that is returned without a valid RMA number or for the loss of the package by any shipping company.

Repair Policy

Products that are returned after the warranty period or are damaged by the customer as specified in the warranty provisions can be returned to Onset with a valid RMA number for evaluation.

ASAP Repair Policy

For an additional charge, Onset will expedite the repair of a returned product.

© 2003 Onset Computer Corporation. All rights reserved.

Onset and HOBO are registered trademarks of Onset Computer Corporation. MaxStream is a trademark of MaxStream, Inc.

Part #: MAN-C-003
Document #: 8159-A