



Ebook Reader

User Manual

Thank you for purchasing our products. For optimum performance and safety, please read this operation manual carefully before connecting, operating, or adjusting the product. Please keep this manual for future reference.

Safety Information

Please read all instructions before usage

- Please note only after two or three charging cycles will the battery reach top performance.
- The new battery should be extended 3-4 hours after charged up well at the first 3 times, then charged up the battery to be full in the fourth time.
- To avoid the loss of information, we suggest the user copy the important data, especially be sure to copy the data before upgrading the hardware. Damages resulting from data loss are out of our company responsibility.
- This device is a high precision electronic product; please do not dismantle by yourself.
- Be careful to avoid falls or impacts to this player.
- Avoid use in the following circumstances: high/low temperatures, moisture, dusty, strong magnetic fields or under direct sunlight for an extended time.
- Clean the shell of the device lightly with moist cotton cloth, do not use chemical cleaners.
- This device should not be exposed to water, use caution near cups of water and other standing liquids.
- Adjust the sound volume when listening to music or video. Excessive volume may damage your hearing.
- Please do not change any parts of this device.
- Please use the battery, adapter, and accessories the manufacturer permits for use. Other type of similar products will go against the warranty and some damage could occur.
- Please deal with the discarded device and accessories according to the local environmental rules.
- If any problems arise when using the unit, please get in touch with our company directly.
- Due to our continuous updates on the product, all figures in

this manual are only for reference only. If any there is any further development of this product in the future, you will not be notified.

- Special hint:
 - ◆ Easy for reading, you can store the eBooks which you usually read in “my storage” documents, making them quick and convenient to open.

Table of Contents

1. Safety Information.....	1
2. Table of Contents.....	3
3. Main Functions.....	4
4. Accessories.....	4
5. Contour and Keystroke Introduction.....	5
6. Transmit Date and Charging Process.....	6
7. Operation.....	7
Turn on the eBook reader.....	7
Main interface.....	7
Browse history.....	7
EBook.....	8
Music playing.....	9
Video.....	10
Photo.....	11
Record.....	11
Explore.....	12
FM.....	13
Settings.....	14
Calendar.....	14

Search.....	15
Shut down the eBook reader.....	15
Restart.....	15
8.Trouble shooting.....	16
9.Function list.....	16


Main Features:

- **Display: 7" c-paper LCD screen resolution: 800x480**
- **RAM: 256MB**
- **Extension slot: SD card**
- **Image: JPG, BMP**
- **Text: TXT, EPUB, FB2, HTML, PDB, PDF, DOC formats**
- **Music: MP3,WMA,OGG,FLAC,WAV,AAC, APE**
- **Video: MKV, AVI, RM, RMVB, VOB, DAT, MP4, FLV, 3GP with 720P**

Accessories:

- ✓ **Power Adapter**
- ✓ **User Manual**
- ✓ **Earphone**
- ✓ **USB Cable**
- ✓ **Leather Case**

Contour and keystroke introduction:

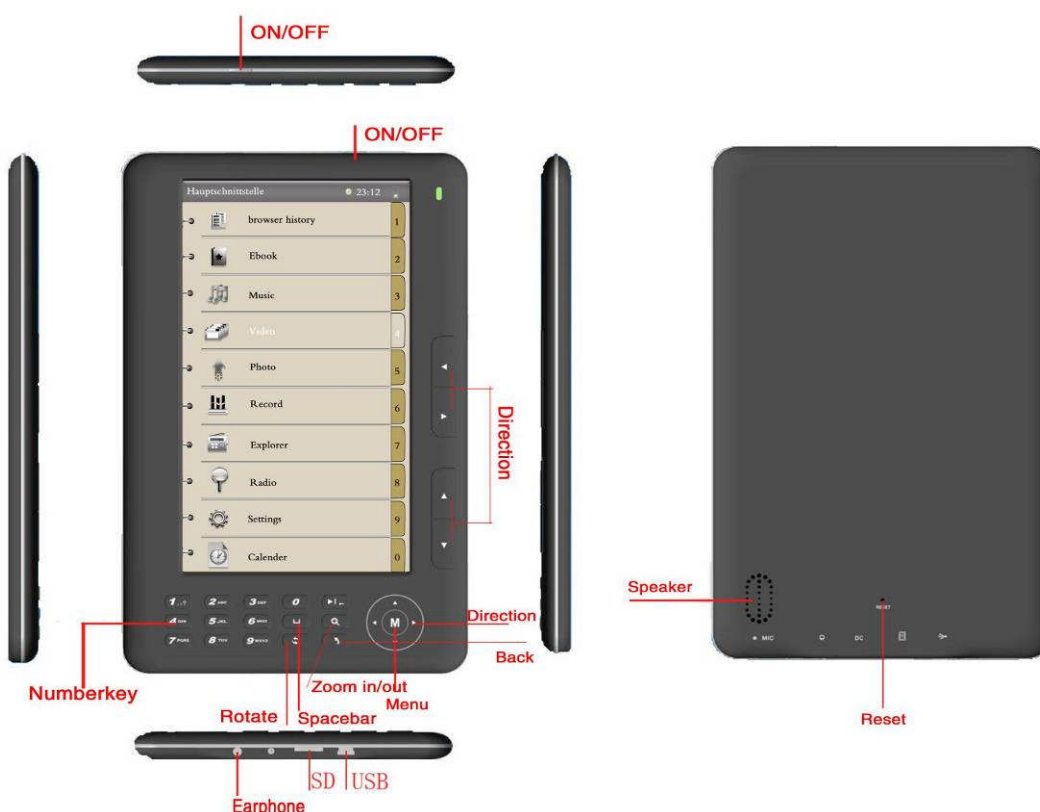


Keystroke description:


1. Direction keys:

- 1) In the main interface and content list: press the direction keys quickly to navigate up and down through the sections.
- 2) In the music interface the direction keys can be used to increase/decrease volume and to select the previous/next music.

2.Main menu key: In any interface, press shortly to enter into main menu directly.




3.Zoom in/Zoom out key: When reading articles, press the key shortly to adjust the font size.

4.On line menu M key: When in reading or music playing interface,  press shortly to recall the functions online menu.

5.Back/cancel: press  shortly to go back to previous menu step by step or cancel the current settings.

6.Number keys: on the right side with serial numbers interface, press the right number shortly to jump to the corresponding interface

7.Rotate:

- 1) In the reading interface, press  shortly can rotate the article
- 2) In the search interface, press  shortly to change the Input Method Editor.
- 3) In the reading article/music list interfaces, press  shortly to sort order the files list again by the document name or phonetic transcription.

8.Up/down keys:

In the menu interface, press Up/Down keys shortly to navigate up and down within the menu.

In the reading article menu interface, turn to the previous and next pages by using the Up/Down keys.

9.Play/pause:

In the music playing interface, press  to switch play and pause.

Transmit Data, charging process:

Transmit Data:

Connect to a PC by USB cable provided in the packaging. Copy the files, music, video, and documents you need to the hard disks of your PC. Switch to your eBook reader memory to put down these files.

Charging process:

1.Use the standard USB cable

First, connect the eBook reader to a computer by the USB cable.

Then, there will be an icon indicator on screen to show a good connection.

After connecting to the computer. Double click the icon “delete hardware safely” found on the right side to remove the device. Don’t pull out the USB cable; keep the unit connected with computer to charge.

2.Charge by the adapter:

Special note: the Adapter which you choose must meet the following requirements, otherwise any damages will be due to

human influence.

input: AC110V~240V 50/60Hz Max:150mA

output: DC5.0~5.5V 1000mA(USB) 1500mA(DC)

Operation:

1. Turn on the eBook reader

Long press the On/Off key 3-5 seconds to start up the device.

2.Main interface:




1).Browser history:

Short press up/down direction keys to move the cursor to “browser history”, press "M" to enter, you can check name and page information about the files you opened recently.

Notice: Pressing the Play/pause key in the browse history interface can delete all the history.

2).E-book

All the files are displayed in the interface, press the direction keys to let the cursor move to the right article, short press the Main menu key to enter the reading interface.

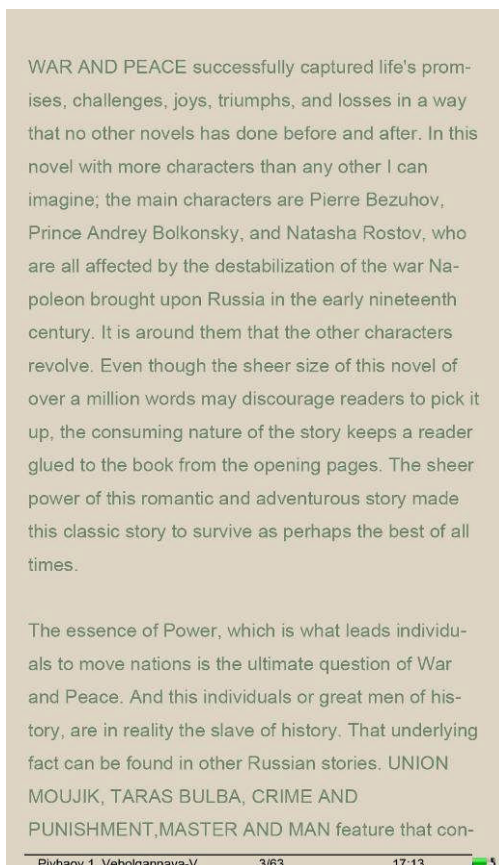

Functions introduction briefly: In the reading interface, short press "**M**"

To enter the online menu interface, include the below functions:

Page jump:

Operation step: Reading articles --- short press "**M**" — choose page jump --- press direction keys to choose the page numbers --- then press "**M**" to select the page.

Save mark:

Operation step: Reading articles --- short press "**M**" — choose save mark --- press "**M**" key --- press direction keys to choose number --- press "**M**" to confirm the number you chose --- the bookmark was stored with the name.

Load mark:

Operation step: Reading articles --- short press "**M**" — choose Load mark --- press "**M**" --- press direction keys to choose the bookmark you need --- press "**M**" to confirm the number you choose --- the bookmark was picked up and entered into the reading interface directly.

Del mark:

Operation step: Read articles --- press "**M**" — choose Del mark --- press "**M**" --- press direction keys to choose the bookmark that needs to be deleted --- press "**M**" to confirm the number you chose --- finished

Browser mode:

Operation step: Reading article --- Press "**M**" --- choose browser mode --- press the direction keys to choose Auto Mode and Manual Mode.

Manual Mode: Change pages by human actions.


Auto Mode: The device will change pages automatically in reasonable time

Auto change pages:

Operation step: reading article --- Press "**M**" — choose Auto changing pages --- choose Flip Time to choose the time of changing pages.

Table of Contents: Shows the information of the article.

3). Music playing

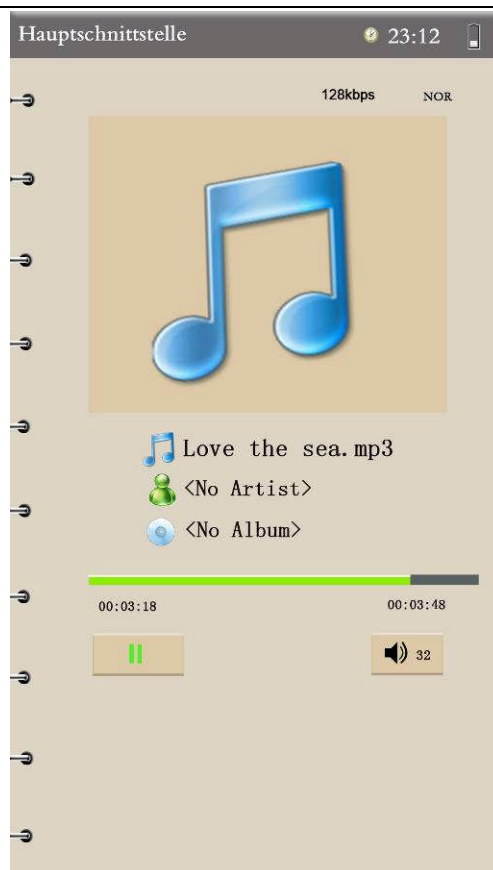

Functions introduction:

Adjust volume: press left/right keys to adjust volume.

Play/Pause: press  can play and pause the music in this interface.

Previous/Next: Press up/down keys to change music.

Fast Forward/Fast Reverse : long press left/right keys to Forward/Reverse

Music list setting: Press "M" shortly to call out the online menu. There are Repeat Mode, Play Mode, MS EQ, EQ Sel, User EQ Setup, and Display different mode options.


Repeat setting: Once, Repeat, All, All Repeat, Intro

MS Sound Effects: 3D, Bass, LEQ

EQ: Normal, MS EQ, Rock, POP, Classic, Bass, Jazz, User EQ

Back: Press  shortly back to previous music list.

4).Video

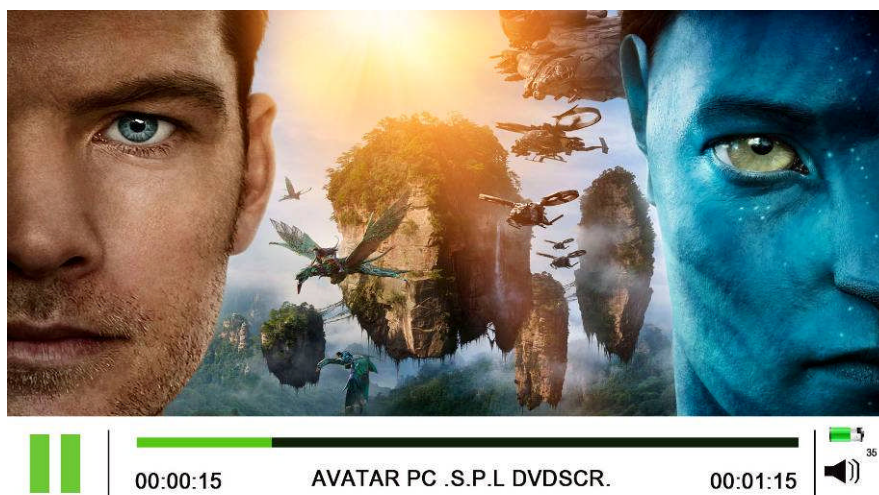

Functions instructions:

Adjust volume: short press right/left direction keys to adjust Volume.

Play/Pause: press  can play and pause the Video in this interface.

Back: Short press back to return to previous menu; long press back to main menu.

5).Photo

Functions Instructions:

Rotate images: press the  in the image browse interface


Image Zoom in/Zoom out: press the  out keys when browse images can change the size of the pictures.


Image switch: press direction keys to switch images.

Back/Exit: short press  to retreat to last menu.

Special note: clients can also listen music when browse images.

Actions: Play music first, then browse the images.

 6).Record

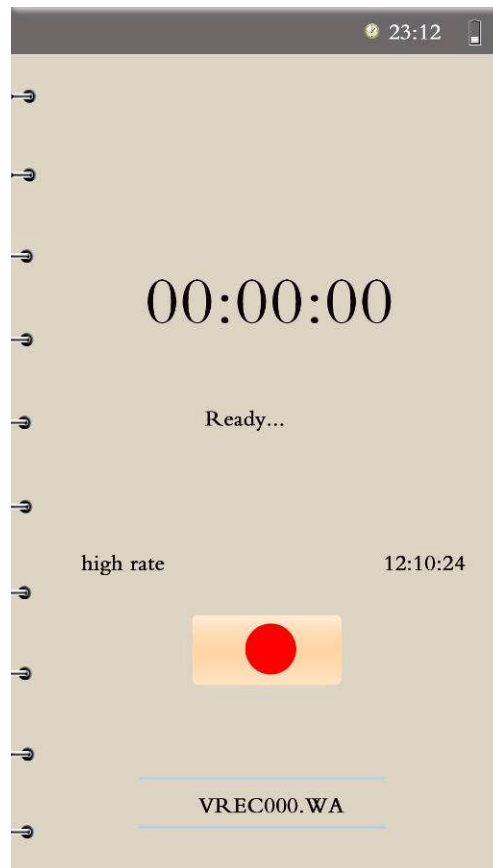

Functions instructions:

Confirm: Short press "M" to confirm.

Start/Pause recording : Short press "M" to switch record condition

Exit storage: Storage notes "yes" and "no" appear when you short press the back key, then press direction keys to choose to store or not.

Record playing:

 
1:Choose "Record Playing" in the recording functions to play recordings.

2:Choose the "Record" files in the catalog list of the main menu.

7). Explore



8). FM

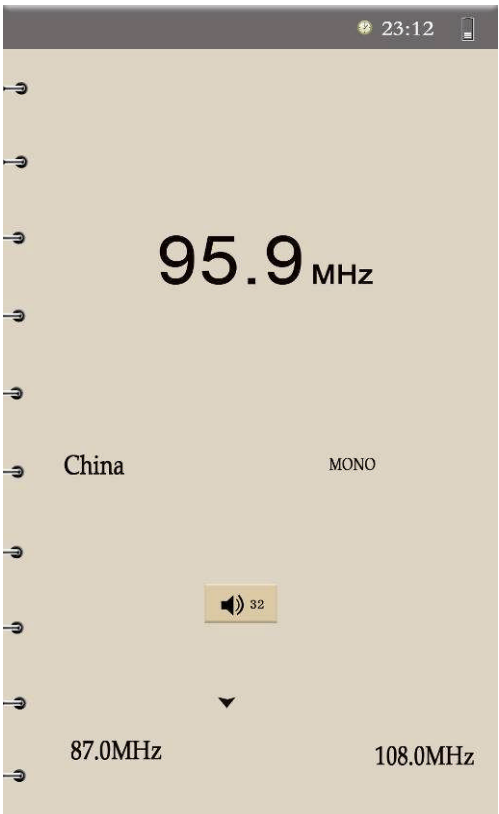

Functions instructions:

Confirm: Press **"M"** shortly to confirm.

Start/Pause FM: Press **"M"** short to switch FM condition.

9).Settings

Functions instructions:

- 1) Display setting: set the time and the brightness of the backlight.
- 2) System Setting: Restorable/Key lock time.
- 3) Time/Date setting: set the time and date of the system.
- 4) Languages: English, Deutsch, Italiano, Portugues, Dutch, Francais, Spanish, Russia, Korean, Japanese, Dansk etc.
- 5) Auto shut time: The device will Auto shut down when there is no other procedure running. For example: when the device is playing music, the Auto shut down function will not be used.

10). Calendar

2010-07-10

Saturday

SUN	MON	TUE	WED	THU	FRI	SAT
						01
02	03	04	05	06	07	08
09	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					

Functions instructions:

Confirm: press **"M"** to choose and confirm

Direction keys: Press direction keys to search dates.

11).Search



Functions instructions:

Confirm: Press **"M"** to choose and confirm.

Searching: Press number keys to enter letters to search bookmark list.

Shut down the eBook reader: Long press the ON/OFF key to shut down the device.

Restart: If any anomaly occurs such as the screen freezing or out of control because of some unruly operations, the user can press the small hole "Reset" on the back of the shell to restart the device, then the device will return to normal.

Trouble shooting

①The ebook reader cannot start normally.

- Please check if the battery is charged.
- Check again after connect with the adapter.
- If it still cannot start after charging, please contact our customer service team.

②No sounds from the earphone.

- Please check if the volume is set to be “0”.
- Please check the connection of the earphone with the device.

③Severe Noise

- Please make sure the plug of the earphone is clean. Noise may be because of dirt.
- Please test the files, try to play other music to check. If the file was damaged, serious noise will occur.

④Keys cannot be operated normally.

- Please make sure the electronic lock is unlocked. If it is locked, press play shortly to unlock.

Function list

Number	Functions list	
	Designation	Content
1	Music formats	MP3, WMA, OGG, FLAC, WAV, AAC, APE
2	TXT formats	TXT,FB2, PDF,PDB,EPUB,SKT,HTML etc.
3	Image formats	Supports playing JPG, BMP Black/white picture
4	SD card expand	Supported
5	Video formats	Supports MKV, AVI, RM, RMVB, VOB, DAT, MP4, FLV, 3GP etc with 720P video.
6	System information	Supported
7	Record	supported