www.philips.com/welcome

HTS5110



EN User manual

DA Brugervejledning

DE Benutzerhandbuch

EL **Ε**γχειρίδιο χρήσης

FI Käyttöopas

FR Mode d'emploi

 ${\sf NL} \ \ \textbf{Gebruiksaanwijzing}$

PT Manual do utilizador

SV **Användarhandbok**

TR Kullanım kılavuzu



Contents

1	Notice Copyright Compliance Mains fuse (UK only) Trademarks	2 2 2 2 2
2	Important Safety Product care Disposal of your old product and batteries	3 3 3
3	Your home theater Main unit Remote control	4 4 5
4	Connect your home theater Connectors Connect to the TV Connect audio from TV or other devices	6 6 7 8
5	Use your home theater Before you start Choose your sound Synchronize audio with video Play from a USB storage device More play features for USB Play from radio Play from an MP3 player Use Philips EasyLink	9 9 10 10 10 11 11
6	Change settings Access the setup menu Change general settings Change audio settings Change video settings Change preference settings	12 12 13 13 13 13
7	Update software Check software version Update software from a USB storage device	14 14 14

8	Product specifications	14
9	Troubleshooting	15
10	Index	16

Notice

Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Copyright in the UK

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers Protection Acts 1958 to 1972.

Compliance



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/ EC (EMC).

Hereby, Philips Consumer Lifestyle, declares that this Home Theater System HTS5110 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Mains fuse (UK only)

This product is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- Refit the fuse cover.



· To conform with the EMC directive (2004/108/EC), the mains plug on this product must not be detached from the mains cord.

Trademarks



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/ or other countries.

2 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Product care

Only use microfiber cloth to clean the product.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.




Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3 Your home theater


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit

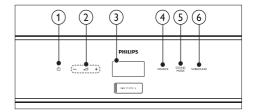

- 1 (Standby-On)
- (2) 4+/- (Volume)
 Increases or decreases volume.
- 3 Display panel
- SOURCE
 Selects an audio/video source for the home theater.
- (5) **SOUND MODE**Selects a sound mode.
- 6 SURROUND
 Switches to surround sound or stereo sound.

Remote control

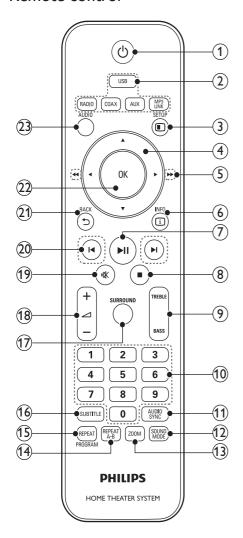

1 (Standby-On)

- Switches the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

(2) Audio Source

• USB: Switches to USB storage device.

- RADIO: Switches to FM radio.
- COAX: Switches to coaxial digital input or HDMI ARC source.
- AUX: Switches to auxiliary input source.
- MP3 LINK: Switches to MP3 Link input source.

(3) **E**SETUP

Accesses or exits the setup menu.

4 ▲▼◀► (Navigation buttons)

- Navigate menus.
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.
- (5) ◀◀ (Fast Backward) ▶▶ (Fast Forward)
 Fast backwards or fast forwards. Press
 repeatedly to change the search speed.
- (6) INFO
 Displays information about what is playing.
- (7) ►II (Play/Pause) Starts, pauses or resumes playback.
- (8) (Stop)
 - Stops playback.
 - In radio mode, erases the current preset radio station.
- 9 TREBLE / BASS Changes treble or bass. Use with +/-.
- (10) Numeric buttons
 Selects an item to play.
- (11) AUDIO SYNC
 Synchronize audio with video. Use with +/-.
- (12) SOUND MODE

 Selects a predefined sound effect.
- 3 ZOOM Zooms into a picture.
- (14) REPEAT A-B

 Marks two points within a track for repeat
- Marks two points within a track for repeat play, or turns off repeat mode.
- (15) REPEAT / PROGRAM
 - Selects a repeat or shuffle mode.
 - In radio mode, programs radio stations.

16 SUBTITLE



• This button is not applicable for HTS5110.

- (7) SURROUND
 Selects Dolby Virtual Speaker surround sound.
- (18) 4/Increases or decreases volume.
- ② I◄/►I (Previous/Next) Skips to the previous or next track or file.
- 21) SACK
 Returns to a previous menu screen.
- ② OK
 Confirms an entry or selection.
- (23) AUDIO Selects an audio language or channel.

4 Connect your home theater

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theater with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see www.connectivityguide. philips.com.




Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

Connectors

Front connectors

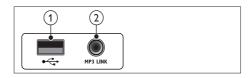


① ← (USB)

Audio or picture input from a USB storage device.

2 MP3 LINK Audio input from an MP3 player.

Back connectors

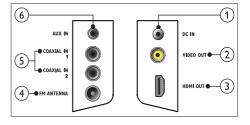

(1) DC IN
Connects to the AC-DC adapter. (Model: PHILIPS G721DA-270250)

2 VIDEO OUT

Connects to the composite video input on the TV.

(3) HDMI OUT

Connects to the HDMI input on the TV.

(4) FM ANTENNA

Connects the FM antenna for radio reception.

(5) COAXIAL IN

Connects to the coaxial audio output on the TV or a digital device.

(6) AUX IN


Connects to the analog audio output on the TV or an analog device.

Connect to the TV

Connect your home theater directly to a TV through one of the following connectors (from highest to basic quality video):

- (1) HDMI
- (2) Composite video
- 3 SCART

Option 1: Connect to the TV through HDMI

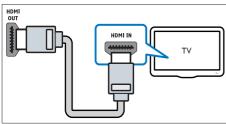

Note


- If the HDTV has a DVI connector, connect using an HDMI/DVI adapter.
- If the TV supports EasyLink HDMI CEC, control the home theater and TV with one remote control (see 'Use Philips EasyLink' on page 11).

Option 2: Connect to the TV through composite video (CVBS)




Note

 The composite video cable or connector might be labeled AV IN, VIDEO IN, COMPOSITE or BASEBAND.

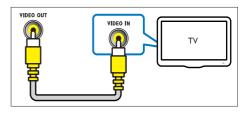

Option 3: Connect to the TV through SCART

Use the supplied scart adapter.

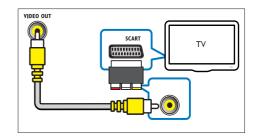

Connect audio from TV or other devices

Use your home theater to play audio from the TV or other devices such as a cable box. Choose from the following connectors.


Option 1: Connect audio through a digital coaxial cable




Note

 The digital coaxial cable or connector might be labeled COAXIAL DIGITAL OUT or SPDIF OUT.

(Cable not supplied)

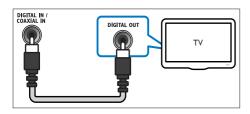

Option 2: Connect audio through analog audio cables

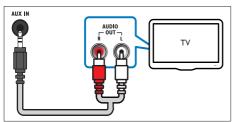


Option 3: Connect audio through an HDMI cable



Note

 The HDMI connector on the TV might be labeled HDMI 1 or HDMI ARC. This feature works with Audio Return Channel (ARC) compatible devices only.

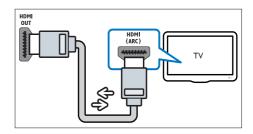

5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

Check that you:


- Make the necessary connections and complete the setup as described in the Ouick Start.
- Switch the TV to the correct source for the home theater.

Choose your sound

This section helps you choose the ideal sound for your video or music.

Change treble or bass

Change the high frequency (treble) or low frequency (bass) settings of the home theater to suit your video or music.

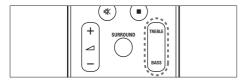


1 Press TREBLE or BASS.

Press 4+/- within five seconds to increase or decrease treble or bass.

Change sound mode

Select predefined sound modes to suit your video or music.

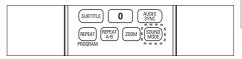


Press **SOUND MODE** repeatedly to cycle through the available sound modes.

Sound mode	Description
ROCK	Enhanced low and high-range. Ideal for action movies and rock or pop music.
JAZZ	Clear mid and high-range. Ideal for drama movies and jazz music.
CLASSIC	Neutral sound. Ideal for live concerts and classical music.
SPORTS	Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sport venue.
NIGHT	Dynamically controlled sound mode suitable for watching movies at night or for non-intrusive background music.

Change virtual surround mode

DVS (Dolby Virtual Speaker) technology creates a highly compelling 5.1-channel listening experience from as few as two speakers.

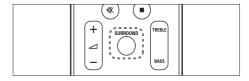

During play, press **SURROUND** to switch on or off the surround sound effect.

Synchronize audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

- 1 Press AUDIO SYNC.
 - → The audio sync message appears on the display panel.
- Press +/- within five seconds to sync the audio with your video.



 This feature is applicable only if the audio/ video source is connected through the TV.

Play from a USB storage device

The home theater is fitted with a USB connector that allows you to view pictures or listen to music stored on a USB storage device.

- 1 Connect the USB storage device to the home theater.
- 2 Press USB.
 - → A content browser appears.
- Press the Navigation buttons to select a file, then press OK.
- **4** Use the following buttons to control play:

Button	Action
Navigation buttons	Navigate menus.
OK	Confirms an entry or selection.
►II	Starts, pauses or resumes play.
	Stops play.
I ◀ / ▶ I	Skips to the previous or next track, or file.
44 / >>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
ZOOM	Zooms into a picture.

Use picture options

Access several useful features while viewing pictures.

Button	Action
▲/▼	Rotates the picture counter- clockwise or clockwise.
4 /▶	Skips to the previous or next picture.
REPEAT	Repeats a single file in the folder or repeats the entire folder. Shuffles files in a folder.
① INFO	Displays photo albums in a thumbnail overview.

Use audio options

Press the following button to access more features while audio is played.

Button	Action
REPEAT	Selects or turns off repeat
	mode.



Vote

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theater does not support digital cameras that need a computer program to display photos.
- The USB storage device must be FAT or DOSformatted, and Mass Storage Class compliant.

More play features for USB

Several advanced features are available for picture playback from a USB storage device.

Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow. The files must be stored on the same USB storage device.

1 Select a music track, then press **OK**.

Press SACK and go to the picture folder.

3 Select a picture, then press **OK** to start slideshow.

4 Press ■ to stop slideshow.

Press ■ again to stop music.

Repeat play a specific section

Select sections of audio for repeat playback.

- During playback, press REPEAT A-B to mark the start point.
- Press REPEAT A-B again to mark the end point,
 - → Repeat play starts.
 - → To cancel repeat A-B, press REPEAT A-B again.



Note

· Repeat play is only possible within a track.

Play from radio

- Check that the FM antenna is connected.
- Press RADIO.
 - → "AUTO INSTALL...PRESS PLAY" appears on the display panel if you have not installed any radio stations. Press ► II.
- Press the following buttons to control play:

Button	Action
I4 / ▶I	Selects a preset radio station.
44 / >>	Searches for a radio station.
▲▼	Fine tunes a radio frequency.
	Press and hold to erase the preset radio station.
PROGRAM	Manual: Press once to access program mode, press I◀/▶I to assign a number to the radio station, then press again to store the radio station. Automatic: Press and hold for three seconds to reinstall radio stations.



- The home theater can store up to 40 radio stations.
- Press to stop the installation.
- AM and digital radio are not supported.
- If no stereo signal is detected, or if fewer than five stations are found, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Play from an MP3 player

Connect and play audio files from an MP3 player or other external audio devices.

- Connect the MP3 player to the home theater.
- Press MP3 LINK
 - → 'MP3 LINK' appears on the display panel.
- Press the buttons on the MP3 player to select and play audio files.

Use Philips EasyLink

The home theater supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLinkcompliant devices that are connected through HDMI connectors can be controlled by a single remote control.



Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.
- Switch on the HDMI CEC operations on the TV and other connected devices. See the manual of the TV or other devices for details.
- Press **ESETUP**.
 - Select [General Setup], then press OK.
 - Select [EasyLink Setup], then press OK.

Select and adjust the following settings:

- [EasyLink]: Enables or disables EasyLink.
- [One Touch Play]: Enables or disables One Touch Play.
 - If enabled, you can use the remote control to start USB play in the home theater and the TV switches automatically to the correct channel.
- [One Touch Standby]: Enables or disables One Touch Standby.
 - If enabled, the home theater can be switched off to standby by a remote control from the TV or other connected HDMI CEC devices.

- [System Audio Control] : Enables or disables System audio control.
 If enabled, follow the instructions on the TV to map the connected devices correctly to the audio connectors of the home theater. The home theater switches automatically to the audio source of the connected device.
- [Audio Input Mapping]: Updates audio input mapping if there are new devices connected.
- 6 Press OK to confirm your choice.



 The connected devices must be connected through HDMI and switched on.

6 Change settings

This section helps you to change the settings of your home theater.



Caution

 Most of the settings are already configured with the best value for the home theater.
 Unless you have a specific reason to change a setting, it is best to leave it at the default value.

Access the setup menu

1 Press **ESETUP**.

→ The following menu appears.

Symbol	Description
*	[General Setup]
•4	[Audio Setup]
0	[Video Setup]
 ✓	[Preference Setup]

- 2 Select a setup menu, then press OK. See the following sections for information about how to change the settings of your home theater.
- Press BACK to return to the previous menu, or press SETUP to exit.



Note

· You cannot change a setting that is grayed out.

Change general settings

1 Press SETUP.

Select [General Setup], then press OK.

Select and adjust the following settings:

- [EasyLink Setup]: Sets up EasyLink to enjoy easy controls of all the HDMI CEC compliant devices using a single remote control (see 'Use Philips EasyLink' on page 11).
- [Display Dim] : Changes the brightness of the display panel.
- [OSD Language] : Selects the onscreen display menu language.
- [Screen Saver]: Enables or disables screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
- [Sleep Timer]: Sets a sleep timer to switch the home theater to standby after a specific time.
- 4 Press **OK** to confirm your choice.

Change audio settings

1 Press SETUP.

Select [Audio Setup], then press OK.

Select and adjust the following setting:
[HDMI Audio]: Enables or disables HDMI audio output the TVF resettings related

audio output for the TV.For settings related to HDMI, the TV must be connected through HDMI.

Press **OK** to confirm your choice.

Change video settings

1 Press SETUP.

Select [Video Setup], then press OK.

Select and adjust the following settings:

- **[TV System]**: Selects a TV system that is compatible with the TV.
- **[TV Display]**: Selects a picture display format to fit the TV screen.
- [Picture Settings] : Selects a predefined color setting.
- [HDMI Setup]: Selects HDMI video resolution and the wide screen display format for the TV. The Wide Screen Display option is only available for 16:9 wide screen TV display setting.
- 4 Press **OK** to confirm your choice.



Note

- The best setting is automatically selected for the TV. If you need to change the setting, ensure that the TV supports the new setting,
- Some video settings depend on the video source, ensure that the TV supports the setting or feature.
- For settings related to HDMI, the TV must be connected through HDMI.

Change preference settings

1 Press SETUP.

2 Select [Preference Setup], then press OK.

Select and adjust the following settings:

- [MP3/JPEG Display] : Displays the MP3/JPEG folders or all the files.
- **[Version Info.]**: Displays the software version for the home theater.
- [Default]: Resets the home theater to the default settings programmed at the factory.
- 4 Press **OK** to confirm your choice.

7 Update software

To check for new updates, compare the current software version of your home theater with the latest software version (if available) on the Philips web site.

Check software version

- 1 Press **ESETUP**.
- Select [Preference Setup] > [Version Info.], then press OK.
 - → The software version is displayed.

Update software from a USB storage device

- 1 Check for the latest software version on www.philips.com/support.
 - Search for your model and click on 'software&drivers'.
- 2 Download the software onto a USB storage device.
- **3** Connect the USB storage device to the home theater.
- 4 Follow the instructions on the TV to confirm the update.
 - → When the update is complete, the home theater automatically switches to standby.
- 5 Disconnect the power cord for a few seconds and then reconnect it.

Caution

 Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage the home theater.

8 Product specifications



Note

Specification and design are subject to change without notice.

Playback medium

USB storage device

File Format

- Audio: .mp3, .wma
- Picture: .jpg

Amplifier

- Total output power: 300 W RMS
- Frequency response: 20 Hz-20 kHz / ±3dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX: 2 V
 - MP3 LINK: 1 V

Video

- Signal system: PAL / NTSC
- HDMI output 480p, 576p, 720p, 1080i, 1080p

Audio

- S/PDIF Digital audio input:
 - Coaxial: IEC 60958-3
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 112 kbps 320 kbps
 - WMA: 48 kbps 192 kbps

Radio

- Tuning range: FM 87.5-108 MHz (50 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-10 kHz / +6dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32
- Maximum memory support: < 160GB

Main Unit

- Power supply: 27 Vdc; 2.5 A (External switching power adapter)
- Power consumption: 35 W
- Standby power consumption: < 1 W
- Impedance: 8 ohm woofer, 8 ohm tweeter
- Speaker drivers: 3" woofer, 1.5" tweeter
- Frequency response: 150 Hz ~ 20 kHz
- Dimensions (WxHxD): 790.6 x 100.3 x 50 (mm)
- Weight: 1.5 kg

Switching power adapter (G721DA-270250)

Input: 100-240 Vac; 50-60 Hz; 1,35 A

Output: 27 Vdc; 2.5 A

Subwoofer

- Power supply: 220-240 V; ~50 Hz
- Power consumption: 35 W
- Standby power consumption: < 1 W
- System: Bass Reflex System
- Impedance: 8 ohm
- Speaker driver: 6" woofer
- Frequency response: 35 Hz ~ 200 Hz
- Dimensions (WxHxD): 182 x 365 x 306 (mm)
- Weight: 6 kg

Wall Mount

- Dimensions (WxHxD): 440 x 60 x 23 (mm)
- Weight: 0.54 kg

9 Troubleshooting



Warning

• Risk of electric shock, Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No.		
Serial No.		

Main unit

The buttons on this home theater do not work.

 Disconnect the home theater from the power outlet for a few minutes, then reconnect.

Picture

No picture.

• Ensure that the TV is switched to the correct source for the home theater.

No picture on HDMI connection.

 Check if the HDMI cable is faulty. Replace with a new HDMI cable.

Sound

No sound from subwoofer

- In Standby, press and hold (Stop) on the remote control until [PAIRING] flashes on the main unit.
- Press and hold PAIR on the subwoofer until the blue and green indicators on the subwoofer flash alternately.
- If the wireless connection succeeds, [PAIR OK] is displayed and the green indicator on the subwoofer lights up.

If the wireless connection fails, [PAIR FAIL] is displayed, and the blue and green indicators on the subwoofer remain lit.
 Check whether there is any interference from nearby electronic devices. Remove the conflict or strong interference, then repeat the above procedures.

No sound.

 Ensure that the audio cables are connected and select the correct input source (for example, AUX, USB) for the device you want to play.

No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (Highbandwidth Digital Content Protection) compliant or only DVI compatible. Use an analog or digital audio connection.
- Ensure that the [HDMI Audio] is enabled.

No sound from TV program.

 Connect an audio cable from the audio input on the home theater to the audio output on the TV. Then select the correct input source, for example, AUX or COAX.

Distorted sound or echo.

 Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theater.

Audio and video are not synchronized.

 1) Press AUDIO SYNC. 2) Press +/- within five seconds.

Play

The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theater (see 'Product specifications' on page 14).
- Ensure that the USB storage device is formatted with a file system that is supported by the home theater (note that NTFS is not supported).

'No entry' or 'x' sign appears on the TV.

The operation is not possible.

EasyLink feature does not work.

 Ensure that the home theater is connected to a Philips brand EasyLink TV and that EasyLink is on.

I do not want my home theater to be switched on when I switch on my TV.

 This is the correct behavior for Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

10 Index

A	
amplifier	14
audio synchronize with video	10
audio input mapping	11
C	2
care change settings	3 12
connect	
guide TV	6 7
connectors	6
contact us	15
 E	
E EasyLink	
settings	11
F	
file formats	14
 H	
□ HDMI CEC (see Easylink)	11
(355 245)	
M	
MP3	
play	11
0	
One-touch play	11
one-touch standby	11
overview connectors	6
main unit	4
remote control	5
P	
F picture	
options	10
slide show thumbnail overview	10, 10 10
troubleshooting	15

MP3 player radio troubleshooting product care product specifications	11 11 16 3 14
R_{μ}	
radio	11
play program	11
tune	11
recycle	3 5
remote control	5
rotate pictures	10
S	
safety	3
slideshow	10
software	4.4
update version	14 14
sound	17
mode	9
treble and bass	9
troubleshooting	15
system audio control	11
troubleshooting	15
TV	7
connect	7
U	
USB	
software update	14
V	
video	
synchronize with audio	10

Language Code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	lvrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhaijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
Castellano, Español	6983	Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja	a 7889	Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slavic; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
Česky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	787 I	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provencal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hrwatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (Internationa	1)7365	Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		



@ 2010 Koninklijke Philips Electronics N.V. All rights reserved. $sgptt_1039/12_v4$