

Bluetooth Headset

User's Guide

1. Introduction

The **Bluetooth Headset** allows you freedom to make and receive calls while on the move or in the office. You can connect the headset to a compatible phone that supports Bluetooth wireless technology.

Read this user guide carefully before using the headset. Read also the user guide for your phone, which provides important safety and maintenance information. Keep the headset and its accessories out of reach of small children.

■ Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible communication devices without cables. A Bluetooth connection does not require that the phone and the headset be in line of sight, but both devices should be within 10 meters (30 feet) of each other. Connections can be subject to interference from obstructions, such as walls, or other electronic devices.

The headset is compliant with the Bluetooth Specification 2.0+EDR supporting the following profiles: Headset Profile 1.1 and Hands-Free Profile 1.5. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some location. Check with your local authorities or service provider.

2. Get started

■ Overview

The headset contains the following parts:

Indicator light (1)


ON/OFF/Answer/end key (2)

Charger connector (3)

Microphone (4)

Earloop (5)

Before you can start using the headset, you must charge the battery and pair the headset with a compatible phone.

 **Note:** Parts of the headset are magnetic. Metallic materials may be attracted to the headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

■ Chargers and batteries

Check the model number of any charger before using it with this device.



Warning: Use only batteries and chargers approved for use with this particular enhancement. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

■ Charge the battery

This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device.

1. Connect the charger cable to the headset.
2. Connect the charger to a wall outlet. The red indicator light is during charging. If charging does not start, disconnect the charger, plug it in again, and retry. Charging the battery fully may take up to 2 hours.

3. When the battery is fully charged, the red indicator light turns off. And the blue indicator light turns on. Disconnect the charger from the wall outlet and the headset.

The fully charged battery has power for up to 3 hours-6 hours 30 minutes of talk-time or up to 100 hours-180 hours of stand-by time. However, the talk and standby times may vary with different mobile phones, products that use a Bluetooth connection, usage settings, styles, and environments.

■ Switch the headset on or off

To switch on, press and hold the power key. The headset beeps, and the red indicator light is displayed. When the headset is connected to a paired phone and is ready for use, the blue indicator light flashes slowly.

To switch off, press and hold the power key. The headset beeps, and the blue indicator light is flashing twice.

■ Pair the headset with a compatible phone

1. Switch on your phone and the headset.
2. Activate the Bluetooth feature on the phone, and set the phone to search for Bluetooth devices. See the user guide of your phone for instructions.
3. Select the headset from the list of found devices

4 Enter the passcode 0000 to pair and connect the headset to your phone. In some phones you may need to make the connection separately after pairing. See the user guide of your phone for details.

You only need to pair the headset with your phone once.

5 If the pairing is successful, the headset beeps and appears in the phone menu where you can view the currently paired Bluetooth devices.

Disconnect the headset from the phone

To disconnect the headset from your phone (for example, to connect the phone to another Bluetooth device), do one of the following:

- Switch off the headset.
- Disconnect the headset in the Bluetooth menu of your phone.
- Move the headset more than 10 meters (30 feet) away from the phone.

You do not need to delete the pairing with the headset to disconnect it.

Reconnect the paired headset to your phone

To connect the headset to your phone, switch on the headset, make the connection in the Bluetooth menu of your phone, or press and hold the answer/end key.

You can set your phone to connect with the headset automatically when the headset is switched on. Change your paired device settings in the Bluetooth menu.

■ Troubleshooting

If you cannot connect the headset to your phone, do as follows:

- Ensure that the headset is charged, switched on, and paired with and connected to your phone.
- Ensure that the Bluetooth feature is activated on your phone.
- Check that the headset is within 10 meters (30 feet) of your phone and that there are no obstructions between the headset and the phone, such as walls or other electronic devices.
- To reset the headset if it stops functioning, although it is charged, plug the headset into a charger, and briefly press the power key and the middle of the volume key. This reset does not clear your settings (for example, pairing settings).





Mobile Watch USER MANUAL

The Mobile Phone Watch's functions and menus are intuitive and will be simple to use for anyone that is familiar with general cellphone operation.

Its features include music, video player (MP3 & MP4) and touch-sensitive screen for navigation that also allows handwritten input via a stylus that is stored in the watch strap.

The following information will help you to get the best from your mobile phone watch and provides information on security features and network settings, so please keep it for reference.

INDEX

1. Getting Started:
2. SIM installation:
3. Charging the battery:
4. Connecting to a network:
5. General Use
 - a. Switching on
 - b. Buttons
 - c. Menus
 - d. Making a call.

6. Phone Book
7. Messages
8. Call History
9. Settings
10. Multimedia
 - a. Camera
 - b. Video Recording
 - c. Audio Player
11. File Manager
12. Games
13. User Profiles
14. Organiser
15. Services
16. Extras – including Bluetooth
17. Shortcuts
18. Icons
19. Connecting to a PC via USB
 - a. Data storage.

- b. Webcam
 - c. COM Port
- 20. Battery life indicator
- 21. Using a Headset (non-Bluetooth)
 - 21.1 Listening to music via the bluetooth headset
- 22. Connecting to the Bluetooth headset
- 23. Text Input
- 24. Troubleshooting
- 25. Safety Notice
- 26. Care of your mobile phone watch
- 27. Security
 - a. Passwords
 - b. PIN
 - c. PIN 2

1. Getting Started:

 
First, you need to install a SIM card and battery.

Your Mobile phone watch supports 1.8V and 3V SIM cards. It does not support 5V SIM cards. It is Tri-band, operating on GSM900, GSM1800, PCS1900.


2. SIM installation:




1. If your Essential is running, press the power button for several seconds for himself off the device.



 2. Remove the screw to protect the SIM card (shown in blue).

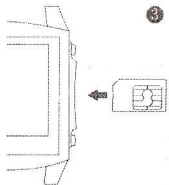

 - ③ Place the SIM card in the sense described above. Inset it until it clicks, if necessary, help yourself to the metal plat.



- ④ Replace the screw to protect the card SIM. Screw thoroughly.

3. Charging the battery:

- The battery supplied with your Mobile Watch should be used immediately. If the battery level is low, the display shows "Battery empty". In such a case: connect the adapter and your Mobile Watch with the supplied cable. Connect adapter sector to a wall outlet
- The battery can be recharged using the USB cable supplied with the Mobile Watch:

- — USB connector Place the USB connector located at the end of the your watch mobile phone in the direction indicated in the illustration.



- You can either connect the USB connector to USB 2.0 port of your computer or use the supplied USB cable and charge your Essential and without removing it from your wrist.
- Once the upload is performed, the screen shows "loading finished". You can use your Essential now

4. Connecting to a network:

- After inserting your SIM card and switching on, the phone will automatically search for the network. You can then dial or receive calls and access the phone's other functions.

 
5. General Use

5.1 Switching on

- Press and hold down the lower-right button to power on or off.
- The mobile phone watch will then start in watch mode.
- To go into phone mode, press the screen either with your finger or the stylus.

5.2 Buttons

From the main screen the button functions are as follows:

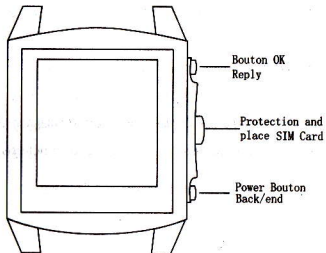

The functions of these buttons will change, depending on the menu that you are in on the function that you are using. This will be indicated by text next to the bottom left and right buttons. The top and middle buttons are typically used for navigation, if you do not wish to use the stylus or touch screen facility.

5.3 Making a Call

You can make calls in three ways.

1. Click on the telephone icon in the bottom centre of the display to bring up a keypad screen and directly input the number you wish to call.
2. Open the phonebook and select a contact. Then click on the telephone icon to call this person.
3. Press the top right hand side button to view your recent call logs. From this list you can select and call these numbers again.

6. Phone Book

The phonebook can store 500 phone numbers and each entry can have up to three telephone numbers. From this menu you can add or edit new entries, search your phone book, copy phone book entries between your phone and SIM card's memory and assign custom pictures or ringtones to different people.

7. Messages

From this menu, you can send text messages, multimedia messages, email or check your voicemail. Please see the separate section on inputting text for instructions on how to write and edit text in messages.

8. Call History

From this menu, you can choose whether you want to view recent calls, missed calls, received calls and also see how long your calls have been.

9. Settings

This menu contains the options for setting up your mobile phone watch, including stylus calibration, time and date, speed dialling, languages, caller id and caller barring, network and security settings.

10. Multimedia

From here you can use the media player functions to play MP3 music files or MP4 video files.

- 10.1. Video – click on the red circle to start recording video. See the options menu in the function to adjust other settings.
- 10.2. Audio Player – The audio player will play files that are stored in your mobile phone watch's internal memory in the 'my music' folder. The controls for play/pause are displayed visually onscreen and can be adjusted using the stylus. Alternatively, the top left button can toggle play/pause.

11. File Manager

Use this function to organise images, music, video, other media or data files that are stored in your mobile phone watch's memory.

12. Games

Your mobile phone watch comes with games and other fun applications that can be found here.

13. User Profiles

Select and edit the different settings for each profile here. Then you can easily change to the most appropriate setting for where you are or what you are doing. You can adjust ringtones, volume, and alerts.

14. Organiser

From this menu you can select the calendar, to do list, alarm and world clock functions.

15. Services

WAP Internet access is available from this menu. You may need to contact your network provider for information on the correct network settings to use.

16. Extras – including Bluetooth
















This menu contains several useful applications, including a calculator, unit converter, currency converter and e-Book reader that can read text files saved in the mobile phone watch's memory.






You can also set up and use Bluetooth accessories, including the handset from here. Please see the separate section for information on how to pair and use these devices.

17. Shortcuts

Set up shortcuts to favourite and most commonly used features or applications from this menu.

18. Icons

Icon	content
	signal
	lock
	line 1
	MMS
	connect to network
	alarm clock
	transfer
	missed call
	Text message
	headphones mode
	battery status
	ring
	vibrate
	ring after vibrate
	ring after and vibrate

icons	function
	call record function
	project hall file
	MSM
	music player
	standby mode

19. Connecting to a PC via USB

When you connect your mobile phone watch to a PC's USB port, a menu will open that gives you three options:

- 19.1 Mass Storage – this enables you to transfer data to and from your mobile phone watch, including images, videos and music or other audio files. When you select this option, the mobile phone watch's internal memory will appear in 'My Computer' as a remote drive. You can cut, copy and paste files to this.
- 19.2 Webcam – this enables your PC to use the camera function as a webcam.
- 19.3 COM Port – this enables your mobile phone watch to be used as a modem. Please follow the instructions that appear on your PC's screen to set up and use this function.

20. Battery life indicator

Your mobile watch displays its battery status on the top right of the screen. When the battery is low, the screen will show "electricity low" and you can choose an alarm to sound to let you know when charging is required.

- When charging, the screen will show an animation to let you know how charging is progressing. When the battery is full it will say 'finish charging'.

From a full charge:

Standby time: approximately 120-150 hours

Talk time: approximately 120-240 minutes

- Note: the actual standby and talk time are affected by whether you are using the other functions too, the local network and SIM card and the settings you choose.

21. Using a Headset (non-Bluetooth)

When you insert a headset directly into the slot on the right hand side of mobile, it will enter earphone mode automatically.

22. Connecting to the Bluetooth headset


- From the 'Extras' menu, select 'Bluetooth'.
- Activate Bluetooth on your mobile phone watch from this menu.
- Select 'Inquiry Audio Device'. It will now begin searching for the Bluetooth headset.
- Hold down the 'Function' button on the Bluetooth headset's control unit until the red and blue indicator lights flash. When they are flashing, release the button.
- The mobile phone watch will then display the headset as 'BT-668'. Select this to start pairing.
- When you are prompted for a pass code, enter 0000.
- When the pairing is successful, the blue light will flash at two second intervals.
- You can now make and receive calls using the Bluetooth headset.

 
 
22.1 Listening to music via the Bluetooth headset


1. Activate Bluetooth on your phone and pair with your headset according to the instructions in the relevant section.
2. Select the mobile phone watches' audio player function.
3. From the 'Choice' list select 'choice options' then 'choice setting' then 'Choice Bluetooth' and then 'Choice on' This will then stream the music from the audio player to your Bluetooth headset.


23. Text Input


This mobile supports direct stylus input. This can be used in editing the phonebook, text messages, memos, file management and in other functions.


When you are inputting letters, click  to switch to capitals

 Click  or  to show or hide the virtual keypad

Click  to switch between normal input mode and symbols mode.

Click  to input a space

Click  to delete the character before

Click  to go to the next line

24. Troubleshooting

Problem	Cause	Solution
SIM card problem reported	SIM card is damaged	Contact network for replacement
	SIM card installed incorrectly	Check SIM card installation
	SIM card dirty	Clean SIM card with dry cloth
No reception	Weak signal area, such as high building or basement	Try a different location
Does not power on	Battery drained	Charge battery
Battery does not charge	Incorrect charger used	Use the correct charger
	Bad contact	Check cables are inserted firmly

25. Safety Notice

Please do not use your phone when driving. Please use hand-free accessories if it is absolutely necessary to make a call.

Remember it is illegal in some countries to make any calls when driving.

When flying, please make sure that you obey the airline's policy on mobile phones and switch it off if requested.

Please ensure that your phone is switched off at petrol stations, especially when refueling your vehicle.

Please check and abide by local policies regarding phone use in places such as hospitals where use may cause interference or danger.

This mobile phone watch can only be maintained by professionals. Attempting to repair or modify it will void the guarantee.

Only use the accessories and battery supplied, or replacements approved by the supplier.

Note: As with any mobile phone, your network supplier may not support all of the functions featured. Certain networks may even not support the 112 International Emergency Call number. Please contact your network supplier for more information.

26. Care of your mobile phone watch

- Only use the original battery or a supplier approved replacement.
- Power off before removing the battery
- Avoid putting the battery near anything made of metal (such as keys) as these may cause it to short circuit.
- Do not dispose of the battery in fire.
- Do not disassemble or attempt to repair the mobile phone watch, its battery or accessories. If damaged or if faults occur these should be taken to a professional repair centre.
- When not in use, store the battery in cool and dry places only, away from sources of heat (over 55°)
- Stop using at once if you notice the battery emitting any unusual odours.
- Stop using it when there are any cracks, distortion, leakage or any other visible damage to the battery.
- Do not clean mobile phone watch, battery or accessories with water or any liquid cleanser or immerse them in water. If cleaning is necessary, wipe with a dry soft cloth only.
- Charge the battery fully before storage if it is not going to be used for a long time.

- When the battery reaches the end of its life recycle it in an appropriate recycling scheme.
- Keep the mobile phone and accessories out of the reach of children.
- Keep away from rain, moisture and all other liquids.
- If the mobile phone watch does get wet, take out battery, and only reinstall it when completely dry.
- Do not use or store in dusty or sandy conditions.
- High temperatures will shorten the life of the electronic components and also damage the battery and certain plastic parts.
- Do not throw, hit or shake your mobile phone watch.

27. Security:

- If your phone watch is lost or stolen, please notify your service provider as soon as possible to block the use of the phone and SIM card to avoid excessive unauthorized call costs.
- To prevent unauthorized use of your phone, please take safety measure, such as :
 - Setting the SIM card PIN number.
 - Setting the phone PIN

27.1 Passwords

Your mobile and SIM card have password functions which can protect your mobile and SIM card from unauthorized use. These can be changed by selecting: 'settings – safety settings - change keywords'. The default passcode (referred to as 'keyword') is 1234.

27.2 PIN

This can protect your SIM card from unauthorized use.

The PIN is supplied with the SIM card by the network supplier. Please see this for more information.

NOTE: If the PIN is input incorrectly 3 times , the SIM card will be locked. It will then be necessary to use a PUK code to unlock it. The PUK is stored by your network supplier and you will need to contact them to obtain this.

27.3 PIN 2

PIN 2 – this is a 4—8 digit number supplied with SIM card . It is required to set up the call cost and fixed dial functions. Please contact your supplier to confirm if your SIM card supports these functions. If you input the PIN2 incorrectly twice , PIN2 will be locked. If this occurs, please contact your network for details on how to unlock it.