PHM-275 DILUTION OLFACTOMETER USER'S MANUAL

DOC-007 Rev. 2.2

Copyright © 2007 All Rights Reserved

MED Associates, Inc. P.O. Box 319 St. Albans, Vermont 05478 www.med-associates.com

TABLE OF CONTENTS

Chapter 11
Introduction1
PHM-275 Dilution Olfactometer with Optional Pumps1
Chapter 22
Installation2
Chapter 312
Septa Seal Replacement
Scent Installation or Replacement15
Chapter 416
Operation
Appendix A18
PHM-275 Flow Diagram18
Appendix B19
PHM-275 with Six PHM-276s Flow Diagram19
Appendix c20
PHM-275 with Single Test Port Flow Diagram
Appendix D21
PHM-275 with Controlled Test Port Flow Diagram21
Appendix E
PHM-275 with Optional Manifold to Multiple Test Ports Diagram
Appendix F23
PHM-276 Flow Diagram23

CHAPTER 1 Introduction

Every effort has been made by MED Associates, Inc. to deliver a fully functional, tested and calibrated Dilution Olfactometer. Please read through the following pages carefully before attempting to unpack, set-up or operate the PHM-275 Dilution Olfactometer. This document contains important information regarding the set-up and operation of the Dilution Olfactometer.



Figure 1 – Dilution Olfactometer with Optional Pumps

PHM-275 Dilution Olfactometer with Optional Pumps

The PHM-275 Dilution Olfactometer is a standalone unit that provides the capability to condition incoming air (desiccate, filter, and rehydrate) and controls the presentation of either a single scent or a mixture of two or more scents to a test chamber. This system is suitable for odor discrimination tasks where flow control is critical, olfactory coding, or any behavioral or neurophysiological study using odor as a stimulus.

Up to eight scents may be controlled and mixed by adding optional PHM-276 Olfactory Column Saturators to the base unit. Valves activated by 28 Volts DC solenoids are used to mix odors and route airflow to the test chamber. The PHM-275 Dilution Olfactometer is designed to generate precise concentrations of up to eight separate odors to a single test point.

CHAPTER 2 Installation

The PHM-275 system provides three containers to desiccate, filter, and rehydrate the incoming air supply before it is mixed with the odor scent sources. The incoming air is plumbed to a large central chamber that houses the desiccant. From the desiccant chamber the air is routed to the chamber that contains activated charcoal filter, then to the chamber that contains distilled water to rehydrate the air (see Figure 1).

Remove the smaller chambers by unscrewing them from the mounting block. The desiccant container is removed by unscrewing two wing nuts located in the base of the mounting structure, as shown in Figure 2. After the wing nuts are removed, support the desiccant container while as it is lowered away from the mounting block.


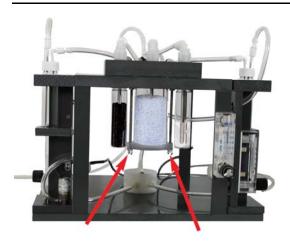


Figure 2 - Remove Desiccant Container Wing Nuts

 Fill the charcoal filter container to approximately $\frac{1}{2}$ " (12.5 mm) of its shoulder with activated charcoal as shown in Figure 3.





Install the filled charcoal filter chamber as shown in Figure 4. Insert the metal air tube into the charcoal and gently guide the chamber up to the mounting block. Screw the chamber into the mounting block until it is snug.


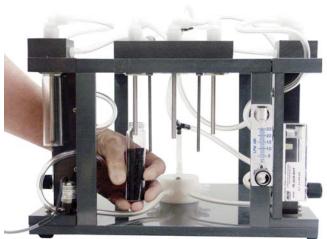


Figure 4 – Installing the Charcoal Filter Chamber

 Fill the rehydration chamber with approximately 1" (25.4 mm) of distilled water as shown in Figure 5.






Install the rehydration chamber in the same manner as the charcoal filter chamber, as shown in Figure 6. Insert the metal air tube into the distilled water and gently guide the chamber up to the mounting block. Screw the chamber into the mounting block until it is snug. Check the metal air tube to ensure that the open end is below the level of the distilled water. If it is not, remove the chamber and add more distilled water until there is sufficient liquid to cover the end of the tube. Do not overfill. This could result in water bubbles entering the rest of the system.



Figure 6 – Installing the Rehydration Chamber

The odor sources are installed in the same manner as the charcoal and distilled water. Unscrew the container, insert scent source, and secure the container back to its mounting block. Screw the container into the mounting block until it is snug.

 Fill the desiccant chamber to approximately $\frac{1}{2}$ " (12.5 mm) of the open top as shown in Figure 7.





Gently raise the desiccant around the central metal air tube as shown in Figure 8. As top of the container approaches the mounting block, align the threaded rod with holes in the mounting flange on the bottom of the container.



Figure 8 – Installing the Desiccant Container

Ensure that the top of the container is in the O-ring groove of the mounting block and attach the wing nuts as shown in Figure 9. Tighten the wing nuts to insure proper seal. Do not over tighten the wing nuts.


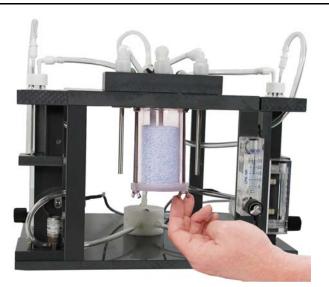


Figure 9 – Installing the Wing Nuts

 
The PHM-275 Dilution Olfactometer contains two PHM-276 Olfactory Column Saturators (Figure 10). Up to six additional PHM-276 may be purchased separately and added to the base unit to provide a maximum of eight individual odors which may be presented to the test chamber individually or in combination.






To install additional PHM-276 Olfactory Columns, position it on an open bay of the base as shown in Figure 11.

Figure 11 – Positioning the PHM-276

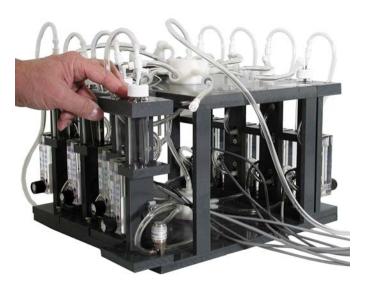

Remove a port plug from the lower manifold and replace it with a barbed nipple fitting (3/16" [4.7 mm] male to 1/8" [3.2 mm]-27 NPT nylon tube fitting). Connect the inlet of the new PHM-276's solenoid value to the newly installed barb fitting with a length of 3/16" (4.7 mm) ID 5/16" (7.9 mm) OD Tygon tubing.

Figure 12 - PHM-276 Solenoid Valve

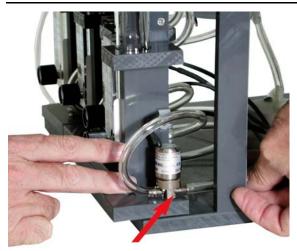


Remove a port plug from the upper manifold and replace it with a barbed nipple fitting (3/16" [4.7 mm] male to 1/8" [3.2 mm]-27 NPT nylon tube fitting). Connect the top outlet of the new PHM-276 to the newly installed barb fitting with a length of 3/16" (4.7 mm) ID 5/16" (7.9 mm) OD Tygon tubing.

Figure 13 - PHM-276 Upper Connection



Position the new PHM-276 onto the aluminum guide pins of the PHM-275 as shown in Figure 14. Push the body of the PHM-276 onto the guide pins until the body of pins is completely enclosed.

Figure 14 - PHM-275 Guide Pins

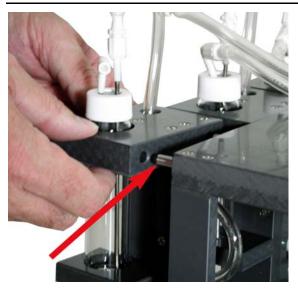


Secure the base of the PHM-276 to the base of the PHM-275 with a thumbscrew as shown in Figure 15.



Figure 15 - Thumbscrew to Base

Connect the air inlet port above the desiccant container (indicated by an arrow in Figure 16) to an air source.

Figure 16 - PHM-275 Air Inlet Port

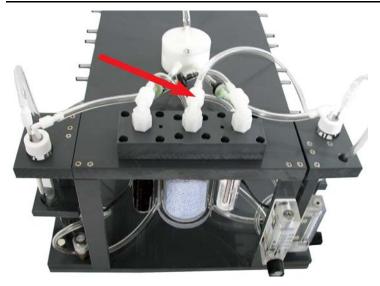


If an adequate source of pressurized air is not available, an optional air pump (MED Pat Number PHM-280) may be purchased from MED Associates. The pump is capable of producing a maximum airflow of 0.28 cfm (7.8 lpm) at a maximum pressure of 7 psig (0.59 bar). Figure 17 shows an optional air pump and vacuum pump with an arrow pointing out the outlet of the air pump.

Figure 17 - Pump Outlet Port




 With air flowing through the conditioning chambers, the flow for the bypass and scent sources may be adjusted and set. The flow for the bypass air is controlled by the needle valve at the base of the flow meter, indicated by an arrow in Figure 18.





 The flow rate may be adjusted from 0 to 2.5 liter per minute. The bypass air may be used as a non scented air flow through the test area so that the introduction of scent will not be accompanied by the sound of air flow, thus giving the subject an auditory cue to the start of the test session.





The airflow through PHM-276 Olfactory Column Saturators is regulated in the same manner as the bypass air. However a normally closed solenoid valve controls the flow into the needle valve. This unit has been designed to connect to a standard MED Associates connection panel (Smart Control or Passive).

If a connection panel is not used, connect the black wire to +28 Volts and the red wire to 28 Volt ground to operate the solenoid valve. To close the valve, remove the red wire from the ground. To set the flow rate through each odor container, activate the solenoid valve for that module and use the needle valve to set the flow rate using the flow meter. Once the desired flow rate has been verified, close the solenoid valve. Repeat this process for each column saturator to be used during the test session.

Connect output of the top manifold (indicated by an arrow in Figure 20) to the test chamber and the PHM-275 Dilution Olfactometer is ready to use.


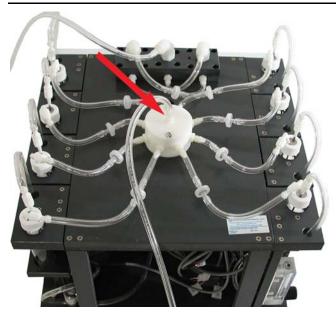


Figure 20 - PHM-275 Air/Odor Outlet Port

CHAPTER 3 Septa Seal Replacement

 Remove the scent vial from the PHM-276 column saturator by first disconnecting the scent output line from the check valve and manifold (Figure 21).






Disconnect the air inlet line from the flow control valve (Figure 22). Remove the cap and its plumbing from the vial. Remove the air inlet and scent outlet plumbing from the cap. Remove the Septa seal from the cap.

Figure 22 – Disconnect Air Inlet Line



Replace the old seal with a new seal by inserting it into the cap as shown in Figure 23. Be sure that the silicone side of the seal is against the cap top. The silicone side is the lighter colored and softer side of the seal. Replacement Septa seals may be purchased from MED Associates.



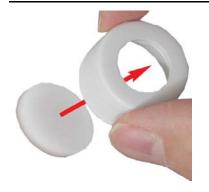

Replace the cap with the new seal onto the glass vial and gently tighten the cap as shown in Figure 24. This will seat the seal and provide a support for the seal while the tubes pierce the seal.



Figure 24 – Secure Cap

Insert the scent out line (the shorter of the two tubes) through the seal as shown in Figure 25. Note that the end of the tube is positioned as close as possible to the outer ring. Gently push the tube through the seal.

Figure 25 – Positioning the Scent Outlet Tube



Insert the air inlet tube into the Septa seal. Position the tip of the tube opposite the shorter tube and as close to the outer ring as possible (Figure 26).



Figure 26 – Positioning the Air Inlet Tube

Return the assembled scent vial to the position on the PHM-275 Dilution Olfactometer from which it was removed.

Scent Installation or Replacement

Remove the scent vial from the PHM-276 column saturator by first disconnecting the scent output line from the check valve and manifold (Figure 21). Disconnect the air inlet line from the flow control valve (Figure 22). Remove the vial from its support structure. Remove the cap and its plumbing from the vial. Clean the vial and insert the desired scent source. Replace the cap with its plumbing and tighten until snug. Return the vial to its support structure and reconnect the fittings. Appendix F presents a flow diagram of the PHM-276 column saturator and its interface connections with the PHM-275 Dilution Olfactometer.

CHAPTER 4 Operation

With the column saturators and bypass airflow set to the desired flow rates, activation of a column saturator solenoid will allow air scented with that particular odor to travel to the test chamber. If more than one column saturator solenoid is activated at the same time, the odors from each will be mixed in the upper manifold and delivered to the test chamber.

The flow diagram in Appendix A presents an overview of the operation of a PHM-275 Dilution Olfactometer. Air is conditioned by passing through a desiccant to remove suspended water, then a charcoal filter to remove odors, and finally rehydrated with distilled water. The conditioned airflow is then bifurcated to the bypass air flow meter and the lower manifold (Manifold #1) on the assembly base. The bypass air flows into the upper manifold (Manifold #2) of the PHM-275 assembly and continues on to the test chamber. The bypass air may be used as a non-scented "background" air flow through the test area so that the introduction of scent will not be accompanied by the sound of air flow, thus giving the subject an auditory cue to the start of the test session. However, it should be noted that the bypass airflow will dilute the concentration of odor when introduced to the test chamber.

The flow of air from Manifold #1 proceeds to the normally closed solenoid valves of all olfactory column saturators present on the PHM-275 base. The standard PHM-275 includes two PHM-276 column saturators. When a solenoid valve is activated, the conditioned air flows through the flow meter, which is used to adjust the flow rate through the odor storage container. From the flow meter, the air passes through the odor source. The scented air then flows through a check valve and into Manifold #2. If bypass air is flowing through manifold #2 when the scented air is present, it will mix with and dilute the scented air. When both solenoid valves are open at the same time, the two odors will mix with the bypass air in Manifold #2 and flow on to the test chamber.


Appendix B depicts a PHM-275 with six PHM-276 Olfactory Column Saturators. The basic operational concept remains the same. Activation of a single solenoid valve will allow that scent to be presented at the test chamber. The simultaneous activation of multiple solenoid valves will allow the mixing of those odors in Manifold #2, with the resulting combined odor being presented at the test chamber.

The setup of the test chamber is dictated by the researcher's protocol. Appendix C presents a basic test approach that employs a sniff port and scent extraction via the use of an optional vacuum pump. If a vacuum source is not available, MED Associates offers a small vacuum pump (MED part number PHM-281) that can provide a maximum airflow of 0.25 cfm (7 lpm) at a maximum vacuum of 11 in. Hg (428 mbar). Contact Sales at MED Associates for further details on available test chamber equipment and pumps.

If more sophisticated control of the flow at the test chamber, Appendix D presents an optional test setup, which incorporates a three-way valve to control the flow into the test port, and a needle valve controlled flow meter to control the flow to the vacuum pump.


Appendix E presents another variation of application of the output from a PHM-275 Distillation Olfactometer. Here the odor is directed to a manifold that directs the scent to the ports of a five-wall nose poke test chamber. The flow to the test ports is controlled by solenoid valves that allowing the researcher to direct flow to individual ports or multiple ports.

APPENDIX A PHM-275 Flow Diagram

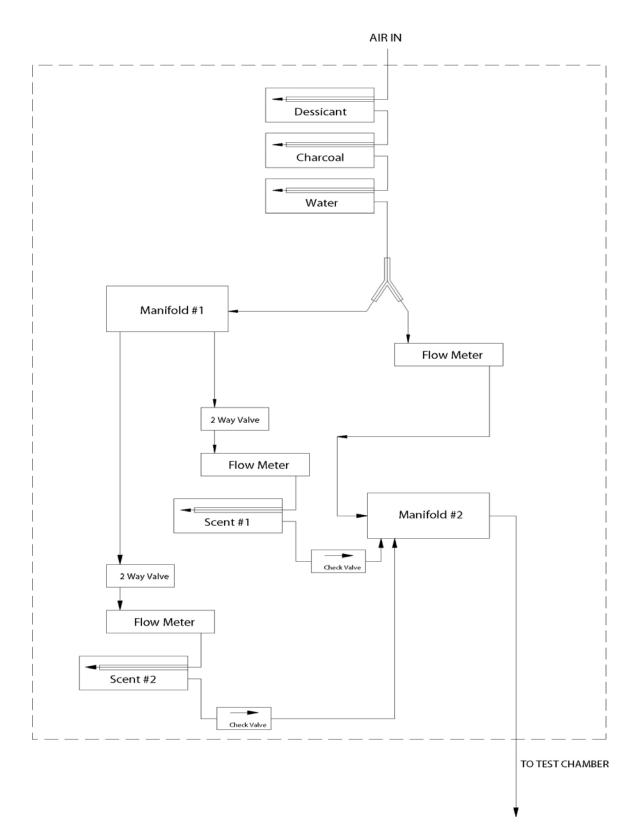


APPENDIX B


PHM-275 with Six PHM-276s Flow Diagram

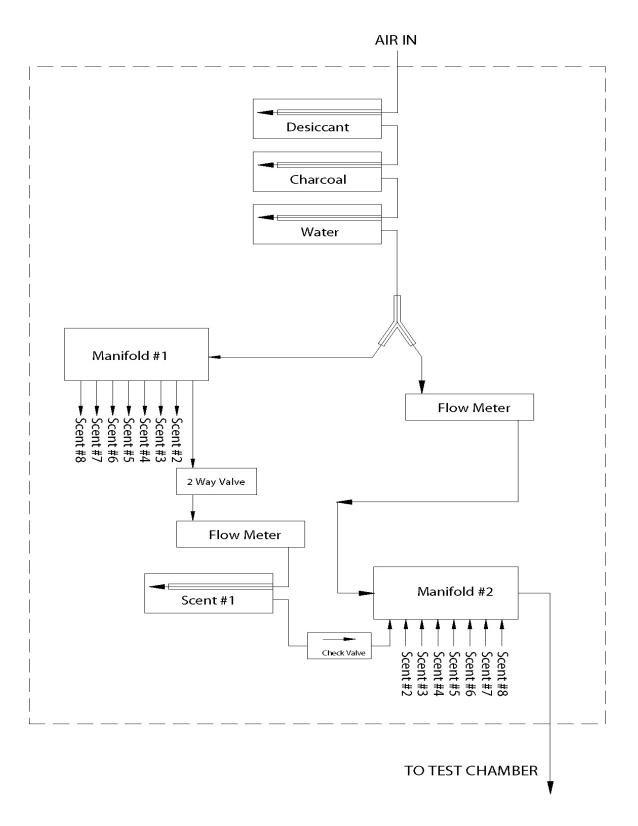


APPENDIX C PHM-275 with Single Test Port Flow Diagram

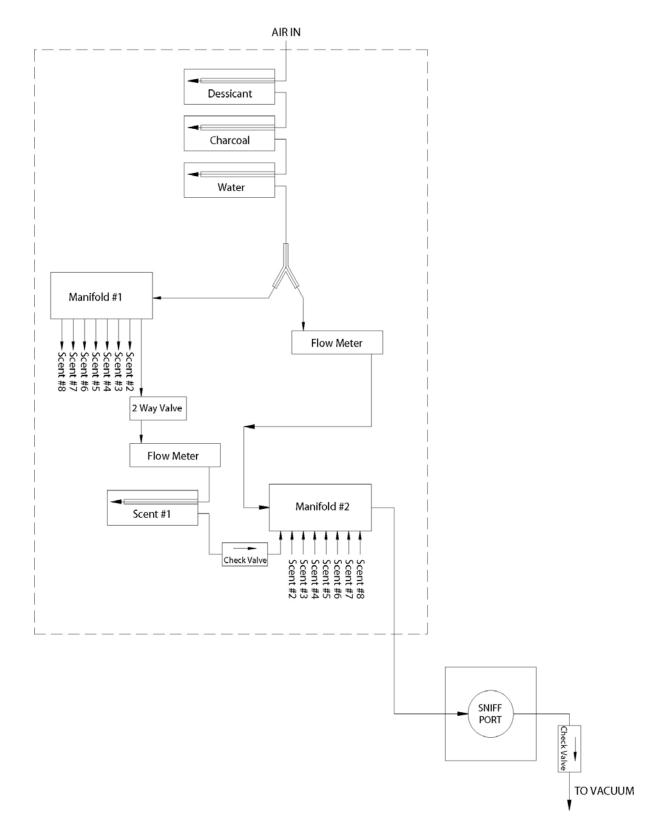

APPENDIX D PHM-275 with Controlled Test Port Flow Diagram

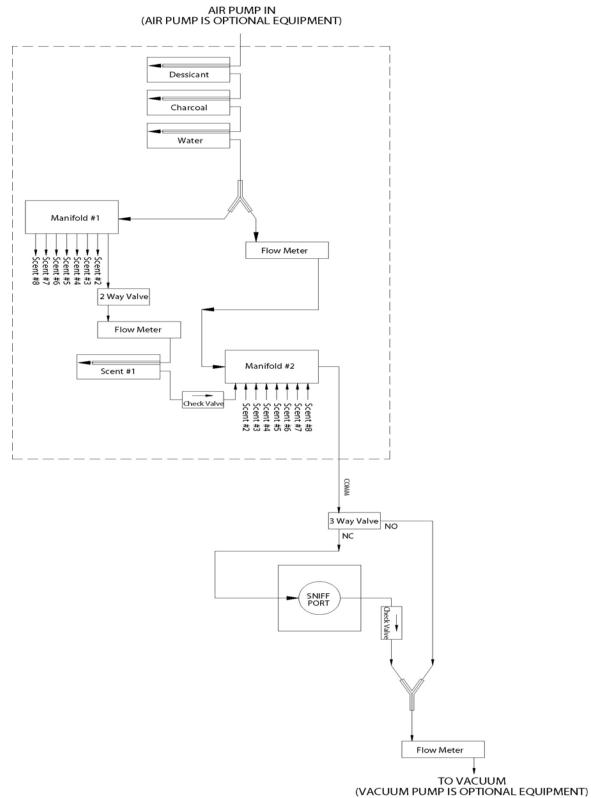

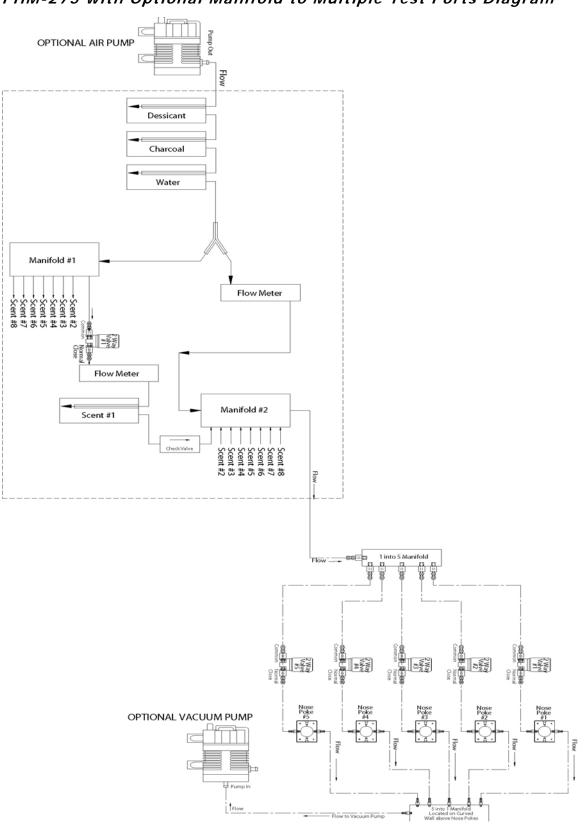

APPENDIX E *PHM-275 with Optional Manifold to Multiple Test Ports Diagram*

APPENDIX F PHM-276 Flow Diagram

