

# Portable WiMAX CPE

## Mada Biscuit User Manual



# Welcome!

Thanks for choosing Mada. Follow the simple steps in this user manual and you will be online in minutes!



# Items in the Box



**Mada Biscuit  
WiMAX CPE**



**Wall Charger**



**Battery**



**USB Cable**

**User Manual**



# Mada Biscuit



# Insert Battery

Inset the battery into your Mada Biscuit by removing the battery cover on the bottom of Mada Biscuit and then sliding the battery in, so the metal pins align. Replace the battery cover.



# Connect Power

- 1.Plug the Wall Charger into Mada Biscuit and connect the other end to an electrical outlet. The power icon on the Mada Biscuit will be illuminated red indicating the battery is charging.
- 2.Charging the battery completely. The power button will glow green when the battery is fully charged.
- 3.Once fully charged. Turn the Mada Biscuit on by pressing the power button for 2-3 seconds. After powering on, your Mada Biscuit will search for WiMAX signal and automatically connect to Mada network when found. While attempting to connect, the WiMAX indicator will display flashing light.
- 4.Once a WiMAX connection is successfully established, the WiMAX indicator will turn solid green, yellow or red.
- 5.Mada Biscuit can also be charged via connecting the Mini-USB cable to a PC or laptop USB port.

As long as the 4G indicator remains steadily lit, your Mada Biscuit is connected to Mada network.



# Connect to Mada Biscuit from your Computer

You can now connect to Mada Biscuit and Mada internet service from your Wi-Fi-enabled device by following these steps:

1. With your computer's Wi-Fi turned on, view the list of available wireless (Wi-Fi) networks.
2. Select from this list the network named "Mada Biscuit" Click "Connect."
3. When prompted, enter the password shown on the bottom of your Mada Biscuit "madabiscuit".

Once your computer is successfully connected to your Mada Biscuit via Wi-Fi, launch your computer's web browser.

Congratulation! You are now connected to Mada WiMAX service!



# Manage Your Mada Biscuit

Use your Mada Biscuit home page to view the status of your connection and device, and change its setting at any time.

To display your Mada Biscuit device home page, type <http://192.168.1.1> into the address bar of your web browser while connected to the Mada Biscuit via Wi-Fi. You may want to bookmark this page for easy access.

To change settings, enter your default password "madabiscuit".

Your Wi-Fi security password and Mada Biscuit device home page password are set the same by default, but can be changed to different values if desired.





# Manage Your Mada Biscuit

For more information on your Mada Biscuit features and settings, click “help” on the Mada Biscuit device home page or visit [www.mada.jo](http://www.mada.jo)

