

## Troubleshooting

If the unit doesn't operate...	Check that the batteries are installed correctly. Or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the magical wand does not trigger the answer...	Try again placing the face of the magical wand over the TRUE or FALSE areas.
If the unit malfunctions...	Install new batteries.

## Important Information

### Care Instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of European directives 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC, 2002/96/EC, 2003/108/EC and 2002/95/EC.

**Warranty:** Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

 
Should you require additional wands then please refer to our website for details:  
[www.inspirationworks.co.uk](http://www.inspirationworks.co.uk).

**InspirationWorks UK Ltd**  
Charlotte Court  
Proctor Way  
LUTON  
Bedfordshire  
LU2 9PE  
UK  
[www.inspirationworks.co.uk](http://www.inspirationworks.co.uk)



© 2010 - CIDE toys  
[www.cidetoys.com](http://www.cidetoys.com)

BEN AND HOLLY'S LITTLE KINGDOM © Astley Baker Davies/  
Entertainment One UK Limited 2008.




Rev. 00  
January 2011  
Printed in China  
Made in China



2+

## Ben & Holly Magical Laptop Instruction Manual

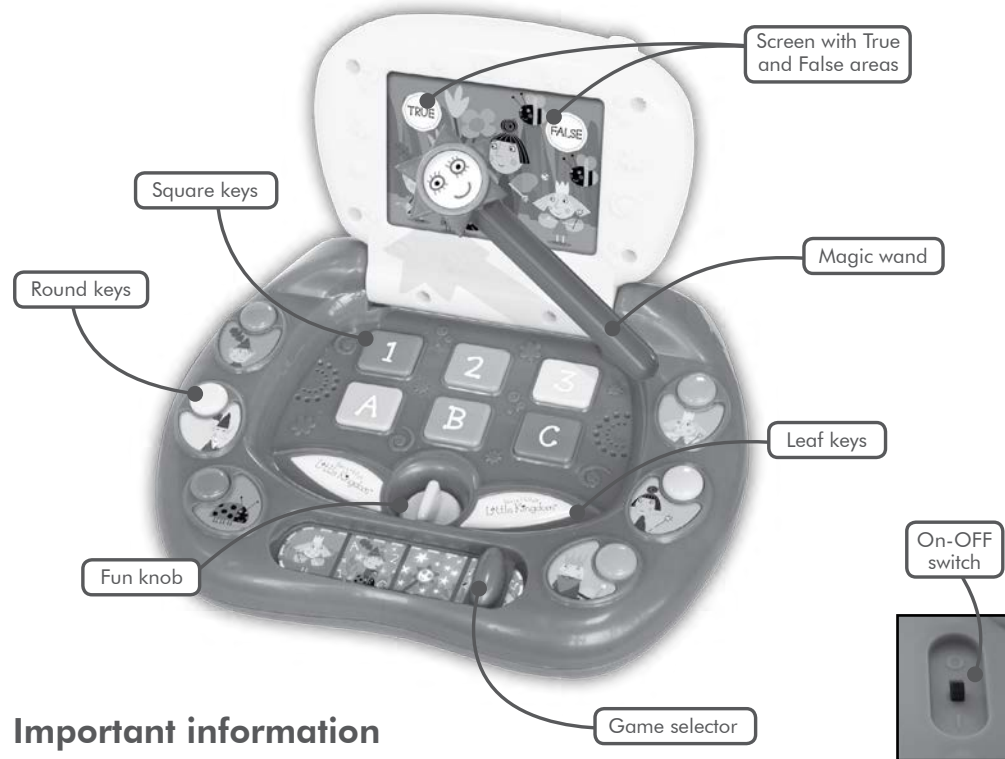

### Important information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- **WARNING:** All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- **IMPORTANT:** for additional safety, check toys regularly for signs of damage during use.

### Content

- The unit
- The magic wand
- This instruction manual



inspiration works

## How To Play

To switch the unit ON, move the slider located at the bottom of the unit.

Open the lid and the laptop will play a welcome tune.

The laptop offers 4 different game modes to play with. The game mode is selected using the game selector.

### Game 1: Discovery mode

This game is selected when moving the game selector to the very left.

In this mode, the child can discover colours, numbers, letters, and meet Ben & Holly and their friends, by pressing the various keys of the Laptop:

- The 6 square keys will say the colours, the numbers and letters.
- The 6 round keys on the sides will introduce Ben & Holly and their friends.
- The 2 leaf keys will play some cute tunes when pressed.
- The fun knob will trigger a special sound effect when turned.
- Waving the magic wand over the TRUE or FALSE areas on screen will trigger a magical sound effect.

### Game 2: Quiz mode

This game is accessed by sliding the game selector one step to the right, from the Discovery mode.

The child is now asked questions that can be answered by directly pressing on the keys. He will be challenged on finding colours, letters, numbers, Ben & Holly and their friends.

The child has 3 attempts to give the correct answer.

After 3 incorrect answers, the unit will advise what the correct answer was and then will ask another question.

### Game 3: Magic Quiz mode

This game is accessed by sliding the game selector one step to the right, from the Quiz mode.

The child is now asked questions that can be answered placing the face of the magic wand over the TRUE or FALSE areas on screen.

He will be challenged on colours, letters, quantities, and Ben & Holly and their friends.

The child has only 1 attempt to give the correct answer.

After an incorrect answer, the unit will advise what the correct answer was and then will ask another question.



*How to use the magic wand.*

### Game 4: Music mode

This game is accessed by sliding the game selector to the very right.

In this mode, the child can discover music by pressing the various keys of the laptop:

- Each of the 6 square keys will become a kind of piano key and will then trigger a different music note when pressed. The child can then compose his own tunes!
- Each of the 6 round keys on the sides will trigger alternatively 2 different tunes.
- The 2 leaf keys will play some cute tunes when pressed.
- The fun knob will trigger a special sound effect when turned.
- Waving the magic wand over the TRUE or FALSE areas on screen will trigger magical tunes.


At any time, closing the lid will stop the games and send the laptop into sleep mode.

To save battery power, the unit will automatically turn into sleep mode after a few seconds of inactivity.

To awake the unit from sleep mode, press on any key or game mode contact.

## How To Change Batteries

1. This product requires 3 x "AA" (LR6-AM3) 1.5V batteries
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 3 x "AA" (LR6-AM3) 1.5V batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.

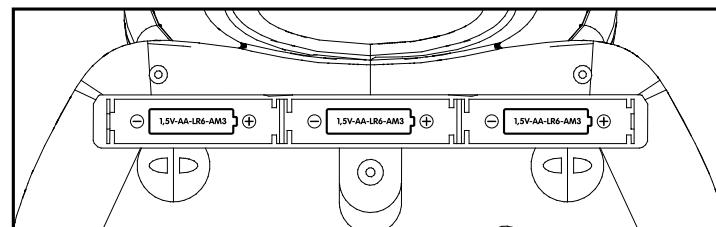

### Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
  - Rechargeable batteries shall be charged only under the supervision of an adult.
  - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

