

SAMSUNG

SCH a650

User Guide



SAMSUNG DIGITall
everyone's invited™

Samsung Telecommunications America, L.P.

1301 East Lookout Drive
Richardson, Texas 75082
1-800-SAMSUNG

www.samsungusa.com/wireless



© 2004 Samsung Telecommunications America. Samsung is a registered trademark of Samsung Electronics America, Inc. and its related entities. Specifications subject to change without notice.

GH68-04440A
03/2004, Rev. 1.1






SCH-a650 Series

  All Digital
Mobile Phone



User Guide

   Please read this guide before operating your phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America, L.P.

Headquarters

1301 East Lookout Drive
Richardson, TX 75082
Tel: 972.761.7000
Fax: 972.761.7001

Customer Care Center

1601 E. Plano Parkway, Suite 150
Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)
Fax: 972.761.7001 and 972.761.7501

Internet Address: <http://www.samsungusa.com>

©2004 Samsung Telecommunications America. Samsung is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in South Korea
Revised February 26, 2004
GH68-04440A

 
 
Openwave® is a registered Trademark of Openwave, Inc.


 

 
 


RSA® is a registered Trademark RSA Security, Inc.



**Disclaimer of Warranties;
Exclusion of Liability**

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.



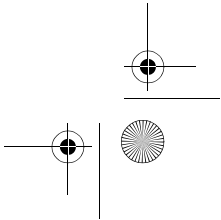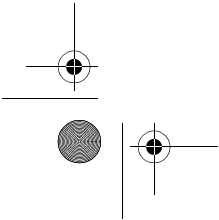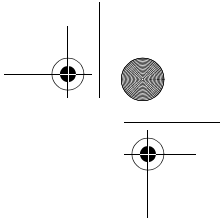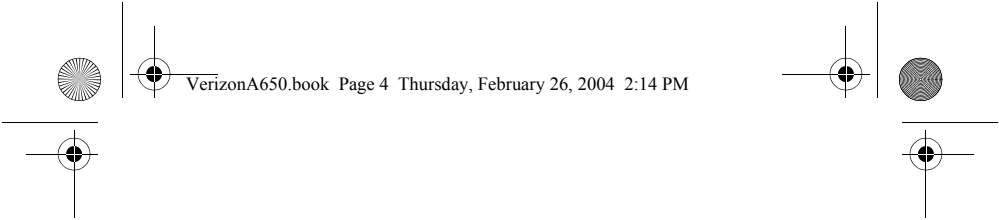

Contents


SCH-a650 closed view	1
SCH-a650 open view	2
Quick Reference.....	3
Introduction	5
Key features of the SCH-a650.....	5
Install the battery	6
Remove the battery	6
Charge the battery	7
Understand your phone.....	8
Antenna	8
Backlight features.....	8
Power save mode.....	9
Left soft key	9
Right soft key	10
Clear key	10
End key.....	10
Headset connector	11
Microphone	11
Alpha-Numeric keypad	11
Speaker	11
Volume Key	11
SEND key	12
Navigation key	12
Your phone's display	12
Your phone's modes	14
Call Answer mode	14
Input mode.....	14
Lock mode.....	14
Standby mode	15
Receive messages in standby mode.....	15
Talk mode.....	15
Silent mode.....	15
Vibrate mode	16
The ringer setting.....	16
Getting Started	17
Obtaining service.....	17
Turn the phone on	17

Turn the phone off	17
Make and answer calls	18
Menus and sub menus	21
Menu navigation	24
Navigate using keys	24
Navigate using a shortcut	25
In-Use Menu	26
Calls	27
Outgoing	27
Incoming	28
Missed	28
Erase Logs	29
Review the call log	29
Call Timer	30
Call waiting	31
Caller ID	32
Call Block	32
Three-way calling	32
Phonebook	33
Open the Phonebook	33
Find	34
Rename group	37
Edit Phonebook numbers	38
Add pauses	39
Store pauses in a Phonebook entry	39
Pause dial from the Phonebook	40
Manual pause calling	40
Erase individual Phonebook entries	41
Edit an existing e-mail address	42
Assign speed dial numbers	42
Store numbers after a call	43
Store numbers from call logs	44
Shortcuts to storing phone numbers	45
One-touch dialing	45
Two-touch dialing	45
Three-touch dialing	46
My Phone#	46
Memory	46
Messages	47
Text entry modes	47

Send SMS text messages	50
Receive text messages	53
Receive messages while in a call.....	54
Message folders	54
Get It Now	61
Settings.....	62
Help	62
Mobile Web	65
Stored web content.....	65
Launch Mobile Web.....	65
Exit Mobile Web.....	66
Navigate the web.....	66
Mobile Web soft keys	66
How Mobile Web keys work	66
Using links	67
Place a call while using Mobile Web	67
Planner	68
Open the Planner	68
Today.....	68
Scheduler	70
View an event.....	70
Jump To Date	70
To Do List	71
Memo Pad	72
Count Down.....	74
Alarm Clock	76
World Time	77
Calculator	78
Display	79
Animation.....	79
Banner	80
Backlight.....	81
Contrast.....	82
Auto Hyphen.....	82
Service LED.....	82
Sounds.....	83
Volume/Vibrate	83
Ringer Type	83
Voice Kit.....	87
Voice Dial	87

Voice Memo	88
Setup	91
Location	91
Network	91
Data	92
Security	93
Others	97
Version	102
TTY/TDD	103
Usage guidelines:	
All about performance and safety	104
Getting the Most Out of Your Reception	104
Maintaining Safe Use of and Access to Your Phone	106
Caring for the Battery	110
Acknowledging Special Precautions and FCC	111
FDA Consumer Update	113
Owner's Record	127
User Guide Proprietary Notice	127
Limited Warranty	128
Index	135


SCH-a650 closed view

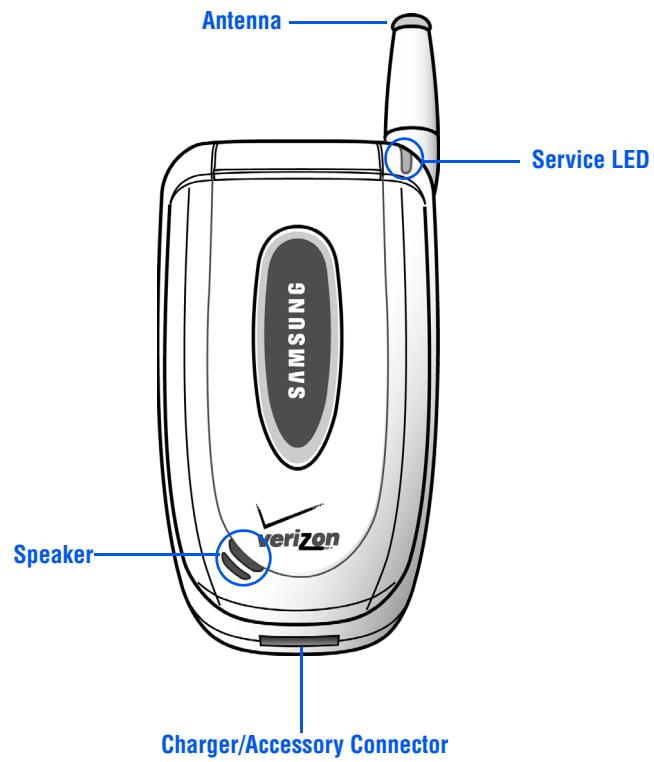

SCH-a650 closed view

1

SCH-a650 open view

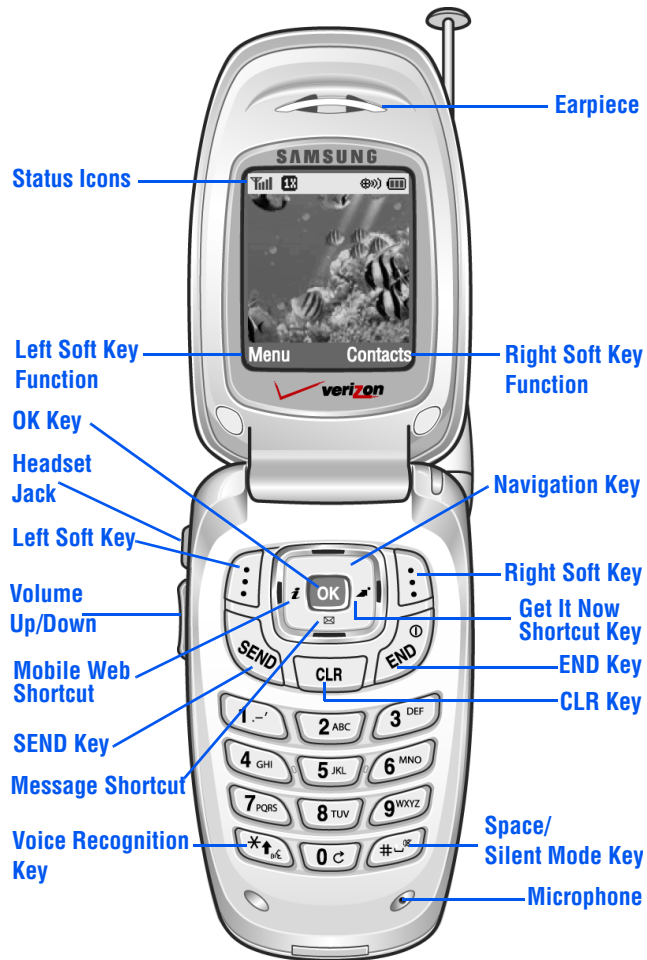

Quick Reference

Cut out and use this page as a handy quick reference for several useful features in your phone.

1) CALLS

- 1) Outgoing
- 2) Incoming
- 3) Missed
- 4) Erase Logs
- 5) Call Timer

2) PHONEBOOK

- 1) Find
- 2) Add
- 3) Rename Group
- 4) My Phone #
- 5) Memory

3) MESSAGE

- 1) Send New Msg
- 2) Voice
- 3) Inbox
- 4) Outbox
- 5) Draft
- 6) Saved
- 7) WebAlert
- 8) Msg Setting
- 9) Erase Msg

4) MOBILE WEB

- 1) Get In Web

5) PLANNER

- 1) Today
- 2) Scheduler
- 3) Jump To Date
- 4) To Do List
- 5) Memo Pad
- 6) Count Down
- 7) Alarm Clock
- 8) World Time
- 9) Calculator

6) DISPLAY

- 1) Animation
- 2) Banner
- 3) Backlight
- 4) Contrast
- 5) Auto Hyphen
- 6) Service LED

7) SOUNDS

- 1) Volume/Vibrate
- 2) Ringer Type
- 3) Key Beep
- 4) Alerts
- 5) Power On/Off
- 6) Roam Ringer
- 7) Whisper Mode

8) VOICE KIT

- 1) Voice Dial
- 2) Voice Memo

9) SETUP

- 1) Location
- 2) Network
- 3) Data
- 4) Security
- 5) Others
- 6) Version

Quick Reference

Turn the phone on and off

Press and hold  to turn the phone on or off.

Enter/Exit Silent Mode

In standby mode, press and hold . To exit, press and hold .

Set call ringer volume

- 1) In standby mode, press the volume key on the left side of the phone.
- 2) Press the volume key up or down to set call ringer volume as desired.

View recent calls

In standby mode, press . Your recent calls appear in the display.

Change the wallpaper

- 1) In standby mode, press the left soft key () **Menu**, then press , , .
- 2) Use the left/right navigation keys to select your choice of wallpaper.


Save a number (quickly)

- 1) In standby mode, enter the number to save using the keypad.
- 2) Press . With **New Entry** highlighted, press  again.
- 3) Select the number type using the navigation keys, then press .
- 4) Enter a name for the entry using the keypad, then press .

View software and hardware information for your phone

In standby mode, press the left soft key () **Menu**, then press , .

Navigation key shortcuts (in standby mode)

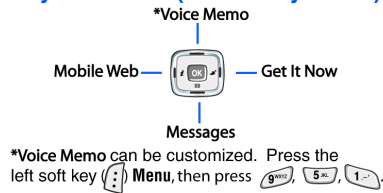

Introduction

Congratulations on your purchase of the Samsung SCH-a650 mobile phone. The features listed below are a sample of what SCH-a650 has to offer. We ask that you read this guide to understand the many features that this phone supports and keep it handy for reference.

Key features of the SCH-a650

- 128 x 160 pixel Liquid Crystal Display
- High speed data (CDMA 2000 1X Technology)
- Global Positioning Technology (GPS)
- PIM functions (Scheduler, To Do List, etc.)
- Short Message Service (SMS)
- Voice Dial
- 16 Polyphonic Ringtones

How to use this guide

The chapters of this guide generally follow the same order as the menus and sub menus in your phone. A robust index for quick reference to most features begins on page 135.

Also included is important safety information that you should know before using your phone. Most of this information is near the back of the guide, beginning on page 104.

Install the battery




Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel charger.




Important! The phone can be used while the battery is charging, but must be fully charged the first time you use your phone otherwise you could damage the battery.

1. Insert the bottom end of the battery first, matching the gold contacts on the inside of the battery to those on the phone.

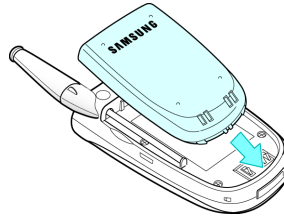


2. Press the top end of the battery down into the phone until you hear it snap into place.

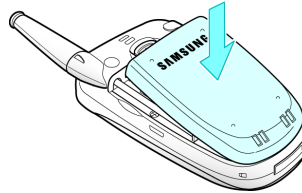

Remove the battery

1. Press and hold  to turn off the phone (if on).
2. Slide the battery release latch toward the top end of the phone and hold.
3. Lift the battery up and away from the phone, top end first.

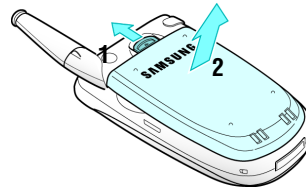


Charge the battery


Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. **Using other accessories may invalidate your warranty and may cause damage.**

Use the travel charger

The travel charger is a convenient, light-weight charger that rapidly charges your phone from any 120/220 VAC outlet.

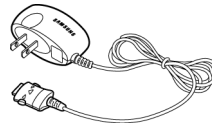

1. Plug the large end of the travel charger into a standard 120 or 220 VAC wall outlet.
2. Insert the smaller end of the adapter into the charger/ accessory connector at the bottom end of the phone.

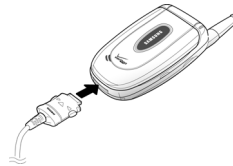

Low battery indicator

The battery indicator (🔋) in the upper-right corner of the display screen indicates the battery power level. Three bars indicate a full charge, while an empty battery icon indicates your battery is almost empty. Two to three minutes before the battery charge level becomes too low to operate the phone, a blinking empty battery icon (🔋) appears in the display and a tone sounds. If you continue to operate the phone without charging the battery, the phone shuts down. Be sure to monitor the battery strength icon and ensure your battery is adequately charged.

Understand your phone

Antenna

Avoid touching the antenna while the phone is powered up. Contact with the antenna affects the quality of your calls and may cause the phone to operate at a higher power level than necessary.

Backlight features

You can choose the amount of time that the display and backlight remain illuminated after a period of inactivity. Keep in mind that increasing these settings reduces battery life.



Folder Open enables the keypad or display backlight to remain on as long as the folder is open.

1. In standby mode, press the left soft key () **Menu**.
2. Press , , for **Backlight**. The following backlight options appear in the display.
 - 1 **Lcd**
 - 2 **Keypad**
 - 3 **Power save**
3. Use the navigation key to highlight **Lcd** or **Keypad**, then press .
4. Use the navigation key to highlight the amount of time that you wish the keypad or display to remain illuminated after a period of inactivity, then press .

Power save mode

Unless the backlight setting for the LCD has been changed, the backlight dims after a minute of inactivity, and then turns off. With Power save enabled, the backlight for the LCD is always dim. After 15 seconds of inactivity, Power save turns the backlight off. To enable or disable Power save:

1. In standby mode, press the left soft key () **Menu**.
2. Press , , for **Backlight**. The following backlight options appear in the display.
 - 1 Lcd
 - 2 Keypad
 - 3 Power save
3. Use the navigation key to highlight **Power save**, then press . **Off** and **On** appear in the display.
4. Use the navigation key to highlight **On** or **Off**, then press .

Left soft key

Functions for the left soft key () are defined by what appears above it in the display. Some functions of the left soft key are as follows.

- Press the left soft key () **Menu** to enter the Main menu.
- Press the left soft key () **Option** to view options in some features.
- Press the left soft key () to acknowledge browser charges and other functions.

Right soft key

Functions for the right soft key () are defined by what appears above it in the display. Some functions of the right soft key are as follows:

- Press the right soft key () **Back** to return to the standby mode from any main menu.
- Press the right soft key () **Back** to return to the previous menu from a sub menu.
- In standby mode, press the right soft key () **Contacts** to enter the **Contacts** list.

Clear key

The CLR key () is used to erase or clear numbers from the display. You can also use  to return to a previous menu or to return to standby mode from any menu.

- If you enter an incorrect character, briefly press  to backspace and delete.
- To erase all digits or characters from the display screen, press and hold .
- To back up one menu level, briefly press .
- To return to standby mode from any menu, press and hold  until you return to standby mode.

End key

- Press and hold  to turn off and on your phone.
- Press  once to disconnect a call, return to standby mode, or cancel any input.


Headset connector

The headset connector is the input jack for the optional hands-free headset. The headset includes an earbud and microphone in a convenient, lightweight unit so you can talk without using your hands.

- Before connecting the headset, gently pry open the input jack cover to expose the connector inside.

Microphone

The microphone, located just beneath  on the keypad, is used for conversation, voice setup, and recording voice memos

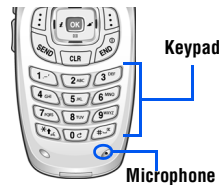

Alpha-Numeric keypad

Use the alpha-numeric keypad to enter text, numbers, and special characters.

Speaker

The speaker, located on the front of the flip, plays audible sounds such as ring tones and alerts.



Volume Key

The volume key on the left side of the phone. Use the volume key to set the call ringer volume and earpiece volume (while in a call). You can even use the volume key to scroll through menus, sub menus, and lists.



SEND key

The SEND key () is used to answer calls, dial calls, and to recall the last number (or list of numbers) dialed.


- Press  once to answer calls.
- Enter a number and press  once to connect a call.
- Press  once in standby mode to display the most recently dialed number.
- Press  twice in standby mode to call the most recently dialed number.

Navigation key



Use any of the four directional keys on the navigation key to browse menus, sub menus, and lists. Each of the four keys also act as a shortcut to launch specific applications. The up navigation key is user definable, however. Use the **OK** () key for such things as replying to or confirming prompts, and jumping to highlighted links on the web.

Your phone's display

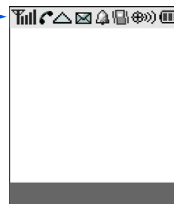

The top line of your phone's display contains icons that indicate network status, battery power, signal strength, connection type, and more. The following list contains icons that may appear in your display.

Display screen icons



Signal strength: Always appears when your phone is on and indicates the current signal strength. More lines indicate higher signal strength.



Ringer Silent: The ringer has been set to **Silent** using the volume key on the side of the phone.



Service indicator: Indicates a call in progress. When dialing a number, this icon flashes until the call connects.



No service indicator: Indicates your phone cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait for a signal or move into an open area to try and find a signal. The no service indicator always appears when you turn on your phone and disappears once service is located.



Roam: Extended roaming indicator. Roaming occurs when you use your phone outside your home area. While roaming, a wireless provider's system other than Verizon Wireless handles your call, so the service rate for the call may be higher than those made within your home area. Please refer to information from Verizon Wireless on roaming rates.



New Message: Indicates that you've received a new voice, text, page or web alert message. You're also notified by a visual and audible alert.



1X Protocol: Indicates your phone is using the 1X protocol.



Battery strength: Indicates the battery charge level. The more black bars, the greater the charge. When the battery becomes very low, a flashing empty battery icon displays and the phone sounds an audible alert, which indicates your phone is about to shut down.



Alarm clock: The alarm clock is set.



GPS (911 only): This icon represents Global Positioning Service (GPS) for 911.



GPS: Indicates GPS is on for location.



Silent mode: Indicates your phone is in silent mode. Ringer is silenced for all alerts, incoming calls, and incoming messages. The phone alerts you of incoming calls, alerts, and messages by vibration and a flashing Service LED.



Vibrate mode: Your phone is in vibrate mode. When you receive a call, the phone vibrates instead of ringing.

Your phone's modes

Call Answer mode

You can select the method for answering your phone when you receive a call.

1. In standby mode, press the left soft key () **Menu**, then press , , . The following call answer options appear in the display.

Send Key
Folder Open
Any Key

2. Use the navigation key to highlight an option.
3. Press  to select the method for answering calls.

Input mode

Use input mode (Abc, Symbol, 123, or T9 WORD) to enter text, numbers or symbols into messages, events, and other functions. The input mode is indicated in the right lower part of the display.

Lock mode

When you lock the phone using the **Lock Mode** menu option, restrictions are placed on phone use. You can receive messages and calls, but you cannot make outgoing calls (except for emergency numbers) until you unlock the phone.

Lock Mode also restricts access to menus and the volume key. Unlock your phone by following the prompts and entering the lock code.

Standby mode

Standby mode is the state of your phone once it has found service and is in the idle state. Your phone goes into standby mode:

- After you power it on.
- When you press  after a call.

When in standby mode, you will see the time, day, and date as well as all other active icons.

1. While in standby mode, enter a phone number, and press  to place a call.
2. Press  to return to standby mode.

Receive messages in standby mode

You can receive messages while in standby mode. An alert tone sounds and a notification message appears in the display when a new message arrives.

- Press the right soft key () **View** to view the message, or press the left soft key () **Ignore** to view the message later.

Talk mode

You can only place and receive calls when your phone is powered on. While in a call your phone is in talk mode. Press the left soft key () to display a list of **In-Use** menu options. See “In-Use Menu” on page 26 for more information.

Silent mode

With a single press of the key you can silence the call ringer and tones that your keypad makes whenever you press a key. When you receive a call, the phone vibrates instead of ringing.

Enter Silent mode

- In standby mode, press and hold . **Entering Silent Mode** briefly appears in the display and your phone returns to standby mode.  appears in the top line of the display.

Exit silent mode

- In standby mode, press and hold . **Exit Silent Mode** briefly appears in the display and your phone returns to standby mode.

Vibrate mode

You can set your phone to vibrate whenever you receive an incoming call either one of two ways.

- In standby mode, repeatedly press the volume key () down until **Vibrate** appears in the display.
- In standby mode, press the left soft key () **Menu**, then press , , .
 - Press the left navigation key until Vibrate appears in the display, then press .

The ringer setting

- In standby mode, repeatedly press the volume key () on the left side of the phone up or down. Options are:
 - Silent**
 - 1 Beep**
 - Vibrate**
 - Vibrate+Ring**
 - Level 1**
 - Level 2**
 - Level 3**
 - Level 4**
 - Level 5**
- Press  once you're satisfied with the setting. The phone returns to standby mode.

Getting Started

Obtaining service

Contact Verizon Wireless and follow their instructions for obtaining service, if necessary. We suggest that you read this user guide to fully understand the services that your phone supports.

Turn the phone on

1. Fully extend the antenna for the clearest reception, then open the flip.
2. Press and hold  for two or more seconds.



As with any other radio-transmitting device, do not touch the antenna as it affects call quality and can cause the phone to operate at a higher power level than is necessary.

3. **Verizon Wireless** momentarily appears in the display and your phone begins searching for a network signal.
4. Once the phone finds a signal, the time, date, and day appear in the bottom of the display.
5. You're now ready to place and receive calls.

If the phone is outside of your carrier's coverage or roaming area,  appears in the top of the display. If you cannot place or receive calls, try later when service is available.

Turn the phone off

- Press and hold  for two or more seconds. Your phone powers off.



If your phone is on and you press  for less than one second, the phone will not power off. This feature prevents your phone from being turned off accidentally.

Make and answer calls

Outgoing

1. With the phone on, enter the number you wish to call using the keypad.
2. Press  to place the call.

Incoming

When you receive a call, the phone displays one of the following:

- If the caller can be identified, the caller's number (or name if it's in your Phonebook) appears in the display.
- If the caller can't be identified, **Call from unavailable #**, **Call from restricted #**, or no number appears in the display.

Your phone continues to notify you of the call until one of the following events occur:

- You answer the call.
- The calling party ends the call.
- The call is sent to voicemail.

Call notification features

Your phone notifies you of a call in a variety of ways.

- Nine ring volume settings including **1- beep**, **Vibrate**, **Silent**, or **Vibrate+Ring**.
- Different ring types to distinguish callers.

- Name display with Caller ID. (If the caller's name is programmed into your Phonebook).
- Incoming or missed calls are automatically stored to a call log. The last 20 calls you answered are stored in an Incoming call log list and the last 20 calls you missed are stored in a Missed call log list.

Call answer

You can select from three methods for answering your calls.

You can change this option in the **Setup** menu.

1. In standby mode, press the left soft key () **Menu**, then press , , . The following options appear in the display.

Send Key
Folder Open
Any Key

2. Use the navigation key to highlight the call answer option of your choice.
3. Press  to select the highlighted option.

Auto Answer

You can enable your phone to automatically pick up any call after a preset length of time.

1. In standby mode, press the left soft key () **Menu**, then press , ,  to display the following options.

Off
After 5 sec
After 3 sec
After 1 sec

2. Use the navigation key to highlight an option.
3. Press **OK** to select the highlighted option.

LCD backlight setting

To prolong the life of your battery, the display goes blank when your screen is idle after a period of time. The amount of idle time allowed can be adjusted in the **Backlight** sub menu.

1. In standby mode, press the left soft key (**Menu**), then press **6 min**, **3 sec**, **1 sec**. The following options appear in the display.

***5 Seconds** (default setting), **10 Seconds**,
15 Seconds, **Folder Open**



With **Folder Open** selected, the LCD remains on as long as the flip is open. This can drain your battery significantly.

2. Use the navigation key to highlight an option.
3. Press **OK** to select the highlighted option.

Step ringer

Step ringer can prevent injury to your hearing. When your phone rings, it first begins to ring at the lowest volume level (level 1), then gradually ascends to the set level.

Silence an incoming ringer

- During an incoming call, press the up or down volume key to silence the ringer.

Ignore an incoming call

When you ignore an incoming call, the call is immediately forwarded to your voice mail.

- During an incoming call, press the left soft key (**Ignore**). The caller is forwarded to your voice mail.

Menus and sub menus

1) CALLS

- 1) **Outgoing**
- 2) **Incoming**
- 3) **Missed**
- 4) **Erase Logs**
 - 1) OUTGOING
Yes
No
 - 2) INCOMING
Yes
No
 - 3) MISSED
Yes
No
 - 4) ALL CALLS
Yes
No
- 5) **Call Timer**
 - 1) LAST CALL
 - 2) TOTAL
 - 3) LIFETIME
 - 4) ERASE TOTAL
Yes
No

2) PHONE BOOK

- 1) **Find**
BY NAME
BY ENTRY
BY GROUP
- 2) **Add**
NUMBER
E-MAIL
- 3) **Rename Group**
 - 1) FRIEND
 - 2) FAMILY
 - 3) COLLEAGUE
 - 4) VIP
 - 5) NO NAME
- 4) **My Phone#**
- 5) **Memory**

3) MESSAGE

- 1) **Send New Msg**
- 2) **Voice**
- 3) **Inbox**
- 4) **Outbox**
- 5) **Draft**
- 6) **Saved**
- 7) **WebAlert**
- 8) **Msg Setting**
- 9) **Erase Msg**
 - 1) VOICE
Yes
No
 - 2) OLDINBOX
Yes
No
 - 3) NEWINBOX
Yes
No
 - 4) OUTBOX
Yes
No
 - 5) DRAFT
Yes
No
 - 6) SAVED
Yes
No
 - 7) ALL MESSAGES
Yes
No

4) MOBILE WEB

- 1) **Get In Web**

5) PLANNER

- 1) **Today**
- 2) **Scheduler**
- 3) **Jump To Date**
- 4) **To Do List**
- 5) **Memo Pad**
- 6) **Count Down**
- 7) **Alarm Clock**
Once
Daily
Off
- 8) **World Time**
(See "World Time"
on page 77)
- 9) **Calculator**

6) DISPLAY

- 1) **Animation**
 - 1) OPENING
 - 1) Fall
 - 2) Aurora
 - 3) Sailing
 - 2) CLOSING
 - 1) Fall
 - 2) Aurora
 - 3) Sailing
 - 3) WALLPAPER
 - 1) Dual Clock
 - 2) Calendar
 - 3) Aquarium
 - 4) Landscape
 - 5) Water Drop
 - 6) Clock 1
- 2) **Banner**
- 3) **Backlight**
 - 1) LCD
 - 5 Seconds
 - 10 Seconds
 - 15 Seconds
 - Folder Open
 - 2) KEYPAD
 - 5 Seconds
 - 10 Seconds
 - 15 Seconds
 - Folder Open

6) DISPLAY (CONT.)

3) POWER SAVE
Off
On

4) Contrast

5) Auto Hyphen

No
Yes

6) Service LED

Off
On

7) SOUNDS

1) Volume/Vibrate

1) CALLS
Silent
1 Beep
Vibrate
Vib+Ring
Level 1
Level 2
Level 3
Level 4
Level 5

2) ALARM

Silent
1 Beep
Vibrate
Vib+Ring
Level 1
Level 2
Level 3
Level 4
Level 5

2) Ringer Type

1) CALLS
Bell 1
Bell 2
Bell 3
Bell 4
Bell 5
Melody 1
Melody 2
Melody 3
Melody 4
Melody 5
Melody 6
Melody 7
Melody 8
Melody 9

Melody 10

2) ALARM

Bell 1
Bell 2
Bell 3
Bell 4
Bell 5
Melody 1
Melody 2
Melody 3
Melody 4
Melody 5
Melody 6
Melody 7
Melody 8
Melody 9
Melody 10

3) DATA

Bell 1
Bell 2
Bell 3
Bell 4
Bell 5
Melody 1
Melody 2
Melody 3
Melody 4
Melody 5
Melody 6
Melody 7
Melody 8
Melody 9
Melody 10

4) PLANNER

Bell 1
Bell 2
Bell 3
Bell 4
Bell 5
Melody 1
Melody 2
Melody 3
Melody 4
Melody 5
Melody 6
Melody 7
Melody 8
Melody 9
Melody 10

3) Key Beep

1) VOLUME
Silent
Level 1
Level 2
Level 3
Level 4
Level 5

2) TONE LENGTH

Long
Normal

4) Alerts

1) MINUTE BEEP

On
Off

2) SERVICE

On
Off

3) CONNECT

On
Off

4) DISCONNECT

On
Off

5) FADE

On
Off

6) ROAM

On
Off

7) PRIVACY

On
Off

5) Power On/Off

On
Off

6) Roam Ringer

On
Off

7) Whisper Mode

On
Off

8) VOICE KIT

1) Voice Dial

1) RECORD
2) REVIEW
3) ERASE ALL
Yes
No

4) SET ACTIVE

[*]/Only
[*]/Folder
[*]/EarMic

2) Voice Memo

1) RECORD
2) REVIEW

8) VOICE KIT (CONT.)

- 3) ERASE ALL
Yes
No

9) SETUP

1) Location

- Location On
911 Only

2) Network

- 1) SET NAM
NAM 1
NAM 2
2) ROAM OPTION
Home only
Automatic
3) FORCE CALL
Automatic
1-Time Analog
Call

3) Data

- 1) AUTO DETECT
data off
data for next call
data until powered
off
2) BAUD RATE
Auto
19200
38400
57600
115200
230400

4) Security

- 1) LOCK PHONE
Never
On power up
Now
2) CHANGE LOCK
New code
3) EMERGENCY #
1) 911
2) *911
3) *911
4) VOICE PRIVACY
Standard
Enhanced

5) RESTRICTION

- 1) Outgoing
No
Yes
2) Incoming
No
Yes
3) Phonebook
No
Yes

6) ERASE MEMORY

- Yes
No

7) RESET PHONE

- Yes
No

5) Others

- 1) SHORTCUT
Scheduler
Voice Memo
Animation
Ringer Type
Alarm
Calculator
Memo Pad
2) CALL ANSWER
Send Key
Folder Open
Any Key
3) AUTO ANSWER
Off
After 5 sec
After 3 sec
After 1 sec
4) AUTO RETRY
Off
Every 10 sec
Every 30 sec
Every 60 sec
5) LANGUAGE
English
Spanish
6) CLOCK SET
1) Main Clock
2) Dual Clock
Location
Summer Time
P1: (Use Navi-
key to select
1st city)
P2: (Use Navi-
key to select
2nd city)

7) GAME PAD

- 1) Get Device
2) Key Remap
1) Cursor Key
2) Fire Key
3) Other Key

6) Version

Menu navigation

Access the menus and sub menus in your phone using the navigation key () and soft keys ( ), or use a shortcut.

Navigate using keys

1. In standby mode press the left soft key () **Menu**. The first of several menus appear in the display.
2. Use the navigation key to browse through the menus in your phone.
3. Press  to enter the menu or sub menu that appears in the display.
4. Press the right soft key () **Back** to return to the previous menu.

Return to the previous menu

There are two methods for exiting a menu or list.

- Press **Back** to return to the previous menu
- When **Back** does not appear in the display, press  to return to the previous menu.

Navigate using a shortcut

You can also access the menus and sub menus in your phone using menu numbers. Using the menu number in conjunction with the left soft key () **Menu** takes you directly to the menu or sub menu of your choice. Before you can navigate using a shortcut, you'll need to know the menu or sub menu number of the feature that you wish to access.




Tip: Use the list of menus and sub menus, which begins on page 21, to navigate using shortcuts.

1. In standby mode, press the left soft key **Menu** (.
2. Press the number of the menu, sub menu, and so on for the feature that you wish to access.

Example: Press the left soft key () for **Menu**, then press , . This takes you to the **Planner** (Menu 5), and then to the **To Do List** (sub menu 4).

Navigation key shortcuts

Some applications can be launched by pressing one of the four navigation keys (see the illustration) while in standby mode. The up key (defaulted to **Voice Memo**) can be customized in the **Setup** menu (**Menu** , , .

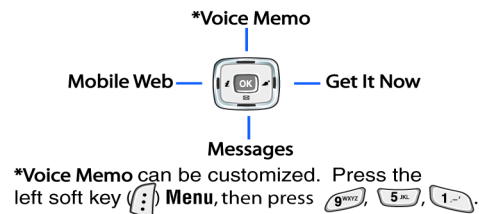

In-Use Menu

Your phone includes both a standby menu and an **In-Use Menu**. The **In-Use Menu** applies to when you are in a call.

1. Press the left soft key () **Menu** while in a call to display the options listed in the following table.

In-Use Menu	Function
Mute/Unmute	Mute (caller cannot hear you) or Unmute the current call.
Calls	Checks your call log for outgoing, incoming, and missed calls. You can also erase your call logs from this menu.
Phonebook	Accesses Phonebook menu options.
Silent/Quit	Activates or deactivates Silent Mode. In Silent Mode, your phones ringer is silent and key-pad tones are also muted. This feature should not be used when you access automated services that require you to select options, or enter numbers (such as your voice mail password).
Send Tel#	Sends your phone number to the other party of the call.
My phone #	View the phone number assigned to your phone by Verizon Wireless.
Version	View the software and hardware versions for your phone.
Voice Privacy	Set Voice Privacy to enhanced or standard mode. Voice Privacy prevents the receiving party from seeing your number when you call.
Location	Enable the GPS setting for emergency calls only, or fully enable GPS (always on).
Send DTMF	Send your phone number as tones (if you're the recipient of the call). Send the recipient's phone number as tones (if you're the originator of the call).

2. Use the navigation keys to highlight an option. Press  to select the **In-Use Menu** of your choice.

Calls

The calls menu retains information about **Outgoing**, **Incoming**, and **Missed** Calls. You can also view times for your last call and the total of all calls.

Outgoing

Your phone retains information about the last 20 outgoing calls and stores them in the **Outgoing** call log. You can review the Outgoing call log for the time and date of the call, as well as other information.



Tip: To quickly view your most recent outgoing calls, briefly press in standby mode. Up to 20 of your most recent outgoing calls appear in the display.

1. In standby mode, press the left soft key () **Menu**, then press , . Your list of outgoing calls appears in the display.
2. Use the navigation key to highlight a call, then press to view further information about the call.
3. Press the left soft key () **Option** to display a pop-up menu containing the options listed in the following table.

Option	Function
Talk	Call the selected number.
Save	Save the number to your Phonebook.
Prepend	Add a prefix to the number.
Erase	Erase the selected call from your Outgoing call list.

4. Use the navigation key to highlight an option.
5. Press to perform the highlighted option's function.

Incoming

Your phone retains information about the last 20 Incoming calls and stores them in the **Incoming** call log. You can review the Incoming call log for the time and date of the call, as well as other information.

1. In standby mode, press the left soft key () **Menu**, then press , . Your list of Incoming calls appears in the display.
2. Use the navigation key to highlight a call, then press  to view further information about the call.
3. Press the left soft key () **Option** to display a pop-up menu containing the options listed in the following table.

Option	Function
Talk	Call the selected number.
Save	Save the number to your Phonebook.
Prepend	Add a prefix to the number.
Erase	Erase the selected call from your Incoming call list.

4. Use the navigation key to highlight an option.
5. Press  to perform the highlighted option's function.

Missed

Your phone retains information about the last 20 missed calls (calls that were never picked up) and stores them in the **Missed** call log. You can review the **Missed** call log for the time and date of the call, as well as other information.

1. In standby mode, press the left soft key () **Menu**, then press , . Your list of missed calls appears in the display.

2. Use the navigation key to highlight a call, then press **OK** to view further information about the call.
3. Press the left soft key (**⏏**) **Option** to display a pop-up menu that contains the following options.

Option	Function
Talk	Call the selected number.
Save	Save the number to your Phonebook.
Prepend	Add a prefix to the number.
Erase	Erase the selected call from your Missed call list.

4. Use the navigation key to highlight an option.
5. Press **OK** to perform the highlighted option's function.

Erase Logs

You can erase the **Outgoing**, **Incoming** or **Missed** call log, or you can erase **All Calls**.

Erase All Calls

1. In standby mode, press the left soft key (**⏏**) **Menu**, then press **1**, **4**, **4**. **Erase All Calls?** appears in the display as well as the options **Yes** and **No**.
2. Use the navigation key to highlight **Yes**, then press **OK**, or select **No** to exit without erasing call logs.

Review the call log

1. In standby mode, press the left soft key (**⏏**) **Menu**, then press **1** for the **Calls** menu.
2. Press the number associated with the call log that you wish to review:
 - Press **1** for **Outgoing** calls.
 - Press **2** for **Incoming** calls.

- Press  for **Missed calls**.
- Press  for **Erase Logs**.
- Press  for **Call Timer**.



In cases where there is a Phonebook match for a call log entry, the name associated with the number appears instead of the number.

Once your selection is highlighted you can do the following:

- Press  to dial the number.
- Press  to review all available call information (name and phone number [if available] and time/date stamp).
- Press , then press the left soft key () **Option**. A pop up menu with the options listed in the following table appears in the display.

Option	Function
Talk	Dials the number.
Save	Saves the number to your Phonebook.
Prepend	Allows you to insert a hard or a soft pause before the number.
Erase	Erases the number.

- Press the number of the option you wish to enter/activate, or use the navigation key to highlight the option and press .
- Press  if you wish to exit the **Option** menu.

Call Timer

View the duration of your last call, total calls, and calls made during the life of your phone using the Call timer feature. Call timer is not for billing purposes.

1. In standby mode, press the left soft key () **Menu**, then press , . The options listed in the following table appear in the display.

Option	Function
Last Call	View the duration of your last call.
Total	View the duration of the total calls, incoming and outgoing, made on your phone since the last erasure.
LifeTime	View the duration of all calls on your phone since activation (LifeTime timers cannot be erased).
Erase Total	Erases the counters for the Total call timer.

- Press the number of the option you wish enter, or use the navigation key to highlight the option and press .
- Press  if you wish to exit the **Option** menu.



Although **Total** call timers can be erased, **LifeTime** call timers can never be erased.

Call waiting

If you're on a call, your phone beeps when another call is incoming. Contact Verizon Wireless for availability of this feature.

1. Press  to connect and ask the calling party to remain on the line.
2. Press  and the second caller is placed on hold and you're returned to the original caller. Press  to alternate between calls.

Caller ID

Caller ID allows you to see who is calling you by displaying the caller's number when the phone rings. If the caller's name and number are stored in your Phonebook, the name also appears in the display.

Call Block

You can block your number from being displayed on another phone by enabling the call block feature.

1. In standby mode, press , , .
2. Enter the phone number and press .

Three-way calling

Call two other numbers and connect them to your call using Three-way calling.

1. In standby mode, dial the number for the first party in your call and press .
2. When connected, ask the other party to remain on the line. Press  to place them on hold.
3. Dial the second party's phone number and press .
4. When the second party answers, press  to connect all three parties.

Phonebook

Your Phonebook can store up to 500 entries. Each entry can have up to five associated phone numbers and two e-mail addresses. Each phone number can be up to 32 digits in length, including hard pauses, and associated names can be up to 22 characters in length. The memory location for each entry can be specified, and you can mark any entry secret to prevent unauthorized viewing.



Tip: One-Touch, Two-Touch, and Three-Touch Dialing allows you to call numbers stored in your Phonebook faster.

Open the Phonebook

1. In standby mode, press the left soft key () **Menu**, then press  for the **Phonebook**. The following Phonebook sub menus and options appear in the display:

Menu	Function
Find	Find a phone number By Name, By Entry, or By Group.
Add	Add a number or e-mail to your Phonebook.
Rename Group	Rename one of your five groups.
My Phone#	View the 10-digit number assigned to your phone by Verizon Wireless.
Memory	Display available memory for dial and voice dial entries.

2. Use the navigation key to highlight the Phonebook menu of your choice, and press .



Tip: You can also press the number on your alpha-numeric keypad that corresponds to the Phonebook menu number.

Find

If you've stored a name entry in your Phonebook, **Find** allows you to find it quickly.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Find**.
2. Use the navigation key to select the method by which to find the entry. The options listed in the following table are available.

Find	Function
By Name	Search the Phonebook alphabetically by name.
By Entry	Search the Phonebook by entry number.
By Group	Search the Phonebook by selecting from one of the five available groups.

Find by Name

1. Enter the name of the person *as they are entered in your Phonebook*. For example, if you saved the name as Amy Smith, begin the search pressing .

As you enter letters, the entry number and names of the closest matches (thus far) appear in the display.

2. When the desired entry appears in the display, highlight the number using the navigation key (if necessary).
3. Press  to dial the number associated with the name.
4. Press  to view information about the entry.
5. Press the left soft key () **Option** to display the options listed in the following table.

Option	Description
Edit	Edit details of the highlighted name.

Option	Description
Erase	Erase the name and associated information.
Add New	Add a new entry to your Phonebook.

6. Use the navigation key to highlight an option, then press  to enter the highlighted option's sub menu.

Find by entry

This option allows you to find a stored entry by location number.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Find**.
2. Use the navigation key to highlight **by Entry**.
3. Press  to display information about the entry.
4. Press the left soft key () **Option** to display the options listed in the following table.

Option	Description
Edit	Edit details of the highlighted name
Erase	Erase the Name and associated information
Add New	Add a new entry to your Phonebook

5. Use the navigation up/down keys to highlight an option, then press  to enter that option's sub menu.

Find by group

This option allows you to find a stored entry in a related group.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Find**.
2. Use the navigation key to highlight **by Group**.

3. Press the navigation key briefly to highlight the group field.
4. Use the navigation key to display the group that you wish to search. As each group appears in the display, entries assigned to the group appear in the display beneath it.
5. Use the navigation key to highlight the desired entry.
6. Press **OK** to display information about the entry.

Add new information to your Phonebook

You can add an entirely new entry or add information to an existing entry.

1. In standby mode, press the left soft key (**Menu**), then press **2 ABC**, **2 ABC** for **Add**. A pop-up menu with the following options appears in the display.

Number	E-mail
---------------	---------------

2. Use the navigation key to highlight the desired option and press **OK**.
3. Enter information for the selected option, then press **OK**. **New Entry** and **Find** appear in the display.
4. With **New Entry** highlighted, press **OK**. The following (number type) icons appear in the display.

 Home	 Office	 Mobile
 Pager	 Fax	

5. Use the navigation key to highlight the type that matches your new entry and press **OK**.
6. Enter a name to associate with the type using the keypad.
7. Press **OK** to save the entry.

Rename group

Use this option to rename a group in your phone book.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Rename Group**.
2. Use the navigation key to highlight the group that you wish to rename, then press . The current name of the group appears in the display with a flashing cursor at the end of the name.
3. Press the left soft key () **Option** to display a pop up menu with the following text entry modes.

T9 word

ABC

Symbol

123

4. Press the corresponding number on the keypad for the method of entry that you prefer.
5. Press  to backspace and delete characters. Press and hold  to clear all characters in the display.
6. Enter a new group name using the keypad, then press .

Edit Phonebook numbers

Once stored in the Phonebook, an entry can be changed quite easily.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Find**.
2. Use the navigation key to display the search method that you wish to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the entry containing the number that you wish to edit.
4. Once the entry is highlighted, press .
5. Use the navigation key to highlight the number within the entry that you wish to edit, then press the left soft key () **Option**. A pop-up menu appears in the display.
6. Use the navigation key to highlight **Edit**, then press .
 - Press  to backspace and delete numbers.
 - Press and hold  to clear all numbers in the highlighted field.
7. When you're finished editing the number, press . Your changes are saved and a confirmation message appears in the display.

Add pauses

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Phonebook along with special characters called pauses.

- **P pause:** A hard pause stops the calling sequence until further input from you.
- **T pause:** A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.



You can enter multiple two-second pauses to extend the length of a pause. For example, two consecutive two-second pauses cause a total pause time of four seconds. Keep in mind pauses count as digits towards the 32-digit maximum.

Store pauses in a Phonebook entry

1. In standby mode, enter the number you wish to store (such as your bank's teleservice number).
2. Press the left soft key () **Option**. The following pause menu options appear in the display.

P pause

T pause



P pause is a hard pause (awaits input from you) and
T pause is a two-second pause.

3. Use the navigation key to highlight the pause option of your choice

4. Press  to enter the highlighted pause into your number sequence.
5. When you're finished entering the number and pauses, press the right soft key () **Save** to store the number in your Phonebook.

Pause dial from the Phonebook

1. If you stored the number using (two-second) T pause(s), simply recall the number from the Phonebook.
2. If you stored the number using (hard) P pause(s), recall the number from the **Phonebook** and wait for the appropriate prompt from the number you are calling (credit card number, bank account number, etc.).
3. Press  to dial the number.

Manual pause calling

To manually call a number with pause(s) without storing it to the Phonebook:

1. Enter the number you wish to call.
2. Press the left soft key () **Option** to display the pause option pop-up menu.
3. Use the navigation key to highlight the desired pause option.
4. Press  to enter the highlighted pause into your number sequence.
5. Press  to call the number.



Tip: Store pauses along with the number if you plan to call the number frequently.

Erase individual Phonebook entries

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Find**.
2. Use the navigation key to display the search method that you wish to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the entry that you wish to erase.
4. Once the entry is highlighted, press the left soft key () **Option**. A pop-up menu with the following menu items appears in the display
 - Edit**
 - Erase**
 - Add New**
5. Use the navigation key to highlight **Erase**.
6. Press . The phone prompts you to confirm the erasure.
7. Use the navigation key to highlight **Yes** or **No**, then press .

Edit an existing e-mail address

1. In standby mode, press the left soft key (⌵) **Menu**, then press **2 ABC**, **1 -*** for **Find**.
2. Use the navigation key to display the search method that you wish to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the entry that you wish to edit.
4. Once the entry is highlighted, press the left soft key (⌵) **Option**. A pop-up menu appears in the display with **Edit** highlighted.
5. Press **OK**.
6. Use the navigation key to highlight the **E-mail** field.
7. Use the keypad to edit the e-mail address. To insert the @ symbol, press the left soft key (⌵) **Option**.
8. Use the navigation key to select **Symbol**, then press **OK**.
9. Press **2 ABC** (@ symbol) and enter the remainder of the e-mail address using the keypad.
10. Press the left soft key (⌵) **Option**.
11. Use the navigation key to highlight **.com**, then use the navigation key to display the desired domain type (.com, .edu, .net), then press **OK**.
12. Press **OK** to save your changes.

Assign speed dial numbers

For each name entered in the Phonebook, the option of designating a Speed Dial number is available.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Find**.
2. Use the navigation key to select the find method (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the desired entry.
4. Press .
5. Use the navigation key to highlight **SpeedDial**.
6. With **SpeedDial** highlighted, press the left soft key () **Edit**.
7. Enter the **SpeedDial** number using the keypad.
8. Press  to save your changes.

Store numbers after a call

Once you've finished a call, you can store the number of the caller to your Phonebook.

 


If the call was incoming and Caller ID information was unavailable, then the store option is also unavailable.

1. After you press  to end your call, the call time, length of call, phone number, and name of the party (if available) appears in the display.
2. Press the right soft key () **Save**. You're prompted to confirm this as a **New Entry**, or **Find** a name in your Phonebook with which to associate the number.
3. Follow the instructions in the upcoming sections depending on whether the number is a new entry or you wish to add it to an existing entry.

Add a New Entry

1. With **New Entry** highlighted, press . The following (number type) icons appear in the display.



2. Use the navigation key to choose the number type, then press .
3. Enter a name for the new entry and press . The new entry is saved to your Phonebook.

Add to an existing entry

1. Use the navigation key to highlight **Find**, then press .
2. Use the navigation key to display the search method that you wish to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the desired entry and press . The following number types appear in the display.



4. Use the navigation key to highlight the number type that matches the number you are adding, then press .
5. Press again at the **Phonebook** menu. The number is added to the existing entry.

Store numbers from call logs

Store numbers from call history logs to your Phonebook.

1. In standby mode, press the left soft key () **Menu**, then press for **Calls**.

2. Press the corresponding number on the keypad to view call logs for the following call types.
 -  for **Outgoing**  for **Incoming**  for **Missed**
3. Use the navigation key to highlight the number you wish to store in the Phonebook, then press .
4. Press the left soft key () **Option**, then use the navigation key to highlight **Save**.
5. Add the number as a **New Entry**, or **Find** a number in your Phonebook with which to add the number.
6. Follow the prompts to store the number to the Phonebook.

Shortcuts to storing phone numbers

You can store a phone number by entering the number, and pressing the right soft key () **Save**. Follow the screen prompts to designate other information. You can also save a number after an incoming or outgoing call.

One-touch dialing

Memory locations 001 through 009 are special **One-Touch dialing** locations. You can call the phone numbers stored in the Phonebook memory from 001 through 009 by pressing and holding a single key. For example, for location number 001, press and hold  until the name and number appear in the display and the number is dialed.

Two-touch dialing

Memory locations 010 through 099 are special **Two-Touch dialing** locations. For example, for location number 013, briefly press , then hold down  until the name and number appear in the display and the number is dialed.

Three-touch dialing

Memory locations 100 through 500 are special **Three-Touch dialing** locations. For example, to dial location number 113, press **1**, **1**, then hold **3** until the name and number appear in the display and the number is dialed.

My Phone#

My Phone# displays the ten-digit number assigned to your phone by Verizon Wireless.

1. In standby mode, press the left soft key (**Menu**), then press **2**, **4** for **My Phone#**. The phone number assigned by Verizon Wireless appears in the display.

Memory

Use the Memory sub menu to view the amount of Phonebook entries and Voice Dial entries you have stored, as well as the remaining memory for each.

- In standby mode, press the left soft key (**Menu**), then press **2**, **5**. The amount of memory used and remaining for Phonebook and Voice Dial entries appears in the display.

Messages

Your phone is able to send and receive text messages to compatible phones and other devices. If a text message exceeds 160 characters, it is broken up and delivered in separate messages, which incur additional cost. Before you learn to send text messages, it's best to cover the basics of composing a message using the various text entry modes of **Abc**, **Symbol**, **123**, and **T9 Word**.



Available memory is shared between all messages. You can store up to 100 incoming and 100 outgoing messages. The exact number that you can store is dependent upon message length.

Text entry modes

You can compose text messages made up of alphabetical characters, symbols, and numbers. Each method of character entry (symbol, number, etc.) is called a text entry mode. There are four such entry modes as indicated in the following table:

Text Entry Mode	Function
ABC	Alphabetical text entry mode. Options are: ABC - All uppercase Abc - Initial caps abc - All lower case
Symbol	Symbol entry mode. Enter symbols into your message by pressing the corresponding number that appears above it in the display.
123	Number entry mode. Enter numbers by pressing the corresponding key on the keypad.

Text Entry Mode	Function
T9 Word	Predictive text mode. Press each key only once to enter the letter of the word that you're spelling.

Your current mode of text entry (**ABC**, **SYM**, **123**, or **T9 Word**) is indicated in the lower part of the display when composing a text message.

Change text entry modes

- While composing a text message, press the left soft key ([:]) **Option** to display a pop-up menu containing the following options
ABC
Text Format
Add Media
Canned Msg
- ABC** is highlighted. Use the navigation left/right keys to choose from one of the other three text entry modes of **Symbol**, **123**, or **T9 Word**. Each of the text entry modes are explained in greater detail in the following sections.

ABC mode

- Enter characters while in **ABC** mode by pressing the key with the desired characters (such as  for "h").
- Press the key repeatedly until the desired character appears in the display.
- Pause briefly and the displayed character is accepted and inserted into your message.
- Press  to enter a space.

T9® Word text entry

T9 Word recognizes commonly used words for the numeric sequence of keypresses and inserts the word into your

message. It's much faster than the traditional method of text entry (Abc) and *requires only one key press per letter* of the word that you're spelling.

1. In standby mode, press the left soft key ( **Menu**), then press ,  to compose a new text message.
2. Enter the phone number of the recipient, then press .
3. Press the left soft key ( **Option**) to display a pop-up menu containing the following options

ABC
Text Format
Add Media
Canned Msg

4. **ABC** is highlighted. Use the navigation left/right keys to display **T9 Word**, then press .
- Now, for practice, enter the word "Samsung" into your message by pressing each of the following keys *only once*:

, , , , , , 
 S A M S U N G

T9 Word recognizes that the most commonly used word for the numeric sequence you just entered is "Samsung." If more than one word shares the same numeric sequence, T9 Word provides the most commonly used word. Press  to display other words, if any are available.

123 mode

Enter numbers into a text message while in number mode (**123**). See "Change text entry modes" on page 48 for instructions on changing text entry modes.

- While in **123** mode, press the key containing the corresponding number that you wish to insert into your message.

Symbol mode

Symbol mode enables you to enter symbols such as @ or % into a text message.

1. In standby mode, press the left soft key (**Menu**), then press **3**, **1** to compose a new text message.
2. Enter the phone number of the recipient, then press **OK**.
3. Press the left soft key (**Option**) to display a pop-up menu containing the following options
ABC
Text Format
Add Media
Canned Msg
4. **ABC** is highlighted. Use the navigation left/right keys to display **Symbol**, then press **OK**. The first of four screens of symbols appear in the display.
5. Use the navigation left/right keys to page through the other symbols, if necessary.
6. Enter the key that corresponds with the symbol that you wish to enter. For example, press **4** for an exclamation point (!).
7. Repeat steps 3 through 6 to insert as many symbols into your message as desired.

Send SMS text messages

1. In standby mode, press the left soft key (**Menu**), then press **3**, **1**.
2. Enter the phone number of the recipient, then press **OK**.

3. Enter the text for your message using the keypad.
4. At any point while composing a message, press the left soft key (⏏) **Option** to display the options listed in the following table.

Option	Function
ABC	The entry mode for your message. Other modes, which are hidden, are Symbol, 123, and T9 Word. Use the navigation key to display each of the text entry modes.
Text Format	Choose the size, alignment, bold, italic, and other options for formatting your text.
Add Media	Add a picture, animation, or melody to your message.
Canned Msg	Insert a pre-composed message into the body of your current message.

5. Once you're finished entering your message, press **OK**. The **New Message** options listed in the following table appear in the display.

Option	Function
Edit Send To	Edit the recipient's Send To number.
Edit Text	Edit the content of your message.
Send Options	Choose the Priority, Validity, Privacy, whether you wish to have a Delivery Acknowledgment, Insert a Signature or Call Back #, and whether you wish to Defer Delivery of the message. See "Message Send options" in the following section for more information on these settings.
Save in Draft	Save the message to your Draft folder.
Save Text	Save the text in your message as a canned message. Canned messages are pre-composed messages that can be inserted into any message you choose.

6. To send your message, press the left soft key
() **Send**.

Message Send options

You can set priority, validity, privacy, and other options before you send a message.

1. After you've composed a message and pressed , you're returned to the **New Message** menu.
2. Use the navigation key to highlight **Send Options**, then press . The **Send Options** listed in the following table appear in the display.

Menu Item	Send Options	Function
Priority	Normal Urgent	Assign a priority to your message.
Validity	None 30 Min 1 Hour 2 Hours 12 Hours 1 Day 2 Days 3 Days	Select the period of time that you wish the message to be available to the recipient. After the set period of time, your message is recalled.
Privacy	Not Restricted Restricted Confidential	Choose the desired level of privacy for your message.
Delivery Ack	Off On	Request confirmation for when your message is received.
Insert Sign.	Off On	Insert your pre-composed signature into the message.

Menu Item	Send Options	Function
Call Back #	Yes No Edit	Insert a number into your message for the recipient to call you back.
Def. Delivery	Immediate Set Time	Choose when you wish your message to be sent.

3. Use the navigation key to display the various **Send Options** for each menu item.
4. When the desired send option is highlighted, press **OK** to confirm the selection or to enter the send option's sub menu.

Receive text messages

When your phone receives a message in standby mode, a ringer sounds (unless turned off), and **New Message** appears in the display along with the closed envelope icon (✉). The date and time of the message also appear in the display.

- Press the left soft key (⏮) **Ignore** to return your phone to standby mode. The message is saved to your inbox where you can view it later.
- Press the right soft key (⏭) **View** to open the message, and then press the right soft key (⏭) **Reply** to open the message composer and respond to the message.
OR (NEXT PAGE)
- Press the left soft key (⏮) **Option**, where you have the option to **Forward**, **Delete**, **Save Text**, **Save Msg**, **Save Addr**, or **Block Addr**.

Receive messages while in a call

When your phone receives a message while in a call, the ringer sounds, (unless turned off), and **New Message** appears in the display along with the closed envelope icon (✉). You can view the message without disconnecting your call.

1. Press the left soft key (ⓘ) **Ignore** to ignore the message. The message is saved to your inbox where you can view it later.
2. Press the right soft key (Ⓜ) **View** to open the message, your call remains connected.

Message folders

Your messages are stored in any one of six folders. The sections that follow cover message folders in greater detail.

The Voice folder

Messages in your Voice Mailbox are logged in the **Voice** folder of the **Message** menu. Open the voice folder to view the **Callback #** (if available), **Urgency**, and other details of the voice mail message.

1. In standby mode, press the left soft key (ⓘ) **Menu**, then press **3 DEF**.
2. Use the navigation key to highlight **Voice**, then press **OK**. Details of your most recent voice mail message appear in the display.
3. Press the left soft key (Ⓜ) **SEND:Listen** to call your voice mailbox and listen to the message.



You can also press and hold **1...** to dial your voice mailbox.

The Inbox folder

Received messages are stored in the **Inbox** folder.

1. In standby mode, press the left soft key ( **Menu**), then press ,  to open the **Inbox** folder.



Tip: Press the right soft key ( **View**) while in a call to view a new message.

2. Use the navigation key to highlight the message that you wish to view.
3. Press  to view contents of the highlighted message.
4. While viewing your message press the left soft key () **Option** to display the options listed in the following table.

Option	Function
Forward	Forward the message to another recipient.
Delete	Delete the message and its contents.
Save Text	Save only the text in the message.
Save Msg	Save the message to the Saved message folder.
Save Addr	Save the number of the sender to your Phonebook as a new entry or add to an existing entry.
Block Addr	Block future messages from the phone number of the sender

5. Use the navigation key to highlight an option. Press  to perform the function for the highlighted option.

The Outbox folder

Your phone stores messages in the **Outbox**, regardless of whether the message was successfully transmitted. You can also verify if a message or e-mail was successfully transmitted, and at what date and time by enabling the

Delivery Ack feature. See “Message Send options” on page 52 for more information on delivery acknowledgements.

REVIEW MESSAGES IN THE OUTBOX

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Outbox**. Any sent messages appear in the display.
2. Use the navigation key to highlight the message that you wish to review, then press .
3. Press the left soft key () **Option** to display the options listed in the following table.

Option	Function
Re-send	Re-send the message.
Save Msg	Save the message to the Saved Msg folder.
Delete	Delete the message.

4. Use the navigation key to highlight the desired option.
5. Press  to perform the function for the highlighted option.

Messages and lock mode

Your phone still receives messages while in **Lock Mode**. The time and date of the message appear in the display, but you cannot access the message until you enter the lock code.

The Draft folder

Draft messages are those that have been composed but never sent. You can return to the **Draft** folder at any time to view, edit, or send a draft message.

CREATE A DRAFT TEXT MESSAGE

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Send New Msg.**
2. Enter the phone number of the recipient, then press .
3. Compose your message using the keypad, then press .
4. Use the navigation key to highlight **Save in Draft**, then press . A confirmation message appears in the display and your message is saved to the **Draft** box.

VIEW AND EDIT DRAFT MESSAGES

1. In standby mode, press the left soft key () **Menu**, then press , . Any draft messages that you've composed appear as a list in the display.
2. Use the navigation key to highlight the message that you wish to view and press .
3. Press the left soft key () **Option**. A pop-up menu appears in the display with **Edit** highlighted.
4. Press . The options listed in the following table appear in the display.

Option	Function
Edit Send To	Edit the phone number of the recipient.
Edit Text	Edit the draft message text. You also have options to format the text, add media or a canned message.
Send Options	Select the priority, validity, privacy, delivery acknowledgement, signature, callback #, deferred delivery options.
Save in Draft	Continue to save the message to the Draft folder.

Option	Function
Save Text	Save only the text in the message, if media or other content is contained within the message.

5. Use the navigation key to highlight an option. Press **OK** to perform the function for the highlighted option.

EDIT TEXT OPTIONS

1. While editing the text of a draft message, press the left soft key (**⋮**) **Option**. The options listed in the following table appear in the display.

Option	Function
ABC, Symbol, 123, T9 WORD	Use the left and right keys on the navigation key to display and select one of four options for entering numbers, symbols, and text.
Text Format	Select the size, alignment, weight, and angle, and other format options.
Add Media	Insert a picture, animation, or melody into your draft message.
Canned Msg	Insert a pre-composed message into your draft message.

2. Use the navigation key to highlight an option. Press **OK** to perform the function for the highlighted option.

The Saved folder

Saved messages are sent to the **Saved** folder.

1. In standby mode, press the left soft key (**⋮**) **Menu**, then press **3 DEF**, **6 MSG**. Any saved messages appear in the display.
2. Use the navigation key to highlight the message you wish to view, then press **OK**.
3. Press the left soft key (**⋮**) **Option** to display the message options **Edit** and **Delete**.

4. Use the navigation key to highlight the desired option. Press **OK** to perform the highlighted option.

The WebAlert folder

Occasionally, Verizon Wireless may send notifications to your phone in the form of **WebAlerts**. WebAlerts may contain information on new services or updates. When you receive an alert, you'll also receive a text notification and hear a tone.

1. In standby mode, press the left soft key (**Menu**), then press **3 DEF**, **7 MSG**. Any received WebAlerts appear in the display.



Contact Verizon Wireless for availability.

The Erase Msg folder

Use Erase Msg to erase all messages in a folder.



Erase Msg erases all of the messages in the selected folder. To delete a single message, use the **Option** menu (left soft key) while viewing the content of a message.

1. In standby mode, press the left soft key (**Menu**), then press **3 DEF**, **9 MSG**. The **Erase Msgs** menu appears in the display.
2. Use the navigation key to highlight the folder containing the messages that you wish to delete.
3. Press **OK** to open the highlighted folder. You're prompted to confirm the erasure of all messages in the folder.
4. Use the navigation key to highlight **Yes** or **No**, then press **OK**.

The Msg Setting folder

The **Msg Setting** folder allows you to define numerous message settings such as ringer types and save options.

1. In standby mode, press the left soft key () **Menu**, then press  . The **Msg Setting** sub menus in the following table appear in the display.

Sub Menu	Function
1 Send Setting	Options to Save in Outbox, Insert signature, and request a delivery acknowledgement.
2 Msg. Alert	Set Ringer types and Reminders for when you receive messages.
3 Auto Play	Select Auto Play or Manual for multimedia content.
4 Direct View	Select Off or On for Direct View.
5 Auto Delete	Auto Delete messages after they are read.
6 Block Address	Block messages from a web address or phone number.
7 Canned Msg.	Edit any of your pre-composed messages, which can then be inserted into any new message that you choose.
8 Signature	Create a signature, which appears at the bottom of all outgoing messages.
9 Voice Mail #	Edit your voice mail number.

2. Use the navigation key to highlight the desired sub menu. Press  to enter the sub menu and adjust settings.

Get It Now

With **Get It Now**, you can download full featured applications over the air including games, personalized ring tones, pictures, and more. Send and receive instant messages and email, or browse the web to catch up on all the latest news.

1. In standby mode, press the right navigation key. The Shopping Cart icon () appears in the display.
2. Press **OK** (**Start**). After a brief pause, the Get it Now options listed in the following table appear in the display.

Option	Function
What's New	Provides updates on the latest games, information services, etc.
Get Games	Select from a broad category of games that you can play on your phone.
Get Tones	Download your favorite ring tones.
Get Going	Download applications that keep you in touch with the world, keep you organized, and help you find the coolest spots.
Get Pix	View, share your own pictures and even save them as your phone's wallpaper or screensaver.
Get Fun	Select from several fun and interesting applications.
Get Messaging	Check e-mail on some of the most popular clients on the Internet.
Search	Enter a keyword and search the Get It Now catalogue.

3. Use the navigation key to highlight the category of your choice, then press **OK**.
4. Select the application you wish to download and follow the online directions.

Settings

Use the **Settings** sub menu within Get It Now to manage, move, order applications and much more.

1. In standby mode, press the right navigation key to launch Get It Now.
2. At the Get It Now menu, press the right navigation key once to highlight  (**Settings**), then press . The options listed in the following table appear in the display.

Option	Function
Order Apps	Adjust the order of apps up and down within a specific folder.
Move Apps	Move previously downloaded applications between available folders.
Manage Apps	View used and available memory.
Main Menu View	Select whether you wish to view the main Get It Now menu in a list or icon format.
Screen sav-ers	View downloaded screensavers.
View Log	View the Get It Now log, which displays information about recent activity using Get It Now.

3. Use the navigation key to highlight an option.
4. Press  to enter the option's sub menu and view or change settings.

Help

The Help sub menu within Get It Now is a short tutorial on several Get It Now features. View information about charges, cancelling subscriptions, buying apps, removing apps, and more.

1. Within in the Get It Now menu, press the right navigation key until the question mark () icon is highlighted.

2. Press **OK**. The Help subjects listed in the following sections appear in the display.

Buying New Apps

To buy new and exciting apps, visit the Get It Now Shop. It provides you with a variety of apps you can choose from.

Cancelling Subscription

1. To cancel a subscription to an app, choose **Settings**, then **Manage apps**.
2. Select the app subscription you want to cancel.

Demo Apps

A Demo app is free and is designed to demonstrate the app's main features. It usually expires after a certain period of time or a number of uses and often has limited functions. When you run a demo app, you will be presented with a purchase option so you won't have to look for the app in the Get It Now Shop.

Removing Apps

You may remove apps that are no longer needed. When you remove an app, you cannot use the application unless you purchase it again.

1. To remove an app, choose **Settings**, then **Manage Apps**.
2. Select the app you want to remove.

Disabling Apps

You can install new apps even if the memory of your phone is full by partially removing (disabling) apps you haven't used recently. When you need to use a disabled app, you can restore it at no additional purchase cost.

 
 
 


Restoring Apps

Disabled apps can be quickly restored at no additional purchase cost. To restore an app, run the application you want to restore from the Main Menu. You will be guided through the restoration process.

Expired Apps

Apps that were purchased based on the number of uses or time expire. You can purchase additional uses from the Get It Now Shop.



Mobile Web

With **Mobile Web**, you can conveniently surf the web using your phone.

- Each time you launch **Mobile Web**, your phone connects to the Internet and the service indicator icon () appears in the display.

Stored web content

Mobile Web ends an Internet connection after a certain period of inactivity, however some information from your session remains stored in the phone (if you leave your phone turned on). You can access this information without reconnecting to the Internet. However, if you are viewing stored information, and you select a link to a site that was not accessed in your last session, you automatically re-connect to the Internet.

Launch Mobile Web



The first time you use **Mobile Web**, you are prompted to go through a setup process that takes approximately three to five minutes.

1. In standby mode, press the left navigation key. If this is the initial launch of **Mobile Web**, you're prompted to enable security before proceeding.
2. Press the left soft key () **Yes** to proceed.
3. **VZW with MSN** and a list of categories (each representing one or more web sites) appears in the display.
4. Use the navigation key to browse the categories.
5. Once the desired category is highlighted, press the left soft key () **Go** to enter the category list.

Exit Mobile Web

- Press  to exit **Mobile Web**.

Navigate the web

When you use **Mobile Web**, some of the keys operate differently than during a normal phone call. **Mobile Web** presents on-screen items in any of the following ways:

- Text or numeric input.
- Links (embedded in content).
- Numbered options (some may not be numbered).
- Simple text.

You can act upon options or links by using the soft keys.

Mobile Web soft keys

At the bottom of the **Mobile Web** display is a bar that contains browser commands. The left () and right () soft keys on the keypad are used to execute the command that appears above them in the display. These are called “soft keys” because their function changes depending on the application.

How Mobile Web keys work

The following table lists **Mobile Web** keys and their functions.

Key	Name	Function
	Navigation Key	Use to browse lists and options.
	CLR Key	A browser back-up key. Press once to back up one page. Press to clear the last number, letter, or symbol entered. Press and hold to completely clear the display.

Key	Name	Function
	Asterisk/Shift Key	Press and hold before entering text to enable upper case characters (in Alpha mode).
	0/Next Key	Press to enter a zero (0), or to display another word in the dictionary when in T9 Word entry mode.
	Pound/Space Key	Press to insert a space when entering text.
	Numbers 1 thru 9	Use the number keys to select items in a menu if they are numbered.
	END Key	Press to exit the Mobile Web and return the phone to standby mode.
	Left Soft Key	Press to activate the command that appears above it in the display.
	Right Soft Key	Press to activate the command that appears above it in the display.
	SEND Key	Press to dial a highlighted number.

Using links

Links have several purposes, such as jumping to a different page, to a different site, or even initiating a phone call. Links are shown inside of brackets ([]). You can normally use the left soft key () to select a link when it is highlighted.

Place a call while using Mobile Web

You may initiate a phone call from **Mobile Web** if the site you are using supports this feature (the phone number may be highlighted). Press the appropriate soft key to call the number. In most cases you can also press  to call the number. The Internet connection terminates when you initiate the call. After you end the call, your phone returns to Mobile Web.

Planner

Your phone has a suite of PDA applications such as a Calendar, To Do List, and Memo Pad. You can schedule events, set reminders, create a to do list, perform calculations, and more with the digital assistant functionality included in this useful feature.

Open the Planner

1. In standby mode, press the left soft key () **Menu**, then press . The **Planner** menu opens with the following sub menus.

Today
Scheduler
Jump To Date
To Do List
Memo Pad
Count Down
Alarm Clock
World Time
Calculator

2. Use the navigation key to highlight an application. Press  to enter the application's sub menu. The following sections provide a detailed description of the applications and their functions.

Today

You can schedule up to nine events for the current day by indicating each event's start time and advance notification time. Set alarms for events so that you can be alerted before an event takes place. Events scheduled for future dates automatically appear on your **Today** events schedule for the present day.

Add a new event

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Today**. You're prompted to enter a **New Event**.
2. Enter details of the event using the keypad. Press the left soft key () **Option** to display a pop-up menu containing the following text entry mode options.

T9 Word
ABC
Symbol
123



The current mode of text entry is indicated in the lower right of the display.

3. Use the navigation key to highlight the entry mode that you wish to use, or press  to exit the pop-up menu.
4. When you're finished entering details for the event, press . You're prompted to enter the time and date for the event.
5. Enter the time and date for the event using the keypad.
 - Press  for A.M. when **P** is highlighted.
 - Press  for P.M. when **A** is highlighted.
6. When you're finished entering the time and date, use the navigation key to highlight the **Notification** field.
7. Use the navigation key to select the amount of time that you wish to be notified by an alert before the event occurs.
8. Press  to store the event in your calendar. An alert will notify you prior to the event, if you set a notification alert.

Scheduler

Scheduler allows you to view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is highlighted and days with scheduled events are surrounded by a box.

View an event

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Scheduler**.
2. A calendar appears in the display with the current date highlighted. The month and year also appear.
3. Use the navigation up, down, left, and right keys to move around within the calendar.
 - Press  to open a date that is highlighted.
 - Press the volume up key to view previous months.
 - Press the volume down key to view future months.
 - Press the left soft key () **Option** while viewing the calendar to display the following options.

Option	Function
View	View events for any date surrounded by a box.
Add new	Add a new event for the date.

Jump To Date

You can to go directly to any date that you specify in the **Jump to Date** entry screen.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Jump To Date**. The **Jump To Date** entry screen appears in the display with the current month highlighted.

2. Enter the desired **Jump to date** and press **OK**. The calendar month for the date that you specified appears in the display with the current date highlighted.

To Do List

The **To Do List** allows you to create a task list. You can store, prioritize and manage up to twenty **To Do List** tasks.

1. In standby mode, press the left soft key (**Menu**), then press **5** **RL**, **4** **GR** for **To Do List**. The **Add To Do** screen appears in the display.
2. Enter details of the task using the keypad. Press the left soft key (**Option**) to display a pop-up menu containing the following text entry mode options.

T9 Word
ABC
Symbol
123

3. Use the navigation key to highlight the entry mode that you wish to use, or press **CLR** to exit the pop-up menu.
4. When you're finished entering details for the task, press **OK**. You're prompted to enter the priority for the task.
5. Use the navigation left/right keys to select **High** or **Low**.
6. Use the navigation down key to highlight the **Enter Date** field.
7. Enter a time and date for the task using the keypad.
 - Press **7** **POR** for P.M when **A** is highlighted.
 - Press **2** **ABC** for A.M when **P** is highlighted.
8. Press **OK** to store the task.

Add, Edit, and Erase To-Do List tasks

1. In standby mode, press the left soft key () **Menu**, then press ,  for **To Do List**.
2. Use the navigation key to browse tasks in your **To Do List**. Events are presented in order of priority.
3. Press the left soft key () **Option** while viewing your **To Do List**. A pop-up menu with the options listed in the following table appears in the display.

Option	Function
Add new	Add a new task to the To Do List.
Edit	Edit the task currently appearing in the display.
Erase	Erase the task currently appearing in the display.
Erase All	Erase all tasks from your To Do List.

4. Use the navigation key to highlight an option.
5. Press  to perform the function for the highlighted option.

Memo Pad

You can create a notes and store them in **Memo Pad**. You can't prioritize or set an alert for stored notes. Return to **Memo Pad** anytime you wish to review and edit your notes.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Memo Pad**.
2. If you have any stored memos, they appear as a list in the display. If this is your first time in **Memo Pad**, you're prompted to add a new memo.
3. Enter a memo using the keypad.

4. Press the left soft key () **Option** to display a pop-up menu containing the following text entry mode options.

T9 Word
ABC
Symbol
123

5. Use the navigation key to highlight the entry mode that you wish to use, or press  to exit the pop-up menu.
6. When you're finished entering details for the memo, press . The memo is stored.

Review, add, edit, and erase memos

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Memo Pad**. Your list of stored memos appears in the display.
2. Use the navigation key to browse memos. Press  to open a highlighted memo.
3. Press the left soft key () **Option** while viewing your memos. A pop-up menu with the options listed in the following table appears in the display.

Option	Function
Add new	Add a new memo to Memo Pad.
Edit	Edit the memo currently highlighted or appearing in the display.
Erase	Erase the memo currently highlighted or appearing in the display.
Erase All	Erase all memos from Memo Pad.

4. Use the navigation key to highlight an option.
5. Press  to perform the function for the highlighted option.

Count Down

Count Down allows you to view the amount of time between the current date and any event that you wish to schedule. You can create up to twenty **Count Down** events.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Count Down**.



If you have multiple **Count Down** timers, the event that is scheduled closest to the current date appears in the display. Use the navigation key to browse timers.

2. Enter details for the **Count Down** event using the keypad.
3. Press the left soft key () **Option** to display a pop-up menu containing the following text entry mode options.

T9 Word
ABC
Symbol
123

4. Use the navigation key to highlight the entry mode that you wish to use, or press  to exit the pop-up menu.
5. Once you've finished entering details for the **Count Down** event, press . You're prompted to enter a time and date for the scheduled event.
6. Enter the time and date using the keypad.
 - Press  for P.M when **A** is highlighted.
 - Press  for A.M when **P** is highlighted.
7. Press  to store the event.

Review, add, edit, and erase Count Down events

Review scheduled **Count Down** events to determine how much time remains between the current time/date and any event that you've scheduled. You can also add another event, or edit and erase previously scheduled events.

1. In standby mode, press the left soft key () **Menu**, then press  **5**,  **6** for **Count Down**.
2. Any stored **Count Down** events appear in the display. The event scheduled closest to the current date appears first in the display.

Event details, including the days, hours, and minutes left until the occurrence of the scheduled event appear in the display. The day, date, and time of the scheduled event appear in the bottom of the display.

3. Press the left soft key () **Option** while viewing your memos. A pop-up menu with the options listed in the following table appears in the display.

Option	Function
Add new	Add a new event to Count Down.
Edit	Edit the event currently appearing in the display.
Erase	Erase the event currently appearing in the display.
Erase All	Erase all scheduled events from Count Down.

4. Use the navigation key to highlight an option.
5. Press  **OK** to perform the function for the highlighted option.

Alarm Clock

Your phone has an alarm clock that can be set to go off once, or daily at a specified time. Once set, the alarm clock is easy to change or turn off completely.



The alarm doesn't function when the phone is turned off. If the time for an alarm that was set for **Once** has elapsed and the phone is off, the alarm occurs at the same time on the following day.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Alarm Clock**. The following options appear in the display.

Once
Daily
Off

2. Use the navigation key to highlight the frequency that you wish the alarm to occur, then press .
3. Enter the time for the alarm using the keypad.
 - Press  for P.M if **A** is highlighted.
 - Press  for A.M if **P** is highlighted.
4. Press  when you're finished entering the time for the alarm. The alarm is set and the alarm icon () appears in the top of the display.

When an alarm sounds

An animated alarm clock appears in the display and an alert sounds when the specified time for the alarm arrives.

- Press  to silence the alarm.
- If the alarm was set as a **Daily** alarm, the alarm icon remains in the top of the display.

- If the alarm was set as a **Once** only alarm, the alarm icon disappears from the top of the display.

Turn off the alarm

1. In standby mode, press the left soft key () **Menu**, then press  **AL**,  **CLR** for **Alarm Clock**. The following options appear in the display.

Once
Daily
Off

2. Use the navigation key to highlight **Off**, then press . All alarms are turned off.

World Time

World Time allows you to view the time of day or night in another part of the world. World Time displays time in the 12 different time zones around the world.

1. In standby mode, press the left soft key () **Menu**, then press  **AL**,  **TV** for **World Time**. A world map appears in the display.
2. Use the navigation key to display the city and time that you wish to view. The following cities are supported.

New York	Caracas	Brasilia
Mid Atlantic	Cape Verde	London
Paris, Berlin	Athens,Helsinki	Moscow
Abu Dhabi	Tashkent	Alma-ata
Bangkok,Jakarta	Hong Kong,Beijing	Seoul,Tokyo
Guam,Sydney	Okhotsk	Wellington
Samoa,Midway	Honolulu,Hawaii	Alaska
San Francisco	Denver,Arizona	Chicago,Mexico

Calculator

You can perform calculations, including addition, subtraction, multiplication, and division using your phone.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Calculator**. The **Calculator** appears in the display.
2. Enter the first number in your equation using the keypad (numbers can be up to nine digits long).
 - Press  to enter a decimal point.
 - Press  to change the sign for a number to a negative.
3. Use the navigation key to set the type of calculation that you wish to perform. Your choices are as follows.

•  Addition	•  Multiplication
•  Subtraction	•  Division
4. Use the keypad to enter the second number into your equation.
5. Press  to perform the calculation and view the result.

Display

Set the menu style, standby mode animation, customize backlight settings, and more using the **Display** menu.

1. In standby mode, press the left soft key () **Menu**, then press  for **Display**. The **Display** sub menus listed in the following table appear in the display.

Sub Menu	Function
Animation	Choose the media that displays on your phone when you turn it on, turn it off, and while in standby mode.
Banner	Create your own personalized greeting that appears in the display when your phone is in standby mode.
Backlight	Set backlight options for the LCD and keypad.
Contrast	Set the display contrast.
Auto Hyphen	With Auto Hyphen enabled, your phone automatically hyphenates phone numbers as they are entered.
Service LED	Turn the service LED on or off.

2. Use the navigation key to highlight a sub menu.
3. Press  to enter the highlighted sub menu. The following sections describe the above listed display sub menus in greater detail.

Animation

Animation allows you to choose the multi-media or pictures that appear in your phone's display when you turn it on, turn it off, and while in standby mode (wallpaper).

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Animation**.

2. The options listed in the following table appear in the display.

Sub Menu	Function
Opening	Choose the animation that appears in your display when you turn on your phone.
Closing	Choose the animation that appears in your display when you turn off your phone.
Wallpaper	Choose the graphic or animation that appears in your display when the phone is in standby mode.

3. Use the navigation key to highlight the sub menu that you wish to enter, then press **OK**.
4. Use the navigation left/right keys to browse available images and animations for the selected sub menu.
5. Press **OK** to select the image or animation appearing in the display.

Banner

Create your own personalized greeting that appears in the display while your phone is in standby mode.

1. In standby mode, press the left soft key (**⏏**) **Menu**, then press **6 MSG**, **2 ABC** for **Banner**.



Press and hold **CLR** to erase an existing banner, if necessary.

2. Enter a word or short phrase to appear in your phone's display while in standby mode (Up to 12 characters).
3. Press **OK** to save the new banner.

Backlight

You can set the backlight for your display or keypad to remain on for a specified period of time or remain on as long as the flip is open.



Prolonged backlight use drains your battery faster.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Backlight**. The following sub menus appear in the display.

Option	Function
Lcd	Sets the amount of time the backlight for the LCD remains on after a period of inactivity. Optional settings are 5, 10, and 15 seconds as well as Folder Open.
Keypad	Sets the amount of time the backlight for the keypad remains on after a period of inactivity. Optional settings are 5, 10, and 15 seconds as well as Folder Open.
Power save	Unless the backlight setting for the LCD has been changed, the backlight dims after a minute of inactivity, and then turns off. With Power save enabled, the backlight for the LCD is always dim. After 15 seconds of inactivity, Power save turns the backlight off.

2. Use the navigation key to highlight a sub menu.
3. Press  to enter the highlighted option's sub menu and change settings as desired.

Contrast

Set the display contrast to your preference.

1. In standby mode, press the left soft key (**⌵**) **Menu**, then press **6** **MNO**, **4** **CON** for **Contrast**.
2. Use the navigation left/right keys to adjust the contrast for the display to your preference.

Auto Hyphen

Auto Hyphen automatically hyphenates phone numbers as they are entered. For example: 580-437-0000.

1. In standby mode, press the left soft key (**⌵**) **Menu**, then press **6** **MNO**, **5** **HL** for **Auto Hyphen**. **Yes** and **No** appear in the display.
2. Use the navigation key to highlight the desired setting.
3. Press **OK** to confirm the setting.

Service LED

The Service LED, located near the antenna, serves the following functions.

- Flashes red to indicate an incoming call or message.
- Lights briefly when you power the phone on and off.
- Flashes red when the phone is in need of a charge.



Turn the Service LED on or off

1. In standby mode, press the left soft key (**⌵**) **Menu**, then press, **6** **MNO**, **6** **MNO**. **Off** and **On** appear in the display.
2. Use the navigation key to highlight your preference, then press **OK**.

Sounds

The **Sounds** menu provides a variety of options to customize audio properties for such things as ringers, keypad tones, alerts, shut down sounds, and more.

Volume/Vibrate

Use the **Volume/Vibrate** sub menu to set the default volume for incoming calls and alarms, or set the phone to vibrate.

1. In standby mode, press the left soft key (**Menu**), then press **7-PGR**, **1-V** for the **Volume/Vibrate** sub menu.
2. Use the navigation key to highlight **Calls** or **Alarm**, then press **OK**.
3. Use the up and down volume keys to select the volume level (or vibrate mode) for the selected setting.
4. Press **OK** to save the setting.

Ringer Type

You can assign ringer types and melody tones for calls, alarms, and other alerts in the **Ringer Type** sub menu.

1. In standby mode, press the left soft key (**Menu**), then press **7-PGR**, **2-RSC** for the **Ringer Type** sub menu. The following ringer types appear in the display.

Calls	Alarm
Data	Planner
2. Use the navigation key to highlight a ringer type, then press **OK**. A list of bells and ringers (melodies) appears in the display.



3. Use the navigation key to browse through available ring tones. Each tone plays through the speaker as it is highlighted.
4. When the desired ringer type plays, press **OK** to save the setting.

Key Beep

 
 
 
Use the Key Beep menu to adjust the volume level and length of tone that the keypad generates each time you press a key.

KEY BEEP VOLUME

1. In standby mode, press the left soft key (**Menu**), then press **7 ON**, **3 OFF** for **Key Beep. Volume** is highlighted.
2. Press **OK**.
3. Use the volume keys or the navigation key to set the volume level for keypad tones. A tone sounds as you increase or decrease the volume setting.
4. Press **OK** when the desired key beep volume setting is reached. You're returned to the **Key Beep** sub menu.

KEY BEEP TONE LENGTH

1. While in the Key Beep menu, use the navigation key to highlight **Tone Length**, then press **OK**.
2. Use the navigation key to highlight **Long** or **Normal**.
3. Press **OK** to save your settings.



Alerts

You can set your phone to sound an alert whenever you enter or leave your service area, connect or disconnect a call, as well as other options.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Alerts**. The **Alerts** sub menus in the following table appear in the display.

Sub Menu	Function
Minute Beep	Sound an alert ten seconds before each elapsed minute of a call.
Service	Sound an alert when you go into and out of coverage areas.
Connect	Sound an alert when you connect a call.
Disconnect	Sound an alert when you disconnect a call.
Fade	Sound an alert when a dropped call occurs during a conversation.
Roam	Sound an alert when you leave your home service area while on a call.
Privacy	Emit a tone whenever you are in enhanced privacy mode.

2. Use the navigation key to highlight a sub menu, then press .
3. Use the navigation left/right keys to activate (or not activate) the selected alerts.
4. Press  to confirm your selection.

Power On/Off

Set your phone to play a sound whenever you turn it on or off.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Power On/Off**.
2. Use the navigation key to highlight **On** or **Off**, then press .

Roam Ringer

Set your phone to sound a unique tone when a call is received outside your home service area. This feature is set to **Off** by default.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Roam Ringer**.
2. Use the navigation key to highlight **On** or **Off**, then press .

Whisper Mode

This feature allows you to talk in a low volume during a phone conversation and still be heard by the other party.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Whisper Mode**.
2. Use the navigation key to highlight **On** or **Off**, then press .

Voice Kit

Use **Voice Kit** features to voice dial entries in your Phonebook, record memos, and screen callers by listening to messages as they are being recorded.

Voice Dial

Voice Dial lets you dial any person in your Phone book by pronouncing that person's name. To use Voice Dial, you'll first need to record a voice tag for each contact that you wish to dial by voice.

Train Voice Dial

1. In standby mode, press the left soft key () **Menu**, then press , , . After a brief pause, you're prompted to say the name.
2. Say the name of an entry in your Phonebook that you wish to assign a voice tag. Your recording is played back through the earpiece and you're prompted to say the name again.



Tip: It's best to use a name with several syllables, or say the first and last name of the contact.

3. Say the name of the entry again. Your recording is played back through the earpiece and you're prompted to enter the phone number.
4. Enter the phone number, then press .
5. Enter the name of the entry using the keypad, then press . The voice tag is saved.

Place a call using Voice Dial

1. In standby mode, press and hold .
“Voice Recognition!” appears in the display and “Please say the name” is pronounced through the earpiece.
2. Say the name of any entry that you have tagged.
“Connecting,” is pronounced through the earpiece and your phone dials the number.

Voice Memo

You can use your phone to record memos for later playback.



The maximum number of voice memos is thirty and the maximum storage space for all voice memos is 4 minutes. After 30 voice memos have been recorded, you can no longer record memos (even if total space is under 4 minutes).

Record a Memo

1. In standby mode, press the left soft key () **Menu**.
2. Press , , . The phone prompts, “Begin recording after the tone.”
3. Wait for the beep, then start speaking. As it is recording the phone displays the elapsed time.
 - To pause the memo, press the left soft key () **Pause**. When a memo is paused, press the left soft key () **Resume** to resume recording.

4. Press the right soft key () **Stop** once you're finished recording. A pop-up menu appears in the display with options listed in the following table.

Option	Function
Review	Replay the memo that you just recorded.
Rerecord	Record over the memo that you just recorded.
Save	Save the memo that you just recorded.
Quit	Exit to the previous (Voice Record) menu.

5. Use the navigation key to highlight an option. Press  to perform the function for that option.
6. To save the memo, select **Save** from the pop-up menu, then press .
7. Enter a name for the memo using the keypad.
8. Press  to save the memo.

Review and Erase Memos

You can review saved memos anytime.

1. In standby mode, press the left soft key () **Menu**.
2. Press , , . A list of saved memos appears in the display.
3. Use the navigation key to highlight the memo you wish to review, then press . The memo title, length, size, and time/date the recording took place appear in the display.
4. Press the right soft key () **Play** to play the memo.
5. Press the left soft key () **Options** to **Play**, **Edit**, or **Erase** the memo.



Erase all memos at one time

1. In standby mode, press the left soft key () **Menu**.
2. Press , , . **Erase all Voice Memos?** appears in the display.
3. Use the navigation key to highlight **Yes** (to erase all tags) or **No** (to return to the previous menu).
4. Press  to confirm your selection.



Setup

Use the **Setup** menu to configure your display, modify sounds that your phone and keypad generate, network preferences, security options, and more.

Location

Location identifies your location to the network via GPS. You can fully enable this setting or set GPS to work only in the event that you dial 911.



Contact Verizon Wireless to determine if, when, or where location-based services are available.

1. In standby mode, press the left soft key () **Menu**, then press  ,  for **Location**. The **Location** settings listed in the following table appear in the display.

Location setting	Function
Location On	GPS location setting is on wherever the feature is available.
911 Only	GPS location setting is on whenever you dial 911 only.

2. Use the navigation key to highlight an option.
3. Press  to select the desired **Location** setting. You're returned to the **Setup** menu.

Network

The Network setting allows you to select **NAM** settings, the **Roam Option**, and a feature called **Force Call**, which allows you to place a 1-time only forced analog call.

1. In standby mode, press the left soft key (⌵) **Menu**, then press **9** **WIRE**, **2** **WIRE**. The sub menus listed in the following table appear in the display.

Sub Menu	Function
Set NAM	If your service contract has two phone lines, set the NAM option for NAM 2 to use both lines. Set the NAM option to NAM 1 otherwise.
Roam Option	Set your phone's roaming options to Home only, Automatic-A, or Automatic-B.
Force Call	Set your phone to automatically select the network or force a 1-time analog call.

2. Use the navigation key to highlight the desired sub menu, then press **OK**.
3. Use the navigation key and **OK** to highlight and select from available options.

Data

Use the **Data** sub menu to configure data connection speed and auto detect settings.

1. In standby mode, press the left soft key (⌵) **Menu**, then press **9** **WIRE**, **3** **WIRE**. The sub menus listed in the following table appear in the display.

Sub Menu	Function
Auto Detect	Select phone options for receiving data, or set data reception to Off.
Baud Rate	Set the data connection rate.

2. Use the navigation key to highlight the desired sub menu, then press **OK**.
3. Use the navigation key and **OK** to highlight and select from available options.

Security

Use the **Security** menu to lock your phone, set up emergency numbers, enable or disable voice privacy, set restrictions, as well as other security options.

Lock Phone

Locking the phone limits all outgoing calls except calls to 911 emergency and the three user-programmable emergency numbers. You can lock the phone manually during use, or set the phone to lock automatically when it is turned on. With the phone in lock mode, you can answer incoming calls, but you must unlock the phone to place outgoing calls (except to emergency and secret numbers).

1. In standby mode, press the left soft key ( **Menu**), then press  **9**,  **4** for **Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
2. Press  **1** for **Lock Phone**. The options listed in the following table appear in the display.

Option	Function
Never	The phone remains unlocked.
On power up	The phone locks automatically the next time your phone is powered on and stays locked until you enter the lock code.
Now	The phone locks immediately and stays locked until you enter the lock code.

3. Use the navigation key to highlight the **Lock Phone** option of your choice.
4. Press  **OK** to perform the function for the highlighted option.

Change Lock

The default lock code for your phone is generally the last four digits of your phone number. It is advisable to change the default lock code to a secret code for security purposes.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
2. Press  for **Change Lock**. You're prompted to enter the new lock code.
3. Enter the new lock code. You're prompted to re-enter the new lock code for verification.
4. Enter the new lock code again. Your changes are stored.



Your phone does not allow you to view the lock code for obvious security reasons. If you change the lock code, be sure to write down or memorize the new code.

Emergency

Your phone provides the option of storing three emergency numbers. Each number can be up to 32 digits in length. All emergency numbers can be manually called at any time, even when your phone is locked or restricted. This can be a useful feature for controlling outgoing calls from your phone.



Emergency number 911 is hard-coded into your phone. You can dial this number any time, even when the phone is locked or restricted. If you call 911 an audible tone is heard and an **Emergency** prompt appears in the display for the duration of the call.



Important! Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.



Important! DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

STORE EMERGENCY NUMBERS

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Security**. You're prompted to enter the lock code. The default lock code is the last four digits of your telephone number.
2. Enter the lock code, then press  for **Emergency #**.
3. Press , , or  to select from the three entry openings.
4. Enter the emergency number (up to 32 digits in length).
5. Press  to save the number that you entered.

CALL EMERGENCY NUMBERS IN LOCK MODE

1. In standby mode, enter the emergency number via the keypad.
2. Press  to place the call.

Voice Privacy

Voice privacy allows you to prevent those you call from seeing your number in their display when receiving your call. Voice privacy options are **Standard** and **Enhanced**.

1. In standby mode, press the left soft key (⌵) **Menu**, then press **9** **WTF**, **4** **GR** **Security**. You're prompted to enter the lock code.
2. Enter the lock code. The default lock code is the last four digits of your phone number.
3. Press **4** **GR** for **Voice Privacy**. The options listed in the following table appear in the display.

Option	Function
Standard	Voice privacy is disabled.
Enhanced	Voice privacy is enabled.

4. Use the navigation key to highlight the **Voice Privacy** option of your choice, then press **OK**.

Restriction

Restriction allows you to restrict the use of your phone for outgoing calls, incoming calls, and calls placed from your Phonebook.

1. In standby mode, press the left soft key (⌵) **Menu**, then press **9** **WTF**, **4** **GR** **Security**. You're prompted to enter the lock code.
2. Enter the lock code, then press **5** **RL** for **Restriction**.
3. Use the navigation key to select **Outgoing**, **Incoming**, or calls to anyone in your **Phonebook**.
4. Press **OK**.
5. Use the navigation key to highlight **Yes** or **No**, then press **OK**.

Erase memory

Erase memory erases your Phonebook and Voice Dial recordings. This feature is useful if you want to give your phone to a friend or family member.

1. In standby mode, press the left soft key (**Menu**), then press **9** **Security**. You're prompted to enter the lock code.
2. Enter the lock code, then press **6** **Erase Memory**. A confirmation prompt appears in the display.
3. Use the navigation key to highlight **Yes** or **No**, then press **OK**. A confirmation message appears in the display while your messages are being erased. Your phone then returns to the **Security** menu.

Reset Phone

Reset Phone returns all setup options to their factory default.

1. In standby mode, press the left soft key (**Menu**), then press **9** **Security**. You're prompted to enter the lock code.
2. Enter the lock code, then press **7** **Reset Phone**. A prompt appears in the display asking if you wish to restore default settings (except for the Phonebook and Voice Dial).
3. Use the navigation key to highlight **Yes** or **No**, then press **OK**.

Others

The **Others** sub menu contains options for setting your **Call Answer** mode, Language, and other settings.

Shortcut

The up navigation key can be customized to launch any one of numerous applications or functions from standby mode. Use the **Shortcut** sub menu to choose the application that you wish the navigation up key to launch.

1. In standby mode, press the left soft key () **Menu**, then press , ,  for **Shortcut**. The following functions appear in the display.

Scheduler
Voice Memo
Animation
Ringer Type
Alarm
Calculator
Memo Pad

2. Use the navigation key to highlight the desired function, then press .

You can now press the navigation up key in standby mode to launch the function selected in step two.

Call Answer

You can select a specific answer mode when you receive an incoming call. Your phone can be preset to answer when you do any of the following:

- **SEND key:** Press  to answer an incoming call.
 - **Any key:** Press any key except  to answer an incoming call.
 - **Folder open:** Open the flip to answer an incoming call.
1. In standby mode, press the left soft key () **Menu**, then press , ,  for **Call Answer**. The **Call Answer** sub menu appears in the display with the following options:

Send Key
Folder Open
Any Key

2. Use the navigation key to highlight the method you wish to use for answering calls, then press **OK**.

Auto Answer

Auto Answer enables your phone to automatically answer calls after a period of time that you specify.

1. In standby mode, press the left soft key (**Menu**), then press **9** **MY**, **5** **ML**, **3** **DE** for **Auto Answer**. The **Auto Answer** sub menu appears in the display with the following options:

Off
After 5 sec
After 3 sec
After 1 sec

2. Use the navigation key to highlight the desired setting, then press **OK**.

Auto Retry

Auto Retry automatically re-dials a number if the connection fails. Depending upon your location, the number of times your phone automatically dials the number may vary.

1. In standby mode, press the left soft key (**Menu**), then press **9** **MY**, **5** **ML**, **4** **GR** for **Auto Retry**. The **Auto Retry** sub menu appears in the display with the following options.

Off
Every 10 sec
Every 30 sec
Every 60 sec

2. Use the navigation keys to highlight the desired setting, then press **OK**.

Language

The language option on your phone can change the language of voice prompts, menus, and key-input.

1. In standby mode, press the left soft key (**Menu**), then press **9**, **5**, **5** for **Language**. The **Language** sub menu appears in the display with the following options.

English
Spanish

2. Use the navigation key to highlight your language preference, then press **OK**.

Clock Set

Use the **Clock Set** sub menu to set the time and date (for the main clock), or choose the two locations that you wish to display for the **Dual Clock**, which can be selected as Wallpaper in the **Display** menu.

1. In standby mode, press the left soft key (**Menu**), then press **9**, **5**, **6** for **Clock Set**. The sub menus in the following table appear in the display.

Sub Menu	Function
Main Clock	Set the time and date.
Dual Clock	Set the two locations you wish to display when Dual Clock is used as wallpaper.

2. Use the navigation key to highlight the desired sub menu, then press **OK**.
3. For **Main Clock**, enter the time and date using the keypad and navigation key. Press **OK** to save your settings.



In digital service mode, the Main Clock feature is disabled. The network adjusts time and date automatically.

4. For **Dual Clock**, select the locations (P1: and P2:) that you wish to display when **Dual Clock** is used as wallpaper. Press **OK** to save your settings.

Game Pad

Your phone is compatible with the Samsung Mobile Game Pad, which allows you to play games on your phone using the Game Pad's larger, gamer-friendly interface. Refer to the Game Pad User Guide for complete instructions on using the Game Pad with your phone. See "Get It Now" on page 61 for information on using Get It Now to download games that you can play on your phone.

1. In standby mode, press the left soft key (**Menu**), then press **9**, **5**, **7** for **Game Pad**. The sub menus listed in the following table appear in the display.

Sub Menu	Function
Get Device	Verifies the electrical connection between the phone and Game Pad. Check this sub menu if you are having problems using the Game Pad with your phone. Remove and reattach the Game Pad if Digital Game Pad is not present in the display when you enter this sub menu.
Key Remap	Allows you to re-define which keys represent the Cursor , Fire , and Other keys on your phone when playing games using your phone's keypad.

2. Use the navigation key to highlight the desired sub menu.
3. Press **OK** to enter the highlighted sub menu.



Version

You can view both the software version and hardware version running on your phone. This feature is helpful if you need to contact Customer Service.

1. In standby mode, press the left soft key () **Menu**, then press ,  for **Version**. Hardware and software information for your phone appears in the display.
2. Press  to return to the **Setup** menu.



TTY/TDD

Your phone is fully TTY/TDD compatible. TTY/TDD equipment is connected to your phone through the headset connector on the left side of the phone. TTY/TDD must be enabled before you can use your phone with a TTY/TDD device.

1. In standby mode, press the left soft key () **Menu**, then press , . **TTY/TDD Lock** appears in the display.
2. Enter the lock code. The default is , , ,  (or #TTY). **TTY Full** and **TTY Off** appear in the display.
3. Use the navigation key to highlight your selection and press . You're returned to the **Sounds** menu.



The TTY icon () appears in the top of the display when the phone is in standby mode.

Usage guidelines: All about performance and safety

Getting the Most Out of Your Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.





In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance



  For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.



There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, return it to Verizon Wireless or call Customer Care for service.



Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN THE U.S.A., USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

10 Driver Safety Tips

 
Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:


1. Get to know your wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes



from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.



4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.

 

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

Following Safety Guidelines



Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.



Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.

- Any other area where you would normally be advised to turn off your vehicle's engine.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 104° F (0° C to 40° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:
32° F to 131° F (0° C to 55° C)

More than one month:
32° F to 104° F (0° C to 40° C)

Disposal of Lithium Ion (Li-Ion) Batteries



For safety, do not handle a damaged or leaking Li-Ion battery.

For safe disposal options of your Li-Ion batteries, contact your nearest Samsung-authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and FCC

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this

equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Samsung supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure that the antenna is at least one inch (2.5 centimeters) from your body when transmitting. Use of non- Samsung approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

 
The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a



base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1999 and has been tested in accordance with the measurement procedures specified in ANSI/IEEE Std. C95.3-1992.



Part 24 CDMA 1900 MHz (PCS Mode):

 
Head max: 1.47 W/Kg

Body Max: 1.00 W/Kg

Part 22 CDMA 800 MHz

Head max: 1.33 W/Kg

Body Max: 1.12 W/Kg



FDA Consumer Update

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in stand-by



mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that it is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to a interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Committee
- Occupational Safety and Health Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities about wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the wireless exposures that people get from these base stations are typically thousands of times lower than those they get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

What kinds of phones are the subject of this update?

The term “wireless phones” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS”. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user’s head.

These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones" which have a base unit connected to the phone wiring in a house, typically operate at far lower per levels, and thus produce RF exposures far below the FCC safety limits.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could Accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and

primary brain cancer, glaucoma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health threat?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. Toxicology Program and with groups of investigators around the world to ensure that high

priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of its work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and other federal health and safety agencies. The FCC limit for exposure from wireless telephones is set at a Specific

Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissue that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

What has FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless hand sets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of

the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the



 
 
time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed on late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and



performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program
(<http://www.fda.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)
- National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk>)

CTIA Safety Information

Exposure to radio frequency signals

Your wireless hand held portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.



In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standard bodies:

- ANSI C95.1 (1992)
- NCRP Report 86 (1986)
- ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna care

Use only the specified of approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality

Usage guidelines: All about performance and safety



and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving--driving safety is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against RF signals from your wireless phone.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the pacemaker is turned on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.



- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.



 
 
HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) *Optional for each phone manufacturer.*

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.



VEHICLES

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

POSTED FACILITIES

Turn your phone OFF in any facility where posted notices so require.



Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

For vehicles equipped with an airbag

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCH-a650

Serial No.: _____

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307; 5,109,390; 5,267,262; 5,416,797

5,506,865; 5,544,196; 5,657,420; 5,101,501

 
 
 
5,267,261; 5,414,796; 5,504,773; 5,535,239

5,600,754; 5,778,338; 5,228,054; 5,337,338

5,710,784; 5,056,109; 5,568,483; 5,659,569

5,490,165; 5,111,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.



Limited Warranty

1. What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants the original ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for a period commencing on the date of purchase and continuing for the specified period of time after the date:

- Phone - 1 year
- Batteries - 1 year
- Leather Case/Pouch/Holster - 90 Days
- Game Pad - 90 Days
- Other Phone Accessories - 1 year

2. What is Not Covered?

The limited warranty is conditioned upon proper use of Product by Purchaser. This limited warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical, or electromechanical stress, modifications of any part of the Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal usage; (d) malfunctions resulting from the use of Product in conjunction with the accessories, products, ancillary, or peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of product, or (g) Product used or purchased outside the

United States or Canada. This Limited Warranty covers batteries only if the battery falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

3. What are SAMSUNG's Obligations?

During the applicable warranty period, SAMSUNG will repair or replace at SAMSUNG's sole option, without charge to purchaser, any defective component part of the phone or accessory. To obtain service under this limited warranty, purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable proof of sale showing the date of purchase, the serial number of Product, and the seller's name and address. To obtain information on where to deliver the phone or accessory, call your service provider or Samsung Customer Care at (888) 987-4357. Upon receipt, SAMSUNG will promptly repair the defective product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned, or new product. Repaired products will be warranted for a period equal to the remainder of the original limited warranty on the original product or for 90 days, whatever is longer. All replaced parts, components, boards, and equipment

becomes the property of SAMSUNG. If SAMSUNG determines that any product is not covered by this limited warranty, purchaser must pay all parts, shipping, and labor charges for the repair or return of said product.

4. What Are the Limits On SAMSUNG's Liability?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES

Limited Warranty

131

PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUCTED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the



 
 
 
 
 
 
limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.

1301 E. Lookout Drive
Richardson, TX 75082
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2004 Samsung Telecommunications America, Inc. All rights reserved. No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.





Index

Numerics

- 123 mode 49
- 911 94, 95

A

- a650 key features 5
- Add, edit, erase tasks 72
- Adjust
 - key beep 84
 - LCD backlight setting 20
- Airbag information 126
- Alarm clock
 - set the alarm 76, 77
 - turn off the alarm 77
 - when an alarm sounds 76
- Alerts 85
- Antenna 8
- Antenna care 123
- Apps
 - buying 63
 - cancelling subscription 63
 - demo 63
 - disabled 63
 - expired 64
 - removing 63
 - restoring 64
- Auto Answer 19
- Auto answer 99

B

- Backlight features 8
- Battery
 - charging 7
 - installation 6
 - low battery indicator 7
 - removal 6
- Battery care 110
- Body worn operation 112
- Buying new apps 63

C

- Calculator 78
- Call answer 98
- Call Answer mode 14
- Call emergency
 - numbers in lock mode 95
- Call notification methods 18
- Call restriction 96
- Call timer 30
- Call waiting 31
- Calls 27
- Calls menu 27
- Cautions 111
- Change display language .100
- Change lock code 94
- Count down
 - review, add, edit and erase 75
- CTIA safety information 122

D

- Dangerous Areas 109
- Demo apps 63
- Dialing
 - one-touch 45
 - three-touch 46
 - two-touch 45
- Disabled apps 63
- Display screen icons 12
- Draft messages
 - creating 57
 - view and edit 57

E

- Edit text options 58
- Emergency numbers 94
- Emergency
 - numbers, storing 95
- Enter numbers 49

- Erase
 - memory97
- Erase calls29
- Erase Message59
- Erase total timers31
- Exit Mobile Web66
- Expired apps64
- F**
 - FCC Notice111
 - FCC website119
 - FDA and health effects117
 - FDA consumer update113
 - FDA rf measurements119
 - FDA's role114
- Find
 - by entry35
 - by group35
 - by name34
- Find names in Phone Book .34
- G**
 - Get It Now Help62
 - Get It Now options61
 - Get It Now settings62
 - Getting Started17
- H**
 - Hard pause39
 - Hardware version102
- I**
 - Ignore calls20
 - Incoming calls 18, 28
 - Input mode14
- Interference
 - with medical equipment121
- In-use menu26
- J**
 - Jump to date, scheduler70
- K**
 - Key beep84
- L**
 - Launch Mobile Web65
 - LCD backlight setting20
 - Left soft key9
 - Lock code, changing94
 - Lock mode14
 - Lock phone93
 - Low battery indicator7
- M**
 - Make outgoing calls18
 - Memo pad
 - review, add, edit, and erase
 - memos73
 - Menu shortcuts25
 - Menus and sub menus21
 - Message folder
 - voice54
 - Message send options52
 - Message settings60
 - Messages and lock mode ...56
 - Messages, receive in call ...54
 - Microphone11
 - Missed Calls28
 - Mobile web65
 - Mode
 - call answer14
 - input14
 - lock14
 - silent15
 - standby15
 - talk15
 - vibrate16
- N**
 - Navigation key12
 - Navigation key shortcuts25
- O**
 - One-touch dialing45
 - Options, message sending .52
 - Others menu97

Outbox,		Restrict calls	96
reviewing messages	56	Return to last menu	24
Outgoing calls	18, 27	Review calls	29
Owner's Record	127	Reviewing outbox	56
P		RF energy exposure	118
P pause	39	RF exposure research	117
Pause dial	40	Right soft key	10
Peak Performance	105	Ringer type	83
Phone Book		Roam ringer	86
add new information	36	S	
add pauses	39	Safe Use of and	
edit numbers	38	Access to Your Phone	106
find by group	35	Safety Guidelines	108
find by name	34	Samsung address	133
rename a group	37	Samsung phone numbers	133
store pauses	39	Scheduler	70
Phone book		jump to date	70
find by entry	35	view an event	70
Planner		Security menu	97
add a new event	69	Service LED	
alarm clock	76	turn on or off	82
calculator	78	Service, obtaining	17
count down	74	Shortcut to menus	25
memo pad	72	Silence a ringer	20
opening	68	Silent mode	
scheduler	70	entering	15
to do list	71	exiting	16
today	68	SMS messages, sending	50
world time	77	Software version	102
Power On/Off sound	86	Special Precautions	111
Power Save Feature	104	Standby mode	15
Powering on	17	Step ringer	20
R		Store emergency numbers	95
Radio Frequency	104	Store numbers after a call	43
Receive messages in call	54	Store pauses	39
Receive text messages	53	Subscriptions, cancelling	63
Reception	104	Symbol mode	50
Removing apps	63		
Reset your phone	97		
Restoring apps	64		

T

T pause	39
T9 text entry	48
Talk mode	15
Text entry mode	
123 mode	49
Symbol mode	50
T9	48
Text messages, receiving ...	53
The inbox folder	55
The outbox folder	55
Three-touch dialing	46
Tips on efficient operation	123
To do list	71
add, edit, erase tasks	72
Travel charger	7
TTY	103
Turn your phone off	17
Turn your phone on	17
Two-second pause	39
Two-touch dialing	45

U

Usage	
children	120
electronic devices	124
hearing aids	125
in aircraft	126
in blasting areas	126
in explosive areas	126
in posted facilities	125
in vehicles	125
other medical devices	125
pacemakers	124
rf exposure	120
while driving	124
Usage guidelines	104
User Guide	
Proprietary Notice	127

V

Version	102
Vibrate mode	16
View an event, scheduler ...	70
Voice folder	54
Voice kit	
erase all memos	90
record memos	88
review and erase memos ..	89
voice memos	88
Voice mail	
checking	54
the voice folder	54

W

Warranty information	
Samsung liability	130
Samsung obligations	129
what is not covered	128
Web alerts	59
Whisper mode	86
World time	77