



Action Ski Goggles with built in Full HD Camera

Getting Started Guide

1. UNPACK

Unpack the Cocoon Action Ski Goggles with built in Full HD Camera from the packaging and check you have all the components:

- 1 x Cocoon Action Ski Goggles with built in Full HD Camera
- 1 x USB Cable
- 1 x Warranty Card
- 1 x Instruction Manual
- 1 x Getting Started Guide



2. INSERT MICRO SD CARD (NOT INCLUDED)

1. Rotate the Open/Close Knob clockwise to the open position (2.1) and pull open the cover (2.2).
2. Insert a MicroSD card (not included) (2.3), checking compatibility and orientation prior to inserting (Gold plate facing the outside of the goggles.)

Ensure your goggles are turned off prior to inserting/removing a Micro SD Card



3. CHARGING THE GOGGLES

1. Connect the Mini USB connector into the goggles (3.1).
2. Connect the USB end into a computer, laptop or USB power adaptor (not included). The red charging light will turn on.
3. Charge until the red charging light turns off, approximately 2-3 hours for full charge.
4. Disconnect the USB Cable
5. Close the cover and turn the Open / Close Knob to the Close position.



4. ADJUST STRAP

1. Loosen the Cocoon Ski Goggles strap (4.1) and place the goggles over your head. Take into account if you will be wearing a helmet or similar.
2. Tighten the strap to ensure goggles are held in place firmly and sit comfortably.

Take care not to over tighten as the wire connecting the battery and camera may be damaged





Action Ski Goggles with built in Full HD Camera

Getting Started Guide

5. TURNING COCOON SKI GOGGLES ON/OFF

1. To turn the Cocoon Ski Goggles ON, hold down the Power/Record Button (5.1) until you feel a vibration and the blue LED indicator turns on. The camera is now on and ready to use.
2. Once you have finished using the camera, hold down the Power/Record Button again until you feel a 3 second vibration and the blue LED indicator turns off.

5.1



6. USE

RECORDING A VIDEO

1. To start recording, ensure the goggles are ON with a memory card inserted (not included) and press the Power/Record Button. The goggles will vibrate and the blue LED indicator will begin flashing.
2. To end recording, press the Power/Record Button again. You will feel a short vibration and the blue LED indicator will return to solid.

6.3



TAKING A PHOTO

3. To take a photo, press the Photo Button (6.3). The blue LED indicator will turn off briefly and the goggles will vibrate before turning to a solid blue LED.

7. CONNECT TO PC

1. Open the cover (7.1).
2. Use the included USB cable to connect the Cocoon Snow Goggles to a USB port on your computer.
3. Navigate to your files as though connecting to a USB drive or camera.

7.1



8. SUCCESS

You have successfully set up your Cocoon Action Ski Goggles with built in Full HD Camera. For further information refer to the included user manual.