

SGH-a885 Series

P O R T A B L E Q u a d - B A N D
M O B I L E P H O N E

User Manual

Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

© 2009 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in South Korea

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Important Safety Precautions5

Important Safety Precautions	5
Road Safety at All Times	5
Switching Off When Refueling	5
Switching Off in an Aircraft	5
Switching Off in Hospitals	5
Special Regulations	5
Sensible Use	5
Emergency Call	5
Liquid Resistance	5
Accessories and Batteries	5
Qualified Service	6

Section 2: Getting Started7

Setting Up Your Phone	7
Charging a Battery	9
Switching the Phone On or Off	11
Locking the Touch Screen	11
Setting Up Your Voice Mail	11

Section 3: Understanding Your Phone12

Features of Your Phone	12
Front View of Your Phone	12
Side Views of Your Phone	14
Rear View of Your Phone	15
Display Layout	15

Using the Multitasking Menu	18
---------------------------------------	----

Section 4: Menu Navigation19

Menu Navigation	19
Widgets	22
Widget Bar Navigation	26
Understanding the Events Widget	27

Section 5: Call Functions28

Displaying Your Phone Number	28
Making a Call	28
Making a Call Using Speed Dial	29
Making a Call from Contacts	29
Answering a Call	30
Dialing Options	30
Call History	30
Call Time	32
Data Counter	33
Options During a Call	33

Section 6: Entering Text37

Using the QWERTY Keyboard	37
Changing the Text Input Mode - Keyboard	38
Using T9 Mode	38
Using 123Sym Mode	39
Using Emo Mode	39
Using Abc Mode	40

Using Numeric in Portrait Mode	40	Used Space	66
Using Symbols in Portrait Mode	41	Section 9: My Files	67
Using the Handwriting Feature	41	My Files Functions	67
Changing the Text Input Mode - Handwriting	42	Audio Files	68
Handwriting Mode-Entering Characters	43	Games	69
Handwriting Mode-Entering Numbers	43	Picture	69
Handwriting Mode-Entering Symbols	44	Tools	70
Section 7: Understanding Your Contacts	45	Video	71
Contacts Settings	45	Other Files	71
Adding a New Contact	45	Used Space	71
Using Contacts	49	Section 10: Camera	72
Contacts Entry Options	50	Using the Camera	72
Finding My Own Phone Number	51	Camera and Camcorder Options	73
FDN Mode	51	Using the Camcorder	77
Group Settings	52	Section 11: SharePix	80
Contacts Favorites	53	Launching SharePix	80
Managing Contacts	54	Uploading a File	80
Section 8: Messaging	57	SharePix Options	80
Types of Messages	57	Section 12: Games	81
Creating and Sending Messages	57	Section 13: TELUS Shop	82
Additional Message Options	58	Launching TELUS Shop	82
Viewing New Received Messages	59	Section 14: Wireless Web	83
Using Message Options	60	Accessing the Wireless Web	83
Using Exchange ActiveSync	61	Navigation Using the Wireless Web	83
Deleting Messages	62	Navigating via a URL Address	85
Messaging Settings	63	Using Favorites	86
Templates	65		

Browser Settings	87	World Clock	100
Using your History	89	Timer	101
Setting Browser Preferences	89	Stopwatch	101
About Browser	90	Section 18: Changing Your Settings	102
Accessing the Wireless Web Site	90	Sound Profiles	102
Changing the WAP Profiles	90	Normal Profile	102
Section 15: Applications	92	Silent Profile	104
Launching Applications	92	Driving Profile	105
Section 16: Calendar	93	Outdoor Profile	107
Creating a New Event	93	Display and Light Settings	108
Other Event Options	94	Time & Date	110
Viewing an Event	94	Phone	111
Deleting an Event	94	Call	116
Section 17: Tools	95	Connectivity	118
Tools	95	Bluetooth Secure Mode	119
Camera	95	Configuring Your Phone's USB Settings	120
Voice Recognition	95	Network Profile Configuration	120
Media Player	96	Applications Settings	122
Record Audio	96	Memory Management	123
Alarms	97	Section 19: Accessibility	125
Calendar	98	TTY Settings	125
Memo	98	Section 20: Safety	126
Tasks	98	Getting the Most Out of Your Reception	126
Calculator	99	UL Certified Travel Adapter	127
Tip Calculator	99	Using Your Phone While Driving	127
Converter	100	Caring for the Battery	129

Acknowledging Special Precautions and Industry Canada Notice	
130	
Information to User	130
Owner's Record	132
Section 21: Warranty	133
Standard Limited Warranty	133
Index	137

Section 1: Important Safety Precautions

Important Safety Precautions

Please read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations

Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital, for example).

Sensible Use

Use the phone in the intended position (held to the ear). If your phone has an external antenna, avoid unnecessary contact with the antenna when the phone is on.

Emergency Call

Ensure the phone is switched on and in-service. Key in the emergency number for your present location, then press the  key. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Liquid Resistance

Your phone is not liquid resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

Important!: Although the phone can be used while the battery is charging, the battery must be fully charged before first use, otherwise you could damage the battery.

Important!: Using a non-supported battery may cause damage to your phone.

Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see “*Safety*” on page 126.

Section 2: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD card slot is also located in this same internal area.

1. Remove the battery cover by pressing down on the cover.
2. While applying pressure, slide the top portion up and away from the lower portion of the phone.



Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Important! The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

- ▶ Carefully slide the SIM card into the SIM card socket (as shown on the next page) until the card locks into place.
 - Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.



Note: If the card is not inserted correctly, the phone does not detect the SIM card. Re-orient the card back into the slot.

Installing the Memory Card

Your phone also supports the use of a memory card (microSD™) for data storage of such things as data, music, pictures, and video files. This type of memory card is designed for use with this mobile phone and other devices.

1. Place the microSD card into the slot until it clicks (as shown).
 - Make sure the microSD's gold contact pins face upward and the card is securely inserted.



Note: The Samsung a885 has been tested to support up to a 16GB memory card.

Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
2. Gently press down to secure the battery (2).



3. Replace the battery cover onto the back of the phone (1).
4. While applying pressure, slide the top portion towards the camera area (2) until you hear a light click.



Note: Make sure the battery is properly installed before switching on the phone.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. The Travel Adapter is used to charge the battery, is included with your phone. Use only Samsung-approved batteries and chargers.

Note: Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

Although you can use the phone while the battery is charging, doing so will require additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

Using the Travel Adapter

1. With the battery installed, temporarily remove the plastic cover (top of phone) and plug in the wall charger's connector into the jack.

Important!: Verify that the handset battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the handset may power off and on continuously, preventing proper operation.



2. Plug the flat end of the Travel Adapter into the Power/Accessory Interface connector and the other end into a standard AC wall outlet.
3. When charging is finished, remove the flat end from the interface connector jack on the phone.

Warning!: If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to "Standard Limited Warranty" on page 133.

Note: Failure to unplug the wall charger before you remove the battery, can cause damage to the phone.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Press and hold  or  until the phone switches on.
The phone launches the activation splash screen and then proceeds to search for the network. Once the network has been found, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to “*Changing Your Settings*” on page 102.

2. Press and hold , until the phone switches off.

Locking the Touch Screen

1. Press  (on the top of the phone) to lock the touch screen.
2. Press  again to unlock the touch screen.

Setting Up Your Voice Mail

1. In Idle mode, press , then touch and hold .
You may be prompted to enter a password.

Note: You can also access your voicemail from the onscreen keypad by touching  then pressing  or touch Call.

2. Follow the tutorial to create a password, record a greeting, and record your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

1. In Idle mode, press , then touch and hold .
2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press  .
3. Enter your passcode.

Section 3: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that appear when the phone is in use.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- Touch screen provides quick response to a variety of in-phone menus and options
- Multitasking
- User friendly, menu driven access to features and options
- Ready access to the Internet
- Built-in Bluetooth technology
- E-mail and Instant Messaging capability
- microSD card compatibility for use in data storage and access
- My files feature provides access to Files, Games, Voice Recognition, Alarms, Calendar, Tasks, Calculator, World Clock, Converter, Tip Calculator, Timer, and Stopwatch.

Front View of Your Phone



1. **External speaker:** allows you to hear the caller.
2. **Display:** shows the information needed to operate your phone, such as the received signal strength, phone battery level, time, etc.
3. **Widget tab:** allows you to open the Widget toolbar.
4. **Contacts key:** allows you to access your current Contacts, Groups and Favorites lists.
5. **Dial key:** allows you to access the Phone Functions menu, such as Dialer, Contacts, and New Message screen.
6. **Talk/Send key:** allows you to power on the phone, make or answer a call, access your History, Call Manager, and Call Block features. Press and hold to redial the last phone number.
7. **Back key:** allows you to return to the previous menu. This key also allows you to return to the previous page within the Web browser.
8. **Power/End key:** ends a call. Press and hold for three seconds to turn the phone on or off. While in a menu, pressing this key once cancels the current input and twice returns the phone to Idle mode.
9. **Menu key:** allows you to access your phone's menu functions menu, such as Contacts, Messaging, My files, Call History, Share Pix, Games, Wireless Web, TELUS Shop, Applications, Calendar, Tools, and Settings.
 - While in the Menu screen, this key is replaced with the Messaging key, whose function is to create new text messages.
10. **Lock key:** () lets you lock or unlock the touch screen. If you receive an incoming call while the screen is locked, you can answer it by either:
 - Pressing  to receive the call without unlocking the screen.
 - Pressing  to unlock the screen and answer the call normally.

Side Views of Your Phone



1. **Microphone:** allows other callers to hear you during a call when the phone is in Speaker mode.
2. **Volume keys:** allow you to adjust the ringer volume while in standby mode or adjust the voice volume during a call. When receiving an incoming call, briefly press down either volume key (↔) to mute the ring tone. Press and

hold either volume key to reject the call and send it directly to voicemail. Adjusts text size when reading a message or using your browser.

3. **Microphone:** allows other callers to hear you when you are speaking to them.
4. **Camera key:** allows you to both access the Picture camera menu and take pictures when you are in camera mode. In Idle mode, press to launch the camera.
5. **Multitask key:** (⏏) launches the multitask menu. This menu provides ready access to some of the most commonly used features such as: Call, Messaging, Wireless Web, Media Player, and Games. You can also End all running features.
6. **Power/Accessory Interface connector:** allows you to connect a Travel Charger or other optional accessories such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.

Rear View of Your Phone



1. **Camera lens:** is used to take pictures and shoot videos.
2. **Mirror:** allow you to see yourself as you take a picture or video.

Display Layout

Your display screen provides a wealth of information about the phone's status and options, as well as providing access to the new widget bar. The display has 4 main areas:



Widget bar

The Widget bar provides quick access to those functions you use most frequently: Analog Clock, Digital Clock, Dual Clock, Create New Message, Photo Favorites, Voice Recognition, Wireless Web, Today, Calendar, Favorite URL, Photo, Birthday, Sound Profile, Bluetooth, Calculator, Music Player, Videos, Share Pix, Yahoo! Search, Yahoo! Finance, Google Search, AccuWeather, digg, Events, More Widgets, and Notification. For more information about the Widget bar, see *“Widget Bar Navigation”* on page 26.

Function categories

Function categories are shortcuts to Dial (for dialing a number), Contacts (accessing the Contacts list), and Menu (displays the icons for application access). While viewing the Main Menu, the Menu category changes to Message, that can be used to create messages.

Icons

This list identifies the symbols you'll see on your phone's display and Indicator area:



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.



Displays when you are out of your service area.



Displays when a call is in progress.



Displays within the lock screen when a call has been missed.



Displays within the Event Widget as a tab when a call has been missed.



Displays your battery's charge level. The more bars you see, the more power you have remaining.



Displays when your connection to a 3G network is active.



Displays when the phone is accessing services in a 3G+ (HSDPA) network. When data is being transferred, this icon animates.



Displays when your phone is communicating with the 3G network.



Displays when an internal microSD memory card is detected.



Displays when the phone is connected to a computer via a supported USB cable connection.



Displays within the Indicators area when a new text message is received.



Displays within the Event Widget as a tab when a new message is received.



Displays within the Indicators area when a new Multimedia message is received.



Displays within the Event Widget as a tab when a new OTA message is received.



Displays within the Event Widget as a tab when an event has been missed.



Displays within the Indicators area when a new voice mail is received.



Displays within the Indicators area when a new WAP message is received.



Displays when Inbox is full - Text Message.



Displays when you set an alarm to ring at a specified time. For more information, refer to *"Alarms"* on page 97.



Displays when Call forwarding is set to Forward always. For more information, refer to *"Call"* on page 116.



Displays when the Sound profile is set to Normal.



Displays when the Sound profile is set to silent or the volume has been manually lowered below level 1.



Displays when the Sound profile is set to Driving.



Displays when the Sound profile is set to Outdoor.



Displays when Bluetooth is activated.



Displays when a Bluetooth stereo headset has been paired with the phone.



Displays when TTY device has been inserted.



Displays when browsing the web.

For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 102.

Using the Multitasking Menu

This key () launches the Multitask menu that can be activated from within any active window or page on the phone. There is no need to stop what you are doing, if you quickly want to jump out and activate another common feature.

The idea is to allow you to temporarily exit from your current location to access a group of common functions such as: Call, Messaging, Wireless Web, Music Player, Games, and End all. This key keeps you from having to completely exit from your current task or window, whether that be a text message, a web page, or an active call, just to quickly do something else.

Here is an example:

You might be in the middle of typing up an email or text message, when you suddenly realize that you need to make a quick call. Typically, you would have to exit from your current message, navigate to the Idle screen, make your call (page 28), after which you would have to go back and re-create your message.

Using this same situation, all you would have to do is:

1. Press  until you see the Multitask menu screen.
2. Touch **Call**, then enter your number and continue the call.

3. Once you are done, hang up the call normally and you are returned to the previous message screen.

Multitask Functions

Pressing the Multitasking key () on the right side of the handset, allows you to choose from one of the following functions:

- **Call:** allows you to make a voice call while using the handset for other tasks. If Music Player is active, it is muted during the call.
- **Messaging:** allows you to send a text or multimedia message while using the handset for other tasks.
- **Wireless Web:** allows you to launch the Wireless Web browser while using the handset for other tasks.
- **Music Player:** allows you to launch the Music Player while using the handset for other tasks. If an incoming call is received or you want to make a call, the Music Player is muted.
- **Games:** allows you to quickly access Games while using the handset for other tasks.
- **End all?:** exits the Multitask menu and returns you to your previously active menu or page.

Section 4: Menu Navigation

This section explains the menu navigation for your phone. The a885 has done away with the need for navigation wheels or keypads. The a885 is completely navigable by either an onscreen touch or scroll.

- Touching an onscreen option activates the feature.
- Long menu list can be easily viewed by either using your fingertip to scroll either up or down the onscreen list, or pressing the volume keys up or down.

Menu Navigation

You can tailor the phone's range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available onscreen menus.

Locking and Unlocking the Phone

When the device is locked, press  to unlock the a885 and display the Idle screen.

The Idle screen provides access to a wealth of phone features, including popup Widgets and Menu tabs (Dial, Contacts, and Menu).



Opening an Application

- ▶ Tap the associated onscreen icon.
 - Press  to exit from the current menu and return to the previous screen.
 - Press  to exit from the current location/function, cancel your input and return to the Idle screen.

Navigating Through Menus

As you navigate through a menu, options display on the screen as scrollable lists. Menu tabs (located at the bottom of most screens, provide access to additional screen options).

To navigate a scrollable list:

1. From the Idle screen, touch .
2. Gently press an onscreen option.
3. From the available list of options you can either:
 - Touch an onscreen entry to activate it.
 - Firmly press and slide your finger up or down the screen to scroll through lists of menu items.
 - Navigate through a long list by pressing either volume key up or down.

Note: Tapping or touching individual entries on the list opens the list entry.



Note: Scrolling requires that you press firmly on the screen then drag. When scrolling through a list make sure not to touch or press individual entries on the list as this will open the list entry.

Accessing the Phone's Main Menu

Once you display a menu list, tapping an item causes different functions, depending on its function. For example, you can open another list, add text to a message, send a message, play a song, or view a photo.


1. Touch  → Settings.
2. Scroll through the list to then touch/activate the desired phone function.

Using the Power Search Tab

Within the Contacts list (sorted alphabetically) the **Power Search** tab allows to quickly "thumb through" the alphabetical listing of entries by first letter (A → B → C, etc...). The **Power Search** tab is located along the left side of the screen and Contacts entries are then selected by pressing their name fields.

1. Touch .
2. Press and drag the Power Search tab until the first letter of the name of the contact you wish to find is shown on the screen.

3. Release the Power Search tab and scroll to the desired contact.

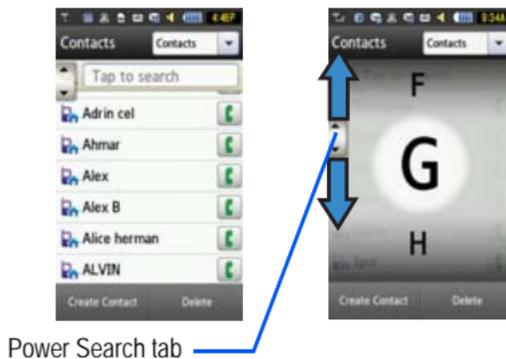

Scrolling Through Field Entries

Some screens will ask you to assign a value to an onscreen field by either touching the up/down selection arrows or by quickly sliding through these values by using your fingertip. An example of these actions can be found on the Alarm page.

1. Touch  → Tools → Alarms → Create Alarm.


2. Touch the **Alarm Time** field and then adjust the hour and minutes values by entering manually (Keypad tab) or using either the +/- buttons or by quickly sliding your fingertip over the numbers (Jog tab).



Widgets

The Widget bar provides quick access to mini-programs (widgets). This bar (located at the left of the Idle screen) gives you information at a glance and provides easy access to frequently used tools such as: Analog Clock, Digital Clock, Dual Clock, Create New Message, Photo Favorites, Voice Recognition, Wireless Web, Today, Calendar, Favorite URL, Photo, Birthday, Sound Profile, Bluetooth, Calculator, Music Player, Videos, Share Pix, Yahoo! Search, Yahoo! Finance, Google Search, AccuWeather, digg, Events, More Widgets, and Notification. This

bar makes great use of the available space on your device. The Widget bar is a pane on the side of the display screen that houses user-selected mini-applications and keeps them organized and always accessible.

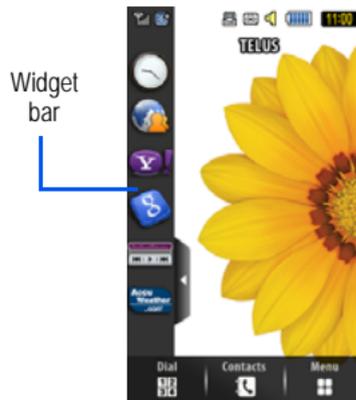

You can easily customize the Widget bar by allowing you to keep these mini-apps docked within the bar itself or they can also be undocked by dragging anywhere onto your Idle screen.

Adding and Deleting Widgets

To select which items are displayed or hidden within the Widget bar:

1. From Idle mode, touch  → Settings → Display and

Light → Widget.

2. Touch the check box to place a check mark next to the Widget you want to display.
– or –
Touch the check box again to remove the check mark and hide the Widget.

The following table contains a description of each available Widget.



Analog Clock: Displays the current time on an analog clock.

- Drag and drop the Analog clock onto the desktop to view the time in an analog format.



Digital Clock: Displays the current time on a digital clock.

- Drag and drop the Digital clock onto the desktop to view the time in a digital format.



Dual Clock/World Clock: Displays current time in other user-defined international locations and find out what time it is in another part of world.

- Drag and drop the World clock onto the desktop to view the time in dual locations. For more information, refer to “*World Clock*” on page 100.



Create New Message: allows you to create new text or picture messages. For more information, refer to “*Creating and Sending Messages*” on page 57.



Photo Favorites: Displays the Contacts Favorites list.

- Drag and drop the Photo Favorites onto the desktop to view the contacts. These favorites are listed and can be edited in **Contacts → Favorites**.



Voice Recognition: Allows you to make calls to a name or number by using your voice. Follow the on-screen tutorial. For more information, refer to “*Voice Recognition*” on page 95.



Wireless Web: Opens the browser and allows you to access the internet.



Today: Displays the current date (month/day/year).

- Drag and drop the Today widget onto the desktop to view the date.



Calendar: Allows you to access the Calendar feature.

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- Set schedules and note anniversaries.
- Write memos to keep track of your schedule.
- Set an alarm to act as a reminder, if necessary.
- For more information, refer to *"Calendar"* on page 98.



Favorite URL: Allows you to access your most frequently visited internet locations which you have saved as Favorites, including your account information, chat group, news, sports, and weather.



Photo: Allows you to view the list of photos downloaded from the web server, received in messages, or taken by the camera. You can then assign the image as the current wallpaper.

- For more information, refer to *"Using the Camera"* on page 72.



Birthday: Displays an onscreen alert for up to 5 upcoming birthdays. These dates must have been previously entered as an entry within Contacts on the day assigned for that person's birthday.

- For more information, refer to *"Adding a New Contact"* on page 45.
- For more information, refer to *"Understanding the Events Widget"* on page 27.



Sound Profile: Allows you to quickly modify your current sound Profile.

- For more information, refer to *"Sound Profiles"* on page 102.



Bluetooth: From this application you can activate Bluetooth and configure it so other Bluetooth devices can see your device by name.

- Drag and drop, then tap the Bluetooth icon to launch the Bluetooth application.
- For more information, refer to “*Bluetooth*” on page 118.



Calculator: Allows you to use a built-in calculator.

- For more information, refer to “*Calculator*” on page 99.



Notification: Automatically displays when you have received a new Email message, MMS message, Text message, or Missed call.



Music Player: Allows you to play music files stored on the phone and external card and control their playback.

- Drag and drop, then tap the purple portion of the Music Player icon to launch the Music player.
- Touch the arrows on the widget to control the playback of the currently active song.



Videos: Allows you to play videos stored on the phone.



SharePix: Provides access to SharePix.



Yahoo! Search: Opens the browser and allows you to initiate a Yahoo Search.

- Drag and drop, then tap the search field, enter a keyword, and click the lens.



Yahoo! Finance: Provides access to Yahoo's finance information.



Google Search: Opens the browser and allows you to initiate a Google Search.

- Drag and drop, then tap the search field, enter a keyword, and click the lens.



AccuWeather: Provides weather information and alerts so you can cope with the elements.



digg: Provides access to digg.



More Widgets: Provides access to more widgets.

Widget Bar Navigation

You can drag the widgets to the desktop to use the application or feature, then drag it back to the Widget Bar when you are finished.

Note: Many widgets can be used directly from the widget bar without dragging them onto the screen (ex: Bluetooth and Alarms).

Accessing the Widget Bar

1. Tap the Widget bar tab, located on the left side of the main display to open the widget (quick access) bar.
2. Tap the Widget bar tab again to close the widget bar.

Undocking Widgets

You can easily customize the Widget bar by either keeping these mini-apps docked within the bar itself or undocking them by dragging anywhere onto your Main display screen.

1. Touch and hold the widget (1).

2. While still holding the icon, in a single motion, drag it over to the new location and release your finger from the screen (2). The application is now located on the Main display screen.



Rearranging Widgets

You can also customize the Widget bar by arranging the location of your current widgets. This can help you place your frequently used (favorite) widgets at the top of the list.

1. Touch and hold the widget (1).

2. While still holding the icon, drag it away from the widget bar and drop it on the main screen (2). Then drag it back into its new location in the list. Or, you can drag it away from the widget bar in a single motion and drop it in the desired location on the widget bar.

Activating a Widget

1. Locate your widget (whether it is still docked in the Widget bar or in another location).
2. Touch the icon to activate the mini-application (widget).
The Analog Clock, Digital Clock, and Today widgets must be dragged to the Main Display screen.

Scrolling Through the Widget Bar

Although the Widget Bar contains a number of widgets, it can only display seven or eight widget icons at one time on the bar.

- ▶ Use your fingertip to scroll up and down along the Widget bar.

Tip: Flick the screen in an upward motion to quickly scroll through the list.

Understanding the Events Widget

The Event Widget is an area that displays on the screen to inform you of calendar events, missed calls, or when new messages have

been sent to the phone. The following is a description of these onscreen notification tabs:



Displays within the Event Widget as a tab when a new message is received.



Displays within the Event Widget as a tab when a call has been missed.



Displays within the Event Widget as a tab when a new voicemail message is received.



Displays within the Event Widget as a tab when a scheduled event has been missed.



Displays within the Birthday Widget (see below) when a birthday event (assigned within the Contact entry) is within 29 days of the current day.

Section 5: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

For more information, refer to “Call” on page 116.

Displaying Your Phone Number

- ▶ Touch  → Contacts → Contacts Settings → Own Number → <voice line #>.

Making a Call

1. From the Idle screen, touch  and use the onscreen keypad to enter the number you wish to dial.
2. Touch  or press .

Note: When you activate the **Auto Redial** option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to “Call” on page 116.

Making an International Call

1. Touch , then touch and hold . The + character appears.

2. Use the onscreen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, touch  until the desired numbers have been deleted.
3. Touch  or press .

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

1. Touch  and use the onscreen keypad to enter the phone number.
2. Press and hold  to add a two-second pause, and use the keypad to enter the additional numbers.

Tip: You can create pauses longer than two seconds by entering multiple P pauses.

3. Touch  or press .

For more information, refer to “Adding Pauses to Contact Numbers” on page 48.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

1. After entering a number using the keypad.
 - If you make a mistake, touch  to erase a single character.
 - Press and hold  to erase the entire string of numbers.
2. Press  to return to the Idle screen.

Ending a Call

- Press  key.

Dialing a Recent Number

All incoming, outgoing and missed calls are recorded in the **Calls** menu. If the number or caller is listed in your **Contacts**, the associated name also displayed.

1. From the Idle Screen, briefly press .
2. Find the number by touching the drop down arrow to the right to view the call logs from the various options screens. Choose from: **All**, **Missed**, **Made**, or **Received**.
3. Touch  next to the desired phone number (or entry name if already in your **Contacts**).
– or –

Select the **Contact** to enter the **Details** page, then touch **Call** or press  to dial the number.

Note: Press and hold  to redial the last number.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number for speed dialing.

1. Touch  → **Contacts** → **Contacts Settings** → **Speed Dial**.
2. The **Speed Dial** screen displays showing the numbers 1 through 9. The number 1 is reserved for Voice Mail.
3. Touch an unused number and the **Contacts** screen displays.
4. Select a contact to assign to the number. You can also tap on the search box and enter the first few letters of the name you are searching for.
5. Follow the on-screen instructions to replace, add, or delete an entry.

Making a Call from Contacts

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called **Contacts**.

For further details about the **Contacts** feature, For more information, refer to *“Searching for a Number in Contacts”* on page 35.

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in **Contacts**.

1. From the Incoming call screen, press .
 - If the **Any Key** option is activated (**Menu** → **Settings** → **Calls** → **General** → **Call Answer**), you can press any key to answer a call except .
2. End the call by pressing .

Note: You can answer a call while using Contacts or other menu feature. After ending the call, the phone returns to the previously active function screen.

Other Answering Options

When receiving an incoming call:

- ▶ Briefly press down either volume key () to mute the ring tone.
- Or-
- ▶ To mute the ring tone when the phone is facing upwards, flip the phone over so that it is facing down. To mute the ring tone when

the phone is facing downwards, flip the phone over and then flip it over again so that it is facing downward. To set up your phone to utilize Motion Detection, see *“Motion Detection”* on page 112.

- ▶ Press and hold either volume key to reject the call and send it directly to voicemail.

Dialing Options

From the Idle screen and Main menu, you have the option to access the Dialer and initiate a call. When you manually enter numbers from the Dialer, you will see three dialing options displayed on the screen.

- **Call:** dials the current number entered using the onscreen keypad.
- **Send Message:** to create a new text message and address it to either a manually entered number or a current entry from Contacts.
- **Contacts:** takes you to Contacts where you can select a contact to call.

Call History

The phone stores the numbers of the calls you've dialed, received, or missed in the **Calls** menu. You can access this menu by from the Idle screen by doing one of the following:

1. Briefly press .
 - or -
 - Touch  → **Call History**.

2. Touch the drop-down list located at the top right of the screen to select from **All**, **Missed**, **Made**, or **Received**.

If the number or caller is listed in your Contacts, the associated name is displayed.

Viewing All Calls

1. From the **Call History** menu, touch the drop-down and select the **All** option. All calls made, received, and missed are listed.
2. Touch an entry from the list to view the following options:
 - **Call**: allows you to return the call automatically.
 - **Send Message**: allows you to send a text or Multimedia message to the caller.
 - **Save**: allows you to save the number to your Contacts on either the phone or SIM card.
 - **Block Caller**: allows you to add the sending number to your Reject List, where incoming calls are sent directly to voice mail.
 - **Delete**: allows you to delete the selected call.

Viewing Missed Calls

1. The number of calls you have missed is displayed on the Idle screen in the **Missed Calls** dialog.

Note: If there is a voicemail sent by the same number, associated icons are displayed and can then be selected.

2. To move to another call type, touch the call drop-down list (upper right of Calls page) and make your selection.

Viewing the Details of a Missed Call

To view the details of a selected missed call, use the following steps:

1. Touch the desired missed call. Information for that caller is then displayed within a Missed Calls page. For more information regarding the available options, see *“Viewing All Calls”* on page 31.

Calling Back a Missed Call

To call back a missed call number:

1. Touch **Call** (if there was only a single missed call) or touch **Logs**. A list of the most recently missed calls is displayed.
2. Touch the desired missed call.
3. Touch either **Call** or press .

Saving a Missed Call to your Contacts

To save a missed call number:

1. Touch the desired missed call.

Note: You may see different choices depending upon the settings for your "Save New Contacts to" option.

2. Touch **Save** → **New**.

For further details about the **Contacts** feature, see *"Adding a New Contact"* on page 45.

Sending a Message to a Missed Call

To send a message to a missed call number:

1. Touch the desired missed call.
2. Touch **Send Message**.
3. At the "Create" screen, touch the empty text field and use the onscreen alphanumeric keys to type in a message.
4. When you are done with your message, touch **OK**.
5. To add additional recipients, touch the yellow recipients field. Insert new recipients by:
 - Pressing the yellow field and then entering the number manually.
 - Selecting from **Recent Contacts** to choose your recipient.
 - Select an entry from your **Contacts** list.
 - Selecting members of a **Group**.

6. Touch **Send** to initiate delivery.

Deleting a Missed Call

To delete a missed call number:

1. Touch the desired missed call.
2. Touch **Delete**.

Note: You can press  at any time to exit the **Missed Call** feature.

Call Time

1. Touch  → **Call History** → **Call Manager** → **Call Time**.
2. The following times are displayed:
 - **Last Call Duration:** shows the length of time for the last call.
 - **Total Dialed:** shows the total length of time for the calls made.
 - **Dialed Voice Calls:** shows the total length of time for all voice calls made.
 - **Dialed Data Calls:** shows the total length of time for all data calls made.
 - **Total Received:** shows the total length of time for the calls received.
 - **Received Voice Calls:** shows the total length of time for all voice calls received.

- **Received Data Calls:** shows the total length of time for all data calls received.
 - **Total Call Duration:** shows the total length of time for all calls made and received.
3. Reset these fields by touching **Reset All**.
 4. Touch **Yes** to confirm the reset or **No** to cancel the operation.
 5. Enter the user-defined password and touch **OK** to reset all counters. For more information, refer to *“Change Phone Password”* on page 114.
 - Press  or  to cancel this operation.

Data Counter

Data Counter refers to the amount of data (volume) to and from the phone.

1. Touch  → **Call History** → **Call Manager** → **Data Counter**.
2. The following data items are displayed:
 - **Last Sent:** shows the size of the last data packet (measured in KB - kilobytes) sent by the phone since the last time this counter was reset.
 - **Last Received:** shows the size of the last data packet (measured in KB - kilobytes) received by the phone since the last time this counter was reset.

- **Total Sent:** shows the size of the total data packet (measured in KB - kilobytes) which have been sent by the phone since the last time this counter was reset.
 - **Total Received:** shows the size of the total data packet (measured in KB - kilobytes) which have been received by the phone since the last time this counter was reset.
3. To set these counters back to zero, touch **Reset**.
 - Place a checkmark adjacent to those individual fields you would like reset.
 - Touch **All** to place a checkmark adjacent to all fields.
 4. Enter the password and touch **OK** to reset all counters. For more information, refer to *“Change Phone Password”* on page 114.
 5. Press  or  to cancel this operation.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the earpiece volume, use the **Volume** keys on the left side of the phone.

- ▶ Press the **Up** volume key to increase the volume level and press the **Down** volume key to decrease the volume level.

In Idle mode, you can also adjust the ringer volume using these same keys.

In-Call Options

During an active call there are several functions available by touching a corresponding onscreen button.

- **Speaker On/Off** routes the phone's audio through either the speaker or through the earpiece.
 - Slide **Speaker** to **On** to route the audio through the speaker. (You can adjust the speaker volume using the volume keys.)
 - Slide **Speaker** to **Off** to use the phone's earpiece.
- **Mute/Unmute** turn the onboard microphone either on or off.
 - Touch **Mute** during a call to mute the microphone.
 - Touch **Unmute** to unmute the microphone.
- **Dial** to display the onscreen keypad, where you can choose to Save the entered number to Contacts, Send a new text message, or initiate a new call.
- **Hold** to place the current active call on hold.
- **More** to access additional in-call options such as:
 - **Contacts** to display your current Contact entries.
 - **Save to Contacts** to store the current phone number into your Contacts.
 - **Send Message** to send a new text message.
 - **Memo** to write a memo concerning this call.

Placing a Call on Hold

You can place the current call on hold at any point during a conversation. You can also make another call while you have a call in progress if your network supports this service.

1. While on a call, touch **Hold**. This action places the current caller on hold (which is displayed onscreen as a greyed-out box).
2. You can later reactivate this call by touching **Resume**.

To make a new call while you have a call in progress:

1. Touch .
2. Touch  → **Contacts** to look up a number in the Contacts.

- or -

Touch  → enter the new number → .

3. Press  to dial the second number.

Once connected, each call is displayed within either an **In call** or **On hold** tab.

Note: The caller currently on hold appears within the **On Hold** tab.

Switching Between Calls

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

1. Touch **Swap**.
 - The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person.
2. Press  to end the currently active call.

To end a specific call:

1. Press the associated tab (**In call** or **On hold**).
2. Touch  to end the specific call.
3. Press the  key to end the remaining call.

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

1. Dial the number and press .
2. Once the call is answered, slide **Speaker** to **On** to activate the speakerphone.
3. Use the **Volume** keys (located on the left side of your phone) to adjust the volume.

4. To deactivate the speakerphone, slide **Speaker** to **Off**.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To switch the microphone off temporarily during a call:

1. Touch **Mute**. The option is then replaced with **Unmute**.
2. Touch **Unmute** to deactivate the Mute function and reactivate the microphone.

Searching for a Number in Contacts

1. During the active call, touch **More** → **Contacts**.
2. Touch the **Contacts** entry.

For further details about the **Contacts** feature, see *"Understanding Your Contacts"* on page 45.

Call Waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you have set the **Settings** → **Calls** → **Voice Call** →

Call Waiting Menu to Activated. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press  to answer the next incoming call. The first call is automatically put on hold.
2. To switch between the two calls, touch **Swap**.
 - **Swap:** Places the current call on hold and then activates the previous call.

To end a call on hold

1. Touch the On hold tab and touch  adjacent to the caller you wish to disconnect.
2. Press  to end the current active call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The **Join** option combines all of the calls you have established with your phone (both active and on hold).
Swap places the current call on hold and then activates the previous call.

This feature joins all of the calls you have established with your phone (both active and on hold) into a multi-party call.

1. Press  to answer the first incoming call.
2. Press  or **Accept** to answer the next incoming call. The first call is automatically put on hold.
3. Join the first two callers by pressing touching **Join**.
 - **Join:** combines your current set of callers into a single multi-party call (both active and on hold).
4. Press  to end the call.

Section 6: Entering Text

This section outlines how to select the desired text entry mode when entering characters using the QWERTY keyboard-style keypad. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes needed to enter text.

The a885 comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text. If the phone is sideways, an onscreen keyboard is displayed. When upright, only the alphanumeric keypad is shown.

The a885 not only provides several onscreen keypad/keypad text entry options, but also provides handwriting recognition to make the task of text entry that much easier.

Using the QWERTY Keyboard

From a screen where you can enter text, rotate your phone counterclockwise to a Landscape orientation. Regardless of the current setting with the **Input Select** field (page 41), the onscreen QWERTY keyboard will display.



Changing the Text Input Mode - Keyboard

There are three main keyboard layout keys that will change the onscreen keys within the QWERTY keyboard.

The available Text Input modes are: **T9**, **123Sym**, and **Abc**. Refer to the Text Input mode in the upper right hand corner to identify which mode you are currently in.

T9

T9: activates the T9 mode in either **abc** (all lower case) or **T9[ab]** (where the keys default to lowercase until the Shift key is touched [activated]). This is achieved by repeatedly pressing the button to toggle the current state.

123Sym

Symbol-Numeric: activates the number and symbol keys.

Emo

Emoticons: activates the emoticon keys.

Abc


Abc: activates the default alphabet keys. This function works in conjunction with the T9 feature.

1. Touch an onscreen Text Input mode button.

2. Touch a corresponding key to enter the associated character within the text field.
3. Touch either  or  to cycle through additional keys. This is only available within **123Sym** and **Emo** options.
4. Touch **OK** to complete the message and return to the previous screen.

Using T9 Mode

1. Rotate your phone counterclockwise to a Landscape orientation.

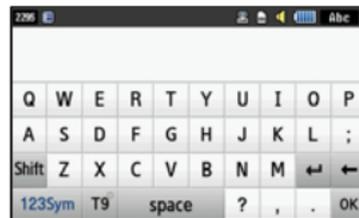

Note: The T9 option is available only when Abc mode has been selected.

2. Touch the Text Input Mode button at the bottom of the screen and touch **T9**.

3. Touch each key only once for each letter. A list of word options displays and includes a number indicating the words available to chose from.




4. Use the up and down navigation keys in the word options box to select the desired word.
5. Touch **OK** to complete the message and return to the previous screen.

Using 123Sym Mode

1. Rotate your phone counterclockwise to a Landscape orientation.


2. Touch the Text Input Mode button at the bottom of the screen and touch **123Sym**.

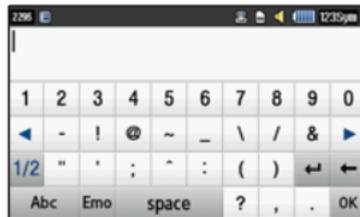

3. Touch either  or  to cycle through additional keys.
4. Touch **OK** to complete the message and return to the previous screen.


Using Emo Mode

1. Rotate your phone counterclockwise to a Landscape orientation.

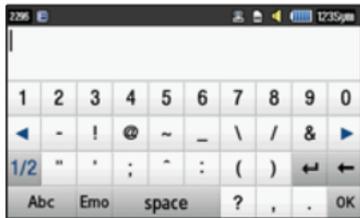

Note: The Emo option is available only when **123Sym** mode has been selected.

2. Touch the Text Input Mode button at the bottom of the screen and touch **Emo**.

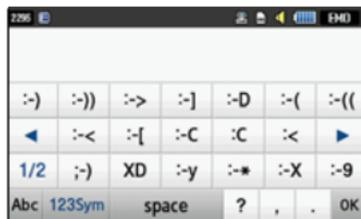


3. Touch either  or  to cycle through additional keys.
4. Touch **OK** to complete the message and return to the previous screen.

Using Abc Mode

1. Rotate your phone counterclockwise to a Landscape orientation.

2. Touch the Text Input Mode button at the bottom of the screen and touch **Abc**.

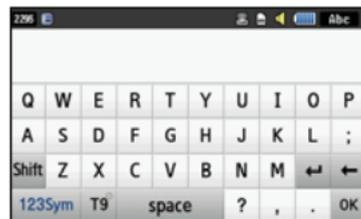

3. Touch the desired alphabetic characters. Touch **Shift** to input an uppercase letter. The keyboard automatically reverts to lowercase after the first letter in a sentence is typed unless you select **Shift** for each of the following letters.
4. Touch **OK** to complete the message and return to the previous screen.

Using Numeric in Portrait Mode

The Numeric mode enables you to enter numbers into a text message.

- ▶ Touch the Text Input Mode button at the bottom of the screen and select **Numeric** () , then touch the keys corresponding to the digits you want to enter.

Using Symbols in Portrait Mode

Symbol mode enables you to insert symbols and punctuation marks into text.

1. Touch the Text Input Mode button at the bottom of the screen and select **Symbols** (), then touch the desired symbol key.
2. To display more symbols, touch the left or right arrow key.
3. To clear the symbol(s), touch .
4. Select the other letters in the same way.
 - To enter a period, @, comma, hyphen, question mark, exclamation point, apostrophe, colon, slash, or the number 1, touch . ABC mode applies grammar rules to ensure correct punctuation.

You can move the cursor by touching **Space**. To delete letters, touch . Touch and hold  key to clear the display.

Tip: The cursor moves to the right when you touch a different key. When entering the same letter twice or a different letter on the same key, wait for a few seconds for the cursor to automatically move to the right, and then select the next letter.

Using the Handwriting Feature

1. From a screen where you can enter text, touch the **Input Select** field (shown below) to change the screen to


Handwriting mode.

2. From the drop-down list touch **Handwriting** to activate the handwriting recognition on the phone.



3. Use your finger tip to print each character. Touch the **Shift** key to use uppercase letters. Touch the **Space** key to create a space between letters, numbers, or symbols.

Note: To properly recognize the printed characters and to prevent scratching of the LCD, do not use cursive writing.

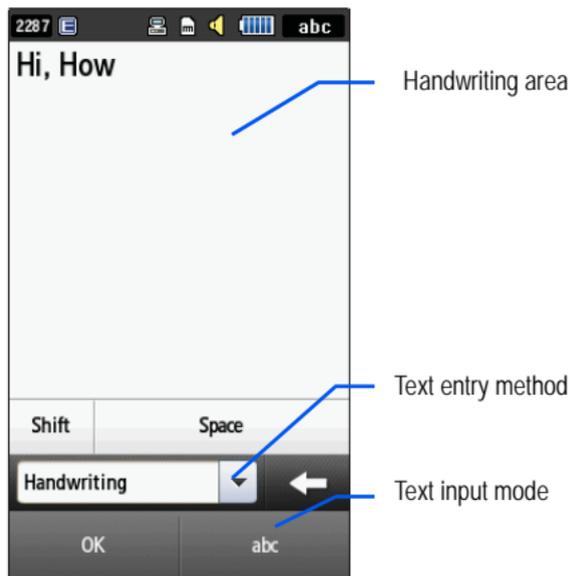

Changing the Text Input Mode - Handwriting

You can write your message using the Handwriting mode but if at any time you feel you can't remember how to input text, you can touch the **Input Select** field and select Keypad.

The available Text Input modes are: **abc**, **Abc**, **ABC**, **Numeric**, and **Symbols**. Each option causes the Handwriting mode to behave differently.

- ABC** **All uppercase:** causes the phone to read everything being written as uppercase characters. Ex: **HI THERE**.
- Abc** **Initial uppercase:** causes the phone to read words as having the initial character in uppercase and all consecutive characters of the same word as lowercase. Ex: **Hi there**.
- abc** **All lowercase:** causes the phone to read everything being written as uppercase characters. Ex: **hi there**.
- 123** **Numeric:** causes the phone to try and interpret all inputs as numbers. Ex: The letter **l** would be displayed as the number **1**. The word **HI** would appear as **551**.
- SYM** **Symbols:** causes the phone to try and interpret all inputs as symbols. Ex: The letter **H** would be displayed as **+)** . The word **Hi** would appear as **+)0**.

The following buttons can also be used in Handwriting mode:



Shift key: Touch this key before printing a letter to make it uppercase.



Space key: Touch this key before printing a letter to insert a space.

Handwriting Mode-Entering Characters

1. Touch the Text Input Mode button at the bottom of the screen and select **Abc**. The input mode indicator then changes to which activates the Initial uppercase function.
2. Write the desired text using your finger.
 - To change the case of the alphabetic characters touch the Text Input Mode button and select **ABC** or **abc**.
 - If you make a mistake, touch to erase a single character.
 - Touch and hold to erase an entire word or line.

As an example, to write "Hi there." you would:

- Touch the **Text Input Mode** button and select **Abc**. is then shown onscreen.

- Write **HI** or **Hi** (in either case the **Abc** mode causes the initial character to be uppercase while the rest are forced into lowercase.)
- Draw a line () across the screen to insert a space. Since there is no letter that matches this icon, the a885 inserts an empty space.
 - You could also touch the Input Select field and choose Keypad to then touch and insert an empty space. After which return to the Handwriting mode.
- Touch the **Text Input Mode** button and select **abc**. is then shown onscreen.
- Write **THERE** or **there** (in either case the **abc** mode causes characters to display as lowercase.)
- Touch the screen to insert a period.

Note: Draw a diagonal slash across the screen (/) to enter a paragraph return.

Handwriting Mode-Entering Numbers

1. Touch the Text Input Mode button at the bottom of the screen and select **Numeric**. The input mode indicator then changes to which activates the number function. No alphabetic characters are recognized.
2. Write the desired numbers using your finger.
 - If you make a mistake, touch to erase a single character.

- Touch and hold  to erase an entire word or line.

As an example, to write "123 Anywhere" you would:

- Touch the **Text Input Mode** button and select **Numeric**.  is then shown onscreen.
- Write 123.
- Touch the **Text Input Mode** button and select **Abc**.  is then shown onscreen.
- Write **ANYWHERE** or **Anywhere** (in either case the **Abc** mode causes the initial character to be uppercase while the rest are forced into lowercase.)
- Draw a line () across the screen to insert a space. Since there is no letter that matches this icon, the a885 inserts an empty space.
- You could also touch the Input Select field and choose **Keypad** to then touch  and insert an empty space. After which return to the Handwriting mode.

Handwriting Mode-Entering Symbols

1. Touch the **Text Input Mode** button at the bottom of the screen and select **Symbols**. The input mode indicator then changes to  which activates the symbols function. No alphabetic or numeric characters are recognized.
2. Write the desired numbers using your finger.
 - If you make a mistake, touch  to erase a single character.

- Touch and hold  to erase an entire word or line.

As an example, to write "pat@att.net" you would:

- Touch the **Text Input Mode** button and select **abc**.  is then shown onscreen.
- Write **PAT** or **pat** (in either case the **abc** mode causes all characters to be lowercase.)
- Touch the **Text Input Mode** button and select **Symbols**.  is then shown onscreen.
- Draw @ or touch the Input Select field, choose **Keypad** to then choose from several pages of available symbols.
- Touch the **Text Input Mode** button and select **abc**.  is then shown onscreen.
- Write **ATT** or **att** (in either case the **abc** mode causes all characters to be lowercase.)
- Touch the screen to insert a period.
- Write **NET** or **net** (in either case the **abc** mode causes all characters to be lowercase.)
- Touch the Input Select field and choose **Keypad** to then touch  to insert an empty space. After which return to the Handwriting mode.
- Select  from the Symbols page to insert a new paragraph.

Section 7: Understanding Your Contacts

This section allows you to manage your daily contacts by storing their name and number in your Contacts. Contacts entries can be sorted by name, entry, or group.

Note: When storing a Contacts entry into your SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). Although you may add additional fields to a SIM entry; if you move that same SIM card to another model phone, it is possible that only the basic information will be transferred.

Contacts Settings

1. Touch  → **Contacts** → **Contacts Settings**.
2. Touch any of the following options to activate a function:
 - **My Business Card:** creates and attaches a virtual business card as an attachment to outgoing messages. For more information, see *"Attaching Business Card to a Message"* on page 59.
 - **Speed Dial:** touch an unused number and then assign it to someone in your Contacts list. From the Dial screen, touch and hold the number to speed dial your contact. For more information, refer to *"Making a Call Using Speed Dial"* on page 29.
 - **Save New Contacts to:** defines the destination for new contact entries (Phone, SIM Card, or Always Ask).

- **View Contacts from:** to filter the display of current Contacts entries. Options include: All, Phone, or SIM Card.
- **Own Number:** to display your current phone number (page 51).
- **Fixed Dial Contacts:** assigns phone numbers as FDN entries (page 51).
- **Used Space:** displays the memory storage allocation (total available and remaining) within both your Phone, SIM card, and FDN list.

Adding a New Contact

Use the following procedure to store a new contact to your Contacts.

Saving a Number from the Idle screen

1. Touch  →  (**Create Contact**). This opens the **Add New Contact** screen.
2. Touch the image icon and assign a picture to the new entry by choosing one of three options:
 - **Remove** although not an option with a new entry, deletes any previously assigned image.
 - **Take Photo** to use the camera to take a new picture and assign it to this entry.

- **Caller Image** to retrieve a previously stored image from your Picture folder and assign it to this entry. Select an image and touch **Add** to assign the image and return to the previous **Add New Contact** screen.
3. Touch the **First Name**, **Last Name**, and **Display Name** fields and use the onscreen keyboard to enter names for the new entry, and touch **OK**. (For more information, refer to “*Entering Text*” on page 37.)
 - **First Name**: allows you enter a first name for this entry.
 - **Last Name**: allows you enter a Last name for this entry.
 - **Display Name**: allows you enter a display name for this entry which then appears when you receive a call from this contact.
 4. Touch the **Mobile** field and use the onscreen keypad to enter the phone number for the entry, and touch **OK**.
 5. Touch  to change the category type of the entry. Choose from among: **Mobile**, **Home**, **Work**, **Fax**, or **Others**.
 6. Use your fingertip to scroll down the screen and touch any of the remaining fields to update their information. Touch **OK**, if required, to save your updates. Available fields consist of:
 - **Email**: adds a contact email address for this entry.
 - **Group**: assigns this contact to a group. Touch a group type to complete the assignment. For more information, refer to “*Creating New Group*” on page 52.
 - **Ringtone**: assigns a ringtone for this contact information. Touch a music file to play a short sample and then touch **Add** to complete the assignment.
 - **Vibration**: assigns a vibration type for this contact information. Touch a setting (**Vibration 1 - 5**) to be provided with a sample. Touch **Save** to complete the assignment.
 - **Birthday**: assigns a calendar date for the contact's birthday. Touch **Save** to store the new date. For more information, refer to “*Scrolling Through Field Entries*” on page 21.
 - **Note**: allows you enter notes associated with this contact. For more information, refer to “*Entering Text*” on page 37.
 7. Touch **Save** to store the new entry into Contacts.

Note: By default, Contacts are saved on the phone. To copy them to a SIM card, see “*Copying an Entry to the SIM Card*” on page 54.

Adding More Fields to a Number

While in the process of creating a new entry or editing an existing contact, you can add additional fields to the entry's list of information.

1. Within the open Contact Screen, touch **Add More Fields** (**Add More Fields**).

2. Place a checkmark adjacent to an individual field by touching each entry.

– or –

Place a checkmark alongside all entries by touching **All**.
Additional fields include:

- **Mobile:** adds an additional Mobile number field for the entry.
- **Home:** adds an additional Home number field for the entry.
- **Work:** adds an additional Work number field for the entry.
- **Fax:** adds an additional Fax number field for the entry.
- **Others:** adds an Others field for the entry.
- **Email:** adds an additional contact Email address field for this entry.
- **URL:** adds a Web site's URL to the entry.
- **DTMF:** adds a DTMF tone string for use with this entry.
- **Group:** creates an additional group field for group assignment.
- **Message Tone:** adds a field used to assign a message tone that will sound when messages are received from this contact.
- **NickName:** adds a field that can be used to enter a nickname for the entry. The NickName is not displayed when calls are made to or received from the contact.
- **Company:** adds a Company field for this entry.
- **Job Title:** adds a Job Title field for this entry.

- **Address - Home:** adds a field used to assign a physical home address for this entry.
- **Address - Work:** adds a field used to assign a physical work address for this entry.

3. Touch **Done** to store the new fields to the entry and return to the previous screen.

– or –

To add even more fields, touch **Add More Fields** and repeat the previous step.

Deleting Fields From a Number

1. Within the open Contact Screen, touch **Delete Fields** (**Delete Fields**).

Note: Only certain new fields may be deleted. If you have not added any new fields to the contact, the **Delete Fields** button will not appear.

2. Touch each field you wish to delete and a checkmark will appear.
3. Touch **Delete**.
4. Once you have made your deletions, touch **Save** to store the contact and its fields.

Saving a Number During a Call

1. Touch  and use the onscreen keypad to enter your number.
2. Press  or touch  to initiate the call.
3. Touch  → **Save to Contacts** → **New**.
 - Select **Update** if this was a previously created entry and you are adding the current number to the previous entry.
4. Enter the desired information, see “Saving a Number from the Idle screen” on page 45.

Saving a Number After a Call Has Ended

1. Press  to bring up the call history screen.
– or –
Touch  → **Call History**.
2. Touch a phone number from the list to reveal the **Details** page for the phone entry.
3. Touch  → **New**.
 - Select **Update** if this was a previously created entry and you are adding the current number to the previous entry.
4. Enter the desired information, see “Saving a Number from the Idle screen” on page 45.

Adding Pauses to Contact Numbers

When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

To add a pause to a Contact:

1. Touch , and then touch the image icon or name to open the Contact.
2. Touch  and then select the desired phone number.
3. Touch the **Phone Number** field and then touch the screen at the place where the additional numbers need to be added.
4. Press and hold  to add a two-second pause, and use the keypad to enter the additional numbers.

Note: If more than a two-second pause is required, press and hold  as many times as needed to add additional two-second pauses.



5. Touch **OK**.
6. Touch **Save** to store your changes.

Using Contacts

Dialing a Number from Contacts

Once you have stored phone numbers in Contacts, you can dial them easily and quickly by either using their SIM card location number or by using the Search field to locate the entry.

Finding a Contacts Entry


You can store phone numbers and their corresponding names onto your SIM card and phone's onboard memory. The two

locations are physically separate but are used as a single entity, called Contacts.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store and how they are stored may differ.

1. In Idle mode, touch **Menu** → **Contacts** → **Contacts**.
2. Touch the **Contacts Filter** field (upper-right) and select Contacts. Additional entry categories include Groups and Favorites.

3. Within the Contacts list (sorted alphabetically), drag the **Power Search** tab to quickly “thumb through” the alphabetical listing by first name.

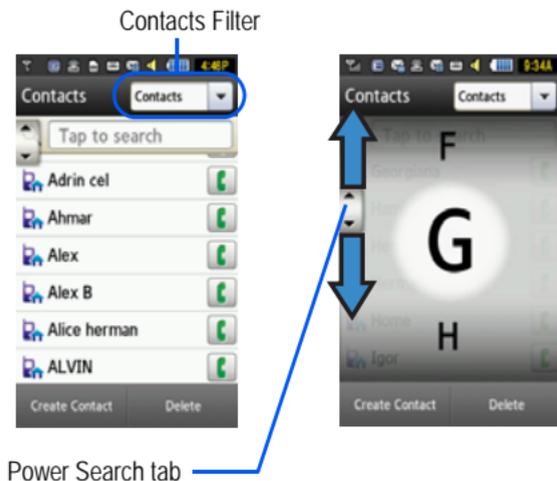


4. When found, touch  adjacent to the entry to make the call.

Contacts Entry Options

While in the details page for a specific entry (seen below) you have two sets of options, each accessible from two of the onscreen buttons.

1. Touch  and touch a Contacts name from the list to reveal the **Entry Options** page (shown below) for the phone entry.

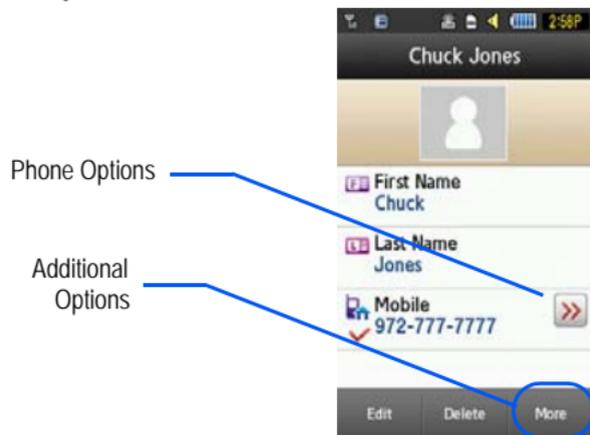

2. Touch  to reveal the first set of options:
 - **Call**: allows you to call a currently selected entry.

- **Send Message:** allows you to send a text message or a multimedia message to the selected entry.
3. Press  to return to the previous Entry Options page.
 4. Touch  to alter the properties of the current entry such as: name, type, group, or location. Touch  to store your changes.
 5. Touch  to delete the current contact entry from a target location such as the Phone and/or SIM card.
 6. Touch  to reveal the second set of entry options:
 - **Mark as Default:** allows you to set the default number if a contact has two or more numbers.
 - **Print via Bluetooth:** allows you to send the selected contact entry information to a Bluetooth compatible printer.
 - **Send Business Card via:** allows you to send a message to the selected entry which contains the information from a Contacts Business Card entry that you have on file. This can be sent as a Message or via Exchange ActiveSync or Bluetooth.
 - **Add to Favorites:** allows you to add the current contact entry to your favorite list of callers (Favorites list).

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

- ▶ In Idle mode, touch  → **Contacts** → **Contacts Settings** →

Own Number → <voice line #>.

FDN Mode

FDN (Fixed Dialing Number) mode, if supported by your SIM card, restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

Note: FDN Mode must be set to **On** in the **Menu** → **Settings** → **Phone** → **Security** → **Fixed Dialing Mode** option before you can add, change, or delete contacts on the FDN List.

Changing the FDN mode Status

1. In Idle mode, touch  → **Settings** → **Phone** → **Security**.
2. Scroll down to the **Fixed Dialing Mode** field and touch **On** (to enable fixed dialing) or **Off** to disable the option.

Important! With Fixed Dial Mode enabled, you will NOT be able to dial any number other than those created Fixed Dial Numbers.

Creating New FDN Numbers

With the Fixed Dial mode **On**, follow these procedures:

1. In Idle mode, touch  → **Contacts** → **Fixed Dial Contacts** → **Create FDN**.

Note: If FDN is Off: touch Menu -> Contacts -> Contacts Settings -> Fixed Dial Contacts -> Create FDN. Then follow steps 2-7.

2. Enter your PIN2 password and touch . This number is provided to you by your service provider.
3. Touch **Name** and use the onscreen alphanumeric keypad to enter a name for this FDN contact. Touch .
4. Touch **Phone Number** and use the onscreen numeric keypad to enter a contact phone number for this FDN contact. Touch .
5. Touch the SIM card location field to then use the onscreen numeric keypad to enter a location value for the entry on the SIM card. Touch .
6. Touch  to store the new FDN entry.
7. Press  to return to Idle mode.

Group Settings

Creating New Group

1. In Idle mode, touch  → **Contacts** → **Groups** → **Create Group**.
2. Touch the **Group Name** field and use the onscreen keypad/keyboard to enter a new group name. For more information, refer to *“Entering Text”* on page 37.
 - Touch  to store the new group name.
3. Touch the **Group Picture** field and choose a location for the new image:
 - **Reset**: although not an option with a new group, deletes any previously assigned image.
 - **Take Photo**: to use the camera to take a new picture and assign it to this entry.
 - **Group Picture**: to retrieve a previously stored image from your Picture folder and assign it to this group entry.
4. Touch **Group Ringtone** to choose an audio file for assignment to this new group.
 - Touch a music file to play a short sample and then touch **Add** to complete the assignment.
5. Touch **Group Vibration** to choose a vibration type for assignment to this new group. Choose from five vibration options (**Vibration 1-5**).
 - Touch a vibration option to activate a short sample and then touch **Save** to complete the assignment.
6. Touch  to store the new Group category.

Adding an Entry to a Group

1. In Idle mode, touch  → **Contacts** → **Groups**.
2. Touch a group entry.
3. Touch **Add Member** and place a checkmark alongside those entries you wish to add to the current Group.
4. Touch **Add**.

Removing an Entry From a Group

1. In Idle mode, touch  → **Contacts** → **Groups**.
2. Touch a group entry.
3. Touch **Remove Member** and place a checkmark alongside those entries you wish to remove from the current Group.
4. Touch **Remove**.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. In Idle mode, touch  → **Contacts** → **Groups**.
2. Touch a current group entry.
3. Touch  → **Edit Group**.

4. Make modifications to the **Group Name**, **Group Picture**, **Group Ringtone**, or **Group Vibration** fields. For more information, refer to *“Creating New Group”* on page 52.
5. Touch  to store your changes.

Contacts Favorites

Once you have stored phone numbers in Contacts, you can add them to your Favorites list.

Adding Favorites to your Contacts

1. In Idle mode, touch  → **Contacts** → **Favorites**.
2. Touch .
3. Select the Contacts you want to add to your Favorites.
4. Touch .

Removing Favorites from your Contacts

1. In Idle mode, touch  → **Contacts** → **Favorites**.
2. Touch .
3. Select the Contacts you want to remove from your Favorites.
4. Touch .

Changing the Order of your Favorites

1. In Idle mode, touch  → **Contacts** → **Favorites**.
2. Touch .
3. Drag the entry to the desired location in your Favorites.
4. Touch .

Managing Contacts

You can copy, delete, and view the memory status for the Phone and SIM entries on your phone.

Copying an Entry to the SIM Card

Note: When storing a Contacts entry into the SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). To save additional information for a particular contact, such as other phone numbers, or e-mail, it is important to add new fields to that Contact information. It is also important to note that if you move the SIM card to another phone that does not support additional fields on the SIM card, this additional information may not be available.

1. In Idle mode, touch  → **Contacts** → **SIM Management** → **Copy Contacts to SIM**. The phone then displays a list of your current contacts.
2. Place a checkmark adjacent to those entries you wish to have copied to the SIM card.

- Repeat this step for all individual entries you wish copied to the SIM or touch **All** to place a checkmark alongside all entries.
3. Touch **Copy**. The selected numbers are copied to the SIM card.
 4. Press  to return to Idle mode.

Copying an Entry to the Phone

1. In Idle mode, touch  → **Contacts** → **SIM Management** → **Copy Contacts from SIM**. The phone then displays a list of your current contacts held on the SIM card.
 - If the entry's associated Group graphic has a SIM location icon on it, then the entry exists on the SIM card. This is the type you can duplicate.
 - If the entry's associated Group image does not have a SIM location icon, then this entry currently exists on the phone.
2. Place a checkmark adjacent to those entries you wish to have copied from the SIM card to the Phone.
 - Repeat this step for all individual entries you wish copied to the Phone or touch **All** to place a checkmark alongside all entries.
3. Touch **Copy**.
4. When you are finished, press  to return to Idle mode.

Deleting All of the Contacts

You can delete all Phone or SIM entries from your phone's memory.

Deleting all entries from the Phone

1. In Idle mode, touch  → **Contacts** → **Contacts** → **Delete**.
2. Touch the **All** field to place checkmarks alongside all the current entries.
3. Touch **Delete**. A pop-up Delete? message appears. Touch **Yes** or **No**.
4. When you are finished, press  to return to Idle mode.

Deleting all entries from the SIM

1. In Idle mode, touch  → **Contacts** → **SIM Management** → **Delete Contacts from SIM**.
Touch the **All** field to place checkmarks alongside all the current entries.
2. Touch **Delete**.
3. When you are finished, press  to return to Idle mode.

Note: Entries in the FDN Contacts must be deleted from within the FDN Contacts.

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers may include emergency numbers, customer service numbers, and directory inquiries.

1. In Idle mode, touch  → **Contacts** → **Service Number**.
2. Scroll through the available numbers.
3. To dial the number displayed, press .

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Checking Contacts Used Space

You can check how many names and numbers are stored in Contacts, in both SIM card and the phone memory. You can also see the capacity of both memories.

1. In Idle mode, touch  → **Contacts** → **Contacts Settings** → **Used Space**.
 - **Phone:** tells you how many entries (out of a possible 2000) are in use.
 - **USIM:** tells you how many entries are in use on your SIM card.
 - **Additional No. 1:** if you have added additional numbers to contacts saved on the SIM card, this is a counter of the number of SIM contacts with a second number saved on your SIM card.

- **Additional No. 2:** if you have added additional numbers to contacts saved on the SIM card, this is a counter of the number of SIM contacts with a third number saved on your SIM card.
- **Email:** tells you how many entries are in use.
- **FDN:** tells you how many entries are in use on your FDN SIM memory.

Note: Depending on the SIM card, the number of entries may differ.

2. Once finished, press  to return to Idle mode.

Section 8: Messaging

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture and Video) Messages

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you must subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture messages and video messages) to and from other mobile phones or email addresses. To use this feature, you must subscribe to your service provider's multimedia message service.

Important!: When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to *"Icons"* on page 16.

Creating and Sending Messages

1. Touch  → **Messaging** → **Create Message**.
– or –
Touch **Message** from the bottom of the Main menu.
2. Select a recipient by selecting an entry method by touching **Tap to Add Recipient** and then selecting an associated option:
 - **FDN Contacts:** to select a recipient from your FDN Contacts list (if FDN mode has been turned on).
 - **Enter Manually:** to manually enter a destination using a valid cellular phone number or email address.
 - **Contacts:** to select a recipient from your Contacts list (valid entries must have a wireless phone number or email address).
 - **Recent Contacts:** to select a recipient from a list of recently sent messages.
 - **Group:** to select a recipient from the Group list.

Note: If the number of recipients are less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.

Note: Enter additional recipients by separating each entry with a semicolon (;) then using the previous procedure.

3. Touch the empty onscreen text field and use the onscreen keyboard to enter a message. Rotate the phone counterclockwise on its side to reveal the keyboard. For more information, refer to “*Entering Text*” on page 37.
4. Touch **OK** to save your text and return to the message screen.
5. Add more recipients by touching the recipient field.
6. Review your message and touch **Send**.

Additional Message Options

1. Touch **Insert** to reveal additional insert options.
 - **Picture:** allows you to choose an existing image from the Pictures list, then add it to your message by touching **Add**.
 - **Video:** allows you to choose an existing video from the Videos list, touch , then select **Add**.

- **Audio:** allows you to choose an existing audio file from the Audio list, then add it to your message by touching **Add**.
 - **Templates:** allows you to insert one of the preset message templates to the text (for example, “Where is the meeting?”).
 - **Take Picture:** allows you to temporarily exit the message, take a photo with phone’s camera, and then add it to your message by touching **OK**.
 - **Record Video:** allows you to temporarily exit the message, record a video clip using the phone’s camera, and then add it to your message by touching **OK**.
 - **Record Audio:** allows you to temporarily exit the message, record an audio clip using the phone’s microphone, and then add it to your message by touching **Add**.
 - **Favorite URL:** allows you to temporarily exit the message, access your Favorites list then select those URLs you would like to add to the current message by touching **Add**.
 - **Contact Info:** allows you to choose an existing Contacts entry, then add it to your message by touching **Insert**.
2. Touch **More** to reveal additional options (multimedia messages only):
 - **Save as Template:** allows you to save the message as a template so you can use it again later.
 - **Preview:** allows you to preview your current message before delivery (multimedia messages only).

- **Slide Options:** allows you to add more images to the current message but then have those configured to display as a slideshow on the recipients phone. Options include: Add Slide, Delete Slide, or Edit Style (multimedia messages only).
- **Attach Files:** allows you to add either a file, card, or other information such as a calendar entry, task, or note.
 - **File:** allows you to insert an audio, graphic, or video clip to your message as an attached file.
 - **Business Card:** allows you to insert the contact information for an entry from Contacts directly to your message as an attached file.
 - **Event:** allows you to insert an Event entry from your calendar directly to your message as an attached file.
 - **Tasks:** allows you to insert an entry from your calendar tagged as a Task directly to your message as an attached file.
 - **Memo:** allows you to insert a Memo directly to your message as an attached file.
 - **Favorites:** allows you to insert an entry from your Wireless Web browser tagged as a Favorite directly to your message as an attached file.
- **View Attachment:** allows you to view attachment.
- **Add Subject/Remove Subject:** allows you to either add or delete a subject field to the new message (multimedia messages only).
- **Save to Drafts:** saves the current message to the Drafts folder.
- **Delivery Options:** allows you to configure the options associated with sending the message.

3. When you have finished composing your message, touch **Send** and confirm the recipient(s). For more information, refer to *“Creating and Sending Messages”* on page 57.
4. Touch  to deliver the message to the selected recipients.

Attaching Business Card to a Message

To attach your Business Card to an outgoing message, follow these steps:

1. Touch  → **Contacts** → **Contacts Settings** → **My Business Card**.
2. Create your Business Card by entering the information that you want (this must only be done once).
3. Touch **More** → **Send Business Card via**.
4. Touch **Message**, **Exchange ActiveSync**, or **Bluetooth**.

Viewing New Received Messages

1. In Idle mode, new messages are indicated by icons and a **New Messages** pop-up. For more information, refer to *“Understanding the Events Widget”* on page 27.
2. Touch the **View** button from the New Messages pop-up.

Note: If you accidentally exit from this notification screen, you will need to go to **Menu → Messaging → Inbox** to access your messages.

3. Touch a message you wish to view. The selected message appears in the display.

Tip: When viewing a text message, press the **Up** or **Down** volume keys to increase or decrease the font size of the message text. Six different font sizes are available.

4. To play a multimedia message, touch .
 - To pause playback of the multimedia message, touch .
 - To stop playback of the multimedia message, touch **Stop**.
5. To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the onscreen page.
6. When you have finished, press .

Note: Messages can also be accessed by navigating to your Inbox (**Menu → Messaging → Inbox**).

Using Message Options

Message options at the Inbox level differ according to the message type, what you have done with the message, and

whether you are viewing the message. Some of the main message category types include:

- **Inbox:** stores any incoming message (text or multimedia).
- **Sent:** stores a copy of the messages you sent.
- **Outbox:** contains messages until they are sent and then the message no longer displays in this box but instead displays in the Sent box.
- **Drafts:** stores unsent messages that you want to edit or send later.

▶ With the list of current message displayed onscreen, use any of the following menu options:

- **List by:** sort the current list based on one of the following criteria (criteria will be different depending on the type of message):
 - Sender, Read/Unread, Type, Subject, Size, or Lock/Unlock status.
- **Move to My Folder:** allows you to select messages to move to My Folder.
- **Delete:** deletes either a single or multiple set of messages. Touch an entry from the list to place a checkmark alongside the entry and mark it for deletion. Touch  to complete the process.

▶ With a message open for reading, use any of the following menu options:

- **Reply (to):** allows you to compose and send a reply to the message. This option reads Reply (when replying to an SMS [Text] message), and Reply to (when replying to an MMS [Multimedia] message).
- **Delete:** deletes the current message.

- **More:** provides these additional message functions:
 - **Forward:** allows you to forward the message.
 - **Move to My Folder:** moves the current message to My Folder.
 - **Save to Contacts:** allows you to save the recipient or sender's information from the message to Contacts as either a New or Updated entry. For more information, refer to *"Understanding Your Contacts"* on page 45.
 - **Save as Template:** allows you to save text as a template.
 - **Move to Phone/Move to SIM card:** If a message is stored in the SIM card, it is saved to the phone's memory. If a message is stored in the phone's memory, it is then saved to the SIM card.
 - **Print via Bluetooth:** allows you to print the contents of the message on a Bluetooth compatible printer.
 - **Activate/Reactivate:** allows
 - **Save Attachment:** allows you save any selected attachments. If the file is currently available, you are prompted to rename the filename. This option only appears for multimedia messages.
 - **Properties:** allows you to see properties of a message such as Date, From, To, Size, Priority, Delivery Report, and Read Report. This option only appears for multimedia messages.
 - **Lock/Unlock:** allows you to secure a selected message by protecting it from accidental alterations. This option only appears for multimedia messages.

Using Exchange ActiveSync

This section describes Using Microsoft® Exchange ActiveSync®, you can synchronize data on the server with the data on your phone. Synchronization compares the data on your phone with the server and updates both your phone and the server with the latest data.

Note: Access the Microsoft website (<http://www.microsoft.com/windowsmobile/downloads/activesync41.msp>) to download Active Sync 4.5 or later.

Exchange ActiveSync allows you to:

- Keep Contacts, Calendar, Tasks, or Inbox data up-to-date by synchronizing your phone with Microsoft® Outlook data on your desktop computer.
- Copy (rather than synchronize) files between your phone and desktop computer.
- Control the moment when synchronization occurs by selecting a synchronization mode.
- Select data types to be synchronized and control the amount of synchronized data.

Synchronization Information

To begin synchronization, connect your phone to your computer. The Microsoft® ActiveSync® window on your computer automatically appears and synchronization starts. Once the

synchronization is completed, the phone stays connected to the computer. If any change is made, Microsoft® ActiveSync® automatically will begin synchronization. To begin synchronization, touch Sync in Microsoft® ActiveSync® on your phone. You can open the phone's file directory by clicking Explore from the Microsoft® ActiveSync window. You can then copy files quickly and easily from the phone to the computer, or vice versa.

Note: To synchronize Bluetooth devices with a compatible computer, the computer must have the Bluetooth stack for Windows XP Service Pack 2.

Server Settings

Synchronization settings allow you to synchronize information automatically as items arrive only if your company is running Microsoft Exchange Server with Exchange ActiveSync®.

1. Touch  → Messaging.
2. Touch Exchange ActiveSync.
3. From the Server settings page, enter values for the following: Server URL, User name, Password, Domain, and User SSL.

Sync Schedule

You can schedule synchronization with the Microsoft® Exchange Server on two separate times. Use the peak time schedule to synchronize during working hours or other times when you experience higher mail volumes. Use the off-peak time schedule to synchronize during times when you experience lower mail volumes.

1. Touch  → Messaging.
2. Touch Exchange ActiveSync > Sync Settings > Sync schedule.
3. Touch Peak schedule or Off-peak schedule.
4. Select Manual, 5 minutes, 15 minutes, 15 minutes, 1 hour, 4 hours, 12 hours, or Push.

Deleting Messages

When your phone's memory is full, an error message displays notifying you that you cannot receive any new messages. Use the Delete option erase obsolete messages, freeing memory for new messages. You can delete the messages in each message folder(s) either individually or all at once. Another option is to delete messages from all categories at once.

Deleting Messages within a Folder

1. Touch  → Messaging.

2. Select a message folder (**Inbox**, **Sent**, **Outbox**, or **Drafts**). A list of messages in the folder appears in the display.
3. Touch **Delete** and touch an entry to mark it for selection with a checkmark.
4. Touch either an individual message or **Select All** to place a checkmark alongside all entries in the list.
5. Touch **Delete**.

Delete All Messages

1. Touch  → **Messaging** → **Delete by Folder**.
2. Touch either a single category (**Inbox**, **Sent**, **Outbox**, or **Drafts**) or touch **All** to place a checkmark alongside all entries.
3. Touch .
4. At the "**Locked Messages**" pop-up, touch **Yes** or **Cancel** to discontinue the process.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

- ▶ Touch  → **Settings** → **Applications Settings** → **Messaging**.

Configuring Auto Delete Inbox Settings

When you select the Auto Delete Inbox option, inbox messages will be deleted automatically without a warning message.

1. From **Messaging Settings** page, touch **Auto Delete Inbox**.
2. Touch one of the available setting fields:
 - **Off**: Messages will not be deleted automatically.
 - **1 Week Old**: Read messages more than one week old will be deleted automatically.
 - **2 Weeks Old**: Read messages more than two weeks old will be deleted automatically.
 - **The Oldest when Full**: The oldest message will be deleted automatically when the Inbox is full.
3. Touch  to store the selected option.

Configuring Text Message Settings

1. From **Messaging Settings** page, touch **Text Message** → **Delivery Options**.
 - **Character Support**: Sets the type of characters used in the message.
 - **Reply Path**: Specify the phone number to which a reply to the text message will be sent.
 - **Get Delivery Report**: Requests a confirmation that the text message has been delivered.

- **Keep a Copy:** Saves a copy of the outgoing text message.
2. For example, touch **Keep a Copy** and touch  to store a local copy of all outgoing text messages.

Configuring the Text Message Center

1. From Messaging Settings page, touch **Text Message** → **Text Message Center**. These settings allow you to set the default method of text message transmission used by the Text Message Center.
2. Touch one of the available setting fields and make the necessary updates.

Note: It is recommended that you do not alter these fields without assistance from your service provider.

3. Touch  to store your settings.

Configuring Multimedia Message Settings

1. From Messaging Settings page, touch **Multimedia Message**.
2. Touch an available field and make the necessary updates.
 - **Delivery Options:** to configure the parameters associated with the delivery of the multimedia message such as:
 - **Priority:** you can select the priority level of your messages.

- **Expiration:** select the length of time you wish the message you sent to remain on the Multimedia message server.
 - **Delivery Time:** you can set a time delay before the phone sends your messages.
 - **Message Size:** you can set the maximum allowed size (30/100/300/600 KB) for a multimedia message.
 - **Get Delivery Report:** when this option is enabled, the network informs you whether or not your message has been delivered.
 - **Get Read Report:** when this option is enabled, your phone requests a reply along with your message to the recipient.
 - **Keep a Copy:** you specify whether you want to keep a copy of the sent messages on your phone.
 - **Add My Business Card:** you send your content information along with your sent messages.
- **Receiving Options:** to configure the parameters associated received multimedia messages such as:
 - **Download Type:** allows you to set the message receipt options. Choose from Auto Download, Manual, or Reject.
 - **Send Delivery Report:** when this option is enabled, the phone allows the network report to the sender whether or not the message has been received.
 - **Send Read Report:** when this option is enabled, your phone sends a notification back to the recipient indicating that your message has been received.
 - **Reject Anonymous:** allows you to automatically reject messages with a category of anonymous.

- **Reject Advertisement:** allows you to automatically reject messages with a category of advertisement.
 - **MMS Profiles:** to configure your Network parameters (For more information, refer to *“Changing the WAP Profiles”* on page 90.)
 - **Auto Resize Image:** to configure the size limits of the images added to new picture messages. Images larger than your setting, will be resized to meet this value. Options include: No Resize, 100 KB, 300 KB, or 600 KB.
 - **Creation Mode:** provide you with editing and formatting tools. Choose from: Free, Warning, or Restricted.
 - **Default Style:** assigns the “look and feel” for the multimedia message screen with parameters such as: Background Color, Font Color (for text), Font Style, and Slide Duration (during playback).
3. Touch  to store each new settings.

Configuring Voice Mail Settings

There may be times when the voice mail access number might need to be changed. If this is necessary, please obtain the information from your service provider.

Note: It is recommended that you do not alter these fields without assistance from a customer service representative.

1. From Messaging Settings page, touch **Voice Mail**.

2. Touch the **Vicemail** field and use your onscreen keypad/keyboard to enter the new Name and Center Address (voicemail phone number).
 - **Name:** allows you to create a new descriptive name for this access number.
 - **Center Address:** allows you edit the existing number and create a new number for use when accessing the remote voicemail.
3. Touch  to store this new information.

Configuring Push Message Settings

A Push Message is a method for your service provider to deliver content (e.g. images, ringtones, software upgrades, information, etc.) to mobile phones that are WAP enabled. You cannot initiate or reply to WAP Push Messages. Examples may be firmware updates or emergency notifications.

1. From Messaging Settings page, touch **Push Message**.
2. From the **Receiving Options** field touch **On** (activate) or **Off** (deactivate) to toggle the state of this feature.

Templates

Besides entering text in your message by using the keypad keys, you can speed message composition by including copies of stored text into your message.

Text Templates

1. Touch  → Messaging → Templates → Text Templates.
2. Touch **Create**.
3. Touch the empty onscreen text field and use the onscreen keyboard to enter a message. You can rotate the phone to use the qwerty keyboard. For more information, refer to *“Entering Text”* on page 37.
4. Touch **Save** to store the text to the Text Template folder.

Multimedia Templates

1. Touch  → Messaging → Templates → Multimedia Templates.
2. Touch **Create**.
3. Touch the empty onscreen text field and use the onscreen keyboard to enter a message. You can rotate the phone to use the qwerty keyboard. For more information, refer to *“Entering Text”* on page 37.
4. Touch **OK**.
5. Touch **Insert** to place a picture, video, or audio file into the message.

6. Touch **Add** to include the selected picture, video, or audio into the template.
7. Touch **More** → **Save as Template**.

Used Space

You can check the amount of the memory being used and the memory remaining for Multimedia, Text, Push, and Configuration Messages. The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

1. Touch  → Messaging → Used Space.
2. Touch a particular folder for review or both size and contents within the selected folder.
3. When you have finished, press .

Section 9: My Files

The topics covered in this section include Audio, Picture, Games, Video, Tools, Other Files, and Used Space.

1. Touch  → My files.
2. Select from one of the following functions: **Audio**, **Picture**, **Games**, **Video**, **Tools**, **Other Files**, or **Used Space**.
3. Touch the filter drop down (upper-right of My files page) to filter the entries based on their current location (**All**, **Phone**, or **Memory Card**).

My Files Functions

This page provides you with several functions that can be activated from virtually any page within the My files directories. Most editing features are only applicable to those files/folders that are not locked, and therefore editable.

1. Touch  → My files.
2. Select from the following:
 - **Create Folder**: create a new My files folder on either the Phone or Memory Card.
 - **Manage**: allows you to move or copy an existing unlocked folder or file.

- **More**: provides you with the ability to Delete, Rename, Sort by, Send via Bluetooth, Bluetooth Visibility, and Lock/Unlock certain files or folders.

Creating a New Folder

1. Touch  → My files → Create Folder.
2. Use the onscreen alphanumeric keypad to create a new name for the folder and touch  once you are done.

Managing Files and Folders

1. Touch  → My files → Manage.
2. Select a migration option by touching either **Move** or **Copy**.
 - **Move**: takes an unlocked file/folder and moves it to a new location.
 - **Copy**: takes the selected file/folder and duplicates it in the new location.
3. Select an unlocked entry by touching it to then place a checkmark next to the entry.
 - Touch **All** to place a checkmark alongside all available/unlocked items.
4. Once complete, touch **Move/Copy**.

5. Touch **Phone** or **Memory Card** depending on where you want to copy or move the files to.
6. Select the folder to copy or move the files to. Touch **New folder** to create a new folder.
7. Touch **Paste here/Move here** to copy or move the files.

More Functionality

1. Touch  → **My files** → **More**.
2. Select an onscreen option:
 - **Delete**: erases selected files/folders.
 - **Rename**: renames the selected files/folders.
 - **Sort by**: sorts the current available files and folders using either: Date, Type, Name, or Size.
 - **Send via Bluetooth**: sends a selected file via Bluetooth to another compatible device.
 - **Bluetooth Visibility**: allows you to make specific files or folders visible to other Bluetooth devices.
 - **Lock**: locks available files and folders.

Audio Files

The **Audio** menu option allows you to shop tones and access previously stored (pre-recorded) audio files from your internal microSD card.

1. Touch  → **My files** → **Audio**.
2. Touch an onscreen option (**Tones** or **Recorded Audio**).

Tones

You can shop, download, and save to your Downloaded Ringtones folder.

1. Touch  → **My files** → **Audio** → **Tones**. A menu then displays to give you the option of either shopping for tones or selecting from files previously stored to your phone.
2. Touch **Shop Tones** → select a file to download, and follow the on-screen options. (These files are downloaded and stored in the **Tones** folder.)
 - or –Touch an available entry.
3. From the playback page, touch **Set as** and select from the following options:
 - **Call Ringtone**: allows you to assign the selected ringtone for use with general incoming calls when no other caller ringtone has been assigned.
 - **Caller Ringtone**: allows you to assign a ringtone to someone in your Contacts list (**Search Contact**) or **Create Contact**.
 - **Alarm Tone**: allows you to assign the tone to an alarm.

Recorded Audio

This menu shows a list of saved voice memos. When a voice memo is recorded and saved, it is stored in the Recorded Audio folder. To access this menu use the following steps:

1. Touch  → My files → Audio → Recorded Audio.
2. Touch a pre-recorded memo to begin playback.
3. To exit, press .

Creating a new audio recording

1. Touch  → Tools → Record Audio.
2. To start recording, touch .

For more information, refer to “Record Audio” on page 96.

Games

The **Games** menu option allows you to shop for games. You can download new games, then save them to the **Games** folder.

For more information, refer to “Games” on page 81.

Picture

The **Picture** menu option allows you to shop for and download new graphics then save them to your **Picture** folder. To access the Picture menu option, use the following steps:

- ▶ Touch  → My files → Picture.

From the Picture page you can access the following menu options (see “My Files Functions” on page 67.):

- **Create Folder:** create a new My files folder on either the Phone or Memory Card.
- **Manage:** allows you to move or copy an existing unlocked folder or file.
- **More:** provides you with the ability to Delete, Rename, Sort by, Send via Bluetooth, Bluetooth Visibility, and Lock/Unlock certain files or folders.

Shop Graphics

1. Touch  → My files → Picture → Shop Graphics.
2. Follow the onscreen options to purchase the new image.
The file is downloaded and stored in the **Picture** folder.

Image Features

Touch a graphic from the Picture page to display the image. From the image viewer page, you have access to both macro functions (Zoom, Edit, and Properties) and menu options.

- **Zoom:** allows you to magnify the current image.
- **Edit:** allows you to edit the current image by applying various image effects. For more information, refer to “Editing Images” on page 70.

Note: Editing is only available for unlocked images or non DRM images.

- **Information:** displays an onscreen listing of the image's properties such as: name, format, size, etc.
- **Send:** lets you send the currently active image via Message, via Bluetooth, or via Exchange ActiveSync.
- **Set as:** allows you to assign the current image as either your current Wallpaper, or as a display image used by a specific entry within Contacts.
- **More:** allows you to choose from the following image options:
 - **Delete:** allows you to delete the current graphic.
 - **Rename:** allows you to rename the current graphic.
 - **Slide Show:** allows you play a slideshow using the graphics currently available from within the Picture folder. Press  to stop the slideshow.
 - **Bluetooth Visibility:** allows you to make a selected graphic visible to other Bluetooth devices.
 - **Print via:** allows you to make a selected graphic printable by either USB or Bluetooth printer.
 - **Lock/Unlock:** allows you to lock/unlock the image to prevent it from being deleted or changed.
 - **Properties:** allows you to view the properties of a photo.

Editing Images

1. Touch  → My files → Picture → <image>.

2. Touch Edit () → Files → Open or Save as (to save a renamed copy of this image).

– or –

Touch Edit () → Edit and select from any of the following:

- **Effects:** allows you to choose from among several effects such as: **Filter, Style, Warp, or Partial Blur.**
- **Adjust:** allows you to adjust **Auto Level, Brightness, Contrast, and Color.**
- **Transform:** allows you to **Resize, Rotate, and Flip** the image.
- **Crop:** allows you to crop the image. Touch one corner of the image and, in a single motion, drag to another location to create the crop area, then touch **Crop.**
- **Insert:** allows you to add **Frames, Picture, Clip Arts, Emoticon, and Text** to the image.
- **Memo on Screen:** allows you to select a color, then **handwrite** a message onto the current image. Touch **Done** to store the new changes.

Tools

The Tools folder provides access to and allows you to use the Camera, Voice Recognition, Media Player, Record Audio files, set Alarms, use the Calendar features, create Memos, create Tasks, use the Calculator, use the Tip Calculator, use the Converter (for

currency, length, weight, volume, area, and temperature), view World Clock, set the Timer, and use the Stopwatch.

For more information, refer to *"Tools"* on page 95.

Video

This menu allows you shop for videos and to set up folders to save your videos.

1. Touch  → My files → Video → Shop Videos.
2. Follow the onscreen options to purchase the new video. The file is downloaded and stored in the **Video** folder.

Other Files

This feature provide additional storage of other miscellaneous file types that may not fit into any of the previous categories.

- ▶ Access the Other Files menu by selecting **My files** → **Other Files**.

Used Space

The Used Space menu option allows you to view the usage and available memory for Applications, Audio, Games, Picture, Video, and Other Files. To access the **Used Space** option, use the following steps:

1. Touch  → My files → Used Space.

Section 10: Camera

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 2.0 megapixel camera produces photos in JPEG format.

Important!: Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Using the Camera


Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press the Camera key  to activate the camera mode.
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.

3. Press the Camera key until the shutter sounds. (The picture will automatically be stored within your designated storage location. If no microSD is installed, all pictures will be stored on the Phone.) For more information, refer to "Camera and Camcorder Options" on page 73.

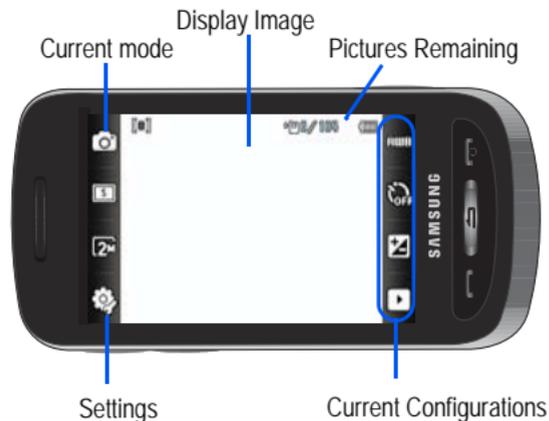

Note: The number of JPEG pictures remaining on the selected media appears in the upper-right of the screen. This is an approximate number of total pictures which can be taken at the current image size.

4. If desired, before taking the photo, you can touch onscreen icons to access various camera options.
5. When viewing a picture after you have taken it, use the **Up** and **Down** Volume keys to zoom in or out. You can magnify the picture up to x13.
6. Press  to return to the viewfinder.

Camera and Camcorder Options

Options are represented by icons across both sides of the screen.

Note: The options will disappear after a few seconds. Touch the screen and they will reappear.



Camera/Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Choose from Camera or Camcorder.



Recording Mode: allows you to set the recording mode to either: Normal (limited only by available space on destination location) or Limit for MMS (limited by MMS size restrictions).



Shooting mode: allows you to set the shooting mode.

Options are:

- **Single:** takes a single photo and view it before returning to the shooting mode.
- **Continuous:** takes a succession of consecutive photos by pressing and holding the Camera key.
- **Panorama:** takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area where the second part of the panoramic picture should fall within.
- **Smile Shot:** the camera focuses on the face of your subject. Once the camera detects the person's smile, it will take the picture.
- **Mosaic:** takes multiple photos and then groups them together into a single final photo.



Shooting mode (continued):

- **Frame:** allows you to choose a custom frame border for your image. Choose from one of the 20 available frames. Touch **OK** to assign the frame.



Camera Resolution: allows you to set the image size to either: 2M(1600x1200), w1M(1600x960), 1M(1280x960), 0.3M(640x480), 400x240, or 320x240.



Camcorder Resolution: allows you to set the video size to either: 320x240 or 176x144.



Settings: allows you to customize your camera settings. Choose the following options and touch **OK**:



Camera:

- **Effects:** allows you to change the color tone or apply special effects to the photo. Options include: None, Black and White, Sepia, Negative, or Watercolor.
- **Exposure Meter:** allows you to set how the camera measures or meters the light source: Matrix, Centre-Weighted, or Spot.
- **Night Mode:** allows you to set the Night Mode to On or Off.

- **Image Quality:** allows you to set the image quality to: Superfine, Fine, Normal, or Economy.



Camcorder:

- **Effects:** allows you to change the color tone or apply special effects to the video. Options include: None, Black and White, Sepia, Negative, or Watercolor.
- **Video Quality:** allows you to set the video quality to: Fine, Normal, or Economy.



Settings tab:

- **Guidelines:** allows you to turn the guidelines On or Off.
- **Review:** allows you to activate the instant review feature where images are displayed immediately after review (On or Off).
- **Shutter Sound:** allows you to select a tone to play when the camera's shutter opens and closes. Sound selections are Shutter 1, Shutter 2, Shutter 3, or Off.
- **Audio Recording:** allows you to record audio while recording video. Selecting Off, temporarily mutes the microphone and records only video.



Settings tab (continued):

- **Storage:** allows you to configure the default storage location for images/videos as either Phone or Memory Card (if inserted).



WhiteBalance: allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.



Timer: allows you to set a time delay before the camera takes the photo or the camcorder begins recording video. Options include: Off, 2 seconds, 5 seconds, or 10 seconds.



Brightness: allows you to adjust the brightness level by moving the slider across the page.



Access Picture/Video Folder Options: allows you to access the options page for a selected image/video. Options include: Play slideshow, Edit, Upload to Web, Properties, Send, Set as, Delete, and Return to previous page.

options:

- **Slideshow** (): to play the available images (from the Picture folder) within a slideshow. Touch the Up/Down arrows to set the duration of each onscreen image. Touch the screen to stop the slideshow and edit images. For more information, refer to *"Editing Images"* on page 70.
- **Edit** (): allows you to edit the current image.
- **Upload to Web** (): allows you to upload the current image to the web with SharePix.
- **Properties** (): displays file information such as name, format, size, resolution, etc.
- **Send** (): lets you send the currently active image as part of a new multimedia message or to an external device via Bluetooth.
- **Set as** (): allows you to assign the current image as either your current Wallpaper, or as a display image used by a specific entry within Contacts.
- **Delete** (): erases the currently selected image/video.
- **Return** (): takes you back to the previously active camera or camcorder page where you can take another photo or shoot a new video.

Note: Upload to Web, and Set as features are not available when the camcorder mode is active.

Picture/Video Folder Options

After you have taken a photo or shot a video, you can access various options from the Picture/Video Folder page.

- ▶ Touch  →  and then touch one of the available

Accessing the Picture Folder

1. Touch  → My files → Picture.

2. Touch a photo to open it in the viewer.

Selecting and Using the Picture Folder

Touch a picture from the Picture page to display the image. From the image viewer page, you have access to both macro functions (Zoom, Edit, and Properties) and menu options.

Note: Menu options only appear in portrait view.

- **Zoom:** allows you to magnify the current image.
- **Edit:** allows you to edit the current image by applying various image effects.
- **Properties:** displays an onscreen listing of the image's properties such as: name, format, size, etc.
- **Send:** lets you send the currently active image as part of a new multimedia message, to an external device via Bluetooth, or to Exchange ActiveSync.
- **Set as:** allows you to assign the current image as either your current Wallpaper, or as a display image used by a specific entry within Contacts.
- **More:** allows you to choose from the following image options:
 - **Delete:** allows you to delete the current graphic.
 - **Rename:** allows you to rename the current graphic.

- **Slide Show:** allows you play a slideshow using the pictures currently available from within the Picture page. Touch the screen to stop the slideshow.
- **Bluetooth Visibility:** allows you to toggle your current Bluetooth visibility status between Visible or Hidden (this option only appears on photographs taken with your camera).
- **Print via:** allows you to make a selected graphic printable by either USB or Bluetooth printer.
- **Lock/Unlock:** allows you to secure a selected graphic by making it protected from accidental alterations.
- **Properties:** allows you to view the properties of a photo.

Editing a Photo

1. Touch  → My files → Picture → <image>.
2. Use the following options onscreen buttons and icons for editing and photo management. For more information, refer to "Editing Images" on page 70.

Assigning an Image to a Contacts Entry

1. Touch  → My files → Picture → <image>.
2. Touch Set as → Caller Image → Search Contact, touch an onscreen entry and touch  .
 - or –

Touch **Set as** → **Caller Image** → **Create Contact**, and follow the create a new **Contacts** entry with the image already assigned. For more information, refer to *“Understanding Your Contacts”* on page 45.

Assigning an Image as a Wallpaper

1. Touch  → **My files** → **Picture** → <image>.
2. Touch **Set as** → **Wallpaper**.
3. Touch the screen to reveal the adjustment tools:
 - **Zoom slider:** touch the magnifying icons at either the top or bottom of the slider to adjust the magnification of the current image.
 - **Rotate:** orients the current image in either a landscape or portrait orientation. The bottom left of the page indicates how much of the image will be displayed as the wallpaper.
4. Touch  to store the new settings and assign the wallpaper image.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder allowing you to also record, view, and send videos.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. In **Idle** mode, press the **Camera** key  to activate the camera mode.
2. Touch  then touch **Camcorder** ().
3. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
4. Press the **Camera** key again to begin shooting video.
5. Touch  or the **Camera** key to stop the recording and save the video file to your **Video** folder.
6. Once the file has been saved, touch  to play back your video for review.
7. Press  to return to the viewer.

Camcorder Options

Camcorder options are represented by icons across both sides of the screen.

For more information, refer to *“Camera and Camcorder Options”* on page 73.

Camcorder Options after a Video is Taken

After you have shot a video, you can use various options that appear as icons on the screen. Touch an icon to activate the function.

- ▶ Touch  →  and then touch one of the available options:
- **Slideshow** (): to play the available images (from the Picture folder) within a slideshow. Touch the Up/Down arrows to set the duration of each onscreen image.
- **Upload to Web** (): allows you to upload the current image to the web with SharePix..
- **Properties** (): displays file information such as name, format, size, resolution, etc.
- **Send** (): lets you send the currently active video as part of a new multimedia message or to an external device via Bluetooth.
- **Delete** (): erases the currently selected video.
- **Return** (): takes you back to the previously active camera or camcorder page where you can shoot a new video.

Accessing the Video Folder

1. Touch  → **My files** → **Video**.
2. Touch a video to open it in the viewer and initiate playback.
3. To play the video, touch .

Options available from the main Video page, and before you select it to play:

- **Create Folder**: create a new My files folder on either the Phone or Memory Card.
- **Manage**: allows you to move or copy an existing unlocked folder or file.
 - **Move**: allows you to choose the Selected or Multiple videos to move.
 - **Copy**: allows you to copy a selected or multiple videos.
- **More**: provides you with the ability to Delete, Rename, Sort by, Send via Bluetooth, Bluetooth Visibility, and Lock/Unlock certain files or folders.
 - **Delete**: allows you to delete the Selected video or Multiple videos.
 - **Rename**: allows you to rename the video file.
 - **Sort by**: allows you to sort video clips by Name, Date, Size or Type.
 - **Send via Bluetooth**: allows you to send the video to a Bluetooth device.
 - **Bluetooth Visibility**: allows you to make the Selected or Multiple videos visible to Bluetooth devices.
 - **Lock/Unlock**: allows you to lock/unlock the video file to prevent deletion. Lock prevents the video clip from being deleted; Unlock allows the video clip to be deleted.

Once you have selected the video to play, your options are:

- **Options** (): to access the following:
 - **Send via**: allows you to send the video clip via a multimedia message or a Bluetooth device or Exchange ActiveSync.
 - **Display Mode**: allows you to select Full Screen, Full Screen in Ratio, or Original Size to view your video.
 - **Properties**: allows you to view the properties for this video file.

- **Full-Screen View** () to return to Normal View.
- **Pause/Resume:** ( ) allows you to pause the video being played, and then resume playing.
- **Previous/Next:** ( ) allows you to jump to either the previously played video or the next file in the Video folder.
- **Exit:** () takes you back to the Video page.

Section 11: SharePix

SharePix allows you to upload your photos to the photo sharing websites Facebook, Picasa, Flickr, Photobucket, Friendster, and MySpace. You can also download your friends' photos to your phone.

Launching SharePix

1. Touch  → SharePix.
2. The following menu options display: Facebook, Picasa, Flickr, Photobucket, Friendster, and MySpace.

Uploading a File

1. Touch  → SharePix.
2. Touch **Upload to web**.
3. Touch one of the menu options: Facebook, Picasa, Flickr, Photobucket, Friendster, or MySpace.
4. Follow the onscreen instructions.

SharePix Options

1. Touch  → SharePix.
2. Touch **Settings**.
3. Touch one of the following options:

- **Upload Details:** Allows you to view upload details such as status, website, and filename.
- **Preferred Lists:** Allows you to set up preferred lists.
- **Image Resize:** Allows you to select the Image resize setting.
- **Upload Reservation:** Allows you to schedule times in the future for uploading your files.
- **Account Manager:** Allows you to store your login details for any of the SharePix photo sharing websites. Once your login details are stored, you will no longer be prompted to login when uploading files.
- **Disclaimer:** Allows you to view the disclaimer.

Section 12: Games

The **Games** menu option allows you to access games that are on the phone such as Tumbling Dice.

1. Touch  → **Games**.
2. Touch a pre-installed game to play.

Section 13: TELUS Shop

The **TELUS Shop** menu option allows you to buy a variety of multimedia files, such as ringtones and graphics. Your phone has embedded links to the web sites providing you with download services, preset by your service provider.

Launching TELUS Shop

1. Touch  → TELUS Shop.
2. Follow the onscreen options.

Section 14: Wireless Web

Your phone is equipped with a WAP (Wireless Application Protocol) browser which allows you to access the Internet. This section explains how to access the WAP services of your service provider and navigate the WAP browser.

Accessing the Wireless Web

▶ In Idle mode, touch  and select any one of the following menu options:

- **Wireless Web** (For more information, refer to “*Accessing the Wireless Web*” on page 83.)
- **Games** (For more information, refer to “*Games*” on page 81.)
- **TELUS Shop** (For more information, refer to “*TELUS Shop*” on page 82.)
- **Applications** (For more information, refer to “*Applications*” on page 92.)

Tip: You can also access the WAP browser from the **My files** menu by selecting any of the “Shop” options in any of the My files sub-menus.

Navigation Using the Wireless Web

Navigation within web pages is all driven via touch points on the screen. *



Back: returns you to the previous web page.



Forward: takes you to the next web page.



Home: returns you to the currently assigned homepage.



Reload: reloads the current page with updated information.



Magnify: launches the magnification slider that allows you to zoom a web page either in or out using the Up or Down Navigation key.



Search: launches the Google Search window.



Add to Favorites: bookmarks the current page and marks it as a favorite site.



Favorites: accesses and displays the bookmarks assigned as favorite web pages.



Browser Settings: accesses the Browser Settings menu, which allows you to clear caches, delete cookies, access cookie options, delete history, change preferences, view the page details, change the browser profiles, and view information about the browser software.



Fullscreen View: indicates the page is being displayed in a fullscreen view either in a Portrait or Landscape orientation. No toolbars are visible.



Toolbar View: toggles the state of the onscreen Web Toolbar so these onscreen buttons become visible.



View Mode: toggles between PC Web view and Mobile view.

Changing the Orientation of the Web page

The a885 comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text. If the phone is sideways, an onscreen keyboard is displayed. When upright, only the alphanumeric keypad is shown.

- From within any active web page, change the orientation:

- Turn the phone on its side to see a Landscape/Widescreen view of the current page.
- Turn the phone upright to see a Portrait view of the current screen.

Viewing the Page in Full Screen Mode

By default, only the Navigation Toolbar and Screen View icons are displayed on the screen. The Screen View button can be used to either reveal the Web Toolbar or remove it to reveal more of the current page.

Magnifying the current page

From an active page you can toggle the view by touching the Screen View button.

1. Touch  from the upper-right of the current web page.
 2. Touch the magnification slider (at the bottom when in landscape or on the left when in portrait) and drag to one side or another
 - or –
- Touch  to zoom into the page or  to zoom out. This enlarges or shrinks the size of the displayed page in increments.
- or –

Press the **Up** or **Down** Volume keys to zoom in or out.

Scrolling Within a Web Page

As with other menu items and pages on your phone, scrolling requires that steady directional pressure be applied onscreen via your fingertip.

To scroll up or down a Web page

- ▶ Touch and slide your finger either up or down on the screen.

To move around a Web page:

- ▶ Drag across the screen in any direction.

Note: The page must be magnified enough so there are unseen areas to where you would move to. If the page is already being displayed in its entirety, you will not be able to move around it.

Accessing the Web Toolbar

From an active page you can toggle the view by touching the Screen View button.

1. Touch either  to change the view to Fullscreen without Toolbars. This view maximizes the viewable area of the current page.
– or –
Touch   to launch (make visible) the Web Toolbar.

2. Navigate around the web page.

Selecting Onscreen Items

- ▶ Touch an onscreen item or hyperlink.

Links, which are displayed as underlined and colored text, allow you to jump to other Web pages, select special functions, or even activate an application.

Entering Text Into a Search or Text Field

Touch an onscreen text field (such as the Navigation Toolbar) once to reveal an onscreen keyboard.

Touch a search field **twice** to display the text input screen and the onscreen keyboard. For more information, refer to “*Entering Text*” on page 37.

Returning to the Previous Page

- ▶ Touch  from the left of the Navigation Toolbar's Address bar.

Returning to the Homepage

1. Touch   (Toolbar View) to launch the Web Toolbar.
2. Touch  to return to the homepage.

Navigating via a URL Address

1. In Idle mode, touch  → Wireless Web.

2. Touch the URL text field at the top of the screen.
3. Use either the onscreen alphanumeric keypad or keyboard, to enter the target Web address, beginning with the **www**. The **http://** prefix is pre-inserted into the text string.
4. Touch **Go** to launch the new web page, where you have the opportunity to also add the new page to your Favorites list and assign a display name for the link.

Using Favorites

While navigating through either the Internet or the Wireless Web pages, you can bookmark a site to quickly and easily access it at a future time. The URLs (web site addresses) of the bookmarked sites are stored in the Favorites folder, where you can use the six preset favorites and store your own favorite URLs.

Accessing a Web Site Using Favorites

1. In Idle mode, touch  → Wireless Web →  .
2. Touch a bookmark item from the Favorite list.

Adding Favorites

1. In Idle mode, touch  → Wireless Web →  → Add New.
– or –

In Idle mode, touch  → Wireless Web →  .

2. Touch the **Enter URL Address** field and use the onscreen alphanumeric keypad to input the desired web address. Touch **OK** to continue.
3. Touch the **Title** field to associate a display name for this link. Use the onscreen alphanumeric keypad to input a title for the web address. Touch **OK** to continue.
4. Touch **Save** to store the new Favorite entry.

Editing Favorites

1. In Idle mode, touch  → Wireless Web →  .
 - Only those entries with  can be edited.
2. Touch  adjacent to a favorite entry. Do not touch the name, as this will launch the assigned web site.
3. Touch either the Enter URL Address or Title fields and use the onscreen alphanumeric keypad to input the desired web address.
4. Touch **Save** to store the changes to the entry.

Deleting a Favorite

1. In Idle mode, touch  → Wireless Web →  .

- Only those entries with  can be deleted.
2. Touch  .
 3. Place a checkmark adjacent to those editable entries you wish to choose for deletion.
 - or –
 Touch **Select All** to place a checkmark alongside all deleteable fields.
 4. Touch  .

Copying a URL to a Message

Copying a selected URL as text into a message requires that the selected URL Address already be saved as a Favorite entry.

1. In Idle mode, touch  → **Wireless Web** →  → **More** → **Copy URL to Message**.
2. Touch a Favorite entry and touch  .
3. Touch the **Tap to Add Recipient** field to use the onscreen keypad/keyboard to enter the recipients phone number.
4. Continue the creation of the remaining message. For more information, refer to *"Messaging"* on page 57.

Sending a URL

A selected URL can also be sent as a file attachment within a new multimedia message, within an email using Exchange ActiveSync, or transmitted to any paired Bluetooth device that can receive the data.

1. In Idle mode, touch  → **Wireless Web** →  → **More** → **Send URL via**.
2. Touch one of the following options and follow the onscreen prompts to complete the process:
 - **Message**: attaches a selected Favorite URL Address to a new multimedia message.
 - **Exchange ActiveSync**: sends selected Favorite URL Address in an email using Exchange ActiveSync.
 - **Bluetooth**: sends selected Favorite URL Address as a data file to a paired Bluetooth device capable of using the file.
3. Touch a Favorite entry and touch  .

Browser Settings

To configure the parameters on the onboard browser, use the Browser Settings page.

1. In Idle mode, touch  → **Wireless Web** →  .
2. In Browser Settings, touch any of the following function fields.

- **Clear Caches:** deletes the information stored in the cache. The cache stores the most recently accessed pages (page 88).
 - **Delete Cookies:** delete cookies. Cookies are pieces of personal information sent to a web server while navigating the web (page 88).
 - **Cookie Options:** sets whether cookies are stored on your phone (**Accept All** or **Reject All**). If you select **Prompt**, the phone will ask you to save the cookies on every page requiring cookies (page 89).
 - **Delete History:** deletes the record of any previously visited web sites (page 89).
 - **Preferences:** changes the settings for the web browser to suit your preference (page 89).
 - **Page Details:** displays the page details.
 - **Browser Profiles:** deletes the current browser profile. For more information, refer to “*Changing the WAP Profiles*” on page 90.
 - **About Browser:** displays the access version and copyright information about the browser.
3. Touch **Yes** to activate the feature.
- or –
- Touch  to save the new setting.

Clearing Caches

A cache is the phone’s temporary memory in which the most recently accessed web pages (and their associated images) are stored. The cache can be cleared at any time from your phone.

1. In Idle mode, touch  → **Wireless Web** →  → **Clear Caches**.
2. At the **Clear cache?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.

Deleting Cookies

A cookie is a small file that is placed on your phone by a web site during navigation. In addition to containing some site-specific information, it can also store some personal information (such as username and password) which can pose a security risk if not properly managed. Cookies can be deleted at any time from your phone.

1. In Idle mode, touch  → **Wireless Web** →  → **Delete Cookies**.
2. At the **Delete cookies?** pop-up, touch **Yes** to continue, or **No** to cancel the operation.

Setting Cookie Options

You can define how to manage cookie installation on your phone when a web site is attempting to place them on your phone.

1. In Idle mode, touch  → Wireless Web →  → Cookie Options.
2. Touch one of the following options:
 - **Accept All:** allows all cookies to be placed on your phone.
 - **Reject All:** allows no cookies to be placed on your phone.
 - **Prompt:** allows you to be prompted before a cookie can be placed on your phone.
3. Touch  to save the new setting.

Using your History

The History list provides you with a list of the most recently visited web sites. These entries can be used to quickly return to a previously unmarked web pages without the need to retype the entire address.

Accessing your History List

1. In Idle mode, touch  → Wireless Web.
2. Touch the Toolbar View () to launch the Web Toolbar.

3. From the Navigation Toolbar (at the top of the web page) touch the History List drop down arrow to reveal the current stored list of visited web sites.
4. Touch an entry from the list to automatically be taken to the selected web site.

Deleting Your History List

A cache is the phone's temporary memory in which the most recently accessed web pages (and their associated images) are stored. The cache can be cleared at any time from your phone.

1. In Idle mode, touch  → Wireless Web →  → Delete History.
2. At the Delete History? pop-up, touch Yes to continue, or No to cancel the operation.

Setting Browser Preferences

The Preferences option allows you to set your browser's ability to run JavaScript, display images, and play sounds.

1. In Idle mode, touch  → Wireless Web →  → Preferences.
2. Activate any of the following by touching an option:
 - **View Mode**

- Search Options
 - Run JavaScript
 - Display Images
 - Display Flash Contents
 - Play Sound
 - Display Minimap
3. Touch either **On** (to activate the feature) or **Off** (to deactivate the feature).
 4. Touch  to save the new setting.

About Browser

The **About Browser** option gives the browser software version information.

1. In Idle mode, touch  → **Wireless Web** →  → **About Browser**.
2. Once finished, press  to return to the previous page.

Accessing the Wireless Web Site

The **Wireless Web** menu option allows you to access your Wireless Web homepage using the built-in browser. This page gives you quick access to information such as local weather, sports scores and quick links to the previously mentioned

shopping sites. To access this menu option, use the following steps:

There are several ways to access a web site:

- In Idle mode, touch  → **Wireless Web**.
- Selecting a link on the browser.
- Selecting an item in the Favorites menu.
- Entering a URL address manually using the keypad.

Changing the WAP Profiles

Connection can be made via the available connection profiles: TELUS MMS (MultiMedia Server), or TELUS Web. Use this menu to create and customize the profiles containing the settings for connecting your phone to the network. You need these settings to use the WAP browser or to send MMS messages or Email messages.

Note: Although the active connection can be changed by the user, it is recommended that this choice be made with the assistance of your service provider.

1. In Idle mode, touch  → **Wireless Web** →  → **Browser Profiles**.
2. Touch one of the following profiles:
 - TELUS Web
 - TELUS MMS

Caution: The WAPs are pre-configured and can not be altered using this screen. If you change the settings without first checking with your service provider, the web browser, MMS, and e-mail features may not work properly.

3. To create a new connection profile, touch  and follow the onscreen prompts.

– or –

To edit an existing profile, touch a profile from list, scroll to the desired field, and use the onscreen keypad/keyboard to edit the parameter you want to edit:

- **Set Name:** enter a profile name.
- **Access Name:** edit the access point name.
- **Auth Type:** select the type of authentication used for this WAP connection: Normal, Secure, or None.
- **User ID:** enter the User ID required to connect to the network.
- **Password:** enter the user password required to connect to the network.
- **Protocol:** set the connection protocol used by the WAP browser: HTTP or WAP.
- **Home URL:** enter the URL address of the page to be used as your homepage.

- **Proxy Address:** (HTTP only) set the proxy server address and port.
 - **Gateway Address:** (WAP only) enter the gateway address of the proxy server.
 - **Secure Connection:** (WAP only) enter secure connection information.
 - **Linger Time (sec.):** set a time period (in seconds) after which the network is disconnected if there has been no new data traffic in that time.
 - **Advanced Settings:** (touch ) allows you to configure some of the IP-specific information: Static IP, Static DNS, Server information, and Traffic Class.
 - **Static IP:** specify if you want to manually enter an IP address. If you want the IP address to be automatically assigned by the server, remove the check mark.
 - **Local Phone IP:** enter the IP address obtained from the network operator, if you checked the Static IP option.
 - **Static DNS:** specify if you want to manually enter the Domain Name Server (DNS) address. If you want the address to be automatically assigned by the server, remove the check mark.
 - **Server 1/Server 2:** enter the Domain Name Server (DNS) addresses.
 - **Traffic Class:** select the traffic class.
4. Touch  to save these settings.

The WAP settings may vary depending on the service provider.

Section 15: Applications

The Applications menu allows you to shop for Applications using the built-in browser.

Launching Applications

1. Touch  → **Applications**. This launches a web browser.
2. Follow the on-screen options.

Section 16: Calendar

The calendar feature allows you to view the Month, Week, and Day layout views. It also shows any Missed Alarm Events that have occurred.

Creating a New Event

1. Touch  → **Calendar** → **Create Event**.
2. Touch the **Title** field and use the onscreen keyboard to enter a name for this specific event. Touch **OK** to save the new name.
3. Touch the **Start Date** field. The **Start Date** screen displays.
4. Select the **Keypad** tab to enter a date with the keypad, or touch the **Jog** tab to scroll to the desired date using + or -.
5. Touch **Set** to complete the process.
6. Touch the **Start Time** field. The **Start Time** screen displays.
7. Select the **Keypad** tab to enter a time with the keypad, or touch the **Jog** tab to scroll to the desired time using + or -.
8. Touch **Set** to complete the process.

Note: In Jog mode, touching and holding down the + and - keys increases the speed at which the numbers scroll through each reel.

9. Touch the **Alarm** field and select a time for the alarm to begin alerting you of the upcoming event. Touch **Save** to store the new alert time.
 - Choices include: Off, On Time, 30 Minutes Before, 1 Hour Before, 1 Day Before, 1 Week Before, Customize (your own defined schedule).
10. Touch **Set Details** to configure additional parameters for the new event:
 - **End Date:** enter final date for this event to occur. This is useful if the alarm is for a repeating event. Touch **Set** to store the date.
 - **End Time:** enter final time for this repeating event. Touch **Set** to store the time.
 - **Details:** enter a description for this event. Touch **OK** to store the name.
 - **Location:** enter a location for this event. Touch **OK** to store the name.
 - **Alarm Tone:** allows you to choose an alarm tone. Once highlighted, navigate to **Tones** and select an audio file. Touch **Add** to assign the file as your new alert tone.

- **Repeat:** allows you to set the number of repetitions allowed for this appointment (Off, Everyday, Every Week, Every Month, or Every Year). Once selected, all remaining alarm settings are enabled. Touch **Save** to store the option.
 - **Repeat Until:** allows you to set as duration for this appointment by assigning an expiration date.
11. Touch **Save** → **Save** to store the new event.

Other Event Options

1. Touch **More** → **Calendar** → **More**.
2. Touch any of the following options:
 - **Go to:** allows you to manually select a target date for review by using the Go To dialer page. Touch **Go** to be taken to the dialed-in date.
 - **View by Day:** allows you to change the Calendar view to display a daily event listing.
 - **View by Week:** allows you to change the Calendar view to display a weekly event listing.
 - **Delete:** allows you to remove an event from your Calendar.
 - **Calendar Settings:** allows you to configure the Calendar's **Starting Day** (select either Sunday or Monday) and **View by Mode** (select Month, Week, or Day).
 - **Missed Alarm Events:** displays any missed events.
 - **Used Space:** displays a list of the different Calendar event categories along with the memory allocation for each.

3. To exit, press  or press .

Viewing an Event

1. Touch **More** → **Calendar** → **Event List**. A listing of all upcoming events is then displayed.
2. Touch an event from the Events page to then open that instance.
3. To exit, press  or press .

Deleting an Event

1. Touch **More** → **Calendar** → **Event List** → **Delete**.
2. Touch an individual event from the list or touch **Select All** to place a checkmark adjacent to all events.
3. Touch **Delete**.
4. To exit, press  or press .

Section 17: Tools

Tools

Tools (such as camera, camcorder, calendar, and alarms) are feature options that allow you to use your handset for a variety of non-phone related activities. To access any of the tools, perform the following:

- ▶ Touch  → Tools.

Camera

For more information, refer to “Camera” on page 72.

Voice Recognition

Nuance Voice Recognition software is an advanced speech recognition software used to activate a wide variety of functions on your phone. Nuance software automatically voice activates (up to 2,000 contacts) for voice dialing and searching. No pre-recording or training needed. Speak a contact name naturally to dial, and use your voice to look up contacts, launch applications and navigate phone menus.

1. Touch  → Tools → Voice Recognition.
2. At the voice prompt, say a command. The list of available commands is listed below.

Note: This list of voice commands is briefly displayed.

Say a Command Options

- **Call <Name or #>:** dials a name or number listed in your contact list. If multiple numbers exist (i.e. home, work, or other) say the name and the number type (location).
- **Send Message to <Name or #>:** displays the Create Text Message screen.
- **Lookup <Name>:** allows you use a voice command to locate and display contact information stored in the Contacts list.
- **Go to <Application>:** accesses all the features of your phone if they are activated, such as: Voicemail, Contacts, Tones, Calendar, Tasks, and Browser.
- **Check <Item>:** lets you check your phone's status in the same report (Status, Messages, Missed Calls, Time, Signal Strength, Network, Battery, My Phone Number, and Volume).

While the **Say a Command** screen displays you have two options:

- **Tutorial:** provides examples of how to use the voice commands.
- **Settings:** lists the settings for voice command software such as: Confirmation, Adaptation, Mode, Speakerphone, and About.

If the phone does not recognize your command the Command not recognized screen displays with two options:

- **Tutorial:** provides instructions on how to use voice commands.
- **Restart:** touch and try the command options again.

Speak clearly when giving your command. There is no need for you to speak slowly or with added emphasis. The voice recognition software has been optimized to understand your speech in its natural form. If it does not recognize your command after a few seconds, a voice prompt asks you to repeat the command. If it does not recognize your command again, the following message displays "Sorry, no match found," and voice recognition turns off.

You must end your current Voice Commands call before you can make another call using Voice Commands. To make a 3-way call, only the first call can be made using Voice Commands.

Voice Recognition Tips

- Wait for the tone before you speak.
- Speak clearly and at a normal volume.
- There is no need to use paused speech. The voice recognition software has been trained to recognize natural speech, and performs best when you speak naturally.
- In very noise environments, it may be helpful to use a headset or a Bluetooth headset.

Contacts List Voice Activation

On startup, Nuance Voice Recognition software reads your Contacts list and voice-activates all the names.

When you add or change contacts, the software automatically reloads and voice-activates the list when you add or modify a contact.

Media Player

The Media Player allows you to play downloaded music files.

1. Touch  → **Tools** → **Media Player**.
2. Follow the on-screen instructions to download songs or other audio tracks. A service charge may apply.

Record Audio

Record Audio allows you to record voice memos. It also allows you to send your audio clip to other people as an attachment of an MMS message. Recording time will vary based on the available memory within the phone.

1. Touch  → **Tools** → **Record Audio**. For more information, refer to "Record Audio Settings" on page 122.
2. To start recording, touch . Record a memo by speaking into the microphone.

3. During the recording process you can either touch Stop () to stop the recording or Pause () to temporarily halt the recording. Once the audio recording has stopped, the message is automatically saved.
4. Once stopped, choose from one of the following options:
 - **Play:** allows you to play the memo.
 - **Record:** allows you to save the current memo and begin another session.
 - **Delete:** allows you to delete the current memo.
 - **More:** provides these additional functions.
 - **Send via:** allows you to send your voice clip to other people using a message, Exchange ActiveSync, or Bluetooth.
 - **Set as:** allows you to set the current memo as a Call Ringtone, a Caller Ringtone for a specific entry or an Alarm Tone.
 - **Properties:** displays the Name, Format, Size, etc., of the current voice memo.
5. To exit, press  or press .

Recorded Audio Folder

This folder shows a list of audio clips that have been recorded and saved. To access this folder, use the following steps:

1. Touch  → My files → Audio → Recorded Audio.
2. Touch a pre-recorded memo from the list to begin playback.

3. To exit, press  or press .

Alarms

This feature allows you to both set the alarm to ring at a specific time.

1. Touch  → Tools → Alarms → Tap to Create. The following options display:
 - **Alarm Name:** allows you to use a specific name for the alarm. The name will appear on the display when the alarm activates.
 - **Alarm Time:** use either the Up/Down input arrows or scroll through the available fields to set the new time for the event, at which time an alarm will sound. Touch **Set** to save the new values.

Note: To change the time format, see *"Time & Date"* on page 110.

- **Alarm Repeat:** use this option to set the repeating status for the alarm by placing a checkmark alongside those days you would like to use for the current alarm. **Everyday** places a checkmark alongside all days.
- **Snooze:** use this option to set a Snooze Duration (5, 10, 15, 20, or 30 Minutes) and a Snooze Repeat (1, 2, 3, 5, or 10 Times).
- **Set Details:** allows you modify some additional features:
 - **Alarm Type** sets the way in which the alarm sounds when activated (Melody, Vibration, Vibration then Melody, and Vibration & Melody).

- **Alarm Tone** sets the sound file which is played when the alarm is activated.
 - **Alarm Volume** adjusts the alarm's volume (1 - 7).
2. Touch **Save** to store the alarm details and **Save** again store this new event.
 3. Touch **On** from the **Auto Power-up** field to keep the alarm event active even if the phone is turned off. Activating this feature turns the phone on and sounds the alarm even if the phone was previously is a powered-off state.

Turning Off an Alarm

To stop the alarm when it rings, perform one of these steps:

- ▶ Locate the **Stop** slider on the screen and slide it across to the right until the alarms stops.
- Or -
- ▶ Press any key, such as: volume, , , etc.
- Or -
- ▶ If the phone is facing upwards, flip the phone over so that it is facing down to mute the alarm. If the phone is facing downward, flip the phone over and then flip it over again so that it is facing downward. To set up your phone to utilize Motion Detection, see

"Motion Detection" on page 112.

- Or -

- ▶ If Snooze is set to **On**, and if the phone is facing upwards, flip the phone over so that it is facing down to activate Snooze. If the phone is facing downward, flip the phone over and then flip it over again so that it is facing downward. Each time the alarm rings (depending on how many times you have set the Snooze Repeat option) flip the phone over.

Calendar

For more information, refer to *"Calendar"* on page 93.

Memo

This option allows you to create memos to add to your events.

1. Touch  → **Tools** → **Memo** → **Create Memo**.
2. Use the onscreen keyboard to enter a new memo and touch .

Tasks

This menu option allows you to create a "to do" entry of tasks which are created in a similar fashion to previously described Calendar entries.

1. Touch  → **Tools** → **Tasks** → **Create Task**.

2. Select any of the following options:
 - **Title:** enter a title for this task (up to 15 characters).
 - **Priority:** allows you assign the task a priority (High, Medium, or Low).
 - **Start Date:** enter a date for this task to begin.
 - **Due Date:** enter a date for this task to end.
 - **Status:** allows you assign a current project status (Completed or Ongoing).
3. Touch **Set Details** to access additional options:
 - **Details:** enter a detailed description for this task (up to 100 characters).
 - **Alarm:** allows you to set a time prior to the event where the event alerts will begin. Options include Off, On Start Date, On Due Date, 1 Day Before Starting, 2 Days Before Starting, and 1 Week Before Starting.
 - **Alarm Time:** enter a time for this alarm to sound. Touch **Set** to assign the new time.
 - **Alarm Tone:** allows you to choose an alarm tone. Once selected, navigate to Tones, select a file, and touch **Add** to assign the audio file as the current alarm tone.
4. Touch  →  to store the new task.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Touch  → **Tools** → **Calculator**.
2. Enter the first number using the onscreen numeric keys.
3. Enter the operation for your calculation by touching the corresponding onscreen arithmetic function key.
4. Enter the second number.
5. To view the result, touch equals (=).

Tip Calculator

Tip Calculator automatically calculates the following amounts:

- Gratuity (tip)
- Individual payment (for groups)

Calculations are based on the total amount of the check, a selected percentage, and the number of people paying.

1. Touch  → **Tools** → **Tip Calculator**.
2. Touch the **Bill** field and use the keypad to enter the total amount of the bill and press **Result**.

3. If needed, touch the **Tip** field and use the keypad to change the tip percentage.
4. If needed, touch the **Split** field and use the keypad to change the number of persons that will be splitting the bill.
5. The amount of the Tip, the bill Total, and the amount each person should pay appear in the lower half of the screen.
6. Touch **Reset** to clear the fields and start over.

Converter

Your phone comes with a built-in conversion application. This conversion menu provides the following conversion categories:

- Currency
 - Length
 - Weight
 - Volume
 - Area
 - Temperature
1. Touch  → **Tools** → **Converter**.
 2. Select the specific converter function by touching one of the above onscreen conversion functions.

- Each converter function has a field for the type of unit to be converted, and the type of unit to convert to. An additional field allows you to input the unit amount to convert.
3. Enter the main value by touching the first onscreen value field (top left of the page).
 4. Use the popup keypad to enter the necessary value and touch .
 5. Touch the drop-down list (upper-right) to then select the desired source unit. This is the value you are converting "from".
 - The resulting converted values ("to") are the automatically displayed in a list.
 6. Touch **Reset** to erase the current values and begin again.
 7. To exit, press  or press .

World Clock

World Clock allows you to view the time of day or night in another parts of the world. World displays time in the 100 different cities, within all 24 time zones around the world.

1. Touch  → **Tools** → **World Clock** → **Add**.
2. Drag the onscreen map to find the desired global region.

3. Touch a representative city from a desired area. If the city area is then correctly highlighted in a darker gray, your selection was accurately read and you can touch .
– or –

If not read correctly, repeat the previous two steps until your selection is correct.

4. Touch the sun symbol next to the time to add or remove Daylight Saving Time. If Daylight Saving Time is selected, the sun symbol will appear orange.

Deleting a World Clock Entry

1. Touch  → Tools → World Clock → Delete.
2. Touch the Trash Can () next to the entry you wish to delete.

Timer

You can use this menu to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. Touch  → Tools → Timer.
2. Select a countdown time length for the alert by setting the Hours, Minutes, and Seconds value.

Select the **Keypad** tab to enter a time length with the keypad, or touch the **Jog** tab to scroll to the desired time length using + or -.

Note: In Jog mode, touching and holding down the + and - keys increases the speed at which the numbers scroll through each reel.

3. Touch **Start** to begin the timer and touch **Stop** to pause the timer.

Note: You can stop the timer by flipping your phone over so that it is facing downward. Restart the timer by flipping it back over. To set up your phone to utilize Motion Detection, see *"Motion Detection"* on page 112.

Stopwatch

You can use this menu to measure intervals of time.

1. Touch  → Tools → Stopwatch → Start.
2. Touch **Stop** to stop the stopwatch and touch **Lap** to mark a unit of time per lap. You can record up to 50 lap times.
3. Touch **Reset** to erase all times recorded.

Section 18: Changing Your Settings

This section includes tips on how to use your phone's features, as well as how to change and customize the display settings, call handling, security settings, and other settings associated with your phone.

Sound Profiles

This menu allows you to specify how you are informed of incoming calls.

Selecting a Profile

1. Touch  → Settings → Sound Profile.
2. Touch the radio button next to the profile name. The selected profile activates. Choices include:
 - Normal
 - Silent
 - Driving
 - Outdoor

Normal Profile

The phone's profile defaults to Normal where the incoming Alert Type is set to melody.

Editing the Normal - Call Profile

1. Touch  → Settings → Sound Profile → Normal.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Call**.
3. Select the **Call Alert Type** field and select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration then Melody**: the phone vibrates and then starts ringing.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
4. Touch the **Voice Call Ringtone** field, touch to select a ringtone and touch **Save**.
5. Drag the **Ringtone Volume** slider to the volume level you desire (range is 1-7).
6. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 5**.
7. Touch **Save** to return to the Sound Profile menu.

Editing the Normal - Message Profile

1. Touch  → Settings → Sound Profile → Normal.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Message**.
3. Touch the **Message Alert Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates 3 times.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
4. Touch the **Message Alert Tone** field, touch to select a ringtone and touch **Save**.
5. Touch the **Message Alert Repetition** pull-down and select one of the following options and touch **Save**:
 - **Once**: repeats the message alert once.
 - **Periodic**: repeats the message alert periodically.
6. Drag the **Alert Tone Volume** slider to the volume level you desire (range is 1-7).

7. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 3**.
8. Touch **Save** to return to the Sound Profile menu.

Editing the Normal - Phone Profile

1. Touch  → Settings → Sound Profile → Normal.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Phone**.
3. Touch the **Keypad Tone** pull-down and select one of the following tones and touch **Save**:
 - **Beep**
 - **Glossy**
 - **Mute**
4. Touch the **Power On Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates but does not play a melody.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.

5. Touch the **Power Off Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates but does not ring.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
6. Drag the **Phone Sound Volume** slider to the volume level you desire (range is 0-7).
7. Touch **Save** to return to the Sound Profile menu.

Silent Profile

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

- ▶ Touch  → **Settings** → **Sound Profile** → **Silent**.
All sound tones are now changed to Silent.

Editing the Silent - Call Profile

1. Touch  → **Settings** → **Sound Profile** → **Silent**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Call**.

3. Select the **Call Alert Type** field and select one of the following and touch **Save**:
 - **Vibration**: the phone vibrates 3 times.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
4. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 5**.
5. Drag the **Vibration Intensity** slider to the intensity level you desire (range is 0-7).
6. Touch **Save** to return to the Sound Profile menu.

Editing the Silent - Message Profile

1. Touch  → **Settings** → **Sound Profile** → **Silent**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Message**.
3. Touch the **Message Alert Type** field, select one of the following and touch **Save**:
 - **Vibration**: the phone vibrates 3 times.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
4. Touch the **Message Alert Repetition** pull-down and select one of the following options and touch **Save**:

- **Once:** repeats the message alert once.
 - **Periodic:** repeats the message alert periodically.
5. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 3** and touch **Save**.
 6. Drag the **Vibration Intensity** slider to the intensity level you desire (range is 0-7).
 7. Touch **Save** to return to the Sound Profile menu.

Driving Profile

In this case, the speaker is active and launches the currently selected Call alert type when the associated notification is activated.

Editing the Driving - Call Profile

1. Touch  → **Settings** → **Sound Profile** → **Driving**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Call**.
3. Select the **Call Alert Type** field and select one of the following and touch **Save**:
 - **Melody:** the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration then Melody:** the phone vibrates and then starts ringing.

- **Vibration & Melody:** the phone vibrates and plays a melody simultaneously.
4. Touch the **Voice Call Ringtone** field, touch to select a ringtone and touch **Save**.
 5. Drag the **Ringtone Volume** slider to the volume level you desire (range is 1-7).
 6. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 5** and touch **Save**.
 7. Touch **Save** to return to the Sound Profile menu.

Editing the Driving - Message Profile

1. Touch  → **Settings** → **Sound Profile** → **Driving**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Message**.
3. Touch the **Message Alert Type** field, select one of the following and touch **Save**:
 - **Melody:** the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration:** the phone vibrates but does not ring.
 - **Vibration & Melody:** the phone vibrates and plays a melody simultaneously.

- **Mute:** the phone is silent and does not play a melody or vibrate.
4. Touch the **Message Alert Tone** field, then touch to select **Message Tone 1 - 6** and touch **Save**.
 5. Touch the **Message Alert Repetition** pull-down and select one of the following options and touch **Save**:
 - **Once:** repeats the message alert once.
 - **Periodic:** repeats the message alert periodically.
 6. Drag the **Alert Tone Volume** slider to the volume level you desire (range is 1-7).
 7. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 3** and touch **Save**.
 8. Touch **Save** to return to the Sound Profile menu.

Editing the Driving - Phone Profile

1. Touch  → **Settings** → **Sound Profile** → **Driving**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Phone**.
3. Touch the **Keypad Tone** pull-down and select one of the following tones and touch **Save**:
 - **Beep**

- **Glossy**
 - **Mute**
4. Touch the **Power On Type** field, select one of the following and touch **Save**:
 - **Melody:** the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration:** the phone vibrates but does not play a melody.
 - **Vibration & Melody:** the phone vibrates and plays a melody simultaneously.
 - **Mute:** the phone is silent and does not play a melody or vibrate.
 5. Touch the **Power Off Type** field, select one of the following and touch **Save**:
 - **Melody:** the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration:** the phone vibrates but does not ring.
 - **Vibration & Melody:** the phone vibrates and plays a melody simultaneously.
 - **Mute:** the phone is silent and does not play a melody or vibrate.
 6. Drag the **Phone Sound Volume** slider to the volume level you desire (range is 0-7).
 7. Touch **Save** to return to the Sound Profile menu.

Outdoor Profile

In this case, you are outdoors and might not be able to hear the phone, or need an increased volume in order to hear the phone. For example, you might be jogging and need the phone to vibrate and ring loudly.

Editing the Outdoor - Call Profile

1. Touch  → Settings → Sound Profile → Outdoor.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Call**.
3. Select the **Call Alert Type** field and select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration then Melody**: the phone vibrates and then starts ringing.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
4. Touch the **Voice Call Ringtone** field, touch to select a ringtone and touch **Save**.
5. Drag the **Ringtone Volume** slider to the volume level you desire (range is 1-7).

6. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 5** and touch **Save**.
7. Touch **Save** to return to the Sound Profile menu.

Editing the Outdoor - Message Profile

1. Touch  → Settings → Sound Profile → Outdoor.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Message**.
3. Touch the **Message Alert Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates but does not ring.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
4. Touch the **Message Alert Tone** field, then touch to select **Message Tone 1 - 6** and touch **Save**.
5. Touch the **Message Alert Repetition** pull-down and select one of the following options and touch **Save**:
 - **Once**: repeats the message alert once.

- **Periodic:** repeats the message alert periodically.
6. Drag the **Alert Tone Volume** slider to the volume level you desire (range is 1-7).
 7. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 3** and touch **Save**.
 8. Touch **Save** to return to the Sound Profile menu.

Editing the Outdoor - Phone Profile

1. Touch  → **Settings** → **Sound Profile** → **Outdoor**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Phone**.
3. Touch the **Keypad Tone** pull-down and select one of the following tones and touch **Save**:
 - **Beep**
 - **Glossy**
 - **Mute**
4. Touch the **Power On Type** field, select one of the following and touch **Save**:
 - **Melody:** the phone rings using the ring melody selected in the Ring tone menu.

- **Vibration:** the phone vibrates but does not play a melody.
 - **Vibration & Melody:** the phone vibrates and plays a melody simultaneously.
 - **Mute:** the phone is silent and does not play a melody or vibrate.
5. Touch the **Power Off Type** field, select one of the following and touch **Save**:
 - **Melody:** the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration:** the phone vibrates but does not ring.
 - **Vibration & Melody:** the phone vibrates and plays a melody simultaneously.
 - **Mute:** the phone is silent and does not play a melody or vibrate.
 6. Drag the **Phone Sound Volume** slider to the volume level you desire (range is 0-7).
 - Touch **Save** to return to the Sound Profile menu.

Display and Light Settings

In this menu, you can change various settings for the display or backlight.

1. From Idle mode, touch  → **Settings** → **Display and Light**.
2. Select one of the following options:
 - **Wallpaper**

- Widget
- Font Type
- Greeting Message
- Transition Effect
- Brightness
- Backlight Time

Wallpaper

This menu allows you to change the background image displayed on the Main screen.

1. From Idle mode, touch  → Settings → Display and Light → Wallpaper.
2. Drag an onscreen image to the left or right to view either the next or previously available images (located in your Pictures folder) for the wallpaper selection.
3. Touch one of the following options:
 - **Set:** assigns the current image as the new wallpaper image that appears when the Main screen.
 - **Pictures:** allows you to choose a photo from Pictures folder, that are displayed in a thumbnail view.

Widget

Allows you to select which widget applications will appear docked within the Widget bar on the Idle screen.

For more information, refer to “Widgets” on page 22.

Font Type

You can select the text style for the informational text displayed on the Main LCD.

1. From Idle mode, touch  → Settings → Display and Light → Font Type.
2. Select Type1, Type2 or Type3 and touch Save.

Greeting Message

In this menu you enter the text which displays on the main screen when the phone powers on.

1. From Idle mode, touch  → Settings → Display and Light → Greeting Message.
2. Touch and hold  to erase the current greeting message.
3. Use either the onscreen keypad/keyboard to enter a new greeting.
4. Touch .

Transition Effect

Allows you to activate/deactivate the default transition effect (wipe) during transitions between menu/options pages.

1. From Idle mode, touch  → Settings → Display and Light → Transition Effect.
2. Touch either **On** (activate) or **Off** (deactivate).
3. Touch  .

Brightness

Allows you to adjust the display brightness for the LCD to see better within different lighting conditions.

1. From Idle mode, touch  → Settings → Display and Light → Brightness.
2. Drag the Level slider to the brightness level you desire (range is 1-5).
3. Touch  .

Note: Modifying this setting will impact your battery life.

Backlight Time

The backlight turns the screen on using a preset brightness level. When the time (set in this feature) runs out, the touch screen turns

off. The phone can also be set to lock when the Backlight Time runs out. For more information, refer to “*Locking and Unlocking the Phone*” on page 19.

1. From Idle mode, touch  → Settings → Display and Light → Backlight Time.
2. Touch one of the backlight times to set the amount of time the phone’s touchscreen remains lit without activity. Options include: **8 Seconds**, **15 Seconds**, **30 Seconds**, **1 Minute**, **3 Minutes**, or **10 Minutes**).
3. Touch  .

Note: Modifying this setting will impact your battery life.

Time & Date

This menu allows you to change the current time and date displayed.

1. From Idle mode, touch  → Settings → Time and Date.
2. Touch the **Time Zone Updating** drop-down list and select one of the following:
 - **Automatic:** the phone automatically updates the time and date according to the current time zone using the network service.
 - **Prompt First:** you are prompted before a time change is applied.

- **Manual Only:** you need to manually set the time and date according to the current time zone using the Set time menu.
3. Touch the **Time Zone** field and assign a new time zone by touching a corresponding area of the world map.
 - Touch **OK** to save the new setting.
 - Major cities in each zone are displayed upon selection.
 - Current time zones are based upon Greenwich Mean Time.
 4. Touch **12hr** (12 hour) or **24hr** (24 hour) from the **Time Format** field.
 5. Touch the **Time** field then adjust the hour and minutes values by using either the up/down input arrows or by quickly sliding your fingertip over the numbers to scroll through their available values.
 - Touch either **AM** or **PM**.
 - Touch **Set** to complete the assignment.
 6. Touch the **Date Format** pull-down list and select the format in which you want the date to display.
 7. Touch the **Date** field then adjust the **Month**, **Day**, and **Year** values by using either the up/down input arrows or by quickly sliding your fingertip over the numbers to scroll through their available values.

- Touch **Set** to complete the assignment.

8. Touch **Save** to store all the new Time and Date settings.

Phone

You can customize various phone settings.

- From Idle mode, touch **Menu** → **Settings** → **Phone**.

Language

This menu allows you to select a display language for Text language and Text Input mode. Choose from Automatic, English, and Français.

1. From Idle mode, touch **Menu** → **Settings** → **Phone** → **Language**.
2. Touch the **Screen Text** drop-down list, touch one of the following selections and touch **Save** :
 - **Automatic** (uses the language set on your SIM card).
 - **English**
 - **Français**
3. Touch the **Input Language** drop-down list, touch one of the following selections and touch **Save** :
 - **English**
 - **Français**

4. Touch  to return to Phone settings page.

Vibration Feedback

You can set the level of vibration intensity that occurs when you touch the screen.

1. From Idle mode, touch  → Settings → Phone → **Vibration Feedback**.
2. Drag the **Vibration Intensity** slider to the intensity level you desire (range is 0-4).
3. Touch **Save**.

Calibration

The Calibration feature allows you to re-align the screen's touch accuracy. Use this feature only when the device does not respond properly when you touch the screen.

1. From Idle mode, touch  → Settings → Phone → **Calibration**.
2. Touch the center of each target and repeat this step for all four targets displayed.
3. Touch **Yes** to save the new settings.

Note: When touching the screen in Calibration mode, you must touch the center of the cross hair area.

Motion Detection

The Motion Detection feature can be used for muting an incoming call or alarm, setting Snooze on an alarm, and starting and restarting a timer.

1. From Idle mode, touch  → Settings → Phone → **Motion Detection**.
2. Touch **On** to activate the Motion Detection feature, or touch **Off** to deactivate it.

For more information on using Motion Detection on your phone, see the following:

- To mute the ringer - see *"Other Answering Options"* on page 30.
- To mute an alarm - see *"Turning Off an Alarm"* on page 98.
- To start or restart a timer - see *"Timer"* on page 101.

Auto Keypad Lock

The Auto Keypad Lock feature locks your phone when the Backlight turns off. Press the  key to unlock the keypad.

1. From Idle mode, touch  → Settings → Phone.
2. Touch **On** or **Off** from the **Auto Keypad Lock** field.

For more information on setting the Backlight time settings, see *"Backlight Time"* on page 110.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone.

- ▶ From Idle mode, touch  → Settings → Phone → Security.

Lock Phone

When the Lock Phone feature is enabled, the phone is locked and you must enter the 4 to 8 digit phone password each time the phone is switched on.

Note: You will be prompted to create a password the first time this feature is enabled.

To change the phone password, see *"Change Phone Password"* on page 114. Once you enter the correct password, you can use the phone until you switch it off.

- ▶ Touch **On** or **Off** from the **Lock Phone** field.

Lock SIM Card

When the Lock SIM Card feature is enabled, your phone only works with the current SIM. You must enter the lock code to unlock

the SIM so you can use a different SIM card. Once you have entered the lock code, you are asked to confirm your password.

- ▶ Touch **On** or **Off** from the **Lock SIM Card** field.

Note: This lock code is typically the last four digits of the current phone number or can be obtained from your service provider.

Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

- ▶ Touch **On** or **Off** from the **Check PIN Code** field.

Note: You can obtain your PIN from your service provider.

Lock Applications

Using this menu, you can lock your applications and media contents (apps, messages, images, and sounds) from being accidentally accessed, altered or deleted. Once you lock the contents, you must enter the phone's password to access the associated menus.

Note: The first time you access the password screen, you will be prompted to create a password.

1. Touch the **Lock Applications** field.
2. Touch the check box next to each application you wish to lock, or touch **All** to select all applications.
 - Applications include: Messaging, My files, Call History, Contacts, Calendar, Memo, Tasks, and Exchange ActiveSync.
 - Touch **Save** to store your new selections.
3. Enter a new password (during the first use) using the onscreen keypad into the **New Password** field and touch .
4. Enter the new password again and touch .

Note: To change this password, see *“Change Phone Password”* on page 114.

Fixed Dialing Mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card. For more information, refer to *“FDN Mode”* on page 51.

1. Touch **On** or **Off** from the **Fixed Dialing Mode** field.

- **On:** you can only call phone numbers stored in the Fixed Dial Contacts. You must enter your PIN2 to continue this configuration. You can obtain your PIN2 from your service provider.
 - **Off:** you can call any number.
2. Use the onscreen keypad to enter your PIN2 Code and touch .

Note: Entering an incorrect PIN2 code can cause the phone to lock, at which point, you will have to call your service provider for assistance.

Change Phone Password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

1. Touch the **Change Phone Password** field.
2. Enter the current phone password and touch .

Note: Initially, the phone will not have a password assigned, and step 2 will not be necessary. Once a password is assigned, all steps are necessary.

3. Enter the new password and touch .
4. Re-enter the same password and touch .

Note: If you change your password, be sure to write it down and keep it in a safe place. If you forget your password, your phone will require unlocking by your service provider.

Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN Code feature is enabled. The Check Pin Code field must be active before you can access this function (page 113).

Note: Entering an incorrect code can cause the phone to lock, at which point, you will have to call your service provider for assistance.

1. If the Check PIN Code feature has not been enabled, touch **On** from the **Check PIN Code** field.
2. Touch the **Change PIN Code** field.
3. Use the onscreen keypad/keyboard to enter your PIN code and touch .
4. Enter the new PIN code and touch .
5. Re-enter (reconfirm) the same code and touch .

Change PIN2 code

The Change PIN2 code feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from your service provider) before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

1. Touch the **Change PIN2 Code** field.
2. Use the onscreen keypad/keyboard to enter your PIN2 code and touch .
3. Enter the new PIN2 code and touch .
4. Re-enter (reconfirm) the same code and touch .

APN Control

Allows you to turn control of Access Point Names (APN) On or Off. APNs are a method by which you can access advanced communication using your handset. This advanced communication can include instant messaging, multimedia messaging, email, and Internet access. Turning On APN Control requires the PIN2 code.

1. Touch **On** or **Off** from the **APN Control** field.
2. Press  to return to the previous Phone settings page.

Reset Phone

You can easily reset your phone to its default settings. To reset your phone:

1. From Idle mode, touch  → Settings → Phone → Reset Phone.
2. At the **Continue?** prompt, touch **Yes** to reset, or **No** to cancel.
3. Enter your phone password, if prompted and touch .
4. After the phone settings have been reset, the **Reset Phone done** confirmation displays.

Once your phone has been reset to its default settings for those selected options, it will restart itself in order to incorporate the new settings.

User data such as contacts, messages, pictures, videos, and music is not deleted.

Restore Phone

The Restore Phone option is the same as the Reset Phone option described above in that all settings are reset to factory defaults. However, with the Restore Phone option, all user data is deleted.

Warning! All User Data such as contacts, messages, pictures, videos, and music will be deleted. Ensure that you remove your MicroSD card if applicable as it will be erased with the Restore Phone option.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. The  icon appears in place of the signal strength indicator when active.

1. From Idle mode, touch  → Settings → Phone.
2. Touch **On** or **Off** from the **Airplane Mode** field.
3. Press  to return to the previous Phone settings page.

Call

- ▶ From Idle mode, touch  → Settings → Calls.

Adjusting the General Call Settings

1. Touch **General** and select from the following options:
 - **Show My Number:** allows you to select how your caller ID is handled when an outgoing call is initiated. This is what others see on their Caller ID screen. This value can be made blank if you do not wish your number displayed to other users.

- **Auto Reject:** selects which numbers will be automatically sent to voicemail based on a user-created list from within the Reject List.
 - **Call Answer:** selects how your phone answers incoming calls. Selections are: Send Key, Any Key, and Automatic (Time - 1-5 seconds).
 - **Auto Reply:** sets up an automatic text message that is sent to the calling party when they call you.
 - Touch either **On** or **Off** to activate/deactivate the function.
 - If active (On), touch the **Reply to Send** field and use the onscreen keypad/keyboard to enter an auto reply message.
 - **Call Status Tones:** allows you to activate an alert tone for one of two available status categories. Touch an option to make your selection and then touch **Save** to store your new selection. Options include:
 - **Call Connect Tone:** allows you to activate an alert tone when a connection has been made.
 - **Minute Minder:** allows you to activate an alert tone which sounds every minute the call is active.
 - **Alerts on Call:** activates an alert tone for new messages being received during an active call. Touch **Save** to store setting.
2. Press  twice return to the previous Phone settings page.

Adjusting the Voice Call Settings

1. Touch **Voice Call** and select from the following options:

- **Call Forwarding:** incoming calls are re-routed to a secondary number that you specify. Select the condition for the call forward action:
 - **Forward Always** activates an automatic forward of all incoming calls regardless of condition.
 - **Busy** activates an forward function only when your number is currently in use and the caller receives a busy signal.
 - **No Reply** activates an automatic forward of all incoming calls after a preset amount of time (5 seconds - 30 seconds).
 - **Unreachable** activates an automatic forward of all incoming calls only when you can not be reached and your phone status is set to unreachable.
 - **Cancel All** cancels all call forwarding functions.
 - **Call Waiting:** this network service informs you when someone is trying to reach you during another call. You can specify individual call waiting options for voice calls and/or data calls.
 - Touch of the available options: **Activate**, **Deactivate**, **Check Status** (checks the status of this service on your account).
 - **Auto Redial:** the phone automatically redials the last active number if the call was either cut off or you were unable to connect.
 - Touch either **On** or **Off** to activate/deactivate the function.
 - Touch **Save** to store the new setting.
2. Press  twice return to the previous Phone settings page.

Connectivity

The phone has several communication/connection parameters which can be edited.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection. Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms. The following Bluetooth options are available:

Activation

1. From Idle mode, touch  → Settings → Connectivity → Bluetooth.
2. Touch the onscreen Phone icon  to activate Bluetooth.
– or –

Touch  to deactivate Bluetooth.



Device Name

1. From Idle mode, touch  → Settings → Connectivity → Bluetooth → My Info.
2. Touch the **Name** field, touch and hold  to erase the current name.
3. Use the onscreen keypad/keyboard to enter the new name for this device and touch . For more information, refer to "Entering Text" on page 37.
4. Touch .

Phone's Visibility

1. From Idle mode, touch  → Settings → Connectivity →

Bluetooth → Visibility.

2. Touch **Yes** or **No** to enable or disable the visibility (discoverability) of your phone.
 - Your phone becomes visible to other devices when you transmit your device's name to others in your area. This allows other devices to detect your phone and request a connection. If your phone is not visible, you can still detect and connect to other devices, while still hiding yourself from others.

Connecting to Other Bluetooth Devices

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth** → **Search**.
 - Detected Bluetooth devices then appear as buttons on the Bluetooth page.
2. Touch the desired device to begin pairing.
3. Touch the **Passkey** field, enter the passkey used by the target device and touch .
4. Select a connection option and touch .
5. Once the target device accepts the pair your new device shows as connected (green) within the Bluetooth page.

Bluetooth Secure Mode

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status to every device within its range. This transmission can pose a security risk and incite unauthorized connection to your phone. It is recommended that you remain hidden unless necessary.

Remote SIM mode

This mode allows you to turn On or Off Remote SIM Mode. Remote SIM mode, when set to On, allows the Bluetooth phone car kit to access the contact information stored on the SIM card.

Note: There is a risk that another Bluetooth device (user) can access and modify your SIM card features and data.

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth** → **My Info**.
2. Touch **On** or **Off** from the **Remote SIM Control** field.
3. Touch .

Bluetooth Services

The Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas services describe the individual devices that are supported. These services reduce

the chance that incompatible devices are allowed to connect to your phone.

- **Headset:** a Bluetooth headset enables both incoming and outgoing calls using Bluetooth headsets.
- **Handsfree:** a Bluetooth car kit or speakerphone enables both incoming and outgoing calls.
- **Bluetooth Stereo Headset:** used to make calls and listen to music through the Bluetooth stereo headset.
- **Serial Port:** used to connect to other Bluetooth devices through a virtual serial port.
- **Dial up:** used to provide Internet access for Bluetooth devices through the phone's modem.
- **Basic Printing:** used to print images, text messages, personal data such as namecards and appointments, etc. through a remote Bluetooth printer.
- **File transfer:** used to transfer files to and from Bluetooth devices.
- **Object Push:** used to exchange personal data (namecards, contacts, etc.) with Bluetooth devices.
- **SIM Access:** provides access to the SIM card on the phone.

Configuring Your Phone's USB Settings

This menu selects the method of communication for the USB port.

Note: The Bluetooth feature **must first be disabled before initiating a USB connection** with the phone. Prior to connecting the USB cable to the

phone, install the latest version of the PC Studio application. This application installs the necessary USB drivers onto your machine.

1. From Idle mode, touch  → Settings → Connectivity → Select USB Mode.
2. Select one of the following USB modes:
 - **Ask on Connection:** causes the phone to present a "Select USB Mode" pop-up when you connect to the PC. You can then choose from either: **Samsung PC Studio**, **Media Player**, or **Mass Storage**.
 - **Samsung PC Studio:** sets PC Studio to launch as the default application when a USB connection is detected.
 - **Media Player:** sets the Media Player to launch as the default application when a USB connection is detected.
 - **Mass Storage:** allows you to utilize the onboard storage capacity of the phone's MicroSD card to store and upload files. This option allows your computer to detect the phone's MicroSD card as a removable storage drive.
3. Touch .

Network Profile Configuration

Your phone is wirelessly connecting to the Internet via a built in WAP browser. Connection can be made via one of the available WAP browsers: TELUS Web and TELUS MMS. You need these settings to use the web browser or send MMS messages or Emails.

Use this menu to create and customize the profiles containing the settings for connecting your phone to the network. Although the active connection can be changed by the user, it is recommended that this choice be made with the assistance of either the retailer or service provider.

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Network Profiles**.
2. Touch one of these options:
 - **TELUS Web**
 - **TELUS MMS**
3. To create a new connection, touch .
4. Select the parameter you want to edit:
 - **Set Name:** enter a profile name.
 - **Access Name:** edit the access point name.
 - **Auth Type:** select the type of authentication used for this WAP connection: Normal, Secure, or None.
 - **User ID:** enter the User ID required to connect to the network.
 - **Password:** enter the user password required to connect to the network.
 - **Protocol:** set the connection protocol used by the WAP browser: HTTP, WAP, or Other.
 - **Home URL:** enter the URL address of the page to be used as your homepage.

- **Proxy Address:** set the proxy server address and port.
- **Gateway Address:** (WAP only) enter the gateway address of the proxy server.
- **Secure Connection:** (WAP only) enter secure connection information.
- **Linger Time (sec.):** set a time period (in seconds) after which the network is disconnected if there has been no new data traffic in that time.
- **Advanced Settings:** allows you to configure some of the IP-specific information: Static IP, Static DNS, Server information, and Traffic Class.
 - **Static IP:** specify if you want to manually enter an IP address. If you want the IP address to be automatically assigned by the server, remove the check mark.
 - **Local Phone IP:** enter the IP address obtained from the network operator, if you checked the Static IP option.
 - **Static DNS:** specify if you want to manually enter the Domain Name Server (DNS) address. If you want the address to be automatically assigned by the server, remove the check mark.
 - **Server 1/Server 2:** enter the Domain Name Server (DNS) addresses.
 - **Traffic Class:** select the traffic class.

Note: The WAP settings may vary depending on the service provider.

5. Touch  to store these new settings.

Applications Settings

The Applications Settings feature allows you to configure the functional parameters for most of the onboard applications. These applications are described in more detail within other sections of this manual.

1. From Idle mode, touch  → Settings → Applications Settings.
2. Select the type of application which you want to change:
 - **SharePix** (page 80)
 - **Messaging** (see page 57)
 - **Browser** (see page 87)
 - **Media Player** (see page 96)
 - **Record Audio** (see page 122)
 - **Calendar** (see page 122)
 - **Contacts** (see page 45).

Record Audio Settings

To configure the filename and maximum length for a recording.

1. From Idle mode, touch  → Settings → Applications Settings → Record Audio.
2. Touch either of the following fields and edit the information:

- **Default Name:** allows you to use the onscreen keyboard to enter a prefix name of all recorded audio files. Touch  to store the new name.
 - **Recording Time:** allows you to choose the maximum limit allowed for the recorded audio file (1 Minute, 5 Minutes, 10 Minutes, 15 Minutes, 30 Minutes, 60 Minutes, or Limit for MMS).
3. Touch .

Calendar Settings

To configure the starting day and view used when opening the Calendar application.

1. From Idle mode, touch  → Settings → Applications Settings → Calendar.
2. Touch either of the following fields and edit the information:
 - **Starting Day:** allows you to choose which day marks the first day in your calendar week (Sunday or Monday).
 - **View by:** allows you to choose the default view for appointments used by the Calendar application when launched (Month, Week, or Day).
3. Touch .

Contacts Settings

To configure your Contacts application.

1. From Idle mode, touch  → Settings → Applications

Settings → Contacts.

2. Touch one of the following fields and edit the information:
 - **My Business Card:** creates and attaches a virtual business card to be used as an attachment to outgoing messages. For more information, see *"Attaching Business Card to a Message"* on page 59.
 - **Speed Dial:** allows you to set up Speed Dial for your contacts. For more information, refer to *"Making a Call Using Speed Dial"* on page 29.
 - **Save New Contacts to:** defines the destination for new contact entries (Phone, SIM Card, or Always Ask).
 - **View Contacts from:** to filter the display of current Contacts entries. Options include: All, Phone, or SIM Card.
 - **Own Number:** to display your current phone number.
 - **Fixed Dial Contacts:** assigns phone numbers as FDN entries.
 - **Used Space:** displays the memory storage allocation (total available and remaining) within both your Phone, SIM card, and FDN list.
3. Touch  (not all of the above options require that you save).

Memory Management

You can easily check the amount of memory being used for storing data, such as messages, media, calendar data, or contacts

entries. You can also delete any selected information from your phone:

1. From Idle mode, touch  → Settings → Memory Management.
2. Touch any of the following options:
 - Clear Phone Memory
 - Memory Card Details
 - Used Space

Clear Phone Memory

From this menu you can clear the memory for Files, Messages, Contacts, Calendar entries, Tasks, Memos, or Sync email. You can also select All to clear everything listed.

Note: To completely remove any personal information stored on your device, see *"Warranty"* on page 133.

1. From Idle mode, touch  → Settings → Memory Management → Clear Phone Memory.
2. Place a checkmark alongside those applications you wish to clear by touching individual applications
– or –
touch **All** to clear all the memory settings.

3. Touch **Clear**.
4. Enter the user-defined password and touch **OK** to clear the memory settings. For more information, refer to *"Change Phone Password"* on page 114.
5. Touch **Yes** to confirm or **No** to cancel.

Memory Card Details

Allows you to view specific information related to the current microSD card being used for storage.

- From Idle mode, touch  → **Settings** → **Memory Management** → **Memory Card Details**.

Note: Memory card is optional.

Check the Used Space

1. From Idle mode, touch  → **Settings** → **Memory Management** → **Used Space**.
2. Select one of the following storage categories to view the contents of a category's memory:
 - **Shared Memory**
 - **Messaging**
 - **My files**

- **Calendar**
 - **Tasks**
 - **Memo**
 - **Contacts**
3. When you are finished, press  to return to Idle screen.

Section 19: Accessibility

TTY Settings

TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone. This phone comes TTY-ready and only requires the insertion of the TTY device to enable this feature.

Use the following steps to access the TTY settings:

- ▶ Inserting a TTY connector into the Headset/Adapter jack (on the left side of the phone) enables this function.

For additional support please contact your service provider.

Section 20: Safety

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Try not to cover the phone's antenna.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and

remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN Canada, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTIONS TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN THE A VERTICAL OR HORIZONTAL OR FLOUR MOUNT POSITION.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.

- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment

systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact.

Do not use if screen is broken or cracked as this could cause injury to you.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and travel adapters. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

- Less than one month:
4° F to 140° F (-20° C to 60° C)
- More than one month:
4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in

safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SGH-a885 are:

GSM 850

- Head: 0.851 W/Kg.
- Body-worn: 0.936 W/Kg.

GSM 1900

- Head: 0.669 W/Kg.
- Body-worn: 0.507 W/Kg.

WCDMA 850

- Head: 0.737 W/Kg.
- Body-worn: 0.533 W/Kg.

WCDMA 1900

- Head: 1.23 W/Kg.
- Body-worn: 0.548 W/Kg.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SGH-a885

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending. This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Section 21: Warranty

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number

removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (l) any of the seals on the battery are broken or show evidence of tampering; or (IA) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service

facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?
EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF

ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN

ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL

ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing

reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2009 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342

A

Adding a New Contact

- Adding More Fields 46
- Deleting Fields 47
- During a Call 48
- Idle Screen 45

Alarms 97

APN Control 115

Application Settings

- Calendar 122

Audio 68

Audio Folder 97

B

Backlight

- settings 110

Battery

- charging 9
- Installing 8
- Low Battery Indicator 10

Birthday Widget 27

Block Caller 31

Brightness 110

Browser

Preferences 89

Settings 90

Business Card

- attaching to a message 59

C

Calendar 93, 98

- Deleting an Event 94
- Viewing an Event 94

Call Functions 28

- 3-Way Calling (Multi-Party Calling)
36

Adjusting the Call Volume 33

Answering a Call 30

Call Back Missed Call 31

Call History 30

Call Time 32

Call Waiting 35

Contacts 29

Correcting the Number 29

Data Counter 33

Deleting Missed Call 32

Dialing a Recent Number 29

Ending a Call 29

International Call 28

Making a Call 28

Manual Pause Dialing 28

Missed Call Details 31

Options During a Call 33

Putting a Call on Hold 34

Saving the Missed Call Number to Contacts 31

Searching for a Number in Contacts 35

Send Message to Missed Call 32

Using the Speakerphone 35

Viewing All Calls 31

Viewing Missed Calls 31

Call History 30

Camcorder 77

Accessing the Video Folder 78

Camcorder Options 77

Shooting Video 77

Camcorder Options

- Camcorder Options after a Video is
Taken 78

Camera

- Accessing the Pictures Folder 75
- Camera Options 73
- Picture Folder 75
- Taking Pictures 72

Camera Options

- Settings 74
- Shooting mode 73, 74
- Timer 75
- White Balance 75

Change Phone Password 114

Changing Your Settings 102

Charging battery 9

Check PIN code 113

Clear Phone Memory 123

Contacts

- Adding a New Contact 45
- Adding Pauses to Contact Numbers 48
- Checking the Used Space 55
- Contacts Entry Options 50
- Copying Entry to Phone 54
- Copying Entry to SIM Card 54
- Deleting all of the Contacts Entries 55
- Dialing a Number 49

Favorites 53

FDN (Fixed Dialing Number) Mode 51

Finding a Contacts Entry 49

Group Settings 52

Managing Contacts Entries 54

Own Phone Number 51

Service Dialing Numbers 55

Using Contacts List 49

Contacts Settings 45

Cookies

Deleting 88

Options 89

Copying a URL 87

D

Display

icons 16

E

Entering Text 37

Changing the Text Entry Mode 38, 42

Using 123Sym Mode 39

Using Abc Mode 40

Using Emo Mode 39

Using Numeric 40

Using Symbols 41

Using T9 Mode 38

Event Widget 27

F

FDN

Changing the Status 51

Creating New Numbers 51

Fixed Dialing Mode 114

Full Screen Mode 84

G

Games 81

Getting Started 7

Setting Up Your Phone 7

Voice mail 11

Group

Adding an Entry 53

Creating New Group 52

Editing 53

Removing an Entry 53

Group Settings

Editing a Caller Group 53

H

Handwriting 41

Changing Text Input 42

Entering Characters 43

- Entering Numbers 43
- Entering Symbols 44
- I**
- Icons, description 16
- In-Call Options 34
- International Call 28
- J**
- Join 36
- K**
- Keyboard
 - Changing Text Input 38
- L**
- Landscape 37
- Lock Applications 113
- M**
- Memory
 - Used Space 66
- Memory Card Installation 8
- Memory Management 123
 - Used Space 124
- Menu Navigation 19
- Messaging
 - Creating and Sending Text Messages 57
 - Settings 63

- Templates 65
- Types of Messages 57
- Using Message Options 60
- microSD card
 - Installing 8
- Motion Detection 112
- Multitasking
 - Functions 18
 - Menu 18
- Mute 34, 35
- My files
 - Recorded Audio 69
 - Used Space 71
- My Stuff
 - Audio 68
 - Games 69
 - Other Files 71
 - Pictures 69
 - Tones 68
 - Videos 71

- N**
- Navigating with the Wireless Web 83
- Network Profile
 - Configuration 120

- P**
- Paragraph
 - Inserting a Return 43
- Password
 - Changing 114
- Phone
 - Front View 12
 - icons 16
 - Rear View 15
 - Reset 116
 - Restore 116
 - Side View 14
 - Switching On/Off 11
- Phone Lock 113
- Phone Settings 111
- Power Search tab 21
- Powering
 - Off 11
 - On 11
- Q**
- QWERTY Keyboard 37
- R**
- Record Audio
 - Audio Folder 97
- Recorded Audio 69

Creating 69

S

Safety 126

SAR values 131

Security 113

Sending a URL 87

Service Dialing Numbers 55

Settings

Applications 122

Call 116

Contacts 45, 122

Display and Light 108

Phone 111

Record Audio 122

Security 113

Sound 102

Time & Date 110

SharePix 80

SIM card

installation 7

Installing 7

Speakerphone Key 35

Standard Limited Warranty

133

Swap 35

T

TELUS Shop 82

Text Input Mode

Changing within Handwriting 42

Tip Calculator 99

Tones 68

Tools 93, 95

Alarms 97

Calculator 99

Calendar 98

Camera 72

Converter 100

Memo 98

Record Audio 96

Stopwatch 101

Tasks 98

Timer 101

Using the Camcorder 77

Using the Camera 72

World Clock 100

Touch Screen 11

Lock/Unlock 11

Transition Effect 110

Travel Adapter 9

Using 9

TTY Settings 125

U

Understanding Your Phone 12

Features of Your Phone 12

Front View 12

Rear View 15

Side Views 14

Unmute 34

URL

Copying to Message 87

Entering Manually 85

Sending 87

Used Space 55, 66, 71

Using Favorites

Accessing a Web Site Using

Favorites 86

Adding Favorites 86

Deleting a Favorite 86

Editing Favorites 86

V

Videos 71

Voice Mail

Accessing 11

From Another Phone 11

Setup 11

Voice Recognition 95

W

Warranty Information 133

Widgets 22

Accessing 26

Activation 27

Adding to the Widget bar 22

Deleting from the Widget bar 22

Events 27

Rearranging 26

Undocking 26

Wireless Web

Accessing the Wireless Web Site 90

Changing WAP Profiles 90

Using Favorites 86

World Clock 100

Deleting an Entry 101