

Retro~Lux

Vintage Audio Products

USER MANUAL

for



Kolster-Brandes MR10 6BE6

Project No. 5052

Table of Contents

1	Introduction	2
2	Power Connection	2
3	Controls	3
	3.1 On-Off.....	3
	3.2 Volume.....	3
	3.3 Tuning.....	3
	3.4 Tone	3
4	Bluetooth Operation	4
5	Care and Cleaning	5
	5.1 Positioning the Radio.....	5
	5.2 Cleaning.....	5
6	Guarantee	6
7	Specifications	6
8	History	7

1 Introduction

Thank you for buying one of our beautiful radios! We hope it will provide hours of trouble-free, high quality entertainment.

Your radio is easy to set up and use and, with a few simple precautions, will continue to look good and operate efficiently for many years.




WARNING

ELECTRIC SHOCK RISK

This unit contains no user serviceable parts.
Under no circumstances remove the rear panel with the mains voltage connected.

2 Power Connection

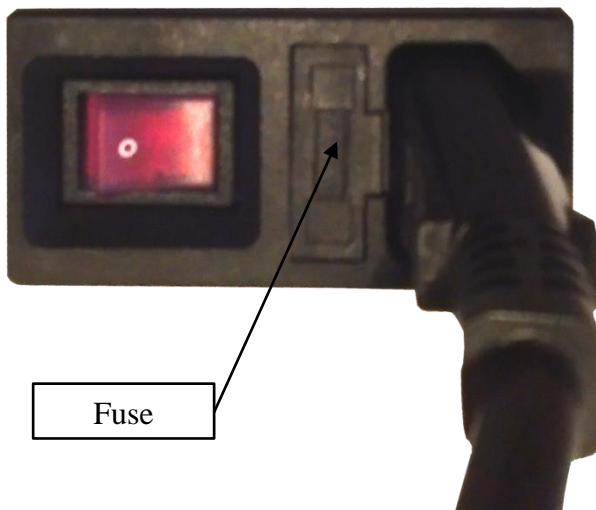

The power mains power connection is via an IEC connector fitted at the rear. Insert the supplied power lead and connect to a mains outlet. Switch on the supply at the mains outlet, and then operate the mains switch on the unit. The switch will illuminate if power is present, which means that the unit is in standby mode.

If your radio is equipped with rechargeable batteries, this is also the batteries will now be charging. Charge the batteries for at least 2 hours before running on batteries alone.

If the switch fails to illuminate, first check that the mains supply is present, then disconnect the supply and check the fuse in the mains plug and the unit inlet connector. In the unlikely event that any of the fuses have blown the unit may be faulty.

3 Controls

The radio controls are as shown below:



3.1 On-Off

This is a three-position switch. Turn fully anti-clockwise to turn the radio off. The first switch position turns the radio on with the dial illumination on. The second position turns off the illumination.

3.2 Volume

Turn fully clockwise (towards) to reduce the volume and anti-clockwise (away) to increase.

3.3 Tuning

This is decorative only and moves the tuning dial indicator.

3.4 Tone

The tone control provides no tone adjustment in the centre position. Turn anti-clockwise to decrease treble and increase bass. Turn clockwise to increase treble and decrease bass.

4 Bluetooth Operation

The radio requires an audio signal from a Bluetooth device such as a smartphone, tablet, laptop or PC. If your device is already paired with an audio device such as headphones or a hands-free headset you may have to un-pair it first.

Please refer to your device's instructions to place the unit in scan mode to scan for Bluetooth devices. With your device in scan mode, turn the volume control up by about one-third, switch the radio on to standby mode at the power inlet, and then turn on using the front panel control.

You should hear 'Bluetooth Mode' from the radio, and the device named 'YET-M1' should appear in the list of available devices on your Bluetooth device. Select 'YET-M1' to pair with it and, if prompted, enter '0000' as the code. You should then hear 'Paired' from the radio.

Play some audio from your device and you should hear it through the radio. After pairing for the first time the two devices should pair automatically when you power up the radio unless you actively disconnect, or un-pair it from your device.

If you have difficulty pairing you may have to turn off the radio at the front panel then turn on again to initiate the pairing process, and reset your device to scan mode.

The range of the Bluetooth receiver in the radio is about 10 metres. Outside this range you may experience drop-outs, especially if you are in another room, although reception is good throughout an average family-sized house.



5 Care and Cleaning

5.1 Positioning the Radio

Do not allow this product to be exposed to water, steam or sand. Do not leave your radio where excessive heat could cause damage such as in a parked car or in a conservatory where the heat from the sun can build up even though the outside temperature may not seem too high. Do not position the radio close to a radiator or other type of heater.

Your radio should not be exposed to dripping or splashing water and no objects filled with liquids, such as vases, should be placed on the radio.

It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation. The ventilation of the product should not be restricted by covering it, its ventilation openings or heatsink with items such as newspapers, tablecloths, curtains etc.

No naked flame sources such as lighted candles should be placed on or near the product.

Do not place this product in an area which receives direct sunlight, as this can cause fading to the finish.

5.2 Cleaning

Your radio will only need cleaning from time to time with a soft duster or lint-free cloth. Splashes and other marks can be wiped with a damp cloth.

Under no circumstances use household cleaning products, solvents or cleaners as they are liable to damage the finish. Do not use silicone based polishes.

Your radio has been sealed with a modern synthetic paint and polished with furniture wax, which provides a long-lasting durable protection. The wax finish can be refreshed with energetic buffing. Occasionally apply a thin coat of wax and buff to a high sheen, but avoid frequent over-waxing as the wax layers can build up trapping fine dirt and dust which diminishes the appearance.

6 Guarantee

This product is guaranteed for six months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

This guarantee does not cover:

- Damage resulting from incorrect use
- Products which have been altered or tampered with externally or internally
- Consequential damage

Any claim under this guarantee should be made by contacting Retro-Lux or the dealer from whom the product was purchased to see if the problem can be rectified. Should it be necessary to return the product for repair or replacement instructions for its return will be provided by Retro-Lux.

These statements do not affect your statutory rights as a consumer.

7 Specifications

Power Supply	
Input Supply	220-240 VAC 60W, 50/60 Hz, inrush < 50 A peak @ 230 VAC, cold start @ 25C
Batteries	None fitted
Amplifier	
Power Output	20W RMS / 30W Music Power
Mode	Mono
Distortion	2% at maximum power
Audio Source	Internal Bluetooth receiver
Tone Control	Volume proportionate loudness, single tone control with bass/treble cut and boost
Loudspeaker	
Type	6.5 inch Dual Cone Full Range
Impedance	8 ohms
Frequency	50Hz - 18kHz
Power	50W RMS / 100W Peak SPL @ 1W/1m: 90dB
Dimensions	
Width	40cm (including side knobs)
Depth	20cm (including rear heatsink and front panel knobs)
Height	24cm
Weight	5.9kg (excluding batteries)

8 History

The Kolster-Brandes MR10 6BE6 AC mains valve radio was originally made in 1955 by Kolster-Brandes Ltd based in Fooks Cray, Sidcup, a suburb of London. The set is housed in a white plastic (not bakelite) case, and came to us painted in a similar colour to that shown. This looks like quite an unusual version of this model, since many other examples we have seen have a white or cream finish.



The control knobs (left to right) were originally: on/off and tone, waveband, tuning, and volume and the radio was capable of receiving AM and FM wavebands.

The original paint finish on this model had become scratched, revealing the white plastic base. The case was completely stripped back and painted with a modern coating.

Internally, the valve radio components were stripped out, but the tuning mechanism and display was left in place. The proprietary Retro-Lux PSU, Power Amplifier and Tone Control PCB circuitry was installed, together with a high-performance 6.5", full range, dual concentric 50W loudspeaker.

A replacement back panel to meet modern regulations completed the upgrade

There is a mains switch on the rear, and the front panel controls have been reassigned as follows: the left hand side control is a volume control, the right hand side control a rotary switch with 3 positions: off, on (with illumination), on (power saving, no illumination). On the front panel, on the left hand side is a tone control which provides bass boost and cut. The right hand knob moves the tuning pointer and is decorative only.



Contrelec Ltd T/A
High Wycombe • Bucks • England
Tel: +44 (0)1494 526270 Email: info@retro-lux.co.uk Web: www.retro-lux.co.uk

The information contained in this document is offered in good faith and believed to be correct at the time of issue, but may be subject to alteration and amendment.

Content and images Copyright © 2015
Retro-Lux Vintage Audio Products (Contrelec T/A)
All rights reserved.
