

# LED PROJECTOR USER MANUAL

## IMPORTANT SAFEGUARDS:

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by supplier; specifically any attachments not provided with the unit.

- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.
- DO NOT look directly into the projector lens while projector is turned on, doing so may cause severe eye damage.

Packing List:


- UC20 LED projector 1 pc
- Power adaptor 1 pc
- Lens cover 1 pc
- Three-in-one AV cable 1 pc
- User manual 1 pc

## Specifications


Product Name	Led projector	Image System	LCD
Resolution	QVGA	Nominal Brightness	400 lumen(max)
Lamp	LED	Color	16770K
Aspect Ratio	4:3	Operation Mode	Manual
Contrast	300:1	Projection Distance	3.54-12.7 feet
Picture Size	17 C67inches	Power Consumption	28W
Weight	0.83 lbs.	Supported External Storage	500G
Size	5x5x2.3	Power Adaptor	12V-2A
Input terminal	12V power input, AV IN, USB, SD Card		
Output terminal	Speaker (2.0w x 1), earphone		
Audio play	Supported Audio Form: MP3, WMA, AAC, FLAC, APE Multi audio-effect: 7 mode of audio-effect plus SRS WOW and SRS WOW HD Breaking point continuous play supported		
Picture display	Supported static picture file: JPEG, BMP, GIF, PNG, TIF support a variety of slide transition special efficacy.		
Video display	Supported video file format: RMVB/RM/AVI/MP4/ASF/MOV/MKV etc. Breaking point continuous play supported		
AVIN audio display	PAL&NTSC format		
Text Read	TXT text file supported Breaking point continuous display & Background music supported		

## Product Structure:

Notes: Please do not block the ventilation holes while using the projector.

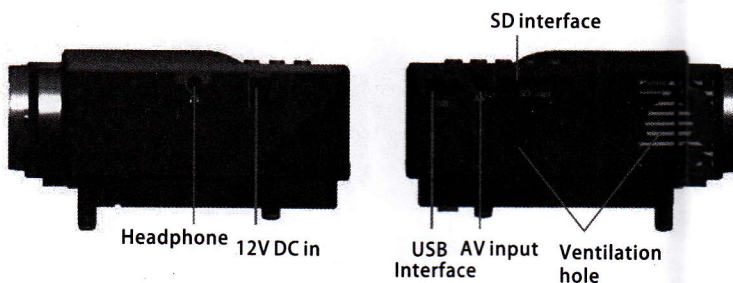

## Function Introduction for Keys:

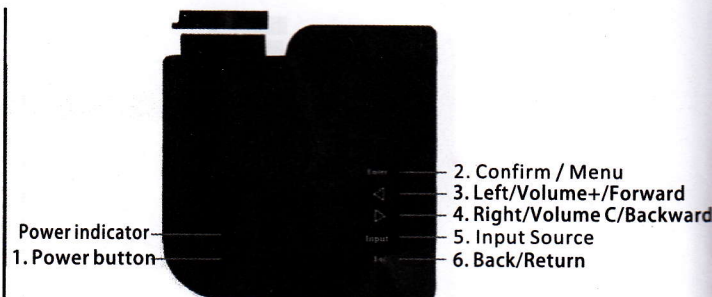

## Using Guide

### Powering ON and OFF

**Standby Status:** After the projector is powered through adaptor, the indicator lamp will flash, then enters standby status.

**Power on:** Press the power button, the indicator lamp will be steady on after a quick flash, the projector starts works;

**Power off:** Press the power button, the indicator lamp will be steady on after a quick flash and enters standby status, disconnect the power cable, then the projector is off.

### Focusing

Depending on the distance between the projector and the screen or the projection wall, the projection image size ranges from 17 to 67 inches.

After powered on, put the projector at a certain place within the distance scale, and then rotate the lens to make the picture clear.

### How to play

Press the 'Input' key to enter the input source menu (including video/USB/SD card), then press 'Enter' Key to confirm the input source you need.

Video can be directly broadcasted through the video signal channel. If signal source comes from USB/SD card, first press 'Left', 'Right' key to choose the formats such as Music, Video, Picture, then press 'Enter' to play the content.

How to set up Long press 'Enter' to enter the setting up menu, operation such as 'OSD language', 'Restore factory settings', 'Software update' can be adjusted here.

**PLEASE NOTE:** Settings will only be saved when the projector is shut down properly.